
Fig.1. CYLINDER BLOCK

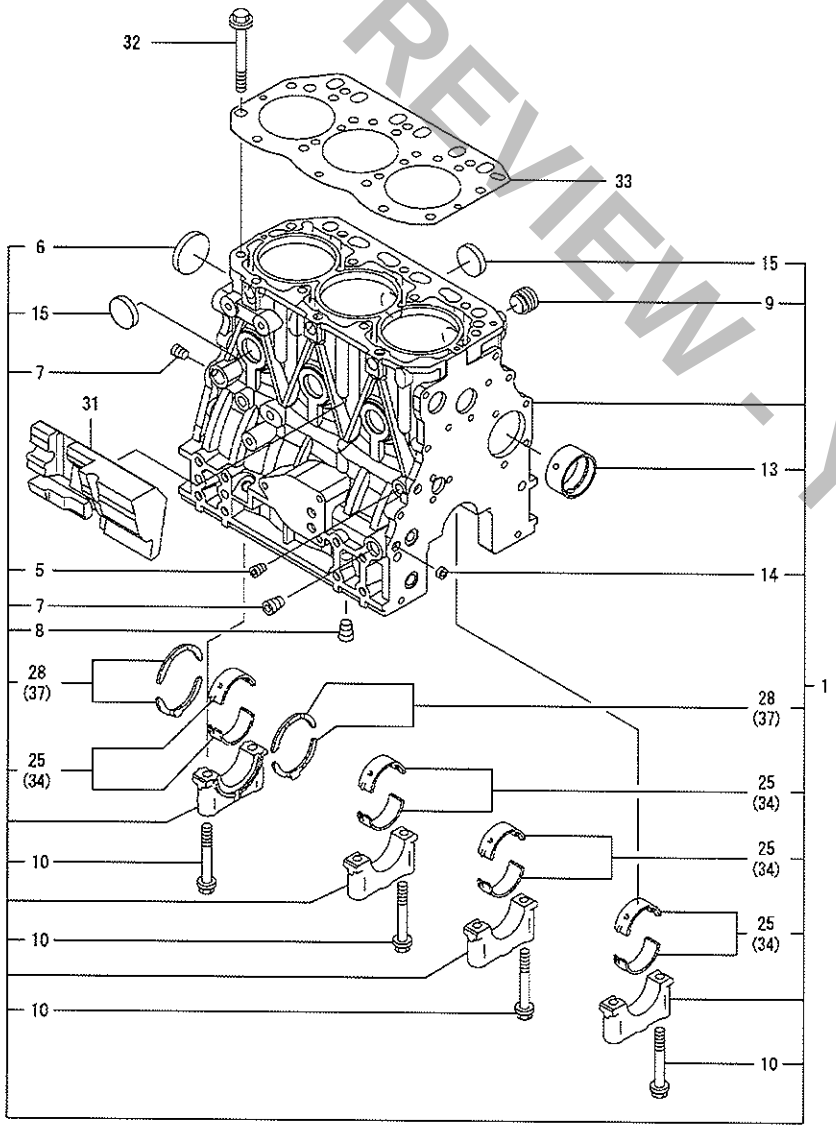

Remarks
(1) UNDER-SIZE(U.S=0.25)PART.
(2) OVER-SIZE(O.S=0.25)PART.
(3) REPAIR PART.

(A)=3TNV88-N5FA (D)=
(B)= (E)=
(C)= (F)=


REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I R
1	1	729005-01561	BLOCK ASSY, CYLINDER	1						
5	2	124060-01050	PLUG PT1/8	1						
6	2	129001-01250	PLUG 50	1						
7	2	124160-01910	PLUG PT1/4	2						
8	2	124160-01910	PLUG PT1/4	1						
9	2	171051-01921	PLUG	1						
10	2	129150-02020	BOLT, METAL CAP	8						
13	2	129795-02411	BUSH, CAMSHAFT	1						
14	2	27241-120000	PLUG 12	2						
15	2	27241-300000	PLUG, 30	6						
25	2	129001-02930	MAIN BEARING SET	4						3
28	2	129150-02930	METAL, THRUST	2						
31	1	129004-01190	SPACER	1						
32	1	129150-01200	STUD, CYL. HEAD	14						
33	1	129001-01340	GASKET, (NON-ASB.)	1						
34	1	129150-02870	MAIN METAL US=0.25	4						1
37	1	129150-02940	METAL,THRUST.25(2PIE	1						2

(C)Copy Rights YANMAR CO.,LTD and YANMAR AGRICULTURAL EQUIPMENT CO.,LTD.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.4. CYLINDER HEAD & BONNET

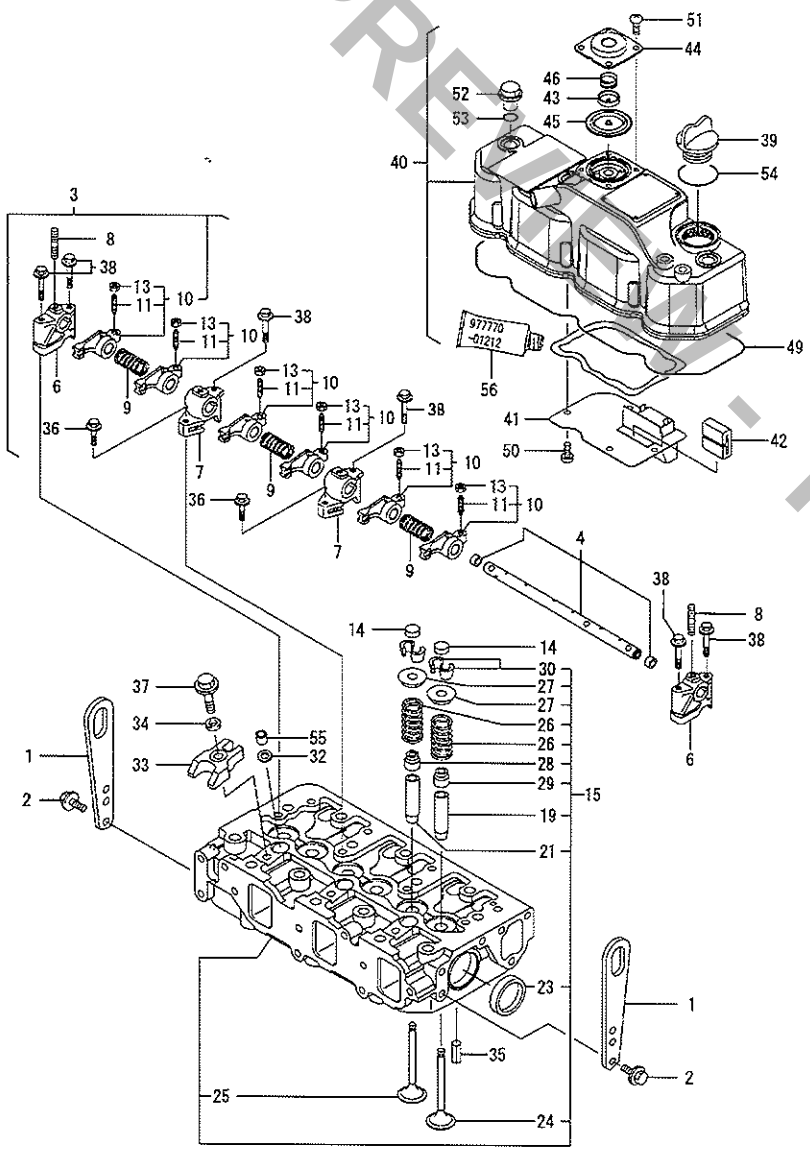

Remarks
(1) REPAIR PART.
(2) OPTIONAL PART.

4. CYLINDER HEAD & BONNET

(A)=3TNV88-N5FA (D)=
(B)= (E)=
(C)= (F)=


REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	129900-07900	LIFTER, ENGINE	2							
2	1	26106-080142	BOLT M 8X 14 PLATED	4							
3	1	129004-11241	SHAFT ASSY, ROCKER	1							
4	2	129004-11251	SHAFT, ROCKER ARM	1							
6	2	119802-11260	SUPPORT, ROCKER ARM	2							
7	2	119802-11270	SUPPORT, ROCKER ARM	2							
8	2	119802-11280	STUD	3							
9	2	129150-11260	SPRING	3							
10	2	129004-11650	ARM ASSY, ROCKER	6							
11	3	129150-11230	SCREW, VALVE	6							
13	3	129150-11750	NUT M8XP1.0	6							
14	1	129150-11370	CAP, VALVE	6							
15	1	129004-11700	HEAD ASSY, CYLINDER	1							
19	2	120130-11860	GUIDE, VALVE	3							1
21	2	129150-11810	GUIDE, VALVE	3							1
23	2	27241-400000	PLUG 40	2							
24	2	129004-11100	VALVE, INTAKE	3							
25	2	129100-11110	VALVE, EXHAUST	3							
26	2	129795-11120	SPRING, VALVE	6							
27	2	129795-11180	RETAINER, SPRING	6							
28	2	121400-11340	SEAL, VALVE STEM	3							
29	2	124460-11340	SEAL, VALVE STEM	3							
30	2	27310-080001	COTTER 8	6							
32	1	119625-11880	SEAT, NOZZLE	3							
33	1	129004-11900	RETAINER, NOZZLE	3							
34	1	120270-54410	WASHER	3							
35	1	22351-060012	SPRING PIN 6X12	2							
36	1	26106-080252	BOLT M 8X 25 PLATED	2							
37	1	26106-080352	BOLT M 8X 35 PLATED	3							
38	1	26106-080502	BOLT M 8X 50 PLATED	6							
39	1	124160-01751	COVER,FILLER	1							
40	1	129004-11350	BONNET ASSY, HEAD	1							
41	2	129004-03010	PLATE, BAFFLE	1							
42	2	129150-03070	BAFFLE, BREATHER	1							
43	2	119802-03110	PLATE, DIAPHRAGM	1							
44	2	119802-03120	COVER, DIAPHRAGM	1							
45	2	119802-03130	DIAPHRAGM	1							
46	2	119802-03140	SPRING, DIAPHRAGM	1							
49	2	129004-11310	GASKET, BONNET	1							
50	2	22857-500100	SCREW 5X10,TAPPING	4							
51	2	22857-500100	SCREW 5X10,TAPPING	4							
52	1	124160-11360	KNOB	3							
53	1	24311-000120	O-RING 1A P 12.0	3							
54	1	24311-000320	O-RING 1A P-32.0	1							
55	1	119802-11870	PROTECTOR, NOZZLE	3							
56	1	977770-01212	GASKET, LIQUID	1							2

(C)Copy Rights YANMAR CO.,LTD and YANMAR AGRICULTURAL EQUIPMENT CO.,LTD.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.8. CRANKSHAFT & PISTON

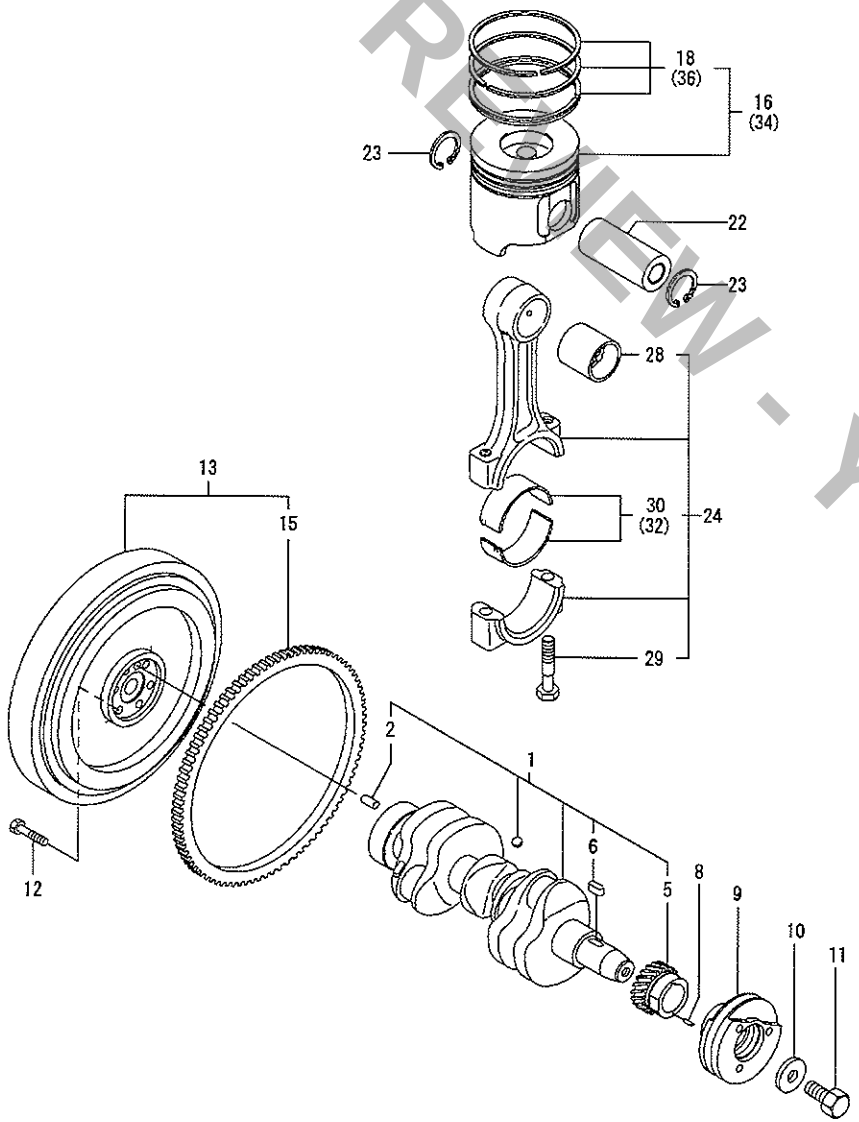

Remarks
(1) REPAIR PART.
(2) UNDER-SIZE(U.S=0.25)PART.
(3) OVER-SIZE(O.S=0.25)PART.

(A)=3TNV88-N5FA (D)=
(B)= (E)=
(C)= (F)=


REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I R
1	1	129004-21001	CRANKSHAFT ASSY	1						
2	2	129100-01580	PARALLEL PIN 8X16	1						
5	2	119802-21201	GEAR, CRANKSHAFT	1						
6	2	22512-070140	KEY 7X 14	1						
8	1	22351-030010	SPRING PIN 3X10	1						
9	1	129004-21650	V-PULLEY, CRANKSHAFT	1						
10	1	129795-21661	WASHER	1						
11	1	121850-21680	BOLT, V-PULLEY	1						
12	1	121111-21501	BOLT, FLYWHEEL	6						
13	1	129128-21590	FLYWHEEL W/RING GEAR	1						
15	2	119865-21600	GEAR, RING	1						
16	1	129005-22080	PISTON ASSY	3						
18	2	129005-22500	RING SET, PISTON	3						
22	1	129202-22300	PIN, PISTON(D26,L70)	3						
23	1	22252-000260	CIRCLIP 26	6						
24	1	729402-23100	ROD ASSY, CONNECTING	3						
28	2	129100-23910	BUSH, PISTON PIN	3						1
29	2	121550-23200	BOLT, CONNECTING ROD	6						
30	2	129150-23600	BEARING, CRANKPIN	3						
32	1	129150-23610	METAL,PIN US=0.25	3						2
34	1	129005-22900	PISTON W/RING OS=.25	3						3
36	2	129005-22950	RING SET O.S=0.25	3						3

(C)Copy Rights YANMAR CO.,LTD and YANMAR AGRICULTURAL EQUIPMENT CO.,LTD.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.11. FUEL INJECTION PUMP

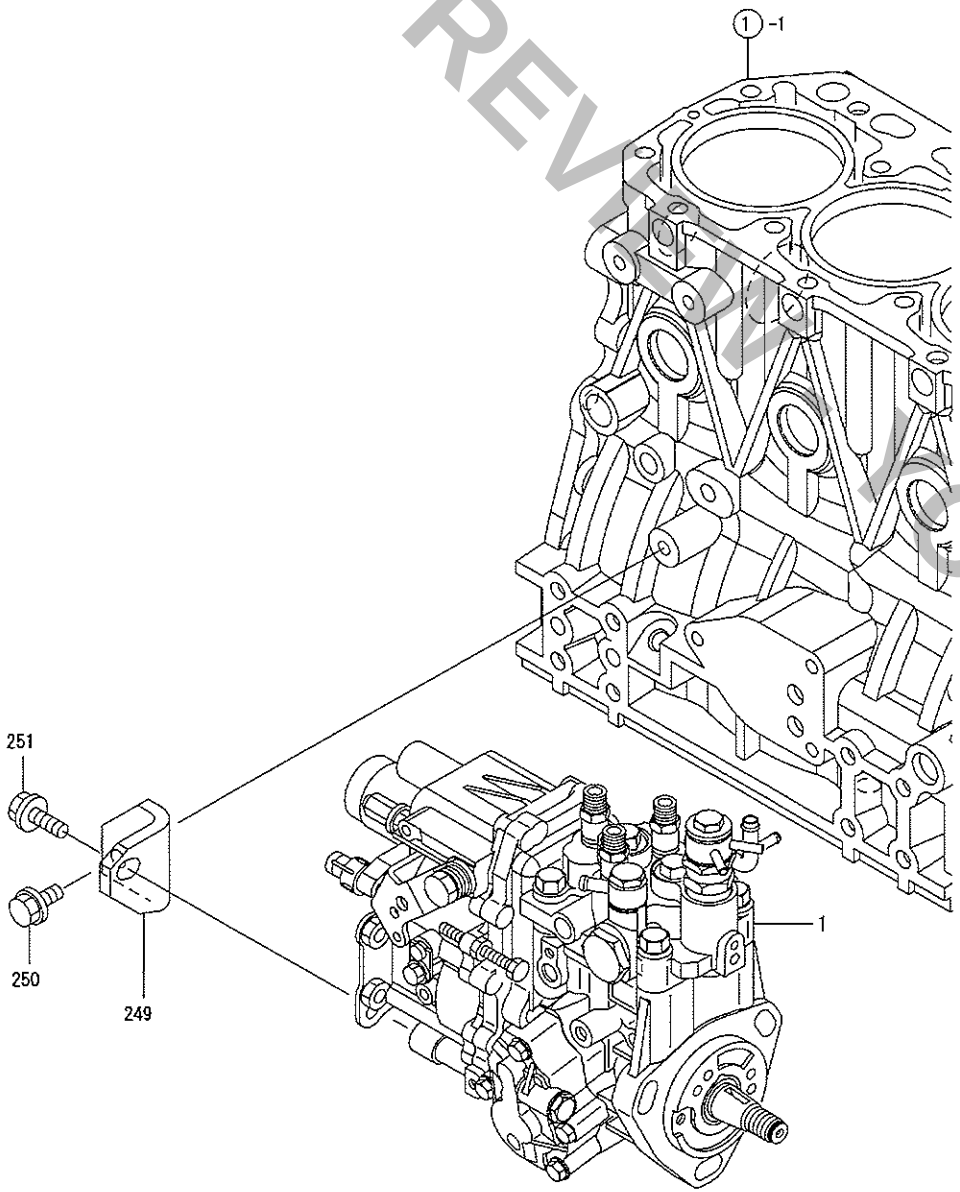

 11. FUEL INJECTION PUMP

(A)=3TNV88-N5FA (D)=
(B)= (E)=
(C)= (F)=


REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	729242-51350	PUMP ASSY, F.INJECT	1							
249	1	119802-51250	BRACKET, PUMP	1							
250	1	26106-080162	BOLT M 8X 16 PLATED	1							
251	1	26106-080202	BOLT M 8X 20 PLATED	1							

(C)Copy Rights YANMAR CO.,LTD and YANMAR AGRICULTURAL EQUIPMENT CO.,LTD.

PREVIEW ONLY YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.14. STARTING MOTOR

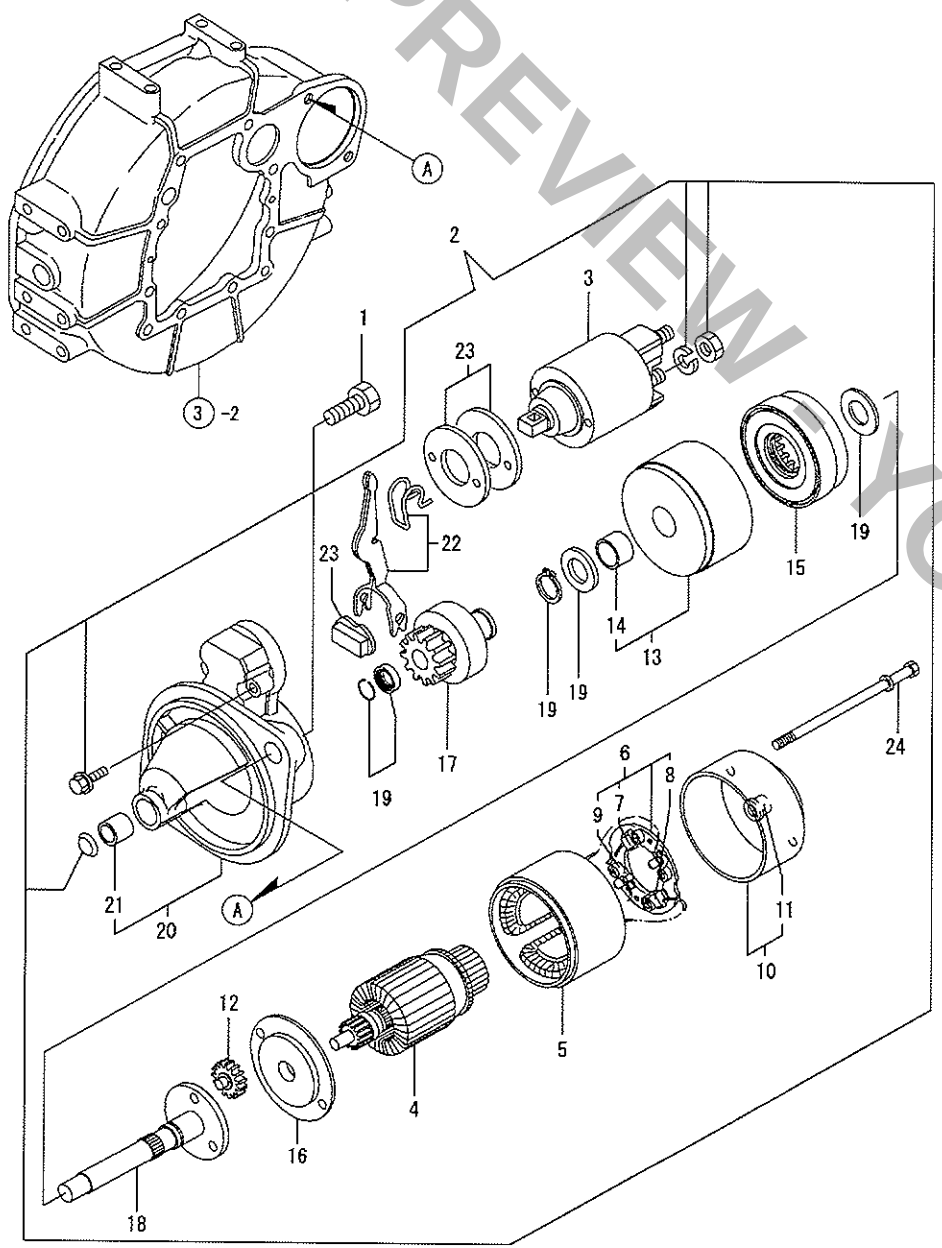

(A)=3TNV88-N5FA (D)=
(B)= (E)=
(C)= (F)=

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	26116-120252	BOLT M12X 25 PLATED	2							
2	1	129242-77010	STARTER	1							
3	2	129698-77020	MAGNETIC SWITCH ASSY	1							
4	2	129242-77100	ARMATURE ASSY	1							
5	2	129242-77110	YOKE ASSY	1							
6	2	129242-77120	BRUSH HOLDER ASSY	1							
7	3	129242-77130	BRUSH(-)	2							
8	3	129242-77140	BRUSH(+) SET	1							
9	3	129242-77150	BRUSH SPRING	4							
10	2	129242-77160	REAR COVER ASSY	1							
11	3	129242-77170	REAR COVER METAL	1							
12	2	118400-77170	PLANET GEAR	3							
13	2	129242-77180	CENTER BRACKET(P)	1							
14	3	129698-77190	BRACKET	1							
15	2	129698-77200	INTERNAL GEAR	1							
16	2	129242-77210	CENTER BRACKET(A)	1							
17	2	129698-77220	PINION ASSY	1							
18	2	129698-77230	SHAFT(PINION	1							
19	2	129698-77250	WASHER SET	1							
20	2	129242-77260	GEAR CASE ASSY	1							
21	3	X2114535200	METAL, STARTER	1							
22	2	129242-77270	SHIFT LEVER SET	1							
23	2	129242-77280	DUST COVER KIT	1							
24	2	124195-77770	BOLT, THROUGH	2							

(C)Copy Rights YANMAR CO.,LTD and YANMAR AGRICULTURAL EQUIPMENT CO.,LTD.

PREVIEW OF YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 5 of 18 pages

The full manual includes:

- All 18 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Yanmar 3TNV88-N5FA Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual