YANMAR

PARTS CATALOG

PREVIEW - YOUFIXTHIS.COM

Published 2008/7 (Jul.)

0CR10-G47802

Download full manual at youfixthis.com

CONTENTS

MODEL : 4LHA-ST/DT/HT/(Z)E(P)
PC NO : 0CR10-G47802

Fig.No. GROUP NAME

4LHA-ST/DT/HT/(Z)E(P)

1. CYLINDER BLOCK
2. GEAR HOUSING
3. FLYWHEEL HOUSING
4. MOUNTING FOOT(4LHA-ST/DT(Z)E(P))
5. MOUNTING FOOT(4LHA-HT(Z)E(P))
6. LUB.OIL SUMP
7. OIL SEAL HOUSING
8. LABEL
9. CYLINDER HEAD(4LHA-ST/DT(Z)E(P))
10. CYLINDER HEAD(4LHA-HT(Z)E(P))
11. BONNET & BREATHER
12. SUCTION MANIFOLD
13. EXHAUST MANIFOLD
14. CAMSHAFT & DRIVING GEAR
15. TURBOCHARGER(4LHA-ST(Z)E(P))
16. TURBOCHARGER(4LHA-DT(Z)E(P))
17. TURBOCHARGER(4LHA-HT(Z)E(P))
18. MIXING ELBOW & EXHAUST BEND
19. AIR COOLER
20. CRANKSHAFT
21. PISTON & CONNECTING ROD
22. LUB.OIL COOLER
23. LUB.OIL COOLER HOUSING
24. LUB.OIL SYSTEM
25. LUB.OIL PIPE
26. LUB.OIL PIPE(TURBOCHARGER)
27. LUB.OIL PIPE(COOLER)
28. C.S.W.PUMP(4LHA-ST/DT(Z)E(P))
29. C.S.W.PUMP(4LHA-HT(Z)E(P))


Fig.No. GROUP NAME

30. COOLING FRESH WATER PUMP
31. C.F.W.COOLER(4LHA-ST/DT(Z)E(P)
32. C.F.W.COOLER(4LHA-HT(Z)E(P))
33. C.S.W.PIPE(4LHA-STE/DTE(P))
34. C.S.W.PIPE(4LHA-STZE/DTZE(P))
35. C.S.W.PIPE(4LHA-HT(Z)E(P))
36. C.F.W.PIPE(4LHA-ST/DT(Z)E(P))
37. C.F.W.PIPE(4LHA-HT(Z)E(P))
38. C.S.W.STRAINER(OPTIONAL)
39. BILGE PUMP(STD,OPTIONAL)
40. BILGE PUMP(DX,OPTIONAL)
41. FUEL INJECTION PUMP(4LHA-ST/DT(Z)E(P))
42. FUEL INJECTION PUMP(4LHA-HT(Z)E(P))
43. GOVERNOR
44. FUEL FEED PUMP
45. TIMER
46. FUEL INJECTION VALVE
47. FUEL INJECTION PIPE
48. FUEL PIPE(4LHA-ST/DT(Z)E(P))
49. FUEL PIPE(4LHA-HT(Z)E(P))
50. FUEL STRAINER(4LHA-ST/DT(Z)E(P))
51. FUEL STRAINER(4LHA-HT(Z)E(P))
52. OIL/WATER SEPARATER(OPTIONAL)
53. ENGINE STOP DEVICE(4LHA-ST/DT(Z)E(P))
54. ENGINE STOP DEVICE(4LHA-HT(Z)E(P))
55. POWER STEERING PUMP
56. POWER STEERING COOLER & TANK
57. ATF PIPE
58. CLUTCH & DRIVE ATTACHMENT
59. STARTING MOTOR

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.1. CYLINDER BLOCK

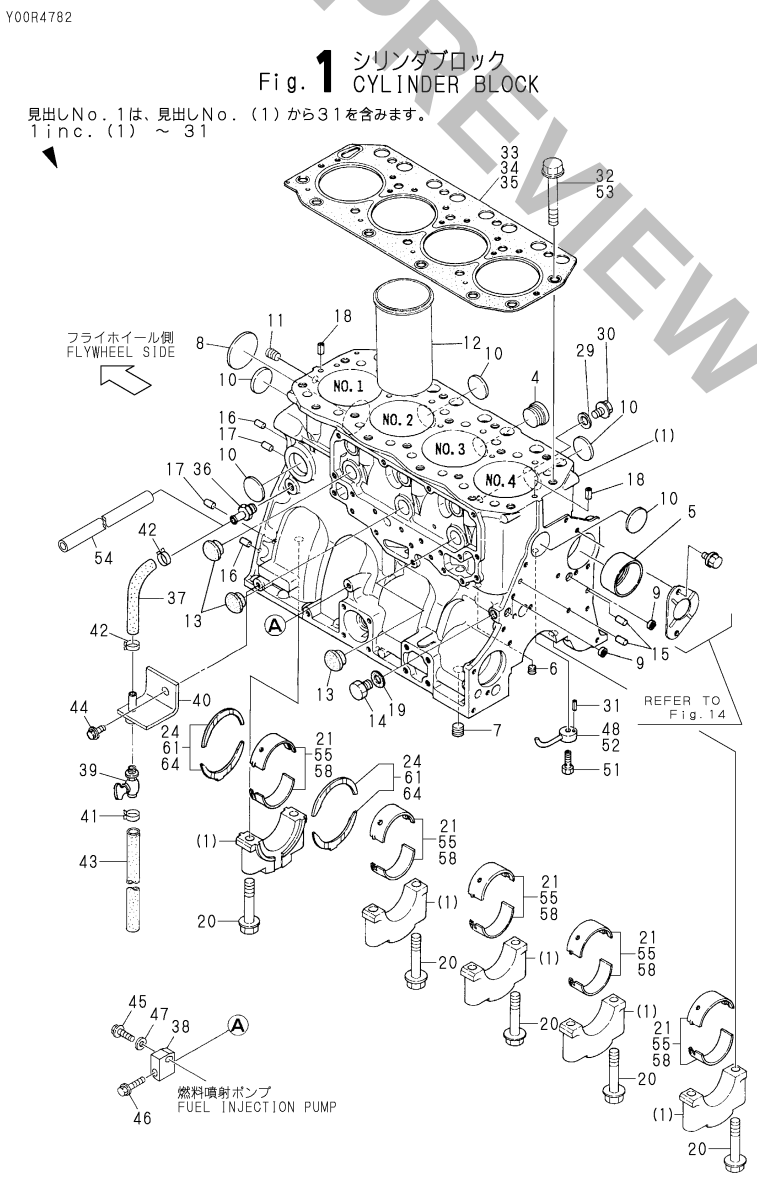

Remarks
(1)FOR ADJUSTMENT
(2)4LHA-STE/DTE(Z)E(P)
(3)4LHA-HTE(Z)E(P)

1. CYLINDER BLOCK

(A)=4LHA-STE(P) (D)=4LHA-DTZE(P)
(B)=4LHA-STZE(P) (E)=4LHA-HTE(P)
(C)=4LHA-DTE(P) (F)=4LHA-HTZE(P)

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	719171-01560	BLOCK ASSY, CYLINDER	1	1	1	1	1	1		
4	3	171051-01921	PLUG	1	1	1	1	1	1		
5	3	119000-02410	BUSH, CAMSHAFT	1	1	1	1	1	1		
6	3	23871-010000	PLUG PT1/8,SCREW	1	1						
6-1	3	23876-010000	PLUG PT1/8,SCREW	1	1	1	1	1	1	N	
	(A=E/#50582)	(B=E/#A0421)									
7	3	23871-030000	PLUG PT3/8,SCREW	1	1						
7-1	3	23876-030000	PLUG PT3/8,SCREW	1	1	1	1	1	1	N	
	(A=E/#50582)	(B=E/#A0421)									
8	3	27231-600000	PLUG 60	1	1	1	1	1	1		
9	3	27241-140000	PLUG 14	3	3	3	3	3	3		
10	3	119593-01870	PLUG,CUP	5	5	5	5	5	5		
11	3	119000-01880	SETSCREW,OIL GALLERY	1	1	1	1	1	1		
12	2	119171-01101	LINER, CYLINDER	4	4	4	4	4	4		
13	2	119000-01840	PLUG 25,RUBBER	3	3	3	3	3	3		
14	2	135602-34390	RETAINER	1	1	1	1	1	1		
15	2	129100-01580	PARALLEL PIN 8X16	2	2	2	2	2	2		
16	2	129100-01580	PARALLEL PIN 8X16	2	2	2	2	2	2		
17	2	129100-01580	PARALLEL PIN 8X16	2	2	2	2	2	2		
18	2	22351-080016	SPRING PIN 8X16	2	2	2	2	2	2		
19	2	23414-140000	GASKET 14, ROUND	1	1	1	1	1	1		
20	2	119000-02020	BOLT, METAL CAP	10	10	10	10	10	10		
21	2	719000-02800	METAL, MAIN	5	5	5	5	5	5		
24	2	119000-02930	WASHER, THRUST	2	2	2	2	2	2		
29	2	23414-100000	GASKET 10, ROUND	1	1	1	1	1	1		
30	2	135400-01790	PLUG	1	1	1	1	1	1		
31	2	22351-040008	SPRING PIN 4X 8	4	4	4	4				2
31A	2	22351-030010	SPRING PIN 3X10					4	4		3
32	1	119174-01200	BOLT, CYLINDER HEAD	18	18	18	18				
33	1	119174-01340	GASKET,CYL.HEADT1.30	1	1	1	1	1	1		
34	1	119174-01330	GASKET,CYL.HEAD T1.2	1	1	1	1	1	1		1
35	1	119174-01350	GASKET,CYL.HEAD T1.4	1	1	1	1	1	1		1
36	1	121550-49111	JOINT PT1/4	1	1	1	1	1	1		
37	1	119173-49160	PIPE	1	1	1	1				
38	1	119181-01990	RETAINER	1	1	1	1				
39	1	128695-44090	PEACOCK	1	1						
39-1	1	129670-49290	COCK R1/8 ASSY	1	1	1	1			N	
	(A=E/#50717)	(B=E/#A0491)									
40	1	119173-49170	BRACKET	1	1	1	1				
41	1	124460-77680	RETAINER	1	1	1	1				
42	1	23000-016000	CLAMP 16	2	2	2	2				
43	1	23061-070300	PIPE 7X 300	1	1	1	1				
44	1	26106-080122	BOLT M 8X 12 PLATED	1	1	1	1				
45	1	26106-080352	BOLT M 8X 35 PLATED	1	1	1	1				
46	1	26106-080402	BOLT M 8X 40 PLATED	1	1	1	1				
47	1	106100-55800	WASHER	1	1	1	1				
48	1	119174-39560	NOZZLE CMP,PSTN.COOL	4	4	4	4				
51	1	23857-030000	JOINT BOLT 3	4	4	4	4	4	4		
52	1	119187-39650	NOZZLE, PISTON JET					4	4		
53	1	119000-01200	BOLT, CYLINDER HEAD					18	18		
54	1	119171-49160	PIPE					1	1		

N:Old ⇔ New (Yes/No), Q:Old ⇔ New (No/Yes), R:Old ⇔ New (Yes/Yes), S:Old ⇔ New (No/No), W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

++ CONTINUE ++


(C)Copy Rights YANMAR CO.,LTD.


PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

Fig.4. MOUNTING FOOT(4LHA-ST/DT(Z)E(P))

Y00R4782

Fig.**4** マウンティングフート（4LHA−ST/DT（Z）E（P））
MOUNTING FOOT(4LHA-ST/DT(Z)E(P))

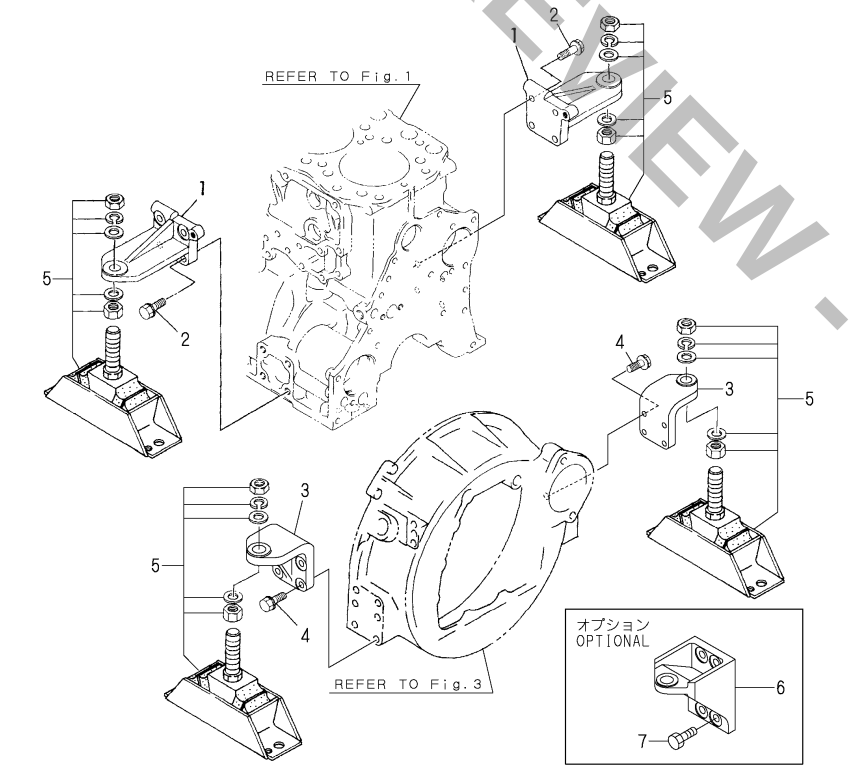

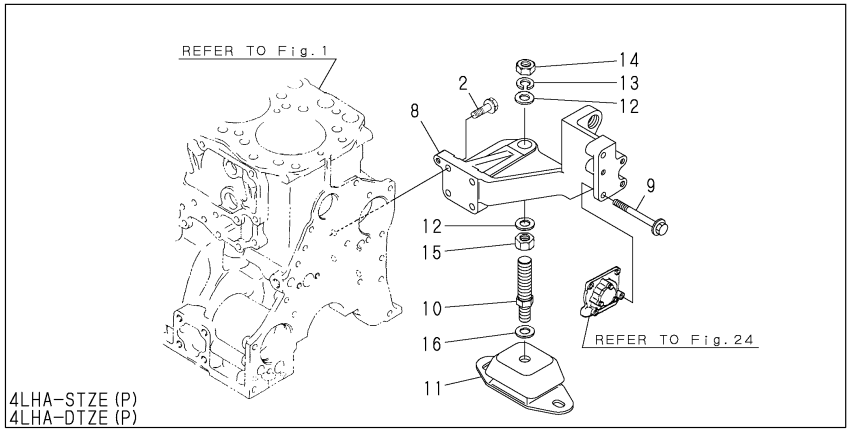

4. MOUNTING FOOT(4LHA-ST/DT(Z)E(P))

(A)=4LHA-STE(P)　(D)=4LHA-DTZE(P)
(B)=4LHA-STZE(P)　(E)=4LHA-HTE(P)
(C)=4LHA-DTE(P)　(F)=4LHA-HTZE(P)


	REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
	1	1	119173-08100	BRACKET, ENGINE	2	1	2	1				
	2	1	26106-100302	BOLT M10X 30 PLATED	8	8	8	8				
	3	1	119175-08120	BRACKET, ENGINE	2	2	2	2				
	4	1	26106-100302	BOLT M10X 30 PLATED	8	8	8	8				
	5	1	119173-08330	ABSORBER	4							
	5A	1	119173-08440	ABSORBER			4					
	6	1	119175-08110	BRACKET,ENGINE	2							
I	6-1	1	119175-08111	BRACKET,ENGINE,R	2		2					R
		(A=E/#51410)										
	7	1	26116-120352	BOLT M12X 35 PLATED	8		8					
	8	1	119175-08160	BRACKET,ENGINE		1		1				
	9	1	26106-080802	BOLT M 8X 80 PLATED		2		2				
	10	1	119175-08300	BOLT,FLEXIBLE MOUNT		2						
	10-1	1	119175-08301	BOLT,FLEXIBLE MOUNT		2		2				N
			(B=E/#A0463)									
	11	1	119175-08320	MOUNT,RUBBER		2		2				
	12	1	22117-200000	WASHER 20		4		4				
	13	1	22217-200000	SPRING WASHER 20		2		2				
	14	1	26736-200002	NUT M20		2		2				
	15	1	26776-200002	LOCK NUT 20		2		2				
	16	1	119175-08330	WASHER		2		2				W
			(B=E/#A0463)									

N:Old $\overset{\text{Yes}}{\underset{\text{No}}{\leftarrow\rightarrow}}$ New, Q:Old $\overset{\text{No}}{\underset{\text{Yes}}{\leftarrow\rightarrow}}$ New, R:Old $\overset{\text{Yes}}{\underset{\text{Yes}}{\leftarrow\rightarrow}}$ New, S:Old $\overset{\text{No}}{\underset{\text{No}}{\leftarrow\rightarrow}}$ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

(C)Copy Rights YANMAR CO.,LTD.

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

Fig.24. LUB.OIL SYSTEM

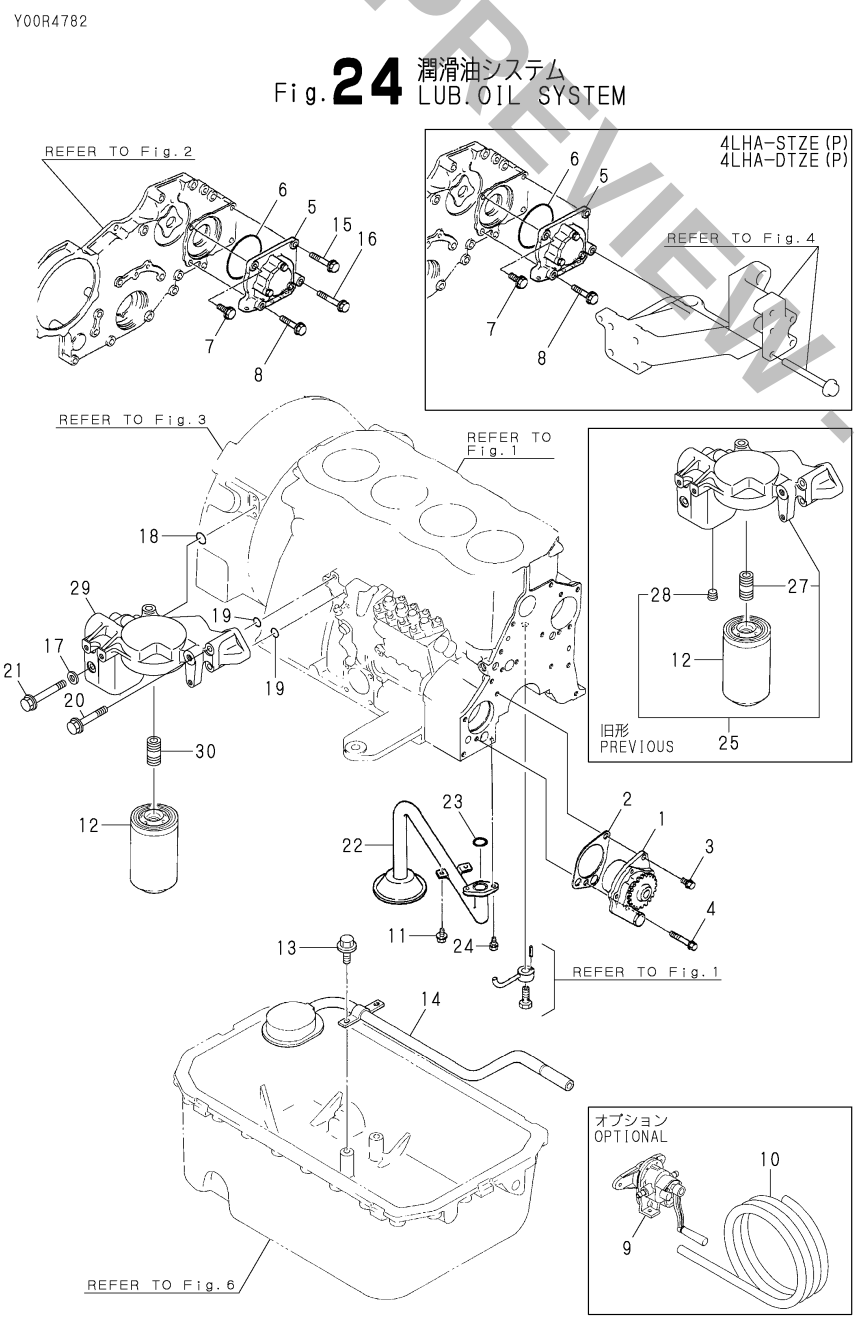

Download full manual at youfixthis.com

24. LUB.OIL SYSTEM

(A)=4LHA-STE(P) (B)=4LHA-STZE(P) (C)=4LHA-DTE(P) (D)=4LHA-DTZE(P) (E)=4LHA-HTE(P) (F)=4LHA-HTZE(P)


	REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
	1	1	119000-32001	PUMP ASSY, LUB.OIL	1	1	1	1	1	1		
	2	1	119000-32020	GASKET, L.O.PUMP	1	1	1	1	1	1		
	3	1	26106-080162	BOLT M 8X 16 PLATED	1	1	1	1	1	1		
	4	1	26106-080502	BOLT M 8X 50 PLATED	1	1	1	1	1	1		
	5	1	119187-32000	LUB. OIL PUMP	1	1	1	1				
	6	1	24341-000800	O-RING 1A S-80.0	1	1	1	1				
	7	1	26106-080252	BOLT M 8X 25 PLATED	1	1	1	1				
	8	1	26106-080452	BOLT M 8X 45 PLATED	1	1	1	1				
	9	1	124413-39100	PUMP, OIL SUMP	1	1	1	1	1	1		
	10	1	43720-001220	PIPE	1	1	1	1	1	1		
	11	1	26106-080162	BOLT M 8X 16 PLATED	2	2	2	2	2	2		
	12	1	127695-35150	STRAINER, LUB. OIL	1	1	1	1	1	1		
	13	1	26106-060122	BOLT M 6X 12 PLATED	2	2	2	2				
	14	1	119187-35100	PIPE, OIL INLET	1	1	1	1				
	15	1	26106-080552	BOLT M 8X 55 PLATED	1		1					
	16	1	26106-080702	BOLT M 8X 70 PLATED	1		1					
	17	1	22137-080000	WASHER 8, POLISHED	2	2	2	2	2	2		
	18	1	24311-000120	O-RING 1A P 12.0	1	1	1	1	1	1		
	19	1	24311-000180	O-RING 1A P-18.0	2	2	2	2	2	2		
	20	1	26106-081102	BOLT M 8X110 PLATED	2	2	2	2	2	2		
	21	1	26106-081152	BOLT M 8X115 PLATED	2	2	2	2	2	2		
	22	1	119100-35090	PIPE, OIL INLET	1	1	1	1	1	1		
	23	1	24311-000220	O-RING 1A P-22.0	1	1	1	1	1	1		
	24	1	26013-080162	BOLT W/WASHER M8X16	2	2	2	2	2	2		
I	25	1	119175-35200	BRACKET,LO FILTR CMP	1	1						Z
			(A=E/#51645)	(B=E/#A0836)								
I	27	2	119175-35180	STUD,LUB.OIL FILTER	1	1						Z
			(A=E/#51645)	(B=E/#A0836)								
	28	2	23871-030000	PLUG PT3/8,SCREW	2	2						
	28-1	2	23876-030000	PLUG PT3/8,SCREW	2	2						N
			(A=E/#50582)	(B=E/#A0421)								
I	28-2	2	23876-030000	PLUG PT3/8,SCREW	2	2						Z
			(A=E/#51645)	(B=E/#A0836)								
I	29	1	119175-35150	BRACKET,LO FILTER	1	1	1	1	1	1		W
			(A=E/#51645)	(B=E/#A0836)								
I	30	1	119175-35180	STUD,LUB.OIL FILTER	1	1	1	1	1	1		W
			(A=E/#51645)	(B=E/#A0836)								

N:Old $\overset{\text{Yes}}{\underset{\text{No}}{\leftrightarrows}}$ New, Q:Old $\overset{\text{No}}{\underset{\text{Yes}}{\leftrightarrows}}$ New, R:Old $\overset{\text{Yes}}{\underset{\text{Yes}}{\leftrightarrows}}$ New, S:Old $\overset{\text{No}}{\underset{\text{No}}{\leftrightarrows}}$ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

(C)Copy Rights YANMAR CO.,LTD.

PREVIEW - YOUFIXTHIS.COM

Fig.33. C.S.W.PIPE(4LHA-STE/DTE(P))

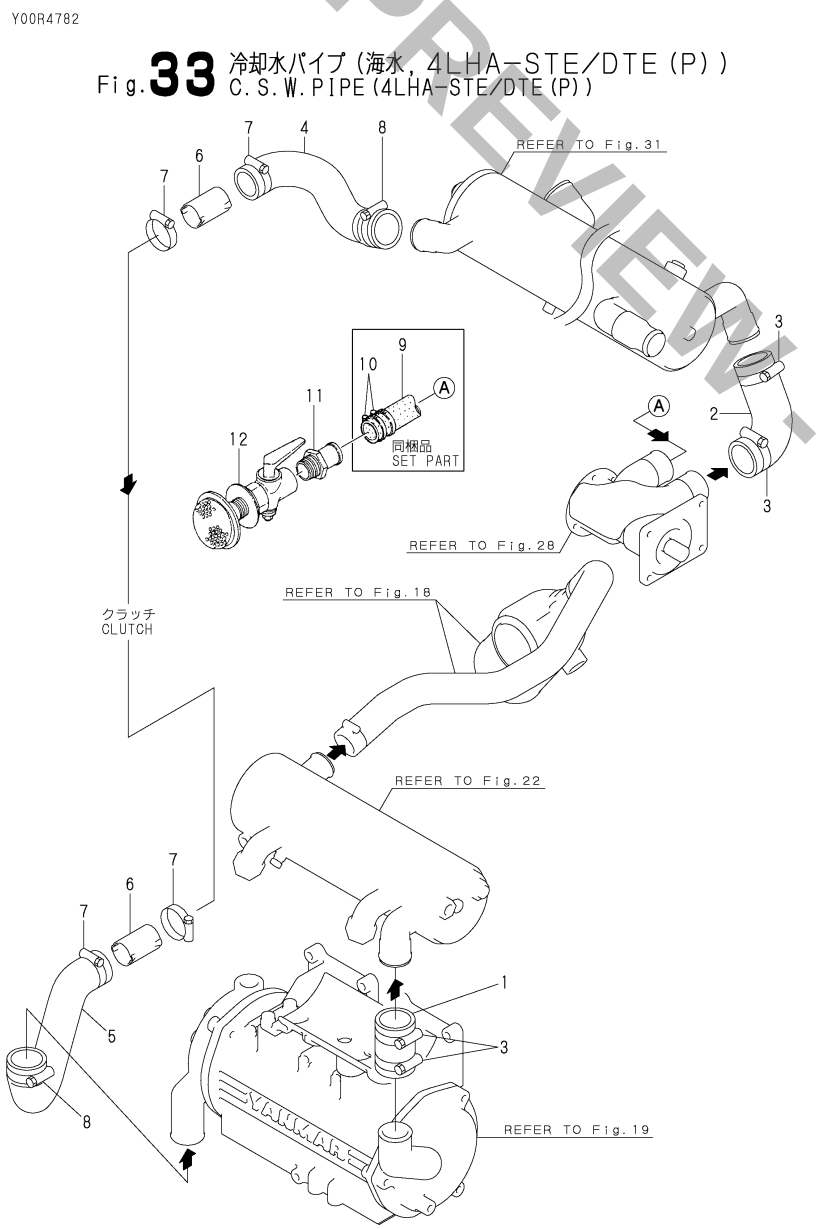

Remarks
(1)OPTIONAL
(2)PACKAGED PART.

33. C.S.W.PIPE(4LHA-STE/DTE(P))

(A)=4LHA-STE(P)
(B)=4LHA-STZE(P)
(C)=4LHA-DTE(P)
(D)=4LHA-DTZE(P)
(E)=4LHA-HTE(P)
(F)=4LHA-HTZE(P)

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	119175-49030	HOSE,I/C,OUT	1		1					
2	1	119175-49250	HOSE,SEA WATER	1		1					
3	1	23000-054000	CLAMP 54	4		4					
4	1	119175-49700	HOSE,GEAR IN	1							
5	1	119175-49710	HOSE,GEAR OUT	1							
6	1	119181-49741	JOINT	2							
7	1	23000-048000	CLAMP 48	4							
8	1	23000-054000	CLAMP 54	2							
9	1	127610-49010	PIPE, COOLING WATER	1		1					2
10	1	23000-054000	CLAMP 54	4		4					2
11	1	43530-500610	JOINT (30A)	1		1					1
12	1	43662-030030	COCK ASSY, SEA WATER	1		1					1

N:Old ◂Yes/No▸ New, Q:Old ◂No/Yes▸ New, R:Old ◂Yes/Yes▸ New, S:Old ◂No/No▸ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change


(C)Copy Rights YANMAR CO.,LTD.

PREVIEW: YOUFIXTHIS.COM
Download full manual at youfixthis.com

Fig.41. FUEL INJECTION PUMP(4LHA-ST/DT(Z)E(P))

Y00R4782

Fig.**41** 燃料噴射ポンプ(4LHA-ST/DT(Z)E(P))
FUEL INJECTION PUMP(4LHA-ST/DT(Z)E(P))

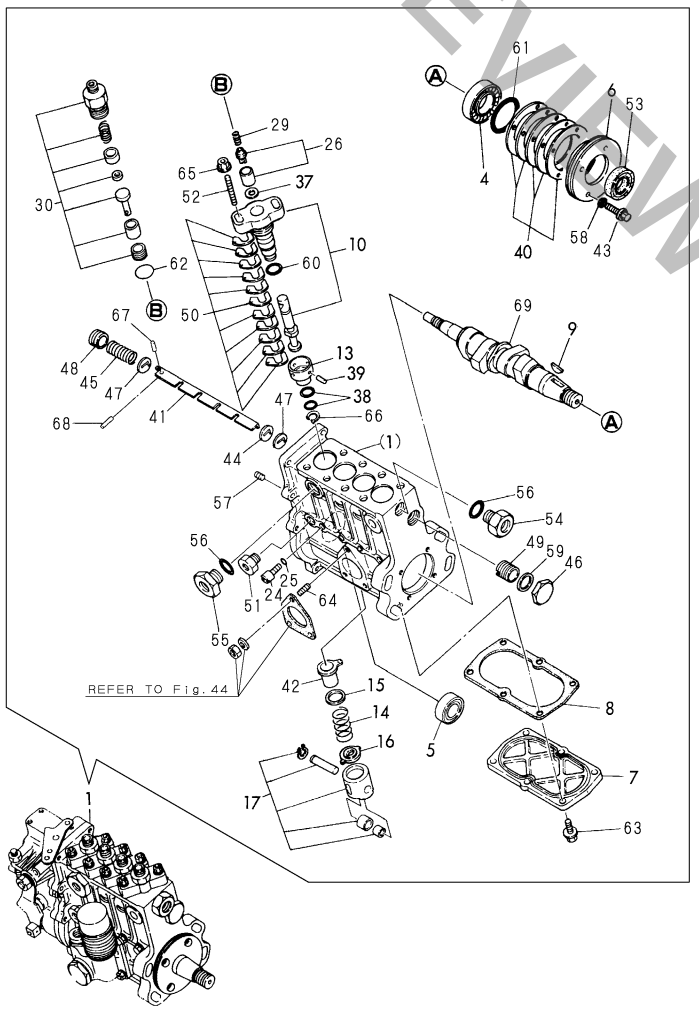

Remarks
(1)GOVERNOR ASSY(FIG 43) AND FUEL FEED PUMP ASSY(FIG 44) IS INCORPORATED IN THIS FUEL INJECTION PUMP ASSY(REF. NO.1,1A)

41. FUEL INJECTION PUMP(4LHA-ST/DT(Z)E(P))

(A)=4LHA-STE(P) (D)=4LHA-DTZE(P)
(B)=4LHA-STZE(P) (E)=4LHA-HTE(P)
(C)=4LHA-DTE(P) (F)=4LHA-HTZE(P)

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	719175-51310	PUMP ASSY, F.INJECT.	1	1						1
1A	1	719173-51310	PUMP ASSY, F. INJECT			1	1				1
4	2	119000-51050	BEARING	1	1	1	1				
5	2	122710-51050	BEARING, ROLLER	1	1	1	1				
6	2	119000-51060	SUPPORT, BEARING	1	1	1	1				
7	2	119100-51081	COVER	1	1	1	1				
8	2	119100-51091	GASKET, LOWER COVER	1	1	1	1				
9	2	144626-51090	KEY 5X19	1	1	1	1				
10	2	119593-51100	PLUNGER W/BARREL	4	4	4	4				
13	2	119000-51151	DEFLECTOR	4	4	4	4				
14	2	119000-51161	SPRING	4	4	4	4				
15	2	119000-51170	SEAT A, PLNGR.SPRING	4	4	4	4				
16	2	119000-51181	SEAT B, PLNGR.SPRING	4	4	4	4				
17	2	119573-51200	TAPPET	4	4	4	4				
24	2	129155-51270	LOCKING, TAPPET	4	4	4	4				
25	2	129155-51280	O-RING S6	4	4	4	4				
26	2	119593-51300	VALVE W/SEAT,DELIVE	4	4	4	4				
29	2	119000-51330	SPRING,DELIVERY VLV.	4	4	4	4				
30	2	119175-51340	DELY VALVE CMP	4	4	4	4				
37	2	122710-51350	GASKET, DELIVERY	4	4	4	4				
38	2	119000-51410	O-RING S18	8	8	8	8				
39	2	119000-51430	PIN, DEFLECTOR	4	4	4	4				
40	2	119000-51450	SHIM SET, CAMSHAFT	1	1	1	1				
41	2	119187-51500	RACK,CONTROL	1	1	1	1				
42	2	119000-51510	SLEEVE, CONTROL	4	4						
42-1	2	119000-51511	SLEEVE, CONTROL	4	4	4	4				R
		(A=E/#50448) (B=E/#A0401)									
43	2	119175-51070	BOLT M 6X 20	4	4	4	4				
44	2	119593-51520	WASHER	1	1	1	1				
45	2	119593-51530	SPRING	1	1	1	1				
46	2	119000-51550	COVER, RACK	1	1	1	1				
47	2	119000-51570	GUIDE, RACK	2	2	2	2				
48	2	119000-51580	SCREW A, GUIDE CAP	1	1	1	1				
49	2	119000-51590	SCREW B, GUIDE CAP	1	1	1	1				
50	2	119000-51650	SHIM SET, ADJUSTING	8	8	8	8				
51	2	121850-51700	BUSHING, OIL FEED	1	1	1	1				
52	2	119000-51800	BOLT,BARREL MOUNTING	8	8	8	8				
53	2	119000-51900	OIL SEAL AC1290E0	1	1	1	1				
54	2	121952-51900	ADAPTER	1	1	1	1				
55	2	121952-51900	ADAPTER	1	1	1	1				
56	2	144626-51950	O-RING 1016	2	2	2	2				
57	2	137600-53900	SCREW M6X 6	1	1	1	1				
58	2	22190-060000	SEAL WASHER 6(BOLT)	4	4	4	4				
59	2	23414-220029	GASKET 22	1	1	1	1				
60	2	24341-000260	O-RING 1A S-26.0	4	4	4	4				
61	2	24341-000500	O-RING 1A S-50.0	1	1	1	1				
62	2	24352-010160	O-RING	4	4	4	4				
63	2	26106-060182	BOLT M 6X 18 PLATED	6	6	6	6				
64	2	26216-060162	STUD M 6X 16 PLATED	3	3	3	3				
65	2	26366-080002	NUT M 8	8	8	8	8				
66	2	22242-000200	CIRCLIP 20	4	4	4	4				


N:Old ⇔ New, Q:Old ⇔ New, R:Old ⇔ New, S:Old ⇔ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

++ CONTINUE ++

(C)Copy Rights YANMAR CO.,LTD.

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

Fig.62. WIRE HARNESS & SENSOR

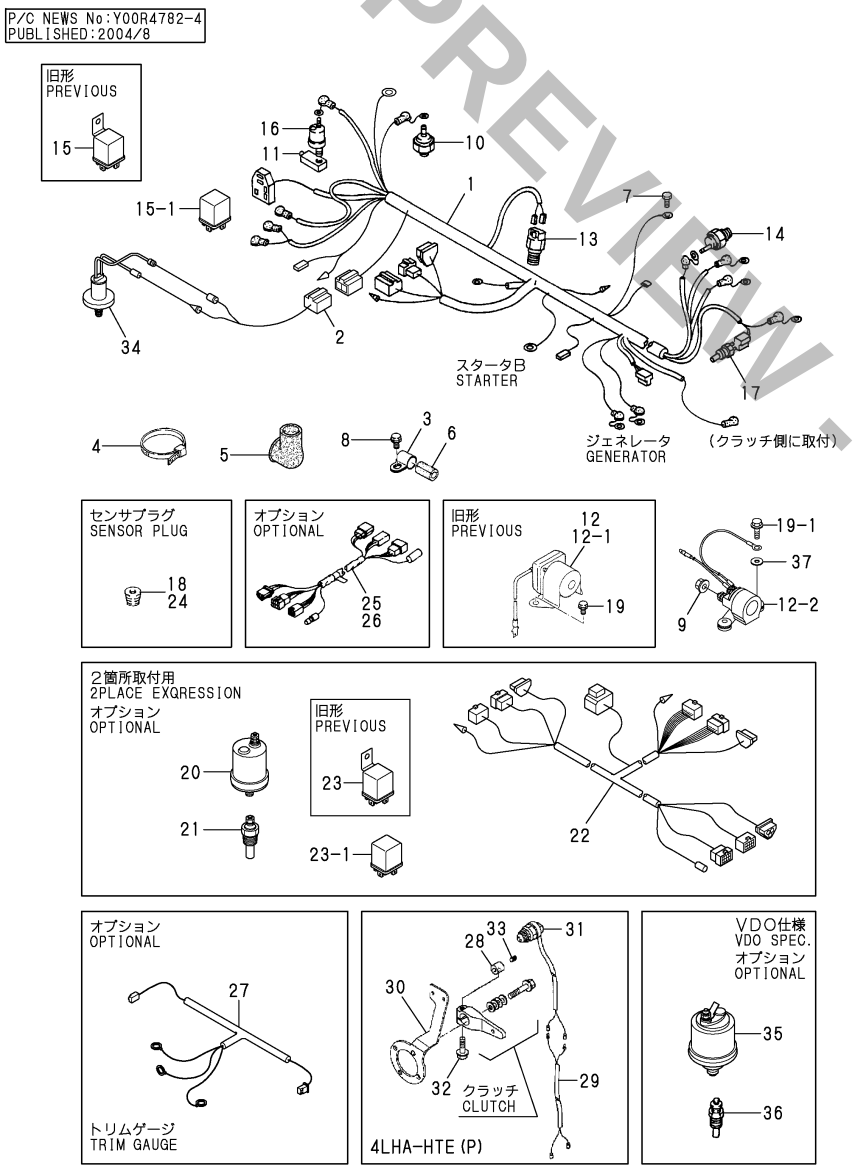

Remarks
(1)OPTIONAL
(2)INTERCHANGEABLE BY SIMULTANEOUS REPLACEMENT WITH REF.NO.12-2,19-1, 37.

62. WIRE HARNESS & SENSOR

(A)=4LHA-STE(P) (B)=4LHA-STZE(P) (C)=4LHA-DTE(P) (D)=4LHA-DTZE(P) (E)=4LHA-HTE(P) (F)=4LHA-HTZE(P)

	REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
	1	1	119175-77810	WIREHARNESS	1	1						
	1-1	1	119173-77851	HARNESS, WIRE	1	1	1	1			N	
		(A=E/#50717)	(B=E/#A0491)									
	1A	1	119172-77820	WIREHARNESS					1	1		
	2	1	119175-77850	WIREHARNESS	1	1					W	
		(A=E/#50717)	(B=E/#A0491)									
	3	1	124770-49310	RETAINER			1	1	1	1		
	4	1	121750-59890	CLAMP 140			1	1	1	1		
	5	1	124550-77030	COVER, TERMINAL			1	1	1	1		
	6	1	123682-77710	PROTECTOR			1	1	1	1		
	7	1	26106-080122	BOLT M 8X 12 PLATED	1	1	1	1	1	1		
	8	1	26106-080162	BOLT M 8X 16 PLATED	1	1	1	1	1	1		
	9	1	26366-060002	NUT M 6	2	2	2	2	2	2		
	10	1	124060-39451	SWITCH,OIL PRESSURE	1	1						
	10-1	1	124060-39452	SENDER,OIL PRESSURE	1	1	1	1	1	1	N	
		(A=E/#50979)	(B=E/#A0615)									
	11	1	123482-39680	DAMPER	1	1	1	1	1	1		
	12	1	129100-77910	RELAY, MAGNETIC	1	1						
	12-1	1	129490-77910	RELAY, STARTER	1	1	1	1	1	1	N	
		(A=E/#50290)	(B=E/#50293)									
I	12-2	1	119575-77510	RELAY, STARTER	1	1	1	1	1	1	F	2
		(A=*2004.06)	(B=*2004.06)	(C=*2004.06) (D=*2004.06)	(E=*2004.06)				(F=*2004.06)			
	13	1	128170-91160	SENSOR, TACHOMETER	1	1	1	1	1	1		
	14	1	127610-91350	SWITCH, THERMO	1	1	1	1	1	1		
	15	1	124617-91850	RELAY	1	1						
	15-1	1	119773-91850	RELAY	1	1	1	1			N	
		(A=E/#50979)	(B=E/#A0615)									
	16	1	119773-91500	SENDER UNIT	1	1						
	16-1	1	119773-91501	SENDER UNIT	1	1	1	1	1	1	N	
		(A=E/#51410)	(B=E/#A0821)									
	17	1	144626-91570	SENDER UNIT	1	1	1	1	1	1		
	18	1	23871-030000	PLUG PT3/8,SCREW	2	2						
	18-1	1	23876-030000	PLUG PT3/8,SCREW	2	2	2	2	2	2	N	
		(A=E/#50582)	(B=E/#A0421)									
	19	1	26106-060122	BOLT M 6X 12 PLATED	2	2	2	2	2	2		
I	19-1	1	26106-060202	BOLT M 6X 20 PLATED	2	2	2	2	2	2	F	2
		(A=*2004.06)	(B=*2004.06)	(C=*2004.06) (D=*2004.06)	(E=*2004.06)				(F=*2004.06)			
	20	1	129574-91560	SENDER UNIT	1	1						1
	20-1	1	129574-91561	SENDER UNIT	1	1	1	1	1	1	N	1
		(A=E/#52121)	(B=*2001.06)									
	21	1	129574-91570	SENDER UNIT	1	1	1	1	1	1		1
	22	1	129574-77980	HARNESS.	1	1	1	1	1	1		1
	23	1	124617-91850	RELAY	1	1						1
	23-1	1	119773-91850	RELAY	1	1	1	1	1	1	N	1
		(A=E/#50979)	(B=E/#A0615)									
	24	1	23876-010000	PLUG PT1/8,SCREW	1	1	1	1	1	1		
	25	1	129574-77710	HARNESS, WIRE(4M)	1	1	1	1	1	1		1
	26	1	129574-77720	HARNESS, WIRE(6M)	1	1	1	1	1	1		1
	27	1	119778-91500	WIRE HARNESS		1		1		1	W	1
			(B=E/#A0463)									
	28	1	177074-06300	SETTING,SAFETY SWIT.					1			1

N:Old ⇔ New, Q:Old ⇔ New, R:Old ⇔ New, S:Old ⇔ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

++ CONTINUE ++

(C)Copy Rights YANMAR CO.,LTD.

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 8 of 96 pages

The full manual includes:

- All 96 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Yanmar 4LHA-STE, 4LHA-STZE, 4LHA-STP, 4LHA-STZP, 4LHA-DTE, 4LHA-DTZE, 4LHA-DTP, 4LHA-DTZP, 4LHA-HTE, 4LHA-HTZE, 4LHA-HTP, 4LHA-HTZP, 4LHA-ST/DT/HT/(Z)E(P) Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual