```
[Info]
PcNo=Y00B4721
PcName=4TNC88L-RB(B50-2)
JpnUse=1
JpnSec1=ƒGƒ“ƒWƒ“
JpnSec2=—§ ¬
JpnSec3=TNC
JpnPreface=0
EngUse=1
EngSec1=ENGINE
EngSec2=SMALL VERTICAL (B)
EngSec3=TNC
EngPreface=0
```

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

```
0,Y00B4721
1,001,,"ENGINE 4TNC88L-RB"
2,1,,"CYLINDER BLOCK",4TNC88L-RB,,,
2,2,,"GEAR HOUSING",4TNC88L-RB,,,
2,3,,"FLYWHEEL HOUSING &LUB.OIL SUMP",4TNC88L-RB,,,
2,4,,"CYLINDER HEAD & BONNET",4TNC88L-RB,,,
2,5,,"SUC. MANIFOLD & AIR CLEANER",4TNC88L-RB,,,
2,6,,"EXH. MANIFOLD & SILENCER",4TNC88L-RB,,,
2,7,,"CAMSHAFT & DRIVING GEAR",4TNC88L-RB,,,
2,8,,"CRANKSHAFT & PISTON",4TNC88L-RB,,,
2,9,,"LUB. OIL SYSTEM",4TNC88L-RB,,,
2,10,,"COOLING WATER SYSTEM",4TNC88L-RB,,,
2,11,,"FUEL INJECTION PUMP",4TNC88L-RB,,,
2,12,,"FUEL INJECTION PIPE",4TNC88L-RB,,,
2,13,,"FUEL PIPE",4TNC88L-RB,,,
2,14,,GOVERNOR,4TNC88L-RB,,,
2,15,,"ENGINE STOP DEVICE",4TNC88L-RB,,,
2,16,,"STARTING MOTOR",4TNC88L-RB,,,
2,17,,GENERATOR,4TNC88L-RB,,,
2,18,,"GASKET SET(OPTIONAL) & TOOL",4TNC88L-RB,,,
```

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Fig. 1 シリンダブロック CYLINDER BLOCK

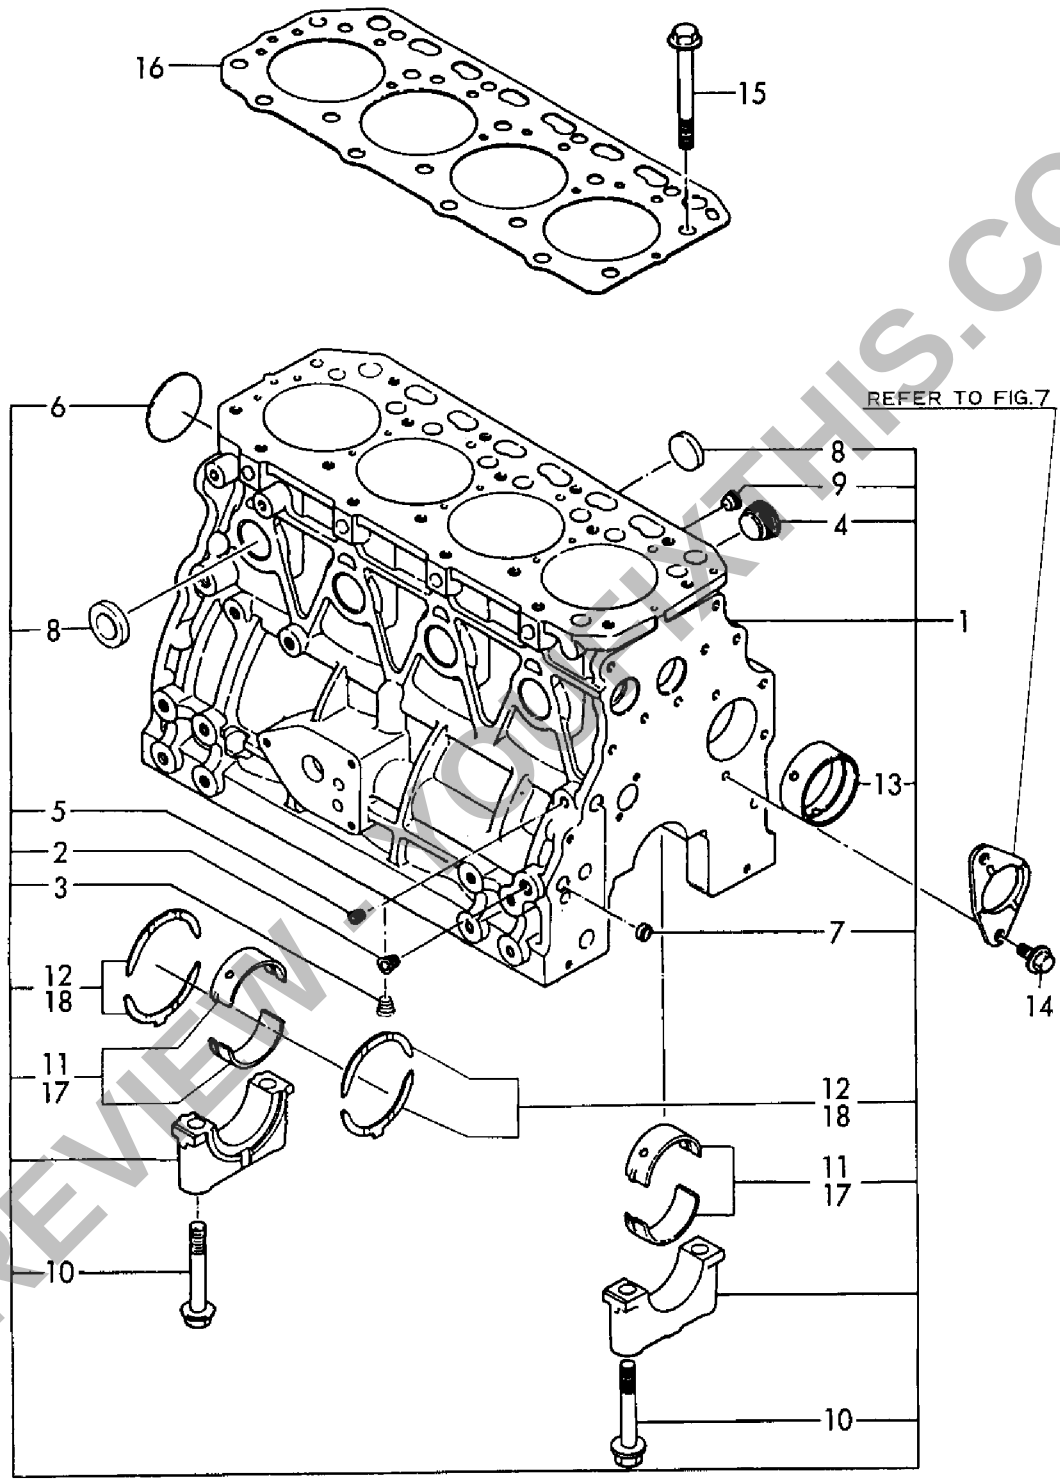

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Fig. 8 クランクシャフト＆ピストン CRANKSHAFT & PISTON

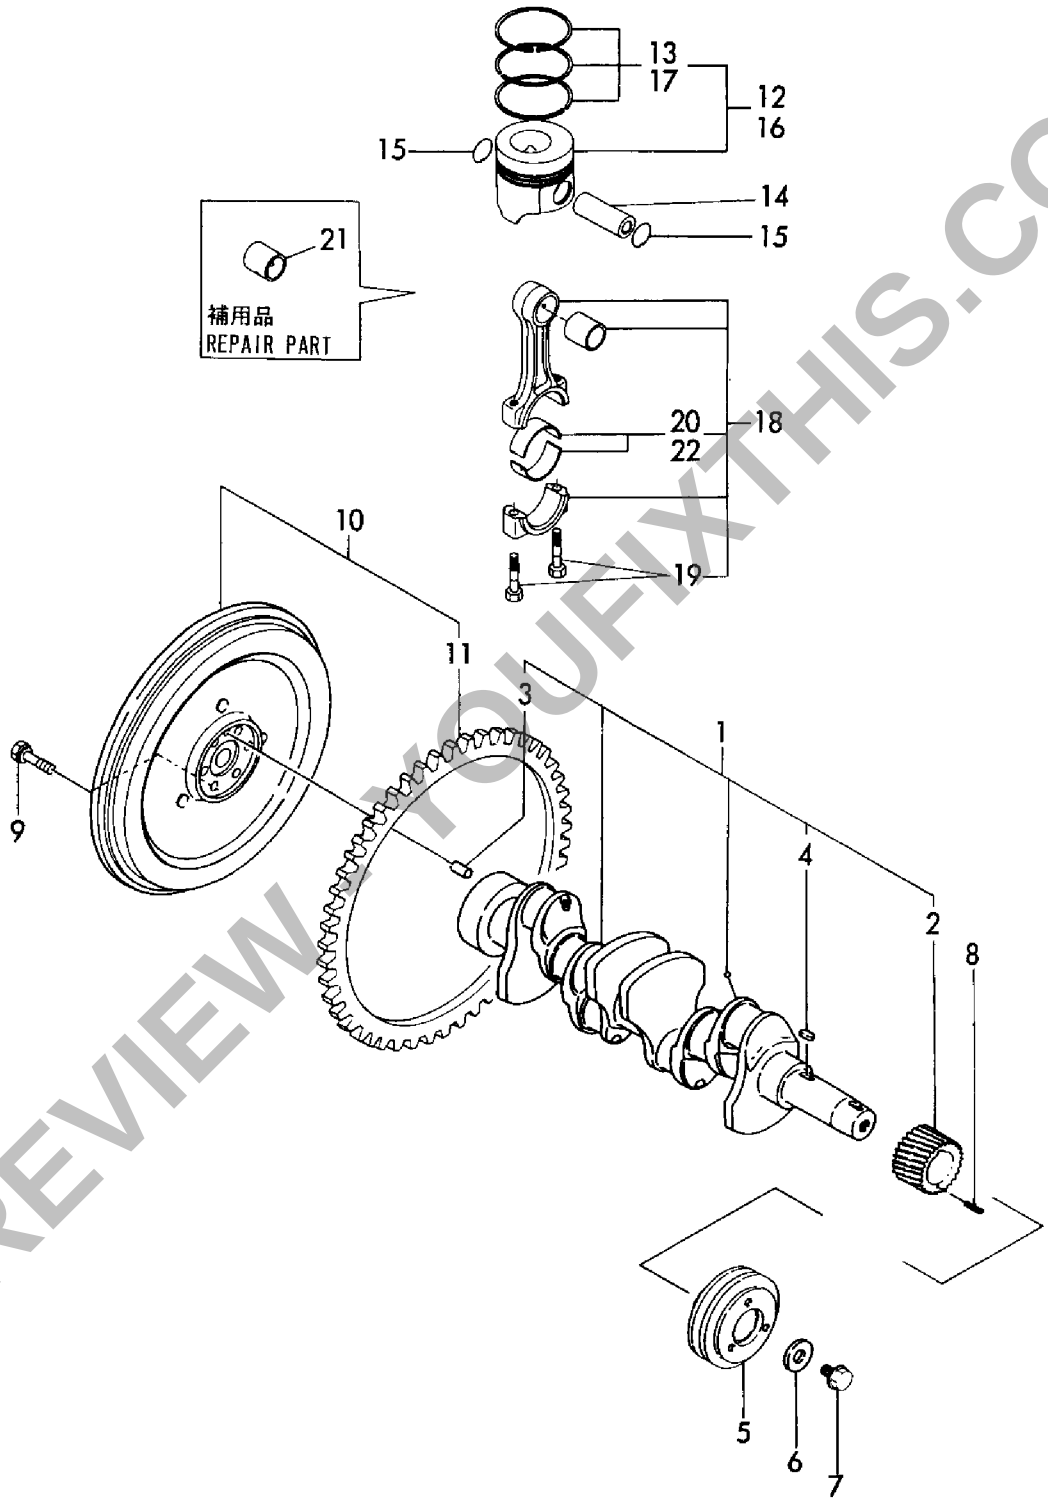

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Fig. 11 燃料噴射ポンプ
FUEL INJECTION PUMP

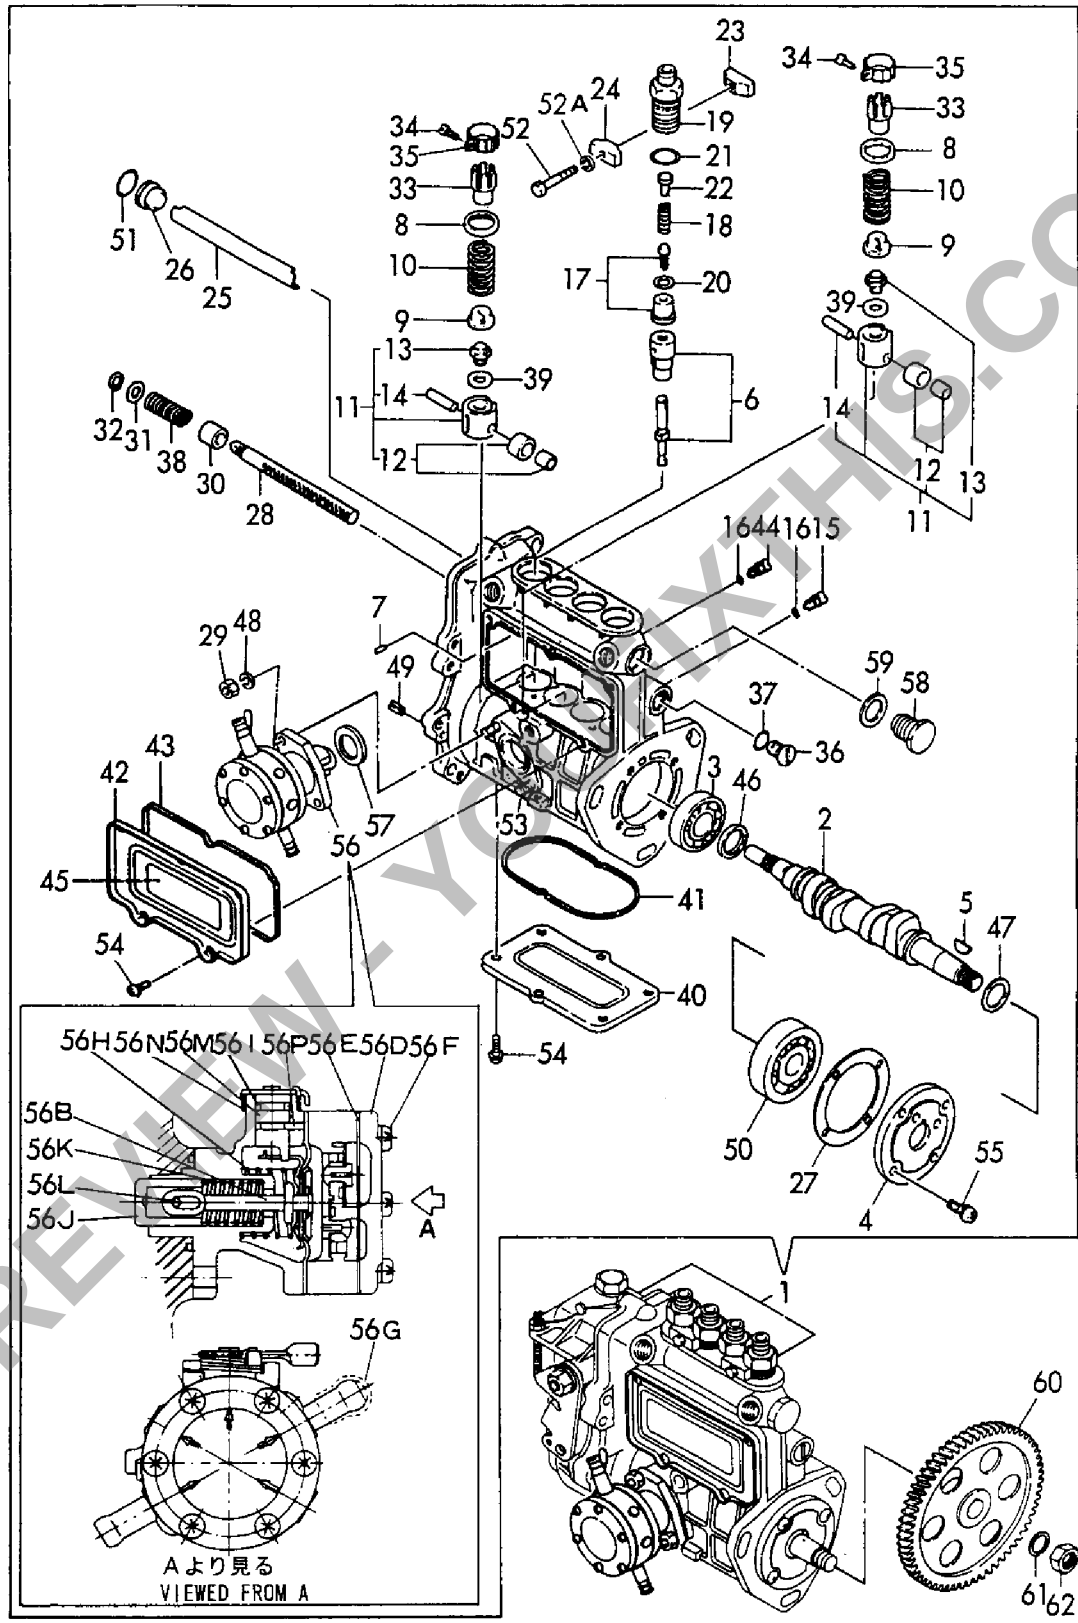

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig. 16 スターティングモータ STARTING MOTOR

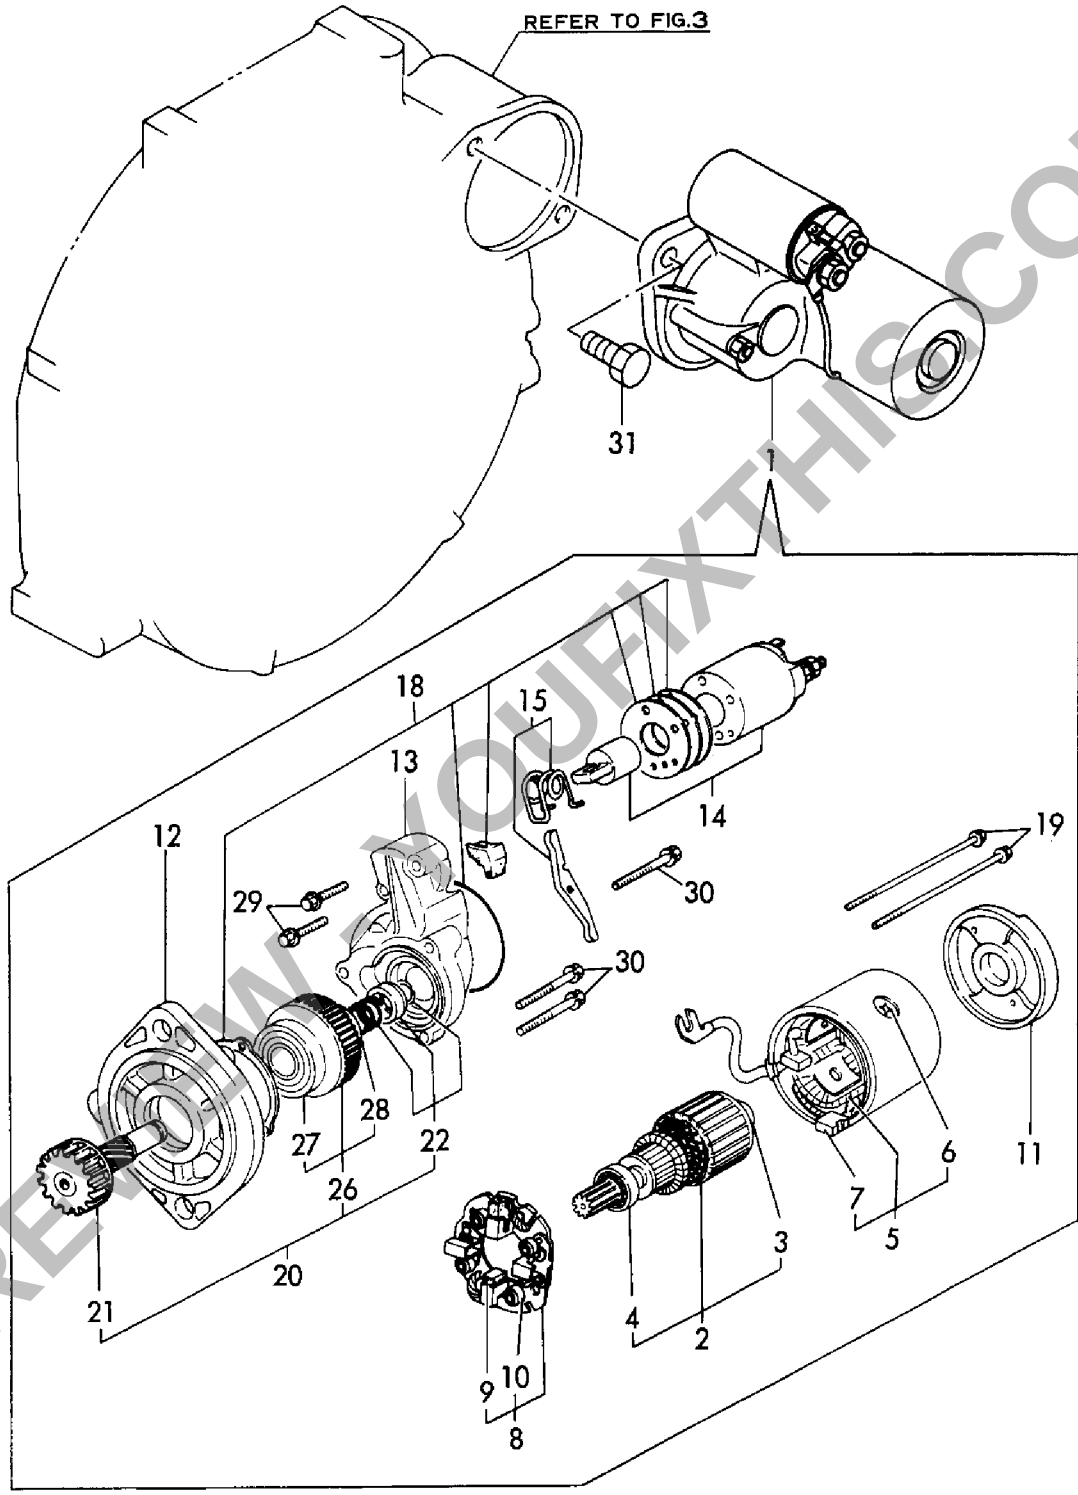

PREVIEW ONLY
YOUFIXTHIS.COM

Download full manual at youfixthis.com

```
1,1,,729407-01560,,"BLOCK ASSY, CYLINDER",1,,,,,,,,,,,,,,,,
1-1,1,,729407-01561,,"BLOCK ASSY, CYLINDER",1,,,,,,N,,,"E/# 01169",,,,,,,,
2,3,,124160-01910,,"PLUG PT1/4",2,,,,,,,,,,,,,,,,
3,3,,124160-01910,,"PLUG PT1/4",1,,,,,,,,,,,,,,,,
4,3,,171051-01921,,PLUG,1,,,,,,,,,,,,,,,,
5,3,,23871-010000,,"PLUG PT1/8,SCREW",1,,,,,,,,,,,,,,,,
6,3,,27231-500000,,"PLUG 50",1,,,,,,,,,,,,,,,,
7,3,,27241-120000,,"PLUG 12",2,,,,,,,,,,,,,,,,
8,3,,27241-300000,,"PLUG 30",8,,,,,,,,,,,,,,,,
9,2,,23871-030000,,"PLUG PT3/8,SCREW",1,,,,,,,,,,,,,,,,
10,2,,129150-02020,,"BOLT, BEARING CAP",10,,,,,,,,,,,,,,,,
11,2,,129150-02800,,"MAIN BEARING",5,,,,,,,,,,,,,,,,
11-1,2,,129001-02800,,"MAIN BEARING",5,,,,,N,,,"E/# 01169",,,,,,,
12,2,,129150-02930,,"BEARING, THRUST",2,,,,,,,,,,,,,,,,
13,2,,129795-02411,,"BUSH, CAMSHAFT",1,,,,,,,,,,,,,,,,
14,1,,26106-080162,,"BOLT M 8X 16 PLATED",2,,,,,,,,,,,,,,,,
15,1,,129150-01200,,"STUD, CYL. HEAD",18,,,,,,,,,,,,,,,,
16,1,,129407-01340,,"GASKET,CYL.HEAD",1,,,,,,,A,,,,,,,,
17,1,,129150-02870,,"MAIN BEARING US=0.25",5,,,,,,,1,,,,,,,,
18,1,,129150-02940,,"BEARING,THRUST .25OS",1,,,,,,,2,,,,,,,,
```

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

```
1,1,,719810-01500,,"HOUSING ASSY, GEAR",1,,,,,,,,,,,,,,,
2,2,,129795-01800,,"SEAL, OIL",1,,,,,,,,,,,,,,,
3,1,,121450-01560,,"STUD M 8X 22",3,,,,,,,,,,,,,,,
4,1,,124160-01751,,"CAP, LUB.OIL SUPPLY",1,,,,,,,,,,,,,,,
5,1,,129400-01520,,"FLANGE,GEARS HOUSING",1,,,,,,,,,,,,,,,
6,1,,124240-01871,,"COVER, HO-P",1,,,,,,,,,,,,,,,
7,1,,124240-01883,,"GASKET, (NON-ASB.)",1,,,,,,,A,,,,,,,,,
8,1,,129795-01950,,"PIPE, KNOCK L=18",2,,,,,,,,,,,,,,,
9,1,,121850-51960,,"O-RING, F.I.PUMP",1,,,,,,,A,,,,,,,,,
10,1,,24311-000160,,"O-RING 1A P-16.0",2,,,,,,,,,,,,,,,
11,1,,24311-000320,,"O-RING 1A P-32.0",1,,,,,,,A,,,,,,,,,
12,1,,26106-080122,,"BOLT M 8X 12 PLATED",4,,,,,,,,,,,,,,,
13,1,,26106-080162,,"BOLT M 8X 16 PLATED",1,,,,,,,,,,,,,,,
14,1,,26106-080162,,"BOLT M 8X 16 PLATED",3,,,,,,,,,,,,,,,
15,1,,26106-080202,,"BOLT M 8X 20 PLATED",2,,,,,,,,,,,,,,,
16,1,,26106-080452,,"BOLT M 8X 45 PLATED",6,,,,,,,,,,,,,,,
17,1,,26106-080552,,"BOLT M 8X 55 PLATED",3,,,,,,,,,,,,,,,
18,1,,26106-080852,,"BOLT M 8X 85 PLATED",4,,,,,,,,,,,,,,,
19,1,,26366-080002,,"NUT M 8",3,,,,,,,,,,,,,,,
20,1,,43400-500410,,"SEAL WASHER  8",4,,,,,,,,,,,,,,,
20-1,1,,22190-080002,,"SEAL WASHER  8S",4,,,,,,N,,,"E/# 02080",,,,,,,,
21,1,,43400-500410,,"SEAL WASHER  8",1,,,,,,,,,,,,,,,
21-1,1,,22190-080002,,"SEAL WASHER  8S",1,,,,,,N,,,"E/# 02080",,,,,,,,
22,1,,121023-01550,,"COVER, BLIND",1,,,,,,,,,,,,,,,
23,1,,24341-000240,,"O-RING 1A S-24.0",1,,,,,,,A,,,,,,,,,
24,1,,26106-060122,,"BOLT M 6X 12 PLATED",2,,,,,,,,,,,,,,,
25,1,,24311-000320,,"O-RING 1A P-32.0",1,,,,,,,A,,,,,,,,,
26,1,,171031-11741,,PIPE,1,,,,,,,,,,,,,,,
```

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 8 of 39 pages

The full manual includes:

- All 39 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Yanmar 4TNC88L-RB, B50-2 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual