
Fig.1. CYLINDER BLOCK

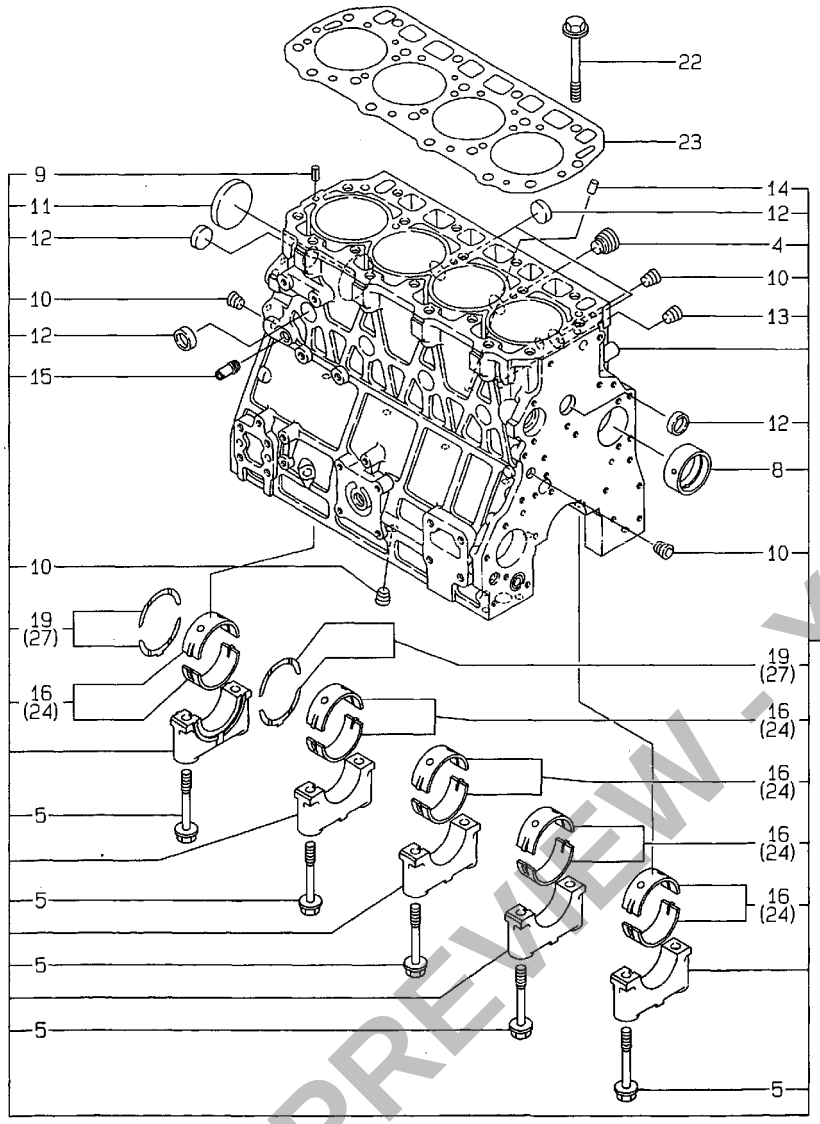

Remarks
(1) UNDER-SIZE(U.S=0.25)PART.
(2) OVER-SIZE(O.S=0.25)PART.

1. CYLINDER BLOCK

(A)=4TNE106-SA (D)=4TNE106T-G1A
(B)=4TNE106-G1A (E)=
(C)=4TNE106T-SA (F)=


REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	723900-01560	BLOCK ASSY, CYLINDER	1	1	1	1				
4	2	171051-01921	PLUG	1	1	1	1				
5	2	123900-02020	BOLT,CAP,MAIN-BEARIN	10	10	10	10				
8	2	123900-02410	BUSH	1	1	1	1				
9	2	22351-060012	SPRING PIN 6X12	2	2	2	2				
10	2	23875-030000	PLUG PT3/8,STEEL	4	4	4	4				
11	2	27231-700000	PLUG 70	1	1	1	1				
12	2	27241-300000	PLUG 30	8	8	8	8				
13	2	23875-030000	PLUG PT3/8,STEEL	1	1	1	1				
14	2	27225-120160	PLUG 12*16	1	1	1	1				
15	2	121851-11970	JOINT, PIPE	1	1	1	1				
16	2	123900-02800	BEARING ASSY, MAIN	5	5	5	5				
19	2	123900-02930	BEARING ASSY, THRUST	2	2	2	2				
22	1	119174-01200	BOLT, CYLINDER HEAD	18	18	18	18				
23	1	123900-01340	GASKET, HEAD	1	1	1	1				
24	1	123900-02340	MAIN BEARING US=0.25	5	5	5	5				1
27	1	123900-02940	BEARING,THRUST .25OS	2	2	2	2				2

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

(C)Copy Rights YANMAR CO.,LTD and YANMAR AGRICULTURAL EQUIPMENT CO.,LTD.

Fig.4. CYLINDER HEAD & BONNET

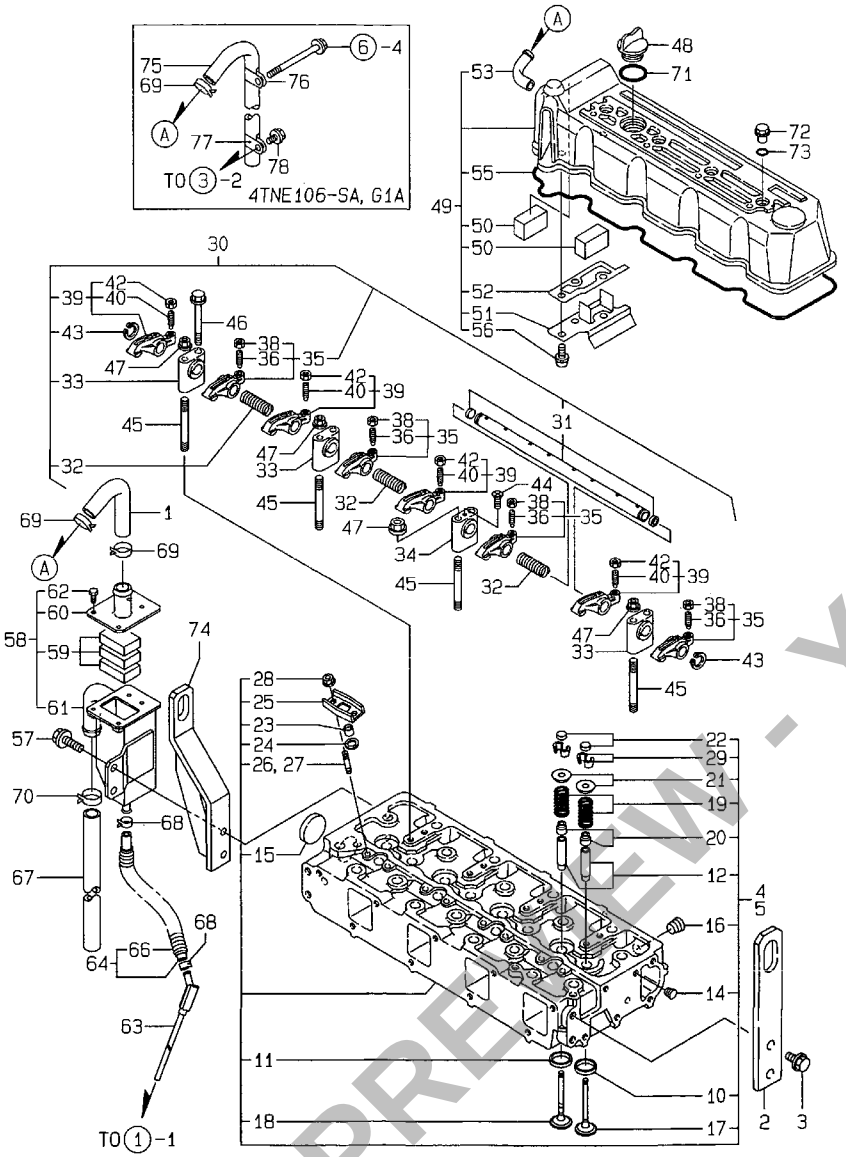

Remarks
(1) REPAIR PART.

4. CYLINDER HEAD & BONNET


(A)=4TNE106-SA (D)=4TNE106T-G1A
(B)=4TNE106-G1A (E)=
(C)=4TNE106T-SA (F)=

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	123901-03090	HOSE, RUBBER			1	1				
2	1	123900-07900	LIFTER	2	2	1	1				
3	1	26106-100202	BOLT M10X 20 PLATED	4	4	2	2				
4	1	723900-11100	HEAD ASSY, CYLINDER	1		1					
5	1	723900-11700	HEAD ASSY, CYLINDER		1		1				
10	2	123900-11080	SEAT, INTAKE	4	4	4	4				
11	2	123900-11090	SEAT, EXHAUST	4	4	4	4				
12	2	119000-11810	GUIDE, VALVE(EXHAUST	8	8	8	8				1
14	2	23876-005000	PLUG PT 1/16,SCREW	1	1	1	1				
15	2	27241-400000	PLUG 40	1	1	1	1				
16	2	23876-030000	PLUG PT3/8,SCREW	1	1	1	1				
17	2	123900-11100	VALVE INTAKE	4	4	4	4				
18	2	123900-11110	VALVE EXHAUST	4	4	4	4				
19	2	123900-11120	SPRING, VALVE	8	8	8	8				
20	2	121850-11150	SEAL, VALVE STEM	8	8	8	8				
21	2	121850-11180	RETAINER, SPRING	8	8	8	8				
22	2	119171-11370	CAP, VALVE	8	8	8	8				
23	2	119625-11870	PROTECTOR, NOZZLE	4	4	4	4				
24	2	119625-11880	SEAT, NOZZLE	4	4	4	4				
25	2	119625-11900	RETAINER	4	4	4	4				
26	2	26216-060252	STUD M 6X 25 PLATED	8		8					
27	2	26216-060302	STUD M 6X 30 PLATED		8		8				
28	2	26366-060002	NUT M 6	8	8	8	8				
29	2	27310-090000	COTTER 9	16	16	16	16				
30	1	123900-11200	SUPPORT COMP,ROCKKER	1	1	1	1				
31	2	123900-11240	SHAFT ROCKER ARM	1	1	1	1				
32	2	119000-11280	SPRING	3	3	3	3				
33	2	123900-11510	SUPPORT ROCKER ARM A	3	3	3	3				
34	2	123900-11520	SUPPORT ROCKER ARM B	1	1	1	1				
35	2	123900-11650	ARM ASSY, SUC. ROCKE	4	4	4	4				
36	3	129150-11230	SCREW, VALVE	4	4	4	4				
38	3	129150-11750	NUT M8XP1.0	4	4	4	4				
39	2	123900-11660	ARM ASSY, EXH. ROCKE	4	4	4	4				
40	3	129150-11230	SCREW, VALVE	4	4	4	4				
42	3	129150-11750	NUT M8XP1.0	4	4	4	4				
43	2	22242-000180	CIRCLIP 18	2	2	2	2				
44	2	26577-040162	SCREW M 4X 16	1	1	1	1				
45	1	119593-11300	BOLT 8X80	4	4	4	4				
46	1	26106-080702	BOLT M 8X 70 PLATED	4	4	4	4				
47	1	26366-080002	NUT M 8	4	4	4	4				
48	1	124160-01751	COVER,FILLER	1	1	1	1				
49	1	123900-11331	BONNET ASSY	1	1	1	1				
50	2	129150-03070	BAFFLE, BREATHER	2	2	2	2				
51	2	123900-03202	PLATE	1	1	1	1				
52	2	123900-03210	PACKING (BREATHER	1	1	1	1				
53	2	123900-03220	JOINT	1	1	1	1				
55	2	123900-11310	PACKING	1	1	1	1				
56	2	26022-050122	SCREW M 5X 12	3	3	3	3				
57	1	26106-100252	BOLT M10X 25 PLATED			2	2				
58	1	123901-03270	BREATHER ASSY			1	1				
59	2	123901-03240	WOOL, STEAL			3	3				
60	2	123901-03250	COVER			1	1				
61	2	123901-03260	BREATHER			1	1				
62	2	26116-050102	BOLT M 5X 10 PLATED			4	4				

++ CONTINUE ++

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com
(C)Copy Rights YANMAR CO.,LTD and YANMAR AGRICULTURAL EQUIPMENT CO.,LTD.

Fig.13. RADIATOR

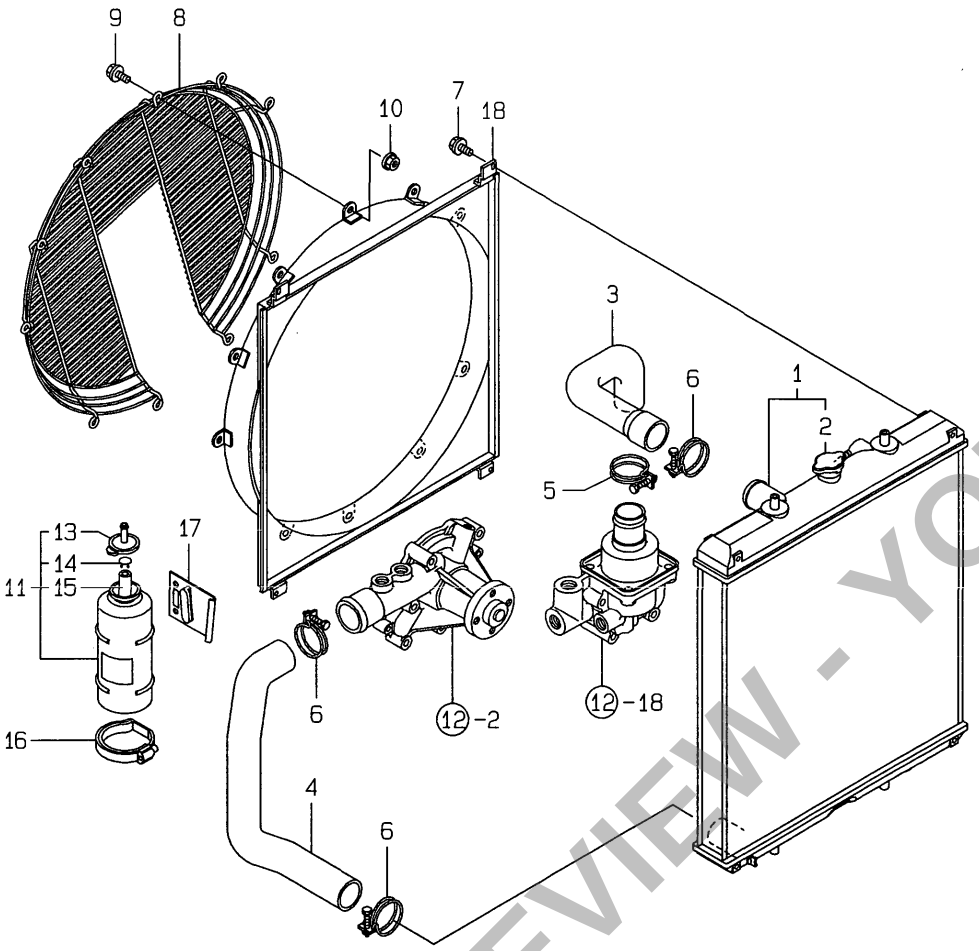

13. RADIATOR

(A)=4TNE106-SA (D)=4TNE106T-G1A
(B)=4TNE106-G1A (E)=
(C)=4TNE106T-SA (F)=


REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	123901-44510	RADIATOR ASSY	1	1	1	1				
2	2	129107-44590	CAP, RADIATOR	1	1	1	1				
3	1	123901-49050	CW-T(A	1	1	1	1				
4	1	123901-49060	CW-T(B	1	1	1	1				
5	1	23000-048000	CLAMP 48	1	1	1	1				
6	1	23000-060000	CLAMP 60	3	3	3	3				
7	1	26106-060102	BOLT M 6X 10 PLATED	4	4	4	4				
8	1	123915-44560	FAN GUARD	1	1	1	1				
9	1	26106-080162	BOLT M 8X 16 PLATED	10	10	10	10				
10	1	26366-080002	NUT M 8	10	10	10	10				
11	1	124450-44510	SUB-TANK ASSY	1	1	1	1				
13	2	124450-44530	CAP	1	1	1	1				
14	2	124450-44560	CLAMP	1	1	1	1				
15	2	23061-070230	PIPE 7X 230	1	1	1	1				
16	1	124450-44550	CLAMP, SUB-TANK	1	1	1	1				
17	1	121256-44600	BRACKET, SUB-TANK	1	1	1	1				
18	1	123915-44750	FAN SHROUD	1	1	1	1				

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

(C)Copy Rights YANMAR CO.,LTD and YANMAR AGRICULTURAL EQUIPMENT CO.,LTD.

Fig.15. FUEL INJECTION VALVE

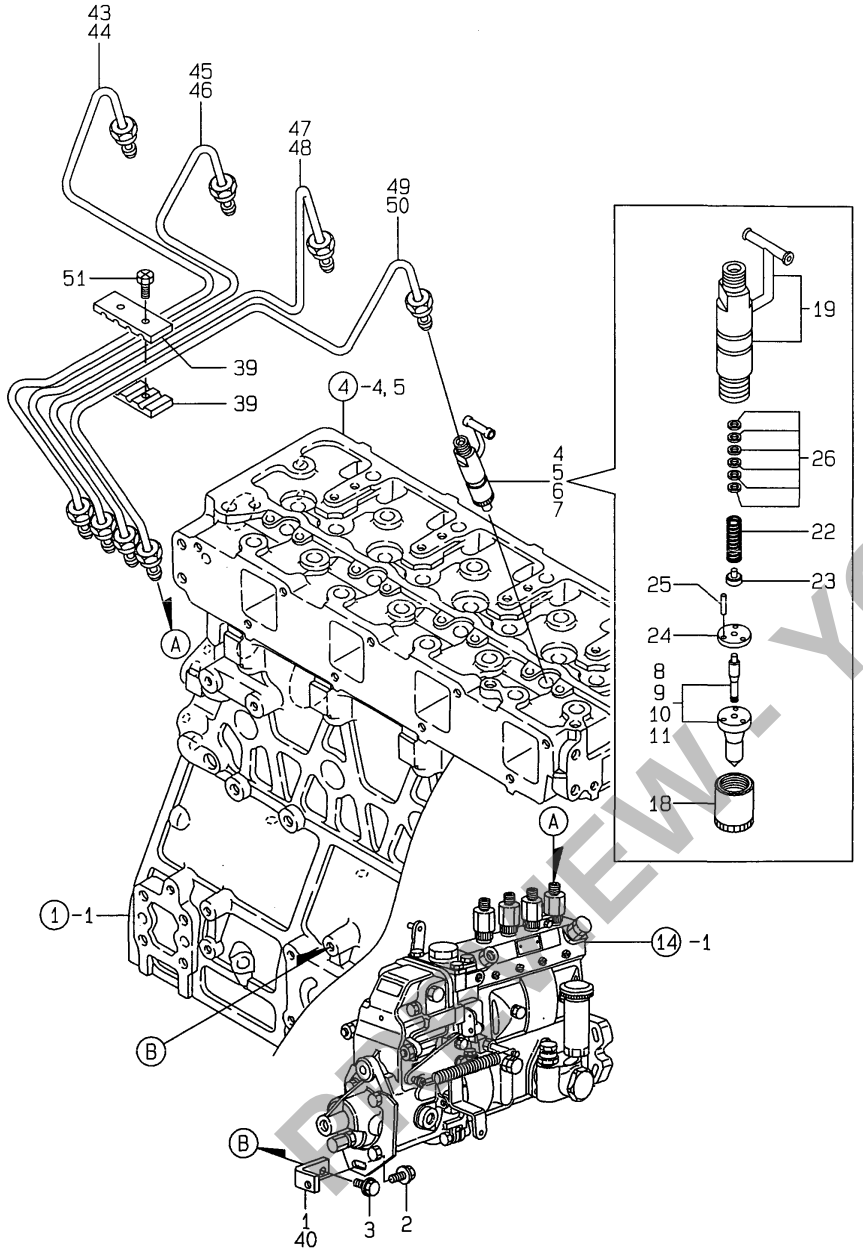

15. FUEL INJECTION VALVE

(A)=4TNE106-SA (D)=4TNE106T-G1A
(B)=4TNE106-G1A (E)=
(C)=4TNE106T-SA (F)=


REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	123901-01950	STAY			1	1				
2	1	26106-100142	BOLT M10X 14 PLATED	1	1	1	1				
3	1	26106-080202	BOLT M 8X 20 PLATED	1	1	1	1				
4	1	723900-53100	VALVE COMP, FUEL	4							
5	1	723980-53100	VALVE COMP, FUEL		4						
6	1	723900-53200	VALVE COMP, FUEL			4					
7	1	723981-53100	VALVE COMP, FUEL				4				
8	2	123900-53000	NOZZLE ASSY	4							
9	2	123980-53000	NOZZLE ASSY		4						
10	2	123900-53050	NOZZLE ASSY			4					
11	2	123981-53000	NOZZLE ASSY				4				
18	2	114250-53080	NUT, NOZZLE CASE	4	4	4	4				
19	2	119000-53100	HOLDER ASSY, NOZZLE	4	4	4	4				
22	2	114250-53120	SPRING, NOZZLE	4	4	4	4				
23	2	114250-53130	SEAT, NOZZLE SPRING	4	4	4	4				
24	2	114250-53140	PLATE, STOP	4	4	4	4				
25	2	114250-53210	PIN	8	8	8	8				
26	2	114250-53400	SHIM PACK	4	4	4	4				
39	1	123472-59120	BRACKET	2	2	2	2				
40	1	123900-01950	STAY	1	1						
43	1	123900-59811	PIPE ASSY, INJECTION	1	1						
44	1	123901-59811	PIPE, F.INJECT (NO.1			1	1				
45	1	123900-59821	PIPE ASSY, INJECTION	1	1						
46	1	123901-59821	PIPE ASSY, INJECTION			1	1				
47	1	123900-59830	PIPE ASSY, INJECTION	1	1						
48	1	123901-59830	PIPE ASSY, INJECTION			1	1				
49	1	123900-59840	PIPE ASSY, INJECTION	1	1						
50	1	123901-59840	PIPE ASSY, INJECTION			1	1				
51	1	26106-060202	BOLT M 6X 20 PLATED	2	2	2	2				

PREVIEW- YOUFIXTHIS.COM

Download full manual at youfixthis.com

(C)Copy Rights YANMAR CO.,LTD and YANMAR AGRICULTURAL EQUIPMENT CO.,LTD.

Fig.19. STARTING MOTOR

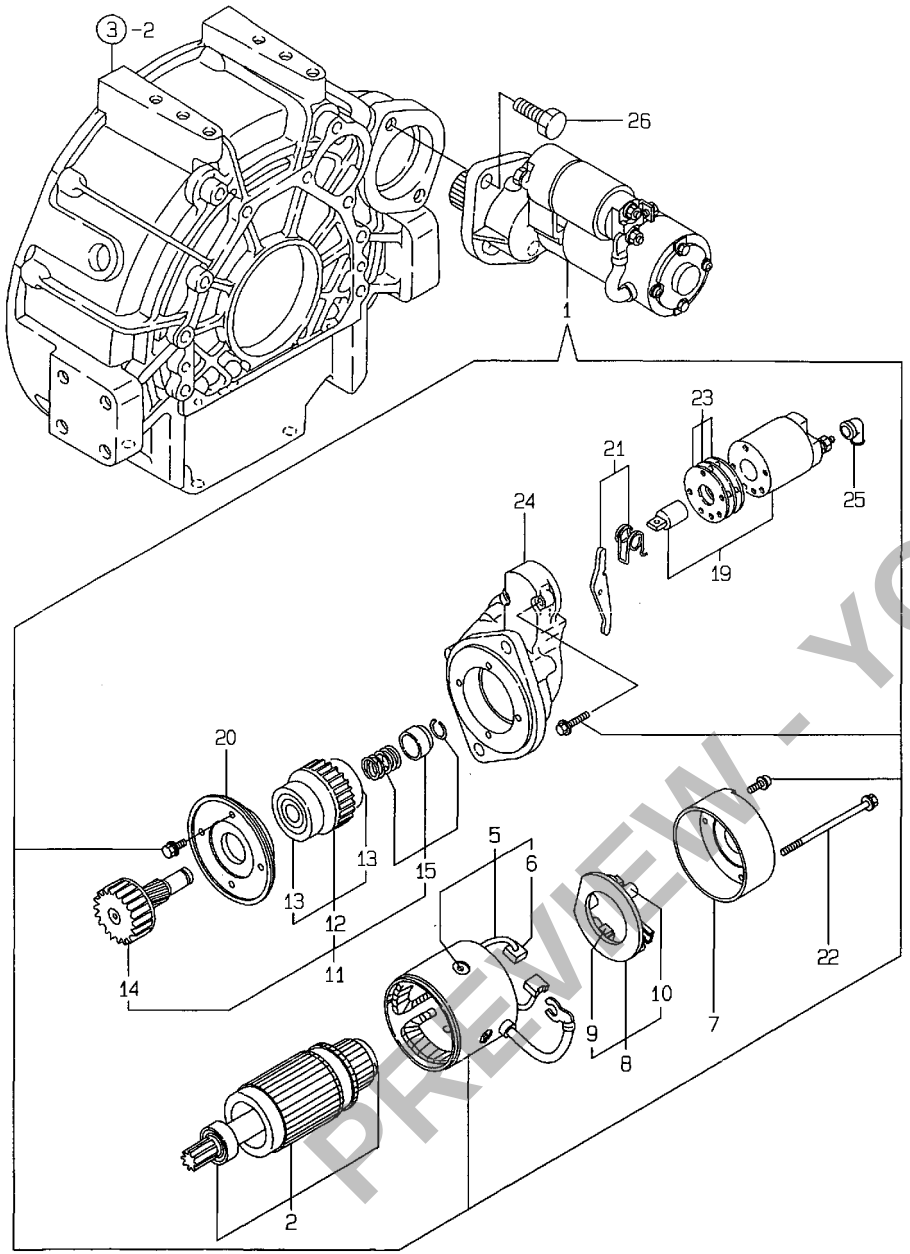

19. STARTING MOTOR

(A)=4TNE106-SA (D)=4TNE106T-G1A
(B)=4TNE106-G1A (E)=
(C)=4TNE106T-SA (F)=

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	123900-77010	STARTER	1	1	1	1				
2	2	123900-77400	ARMATURE ASSY	1	1	1	1				
5	2	123900-77440	COIL ASSY, FIELD	1	1	1	1				
6	3	123900-77450	BRUSH (+)	2	2	2	2				
7	2	123900-77460	COVER, REAR	1	1	1	1				
8	2	123900-77480	HOLDER, BRUSH	1	1	1	1				
9	3	123900-77450	BRUSH (+)	2	2	2	2				
10	3	121254-77590	SPRING, BRUSH	4	4	4	4				
11	2	123900-77510	PINION ASSY	1	1	1	1				
12	3	123900-77520	CLUTCH ASSY	1	1	1	1				
13	4	X2240610100	BALL BEARING (3	2	2	2	2				
14	3	123900-77540	SHAFT, PINION	1	1	1	1				
15	3	119131-77550	STOPPER KIT, PINION	1	1	1	1				
19	2	129900-77591	SWITCH ASSY,MAGNETIC	1	1	1	1				
20	2	123900-77610	RETAINER, BEARING	1	1	1	1				
21	2	129900-77620	SHIFT LEVER SET	1	1	1	1				
22	2	123900-77640	THROUGHT BOLT	2	2	2	2				
23	2	123900-77650	COVER ASSY, DUST	1	1	1	1				
24	2	123900-77710	HOUSING, GEARS	1	1	1	1				
25	2	171008-77750	COVER, M TERMINAL	1	1	1	1				
26	1	26116-120302	BOLT M12X 30 PLATED	2	2	2	2				

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

(C)Copy Rights YANMAR CO.,LTD and YANMAR AGRICULTURAL EQUIPMENT CO.,LTD.

PREVIEW ONLY

You're viewing 5 of 23 pages

The full manual includes:

- All 23 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Yanmar 4TNE106-SA, 4TNE106-G1A, 4TNE106T-SA, 4TNE106T-G1A Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual