
パーツカタログの見方

1. このパーツカタログに記載されている部品は、必ずしも標準装備部品ではありません。
2. 部品変更は、予告なく行うことがあります。
3. パーツカタログリスト様式

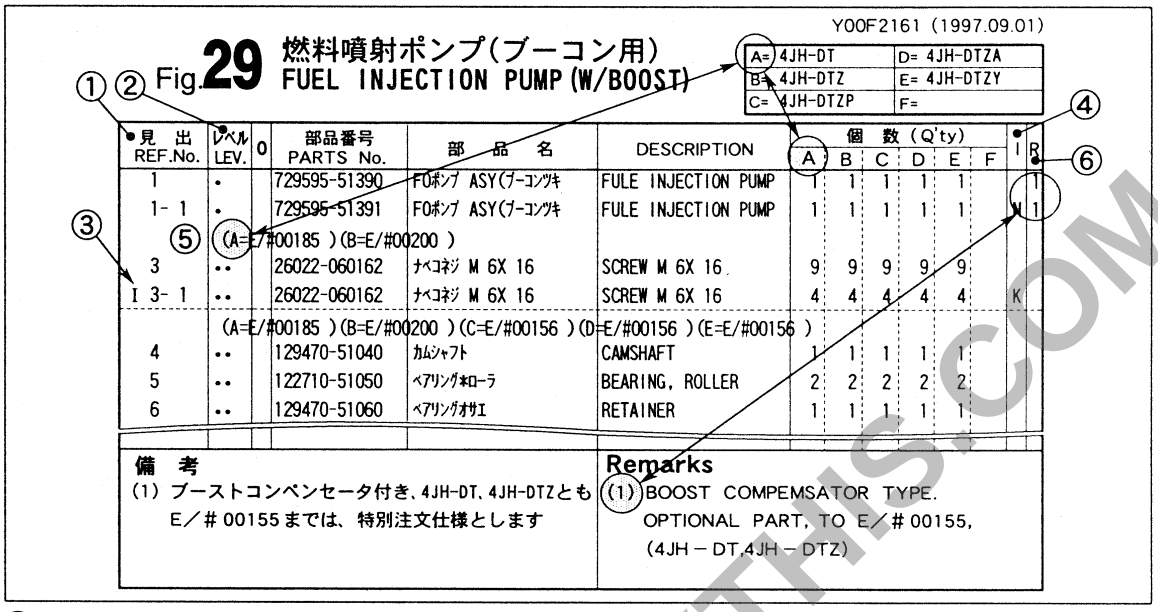

Y00F2161 (1997.09.01)

Fig.29 燃料噴射ポンプ(ブーコン用)
FUEL INJECTION PUMP (W/BOOST)

A=	4JH-DT	D=	4JH-DTZA
B=	4JH-DTZ	E=	4JH-DTZY
C=	4JH-DTZP	F=	

●見出 REF.No.	レベル LEV.	0	部品番号 PARTS No.	部品名	DESCRIPTION	個数 (Q'ty) A	B	C	D	E	F	I	R
1	•		729595-51390	FOポンプ ASY(ブーコンツキ	FULE INJECTION PUMP	1	1	1	1	1			1
1-1	•		729595-51391	FOポンプ ASY(ブーコンツキ	FULE INJECTION PUMP	1	1	1	1	1		N	1
			(A=E/#00185)(B=E/#00200)										
3	••		26022-060162	ナベコネジ M 6X 16	SCREW M 6X 16	9	9	9	9	9			
I 3-1	••		26022-060162	ナベコネジ M 6X 16	SCREW M 6X 16	4	4	4	4	4		K	
	(A=E/#00185)(B=E/#00200)(C=E/#00156)(D=E/#00156)(E=E/#00156)												
4	••		129470-51040	カムシャフト	CAMSHAFT	1	1	1	1	1			
5	••		122710-51050	ベアリングキローラ	BEARING, ROLLER	2	2	2	2	2			
6	••		129470-51060	ベアリングオサエ	RETAINER	1	1	1	1	1			

備考	Remarks
(1) ブーストコンペンセータ付き、4JH-DT、4JH-DTZとも E／＃00155までは、特別注文仕様とします	(1) BOOST COMPEMSATOR TYPE. OPTIONAL PART, TO E／＃00155, (4JH－DT,4JH－DTZ)

① 見出No.(REF.No.)

リスト頁の見出No.とイラスト図番の末尾が一致しない場合があります。

(例) イラスト図番 1 リスト頁の見出No. 1 (変更前) ⟶ 1 −1 (変更後)

互換性記号N、R、Kの場合は新部品のイラストを省略している場合があります。

② レベル (LEV.)

レベル
● ……表示している ● 印の数をレベルと呼び親子の関係を示します。(●は親部品です)

●● ……は ● に含まれる子部品です。

●●● ……は ●● に含まれる子部品 (●から見れば孫部品) です。

注) 非販売部品のイラストは一部展開しておりますが、リストには記載しておりません。

③ 変 更 マ ー ク

前回出版したパーツカタログには無く、今回新規に設計変更が発生した部品について " I " 印が表示されます。

④ 互 換 性 区 分

部分変更が行われた場合、その部品に対して下記の互換性記号が表示されます。

記号	互換性	内容
N	旧 ⟷ 新	新部品は、旧部品に対して互換性有り、その逆は無し。
Q	旧 ⟷ 新	新部品は、旧部品に対して互換性無し、その逆は有り。
R	旧 ⟷ 新	新・旧部品双方に対して互換性有り。
S	旧 ⟷ 新	新・旧部品双方に対して互換性無し。
W		新規追加となった部品。
Z		廃止された部品。
F		単品では、互換性無し。但し関連部品セットにて互換性有り。
K		使用個数のみの変更。

⑤ 実 施 号 機

部品が変更された時には、適用される商品形式の実施号機が (A) ～ (F) 欄毎に表示されます。

商品記号	商品 No.	商品記号	商品 No.
C	クラッチNo. コンプレッサNo.	M	本機No.
D	ドライブNo.	T	トラクタNo.
E	エンジンNo.	注1)※	西暦年月

注1) 記号の後の西暦年月を記載している事もあります。(例) ※1996. 01

注2) 実施号機が×××は、部品変更の予告又は、実施号機が確定できなかった部品です。

注3) (A＝E／＃00185)は、A欄の商品形式(＝4JH－DT)の部品変更実施号機は、E／＃(＝エンジンNo.)が00185号機以降であることを示します。

⑥ 備考(リマークス)区分

R …… 欄に数字又は、英字 (記号) を表示してあります。

リスト下段に上記の記号と同一記号を表記して当該部品に対するコメント(備考)を表示しています。

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

目次 CONTENTS (PC NO.YOOD6852)

コウモクNO. GROUP	コウモク メイ	GROUP NAME	ロケーションLOCATION
1	ｼﾘﾝﾀﾞﾌﾞﾛｯｸ	CYLINDER BLOCK	1A02
2	ｷﾞﾔｹｰｽ	GEAR HOUSING	1A03
3	ﾌﾗｲﾎｲﾙﾊｳｼﾞﾝｸﾞ & ｵｲﾙﾊﾟﾝ	FLYWHEEL HOUSING & OIL SUMP	1A04
4	ｼﾘﾝﾀﾞﾍｯﾄﾞ & ﾎﾞﾝﾈｯﾄ	CYLINDER HEAD & BONNET	1A05
5	ｷｭｳｷﾏﾆﾎｰﾙﾄﾞ & ｴｱｸﾘｰﾅ	SUCTION MANIFOLD & AIR CLEANER	1A06
6	ﾊｲｷﾏﾆﾎｰﾙﾄﾞ & ｻｲﾚﾝｻ	EXHAUST MANIFOLD & SILENCER	1A07
7	ｶﾑｼｬﾌﾄ & ｸﾄﾞｳｷﾞﾔ	CAMSHAFT & DRIVING GEAR	1A08
8	ｸﾗﾝｸｼｬﾌﾄ & ﾋﾟｽﾄﾝ	CRANKSHAFT & PISTON	1A09
9	LOｼｽﾃﾑ	LUB.OIL SYSTEM	1A10
10	CWｼｽﾃﾑ	COOLING WATER SYSTEM	1A11
11	FOﾌﾝｼｬﾎﾟﾝﾌﾟ	FUEL INJECTION PUMP	1A13
12	ｶﾞﾊﾞﾅ	GOVERNOR	1A15
13	FOﾌﾝｼｬﾍﾞﾝ	FUEL INJECTION VALVE	1B01
14	FOﾊﾟｲﾌﾟ	FUEL LINE	1B02
15	ｽﾀｰﾃｲﾝｸﾞﾓｰﾀ	STARTING MOTOR	1B03
16	ｼﾞｪﾈﾚｰﾀ	GENERATOR	1B04
17	ﾊﾟｯｷﾝｾｯﾄ	GASKET SET	1B06

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

ｼﾘﾝﾀﾞﾌﾞﾛｯｸ　CYLINDER BLOCK

見出 REF NO.	部品番号 PARTS NO.	部品名	Description	数量 Q'ty	互換性 I	R	備考
1	729407-01561	ｼﾘﾝﾀﾞﾌﾞﾛｯｸ CMP	BLOCK ASSY, CYLINDER	1			
5	124160-01910	・ﾌﾟﾗｸﾞ PT1/4	・PLUG PT1/4	2			
6	124160-01910	・ﾌﾟﾗｸﾞ PT1/4	・PLUG PT1/4	1			
7	171051-01921	・ﾌﾟﾗｸﾞ NPTF1	・PLUG	1			
8	129150-02020	・ﾎﾞﾙﾄ(ﾒﾀﾙｷｬｯﾌﾟ	・BOLT, METAL CAP	10			
11	23871-010000	・ﾈｼﾞﾌﾟﾗｸﾞPT 1/8	・PLUG PT1/8,SCREW	1			
11- 1	23876-010000 (ALL=EXXX)	・ﾈｼﾞﾌﾟﾗｸﾞPT1/8	・PLUG PT1/8,SCREW	1	N		
12	27231-500000	・ｻﾗｶﾞﾀﾌﾟﾗｸﾞ 50	・PLUG 50	1			
12- 1	129001-01250 (ALL=EXXX)	・ｻﾗｶﾞﾀﾌﾟﾗｸﾞ 50	・PLUG 50	1	N		
13	27241-120000	・ﾜﾝｶﾞﾀﾌﾟﾗｸﾞ 12	・PLUG 12	2			
14	27241-300000	・ﾜﾝｶﾞﾀﾌﾟﾗｸﾞ 30	・PLUG 30	8			
15	23871-030000	・ﾈｼﾞﾌﾟﾗｸﾞPT 3/8	・PLUG PT3/8,SCREW	1			
15- 1	23876-030000 (ALL=EXXX)	・ﾈｼﾞﾌﾟﾗｸﾞPT 3/8	・PLUG PT3/8,SCREW	1	N		
24A	129001-02930 (ALL=EXXX)	・ﾒｲﾝﾒﾀﾙCMP(STDﾎﾖｳﾋﾝ)	・MAIN BEARING SET	5	W	(3)	ﾎﾖｳﾌﾞﾋﾝﾃﾞｽ
25	129150-02930	・ｽﾗｽﾄﾒﾀﾙ	・METAL, THRUST	2			
28	129795-02411	・ﾌﾞｯｼｭ (A	・BUSH, CAMSHAFT	1			
29	26106-080162	ﾂﾊﾞﾎﾞﾙﾄ 8X 16	BOLT M 8X 16 PLATED	2			
30	129150-01200	ﾍｯﾄﾞﾎﾞﾙﾄ	STUD, CYL. HEAD	18			
31	129407-01340	ﾍｯﾄﾞｶﾞｽｹｯﾄ	GASKET,CYL.HEAD	1			
32	129150-02870	ﾒｲﾝﾒﾀﾙ U.S=0.25	MAIN METAL US=0.25	5		(1)	ｱﾝﾀﾞｰｻｲｽﾞ(U.S=0.25)ﾌﾞﾋﾝﾃﾞｽ
35	129150-02940	ｽﾗｽﾄﾒﾀﾙ 0.25(2ｹ=1ｾｯﾄ	METAL,THRUST.25(2PIE	1		(2)	ｵｰﾊﾞｰｻｲｽﾞ(0.S=0.25)ﾌﾞﾋﾝﾃﾞｽ


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

CYLINDER BLOCK

Y00D6852
4TNE88- (E) TB (1, Z)

1 シリンダブロック
CYLINDER BLOCK

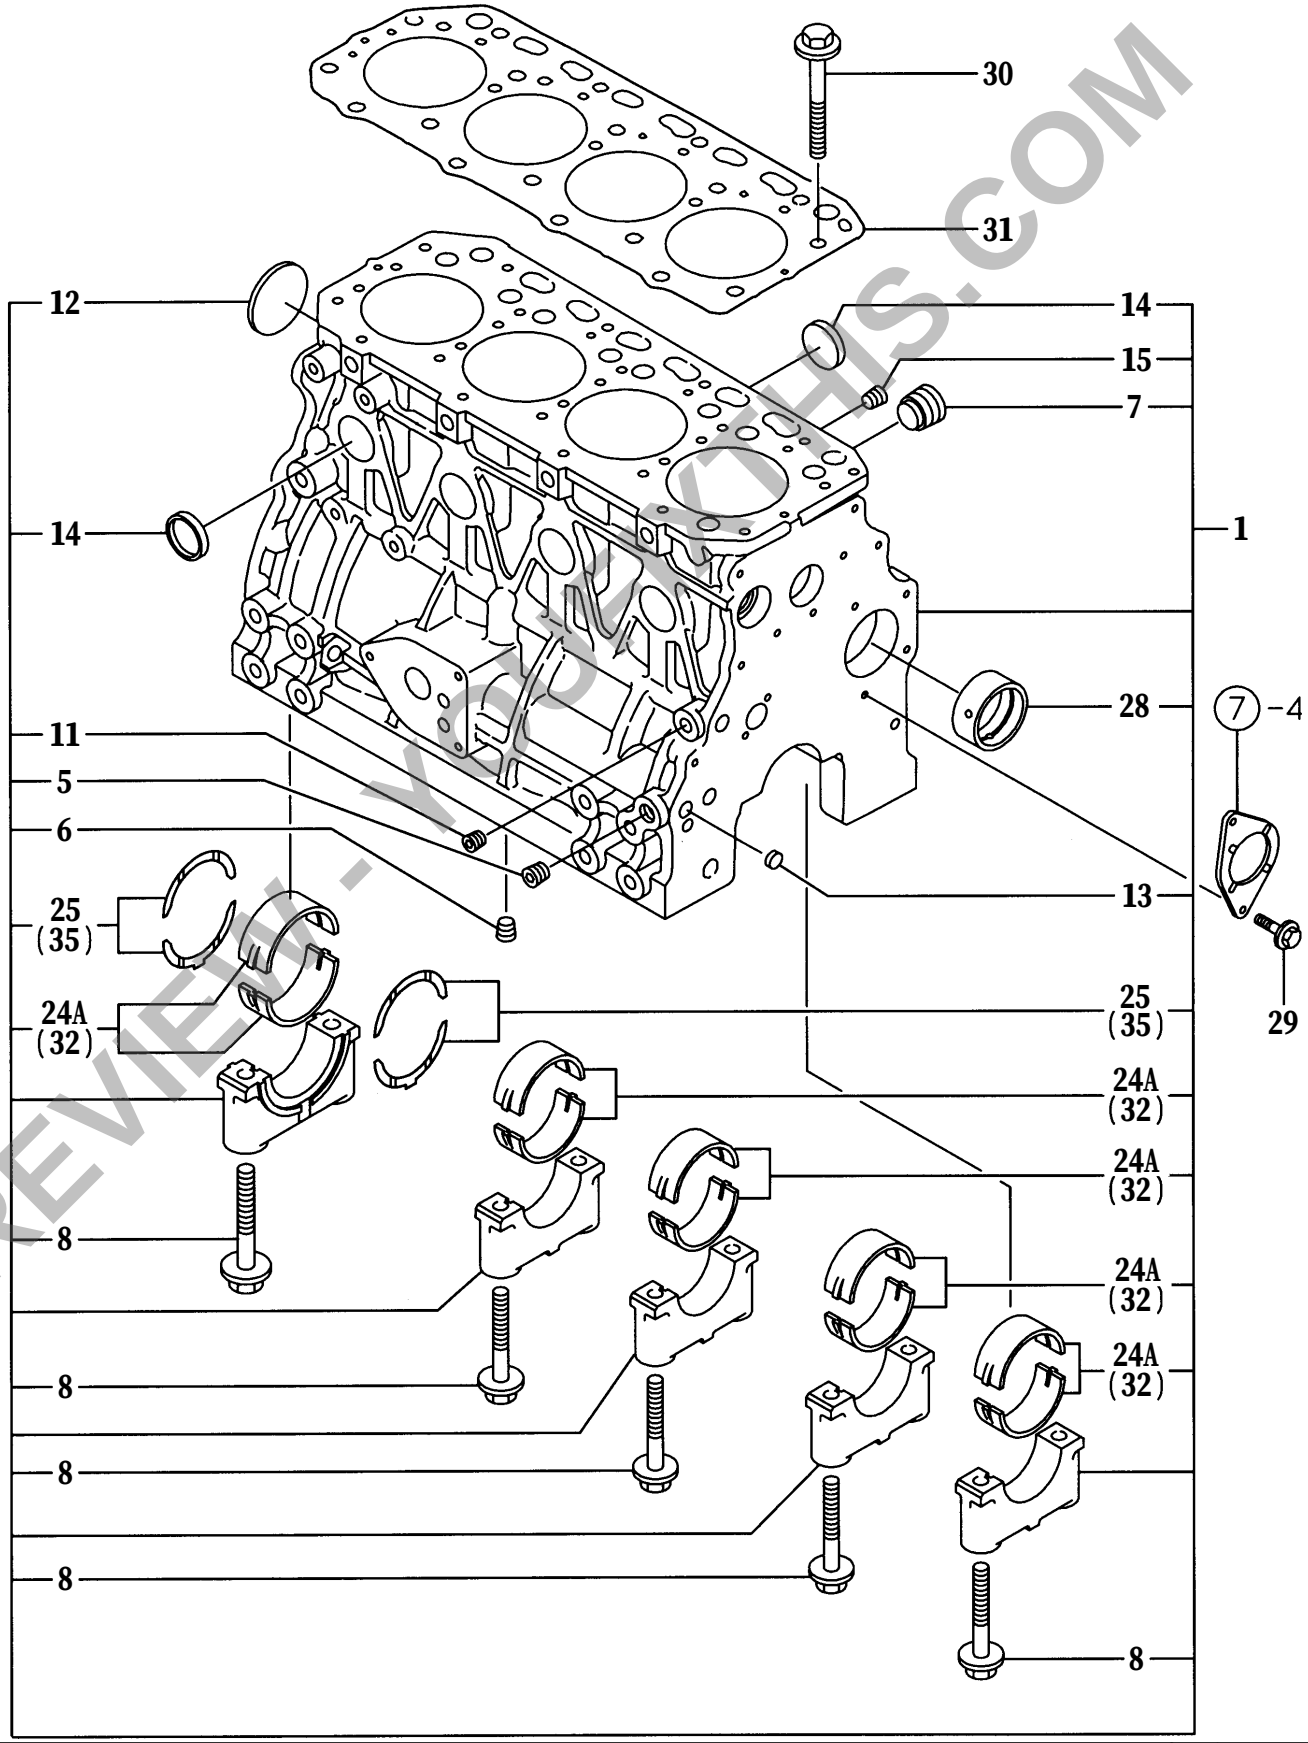


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Y00D6852
4TNE88- (E) TB (1, Z)

11 FOフンシャポンプ
FUEL INJECTION PUMP

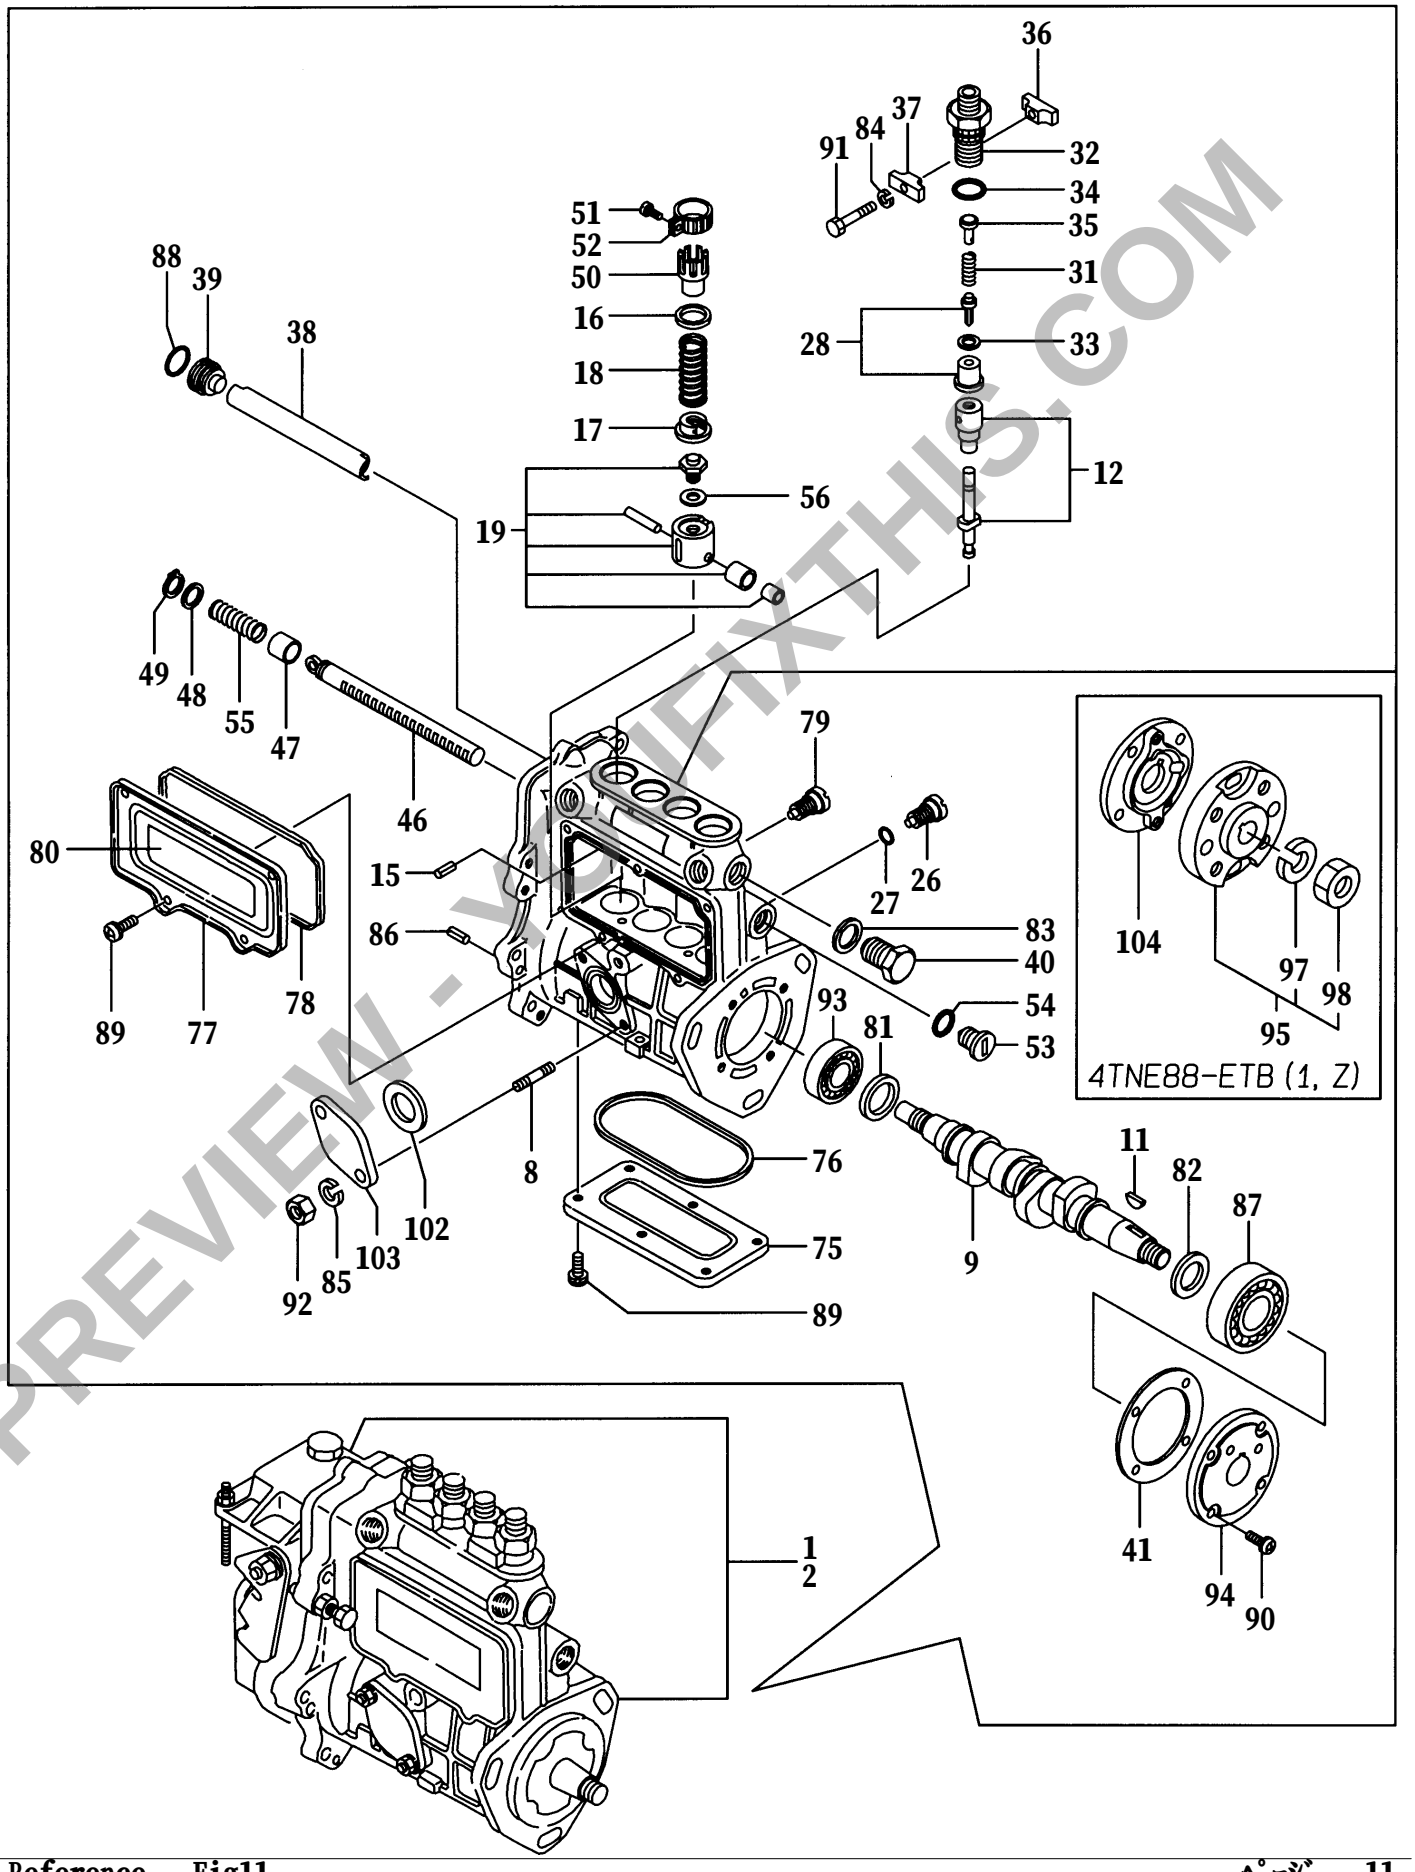


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Y00D6852
4TNE88- (E) TB (1, Z)

12 ガバナ GOVERNOR

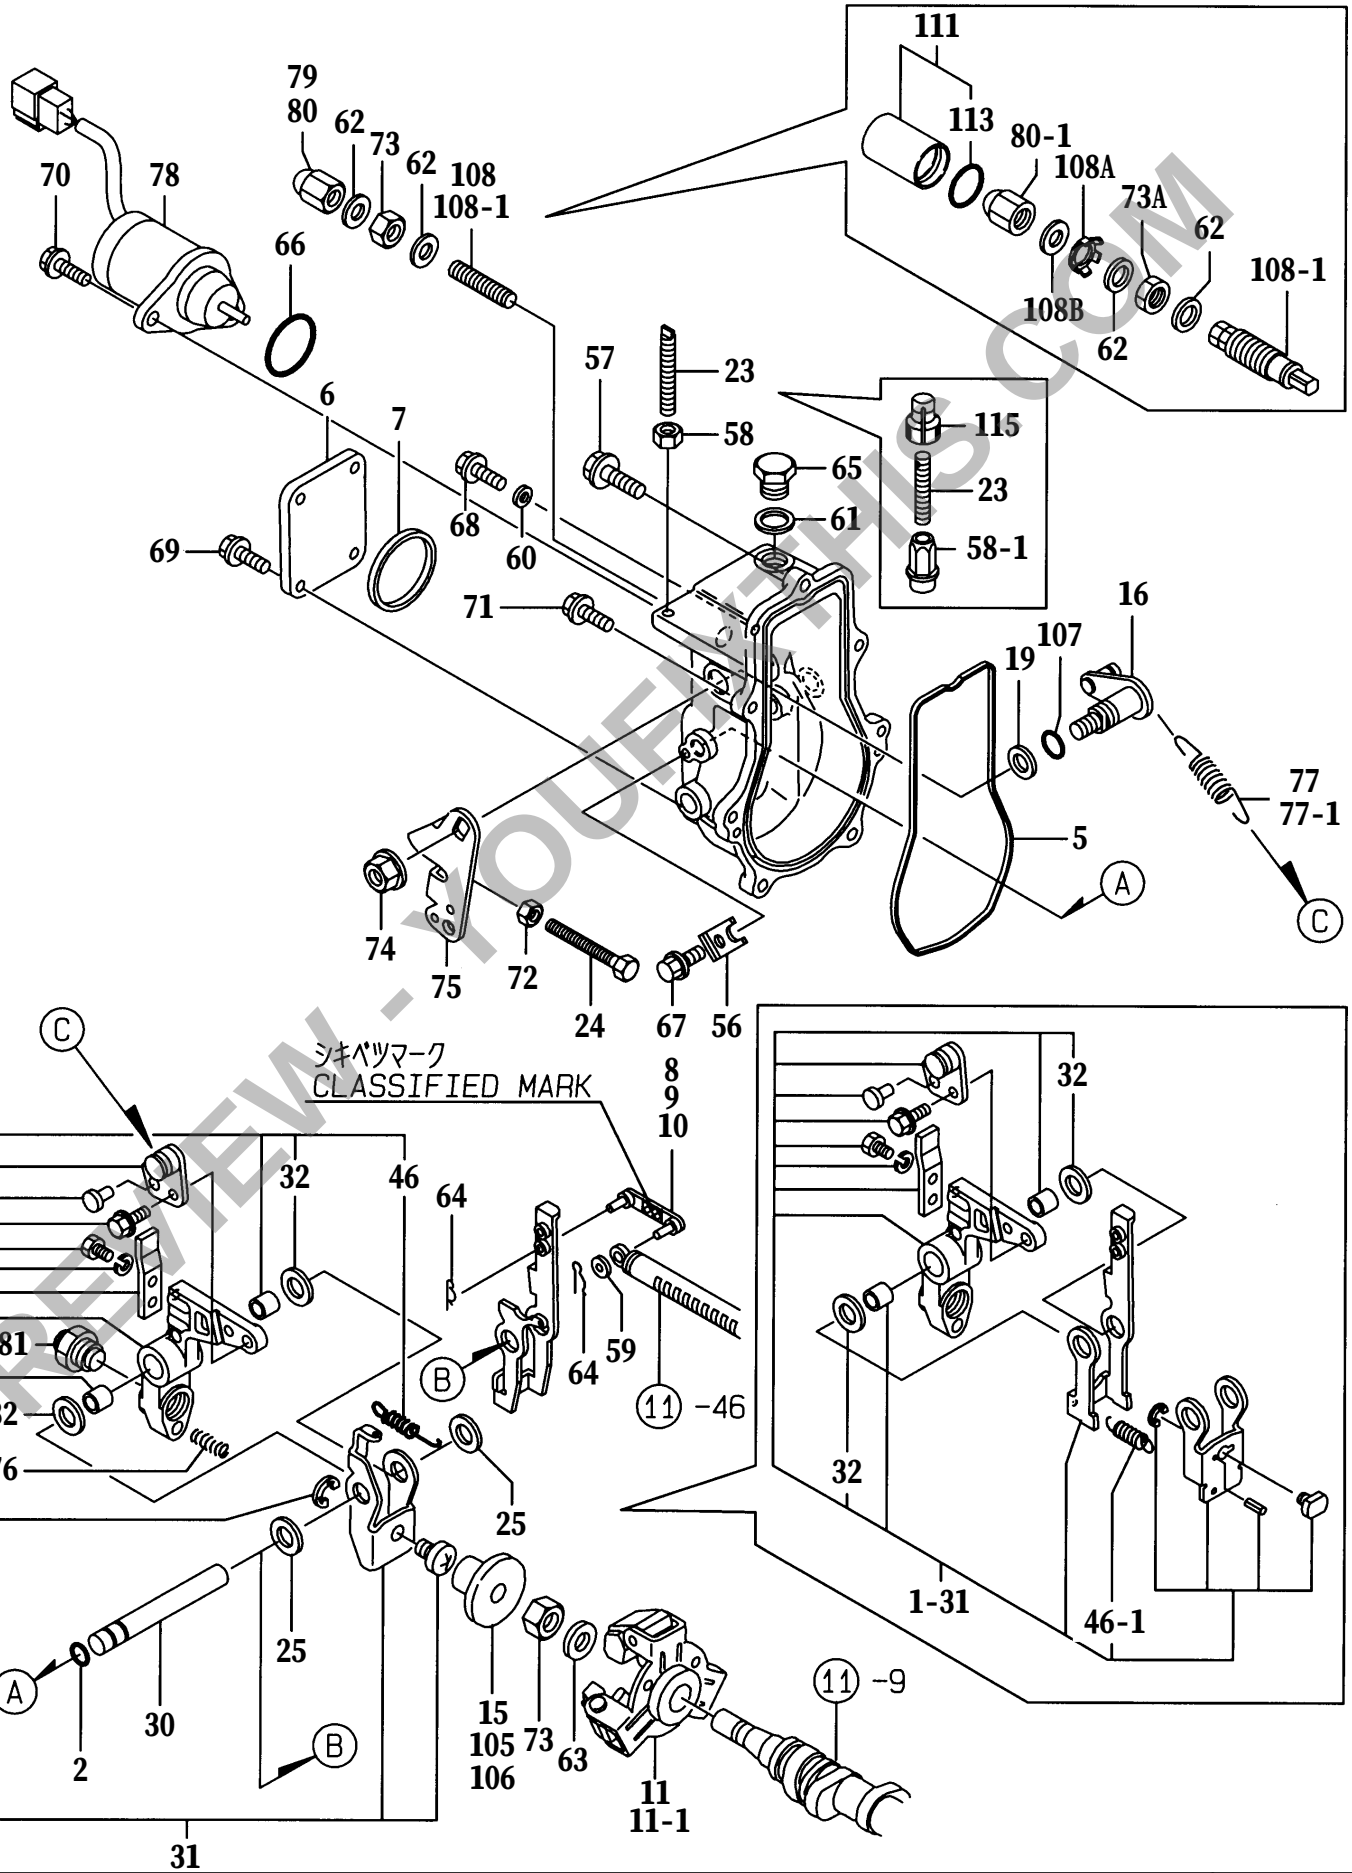


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Y00D6852
4TNE88- (E) TB (1, Z)

15 スターティングモータ STARTING MOTOR

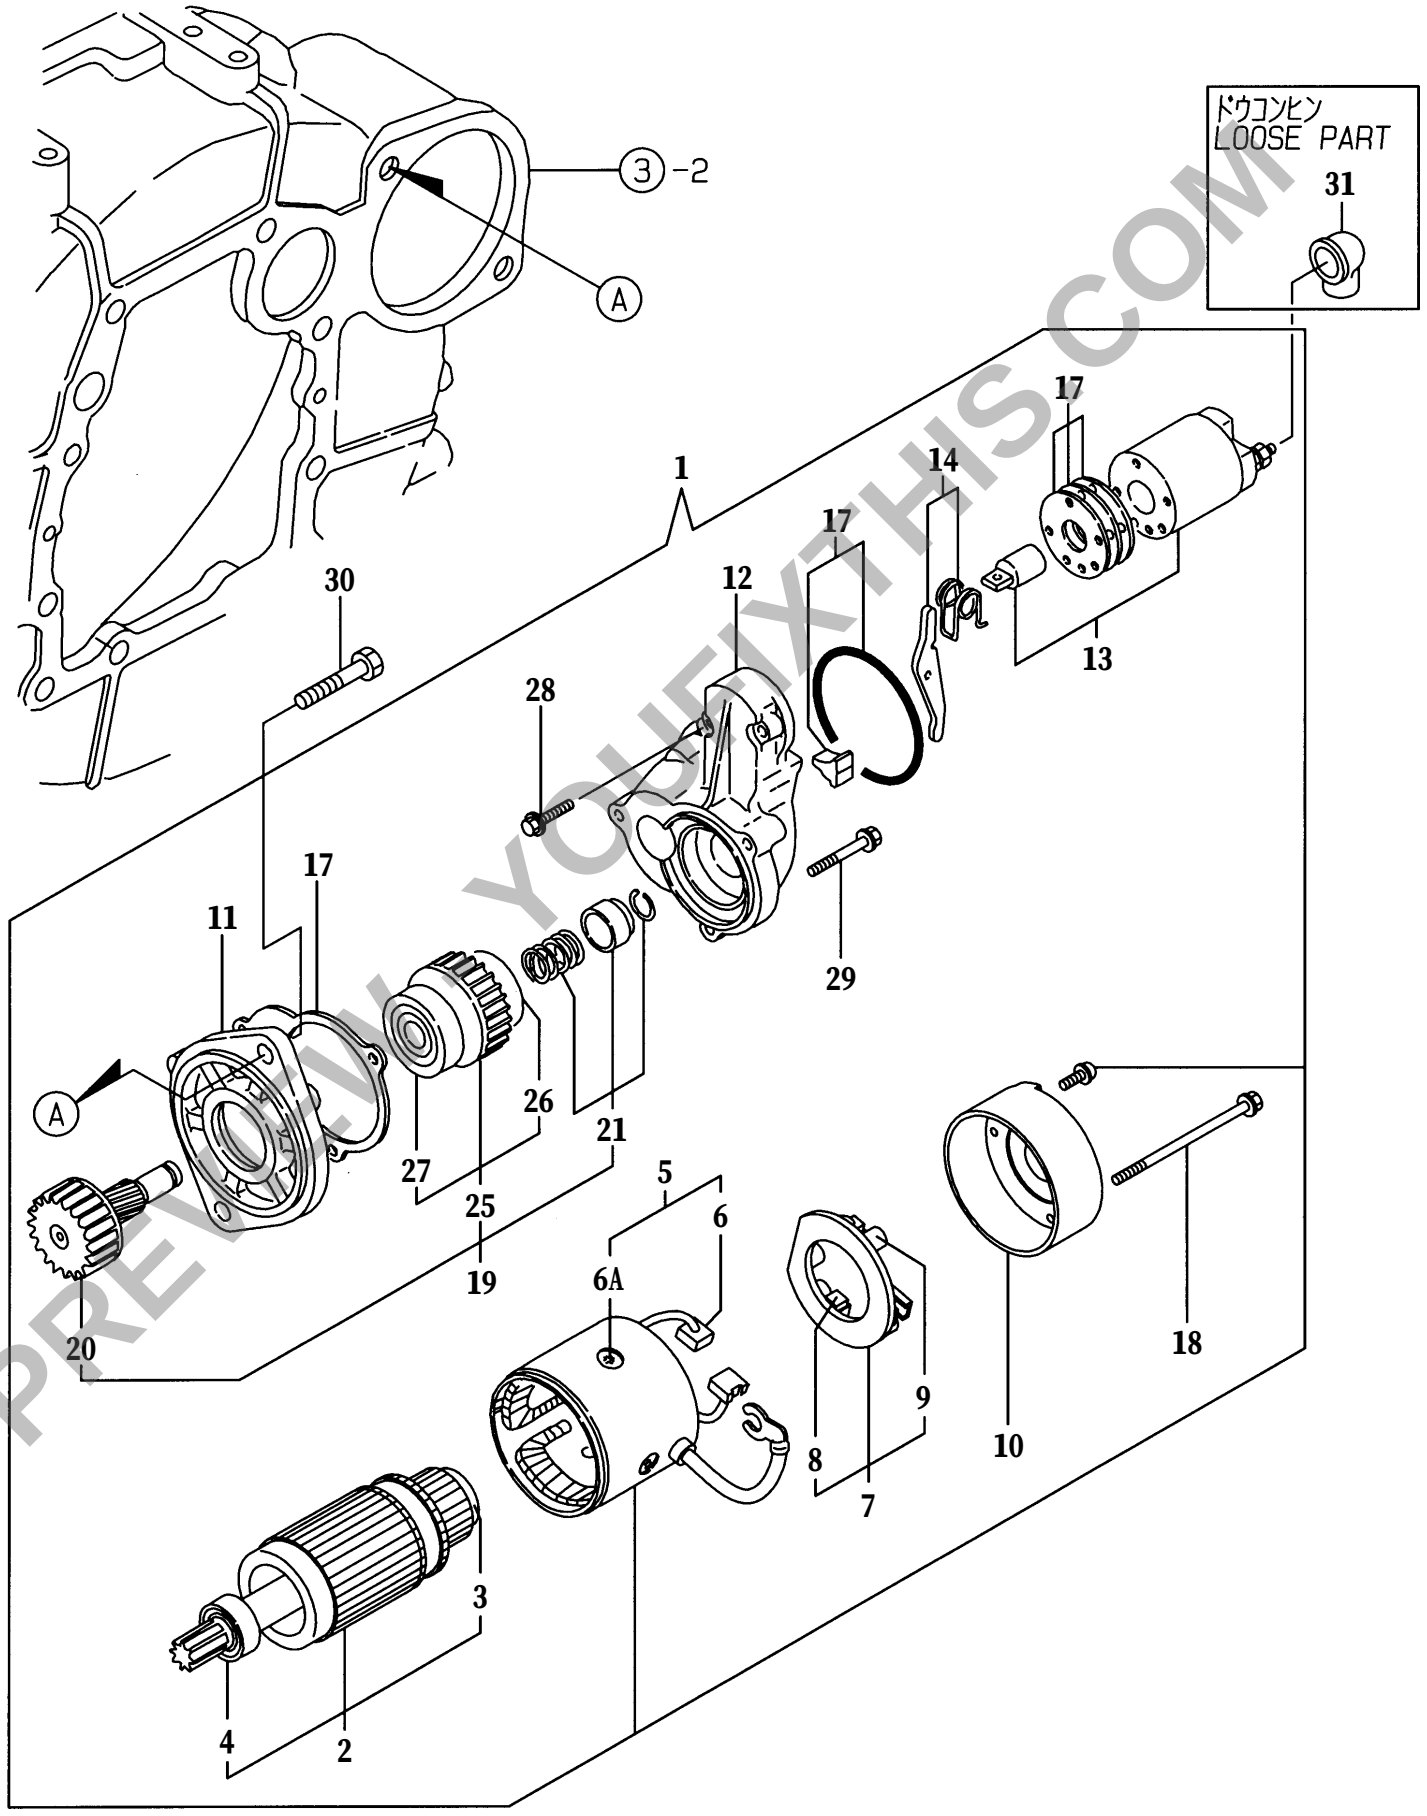


PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

Y00D6852
4TNE88-(E)TB(1,Z)

16 ジェネレータ GENERATOR

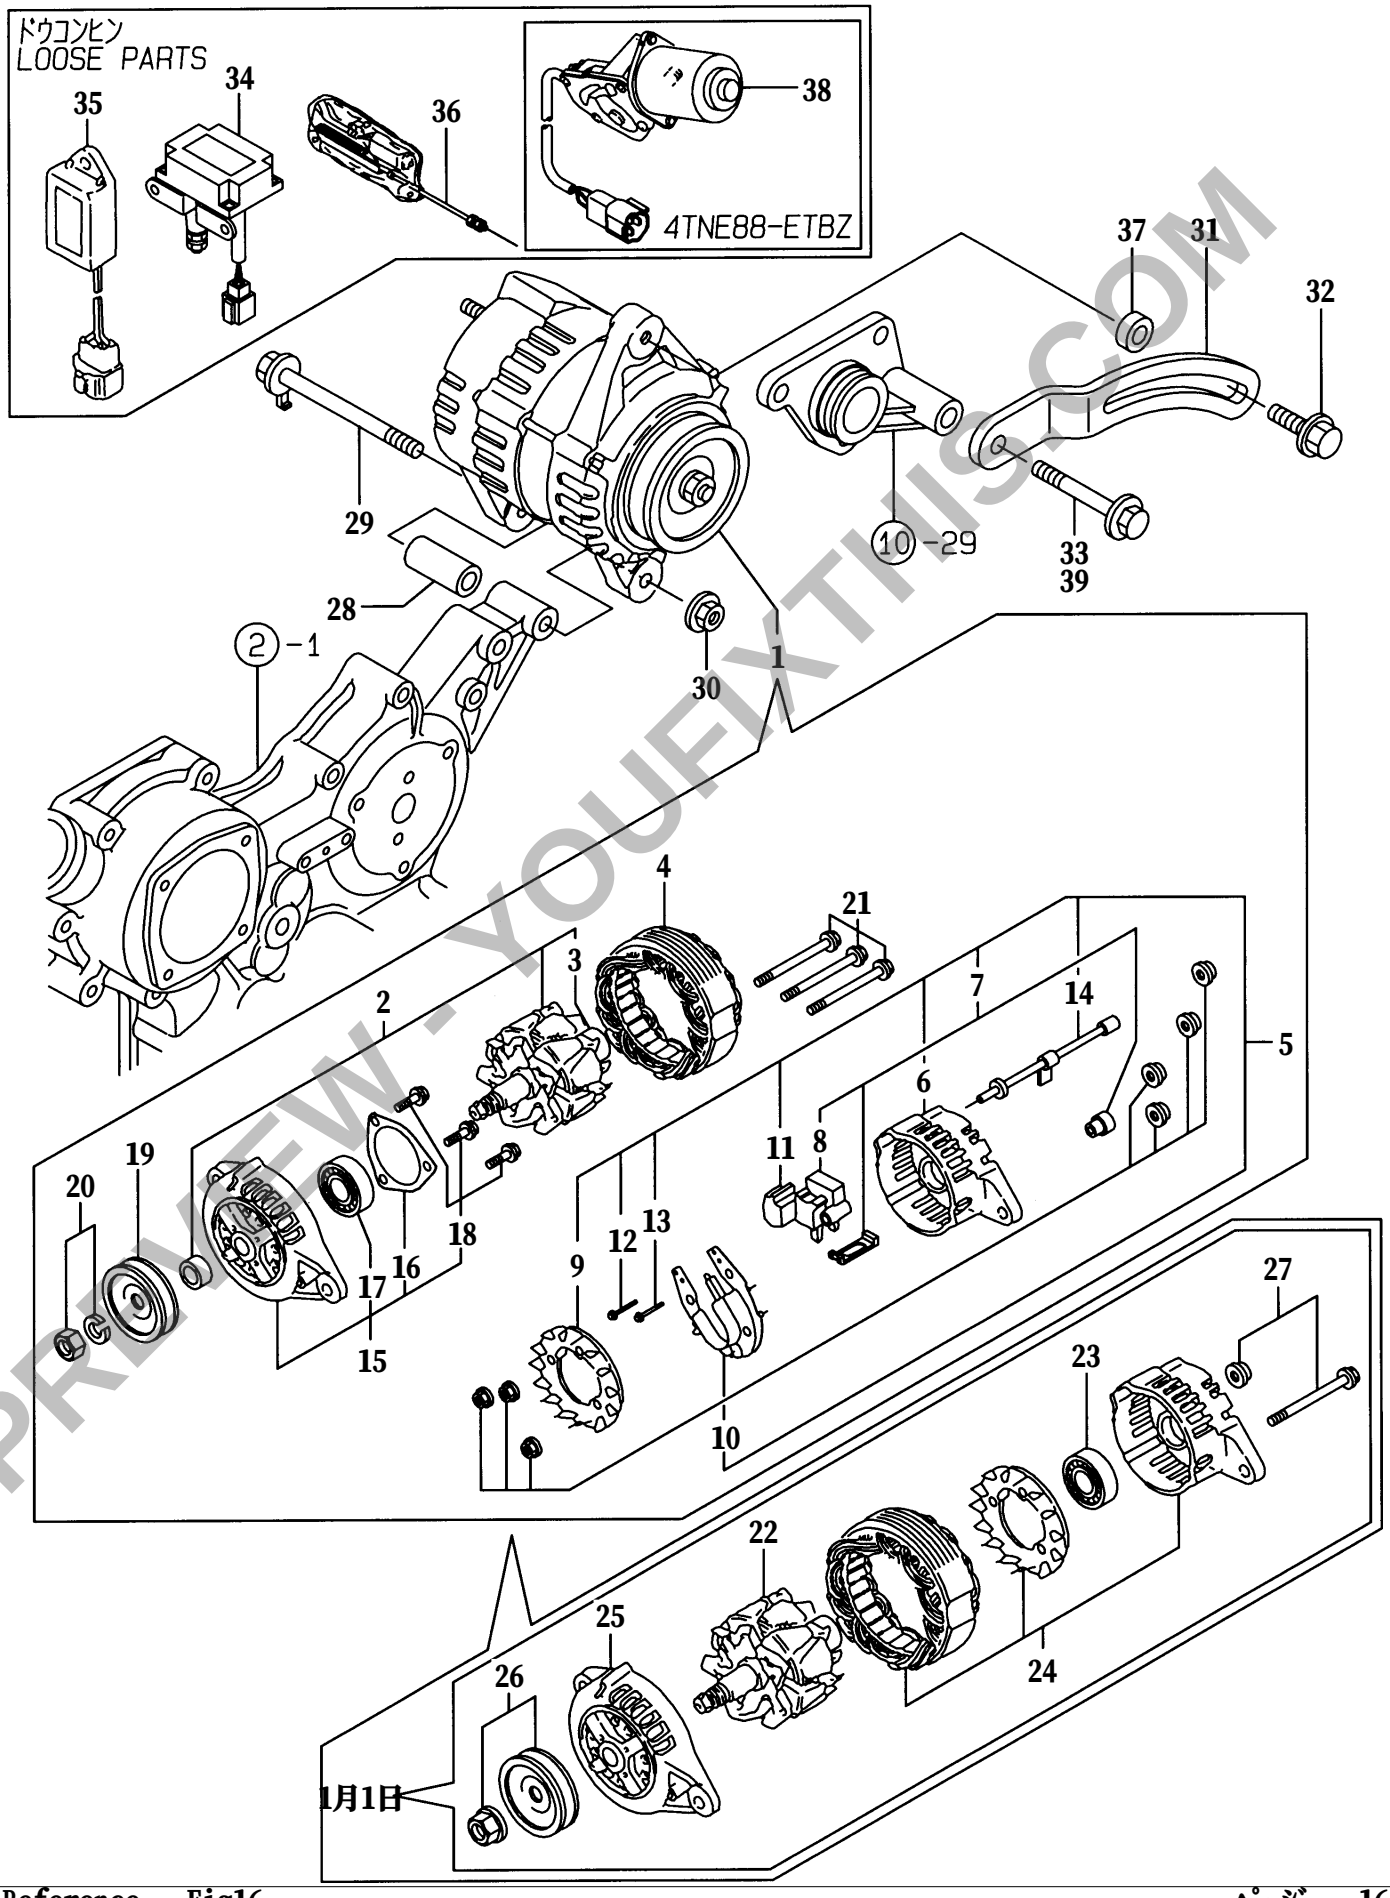

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 8 of 90 pages

The full manual includes:

- All 90 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Yanmar 4TNE88-(E) TB (1) (Z), 4TNV88-QTB, QTB1, TB145, 4TNE88-TB (1), 4TNE88-ETB (1), 4TNE88-ETBZ Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual