PREFACE

1.This parts catalog is the 1st edition of 4TNE92-HRJ for Jingjiang Ltd.

Pub.No. : 000Y00W1650


Published : March,2007

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

How to read this Parts Catalog.

1.Parts mentioned in Parts Catalog may not necessarily be standard equipping parts
2.Parts change may be made without prior notice.
3.Form of this Parts Catalog.

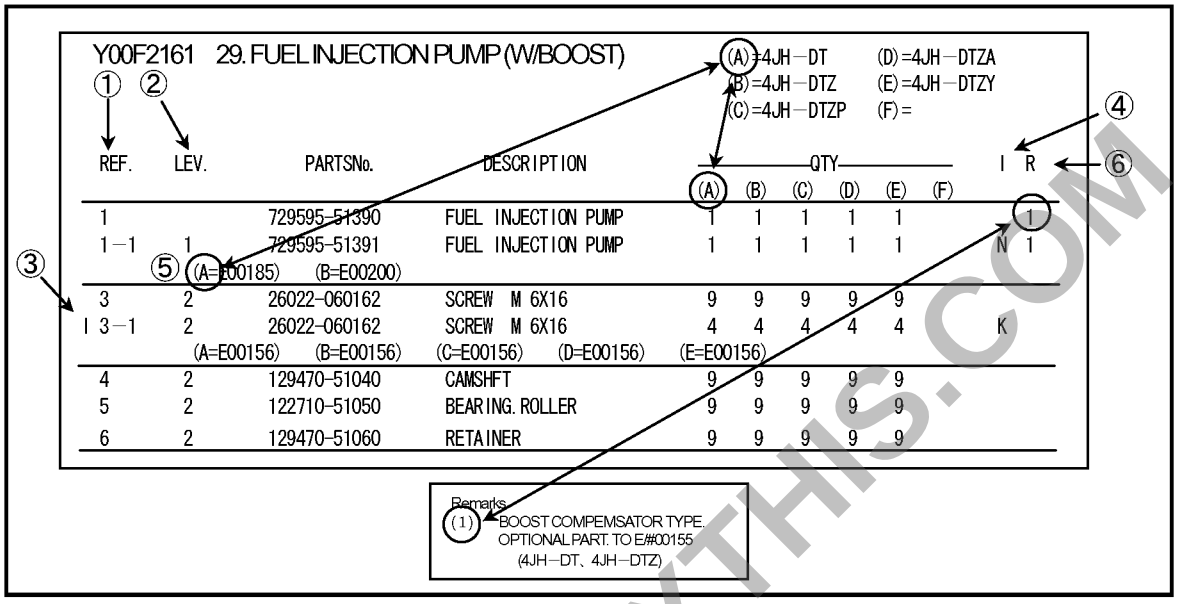

①Ref. No,

The Ref. No, in the list may not be in accordance with the Ref. No, on illustration.
(Ex.) illustration No, 1 List heed No, 1 (Before change) → 1-1 (After change)
When interchangeable symbol N, and k, illustrations for the new parts are sometimes omitted.

②Lev. (Level)

Indication and Meaning of Level
Level Hereunder is given the relation among the number of number (1,2,3) the level and the nominal parent-child relationship.
1 ----- Parent parts (Assembly parts)
2 ----- Child parts included in " 1 " (Semi-Assembly parts, component parts of Assembly parts.)
3 ----- Child parts included in " 2 ", Grand-child parts in terms of " 1 ".
(Component parts of Semi-Assembly parts.)
Note) A parts of non-sale parts are illustrated but not listed.

③Change Mark

Change Mark " I " is given to the part for which a design change was made at this time.
The design change was not shown in the last published Parts Catalog.

④Interchangeability Mark

In the case where a part change took place, one of the following interchangeability marks is indicated for that part

Symbol	Interchangeability	Contents note
N	Old ⟷ New	New Part is interchangeable for Old Part but not interchangeable conversely.
Q	Old ⟷ New	New Part is not interchangeable for Old Part but interchangeable conversely.
R	Old ⟷ New	New Part is interchangeable for Old Part and vice versa.
S	Old ⟷ New	New Part is not interchangeable for Old Part and vice versa.
W		Part newly added.
Z		Part discontinued.
F		Not interchangeable single part but interchangeable by set of the related parts.
K		Changed only in quantity used.

⑤Effective Machine No,

When a part is changed, Effective Machine No, of a Model for which the part is applicable is indication
In each column of (A)-(F).

Product Symbol	Product No,	Product Symbol	Product No,
C	Clutch No, Compressor No,	M	Machine No,
D	Drive No,	T	Tractor No,
E	Engine No,	Note 1)※	Date

Note 1) Date may follow the symbol in some cases.(Ex.) ※1996.01
Note 2) As far as engine models shown by " XXX " are concerned, the modification of the parts could not be Predicted or the engine models themselves could not be identified.
Note 3) (A=E/#00185) means that the design change on the part has been effective for the model at the, column (A) (in the case, for 4JH-DT) on and from E/#(Engine Serial Number) 00185

⑥Remarks Mark

Figures or alphabets (Symbols) are entered in the remark column.
The comments (remarks) on the pertinent parts are indicated in the lower part of the list by the same symbols a those stated above.

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

CONTENTS

MODEL : 4TNE92-HRJ(JINGJIANG
PC NO : Y00W1650

Fig.No. GROUP NAME

4TNE92-HRJ


1. CYLINDER BLOCK
2. GEAR HOUSING
3. FLYWHEEL HOUSING & OIL SUMP
4. CYLINDER HEAD & BONNET
5. SUCTION & EXHAUST MANIFOLD
6. CAMSHAFT & DRIVING GEAR
7. CRANKSHAFT & PISTON
8. LUB.OIL SYSTEM
9. COOLING WATER SYSTEM
10. FUEL INJECTION PUMP
11. FUEL INJECTION VALVE
12. FUEL FILTER
13. STARTING MOTOR
14. GENERATOR
15. GASKET SET

Fig.No. GROUP NAME

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.1. CYLINDER BLOCK

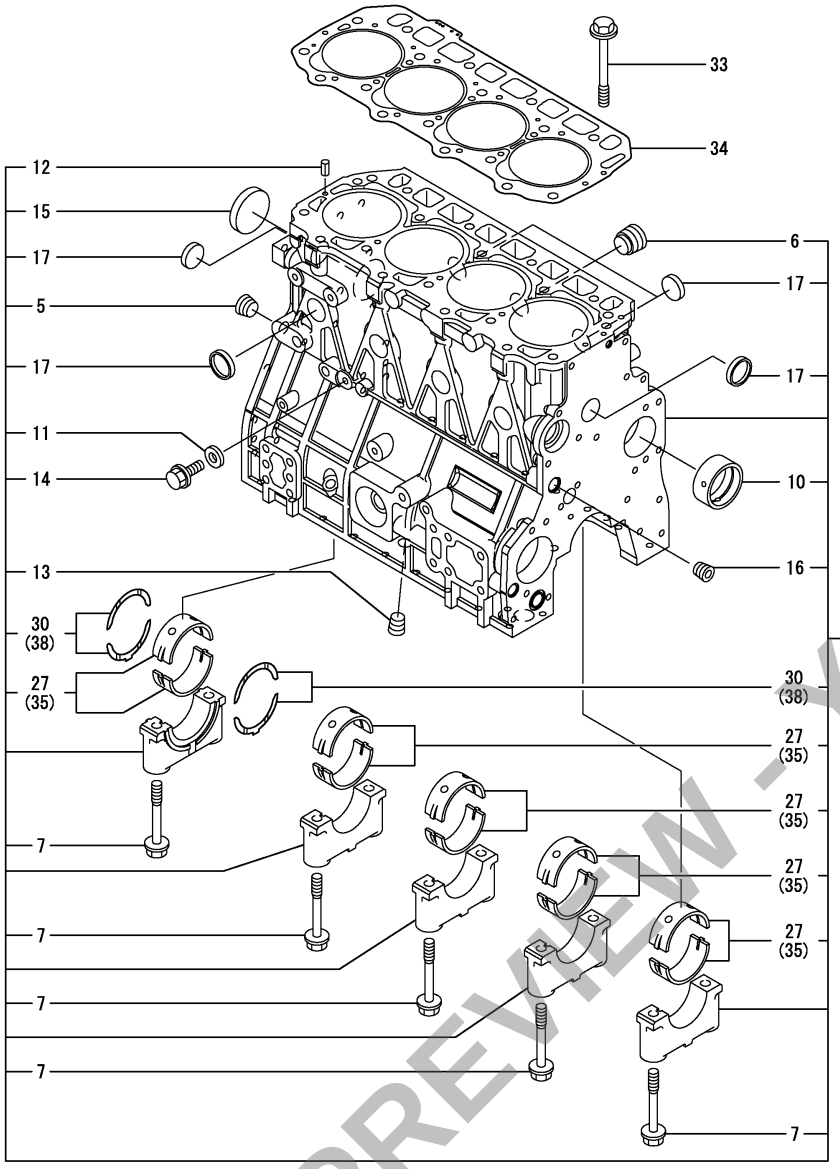

Remarks
(1) UNDER-SIZED(U.S=0.25)PART.
(2) OVER-SIZED(O.S=0.25)PART.
(3) REPAIR PART.

 1. CYLINDER BLOCK

(A)=4TNE92-HRJ (D)=
(B)= (E)=
(C)= (F)=

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	729904-01560	BLOCK ASSY, CYLINDER	1							
5	2	23876-030000	PLUG PT3/8,SCREW	1							
6	2	171051-01921	PLUG	1							
7	2	129900-02020	BOLT, METAL CAP	10							
10	2	129900-02410	BUSH, CAMSHAFT	1							
11	2	22190-080002	SEAL WASHER 8S	1							
12	2	22351-060012	SPRING PIN 6X12	2							
13	2	23876-030000	PLUG PT3/8,SCREW	1							
14	2	26106-080122	BOLT M 8X 12 PLATED	1							
15	2	129900-01250	PLUG 55	1							
16	2	23876-030000	PLUG PT3/8,SCREW	1							
17	2	27241-300000	PLUG 30	8							
27	2	729900-02801	MAIN BEARING SET	5							3
30	2	129900-02931	BEARING ASSY, THRUST	2							
33	1	129900-01200	BOLT, HEAD	18							
34	1	129901-01350	GASKET, HEAD	1							
35	1	129900-02341	MAIN BEARING US=0.25	5							1
38	1	129900-02941	BEARING,THRUST .25OS	2							2

N:Old ←○/×→ New, Q:Old ←×/○→ New, R:Old ←○/○→ New, S:Old ←×/×→ New, W:Add, Z:Discontinued, F:Set Change, K:Q'ty Change

(C)Copy Rights YANMAR CO.,LTD and YANMAR AGRICULTURAL EQUIPMENT CO.,LTD.

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

MODEL : 4TNE92-HRJ(JINGJIANG
PC NO : Y00W1650

PARTS No. INDEX

PARTS No.	Fig.	Ref.No.
105010-39140	8	17
105225-59500	11	40
105430-67110	12	12
114250-39450	8	15
119000-35140	8	7
119130-44760	9	31
119131-18320	5	7
119171-59910	12	9
119260-34810	8	2
119305-59120	11	15
119326-77820	4	61
119600-11460	4	12
	15	5
119620-59700	11	50
119640-01640	3	9
119717-53010	11	2
119717-77800	4	56
119802-13610	5	6
119802-13720	5	8
119810-77340	14	12
119836-77201	14	1
119836-77920	14	7
120130-22301	7	17
121023-26070	2	23
121400-11340	4	8
	15	9
121450-42450	9	29
121850-21130	7	35
121850-21290	7	5
121850-21680	7	10
121850-21920	7	6
121850-49550	9	6
	15	14
121850-49800	9	9
121850-77021	5	10
	15	24
124066-59100	11	41
124160-01751	2	6
	4	45
124160-11360	4	46
124250-49351	9	32
124460-11340	4	9
	15	3
124465-44950	9	30
	15	26
129001-91810	2	36
		37
129052-55630	12	13
129100-01580	2	27
	3	1

PARTS No.	Fig.	Ref.No.
129136-77251	14	8
129150-02450	6	4
129150-11230	4	34
		38
129150-11370	4	10
129150-11750	4	36
		40
129150-11810	4	20
129150-14200	6	1
129150-25920	6	14
129150-35160	8	6
129150-49360	9	33
	15	27
129150-59131	11	18
		22
129150-77340	14	10
129400-92440	15	28
129550-59120	11	19
129612-77260	14	9
129612-77700	14	2
129612-77710	14	3
129612-77730	14	4
129612-77740	14	5
129612-77750	14	6
129795-11180	4	7
129900-01200	1	33
129900-01250	1	15
129900-01780	2	3
129900-02020	1	7
129900-02341	1	35
129900-02410	1	10
129900-02931	1	30
129900-02941	1	38
129900-11100	4	4
129900-11110	4	5
129900-11120	4	6
129900-11200	4	26
129900-11240	4	27
129900-11280	4	30
129900-11310	4	48
	15	6
129900-11370	4	47
129900-11510	4	31
129900-11520	4	32
129900-11530	4	43
129900-11600	4	51
129900-11650	4	33
129900-11660	4	37
129900-12050	5	1
	15	7

PARTS No.	Fig.	Ref.No.
129900-12100	5	2
129900-13120	5	4
129900-13150	5	5
	15	8
129900-14110	6	7
129900-14140	2	28
129900-14400	6	2
129900-14590	6	3
129900-21050	7	1
129900-21220	7	4
129900-21600	7	39
129900-21640	7	9
129900-23001	7	19
129900-23200	7	24
129900-23601	7	25
129900-23611	7	33
129900-23911	7	23
129900-25060	6	10
129900-25110	6	11
129900-26020	6	17
129900-26250	2	21
		29
129900-32001	2	10
129900-32030	2	25
	8	8
	15	10
129900-32040	2	26
	15	11
129900-42061	9	12
	15	12
129900-42140	9	16
129900-42461	9	2
129900-49551	9	7
129900-49560	9	8
	15	13
129900-77010	13	1
129900-77330	14	11
129900-77400	13	2
129900-77440	13	5
129900-77450	13	7
		9
129900-77460	13	11
129900-77480	13	8
129900-77510	13	17
129900-77520	13	20
129900-77540	13	18
129900-77550	13	19
129900-77591	13	12
129900-77610	13	23
129900-77620	13	13

PARTS No.	Fig.	Ref.No.
129900-77640	13	15
129900-77650	13	14
129900-77700	13	16
129900-77710	13	24
129901-01350	1	34
	15	2
129901-01960	10	6
129901-11450	4	11
	15	4
129901-25900	6	16
129901-53020	11	3
129901-53800	11	4
129901-59500	12	8
129901-59510	11	43
129901-59560	11	48
	15	15
129901-59580	11	49
129901-59810	11	24
129901-59820	11	28
129901-59830	11	32
129901-59840	11	36
129901-77820	4	57
129904-01950	10	5
129904-11700	4	3
129904-22050	7	13
129904-22120	7	11
129904-22940	7	27
129904-22950	7	29
129906-01610	3	2
129906-21520	7	36
129907-21660	7	8
129910-07910	4	2
129915-77050	5	11
129916-01790	3	7
129916-44740	9	4
129916-49740	9	14
129917-42010	9	13
129917-42160	9	17
129917-42170	9	18
129917-42300	9	22
129917-42310	9	23
129917-51410	10	12
129917-55800	12	1
129917-55810	12	2
129917-55820	12	3
129917-55830	12	4
129917-55840	12	5
129917-55850	12	6
129930-01710	3	8
129930-07910	4	1

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 5 of 21 pages

The full manual includes:

- All 21 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Yanmar 4TNE92-HRJ Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual