
Fig.1. CYLINDER BLOCK

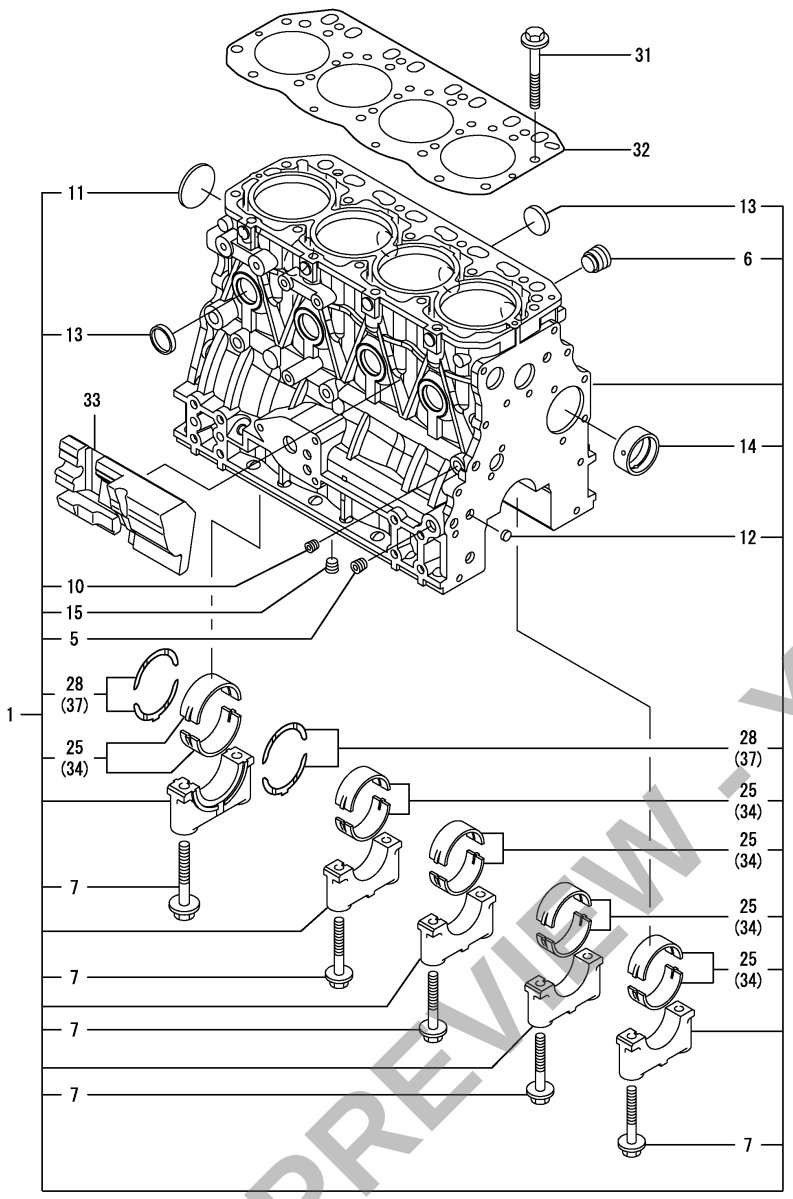

Remarks
(1) UNDER-SIZE(U.S=0.25)PART.
(2) OVER-SIZE(O.S=0.25)PART.
(3) REPAIR PART.

1. CYLINDER BLOCK

(A)=4TNV88-DSA (D)=4TNV88-GGE
(B)=4TNV88-DSA2 (E)=
(C)=4TNV88-DSA3 (F)=


REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	729602-01560	BLOCK ASSY, CYLINDER	1	1	1	1				
5	2	124160-01910	PLUG PT1/4	2	2	2	2				
6	2	171051-01921	PLUG	1	1	1	1				
7	2	129150-02020	BOLT, METAL CAP	10	10	10	10				
10	2	124060-01050	PLUG PT1/8	1	1	1	1				
11	2	129001-01250	PLUG 50	1	1	1	1				
12	2	27241-120000	PLUG 12	2	2	2	2				
13	2	27241-300000	PLUG 30	8	8	8	8				
14	2	129795-02411	BUSH, CAMSHAFT	1	1	1	1				
15	2	124160-01910	PLUG PT1/4	1	1	1	1				
25	2	129001-02930	MAIN BEARING SET	5	5	5	5				3
28	2	129150-02930	METAL, THRUST	2	2	2	2				
31	1	129150-01200	STUD, CYL. HEAD	18	18	18	18				
32	1	129407-01340	GASKET,CYL.HEAD	1	1	1	1				
33	1	129004-01190	SPACER	1	1	1	1				
34	1	129150-02870	MAIN METAL US=0.25	5	5	5	5				1
37	1	129150-02940	METAL,THRUST.25(2PIE	1	1	1	1				2

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

(C)Copy Rights YANMAR CO.,LTD and YANMAR AGRICULTURAL EQUIPMENT CO.,LTD.

Fig.9. CRANKSHAFT & PISTON

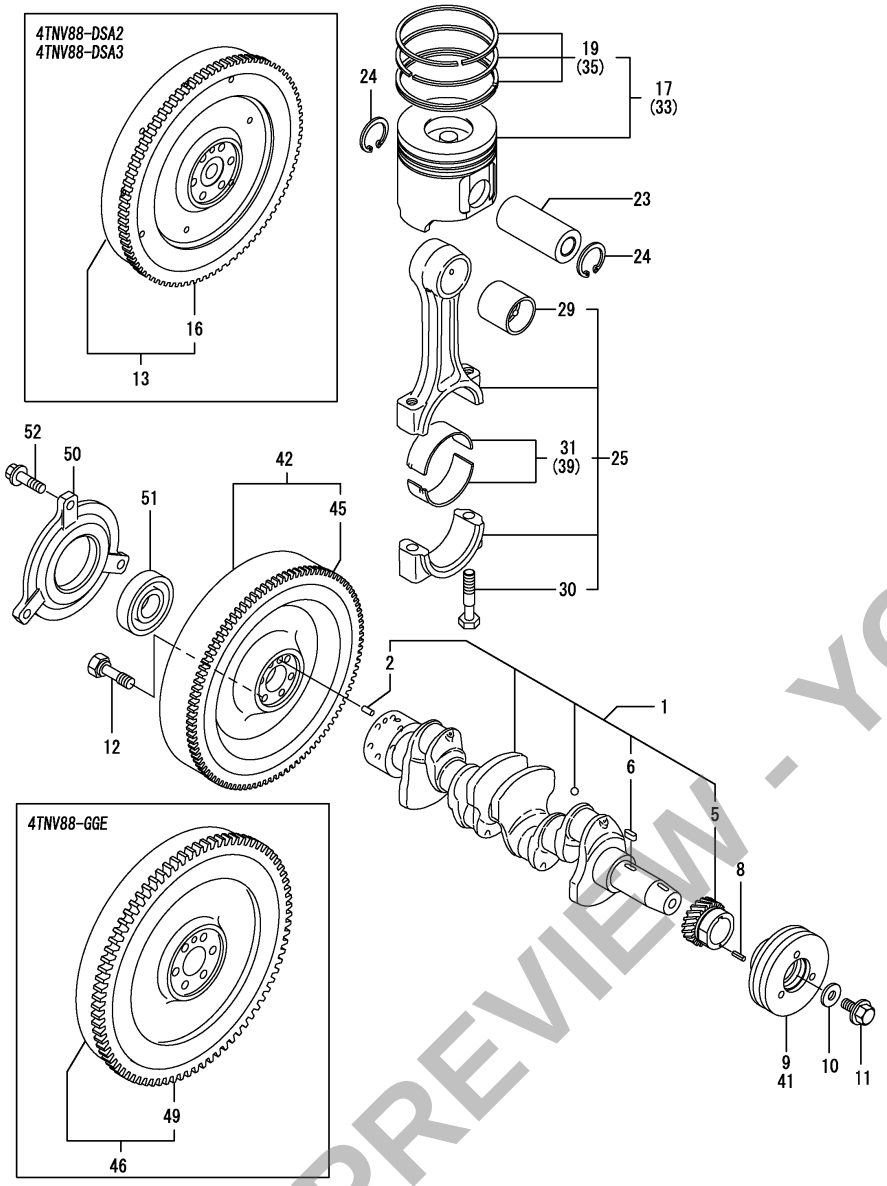

Remarks
(1) REPAIR PART.
(2) OVER-SIZE(O.S=0.25)PART.
(3) UNDER-SIZE(U.S=0.25)PART.

9. CRANKSHAFT & PISTON

(A)=4TNV88-DSA (D)=4TNV88-GGE
(B)=4TNV88-DSA2 (E)=
(C)=4TNV88-DSA3 (F)=

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I R
1	1	129601-21002	CRANKSHAFT ASSY	1	1	1	1			
2	2	129100-01580	PARALLEL PIN 8X16	1	1	1	1			
5	2	119802-21202	GEAR, CRANKSHAFT	1	1	1	1			
6	2	22512-070140	KEY 7X 14	1	1	1	1			
8	1	22351-030010	SPRING PIN 3X10	1	1	1	1			
9	1	119802-21650	V-PULLEY, CRANKSHAFT	1	1	1				
10	1	129795-21661	WASHER	1	1	1	1			
11	1	121850-21680	BOLT, V-PULLEY	1	1	1	1			
12	1	121111-21501	BOLT, FLYWHEEL	6	6	6	6			
13	1	171420-21580	FLYWHEEL ASSY		1	1				
16	2	119865-21600	GEAR, RING		1	1				
17	1	129005-22080	PISTON ASSY	4	4	4	4			
19	2	129005-22500	RING SET, PISTON	4	4	4	4			
23	1	129202-22300	PIN, PISTON(D26,L70)	4	4	4	4			
24	1	22252-000260	CIRCLIP 26	8	8	8	8			
25	1	729402-23100	ROD ASSY, CONNECTING	4	4	4	4			
29	2	129100-23910	BUSH, PISTON PIN	4	4	4	4			1
30	2	121550-23200	BOLT, CONNECTING ROD	8	8	8	8			
31	2	129150-23600	BEARING, CRANKPIN	4	4	4	4			
33	1	129005-22900	PISTON W/RING OS=.25	4	4	4	4			2
35	2	129005-22950	RING SET O.S=0.25	4	4	4	4			2
39	1	129150-23610	METAL.PIN US=0.25	4	4	4	4			3
41	1	119802-21660	V-PULLEY, CRANKSHAFT				1			
42	1	129488-21590	FLYWHEEL ASSY	1						
45	2	119865-21600	GEAR, RING	1						
46	1	171420-21590	FLYWHEEL ASSY				1			
49	2	124550-21600	RING GEAR				1			
50	1	119888-21450	RETAINER, BEARING	1						
51	1	24107-062054	BALL BEARING	1						
52	1	26106-080222	BOLT M 8X 22 PLATED	3						


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

(C)Copy Rights YANMAR CO.,LTD and YANMAR AGRICULTURAL EQUIPMENT CO.,LTD.

Y00R5660

Fig.13. FUEL INJECTION VALVE

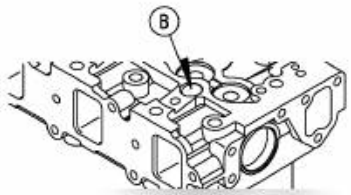

Y00R5660 13. FUEL INJECTION VALVE

(A)=4TNV88-DSA (D)=4TNV88-GGE
(B)=4TNV88-DSA2 (E)=
(C)=4TNV88-DSA3 (F)=

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	729602-53101	VALVE ASSY, F.INJECT	4	4	4					
2	2	129602-53001	NOZZLE ASSY	4	4	4					
5	2	114250-53080	NUT, NOZZLE CASE	4	4	4					
6	2	119802-53100	HOLDER ASSY, NOZZLE	4	4	4					
10	2	114250-53120	SPRING, NOZZLE	4	4	4					
11	2	114250-53130	SEAT, NOZZLE SPRING	4	4	4					
12	2	114250-53140	PLATE, STOP	4	4	4					
13	2	114250-53210	PIN	8	8	8					

PREVIEW - YOUFIXTHIS.COM

Blurred on purpose. The manual you buy has this page in full quality.

Download full manual at youfixthis.com

Y00R5660

Fig.11. COOLING WATER SYSTEM



Y00R5660 11. COOLING WATER SYSTEM

(A)=4TNV88-DSA (D)=4TNV88-GGE
(B)=4TNV88-DSA2 (E)=
(C)=4TNV88-DSA3 (F)=

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	129004-42001	PUMP ASSY, WATER	1	1	1	1				
3	2	129100-42051	GASKET, (NON-ASB.)	1	1	1	1				
4	2	129100-42121	PLATE	1	1	1	1				
8	2	121850-42410	SCREW	3	3	3	3				
10	2	119802-49113	JOINT	2	2	2	2				
11	2	23876-010000	PLUG PT1/8,SCREW	1	1	1	1				
12	2	23876-020000	PLUG PT1/4,SCREW	1	1	1	1				
13	2	129916-49740	PLUG, DRAIN R03	2	2	2	2				


Blurred on purpose. The manual you buy has this page in full quality.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Y00R5660

Fig.16. STARTING MOTOR

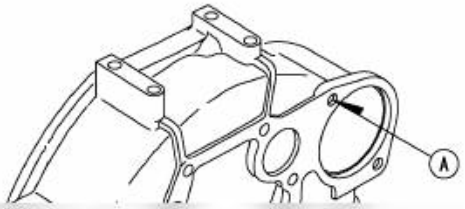

Y00R5660 16. STARTING MOTOR

(A)=4TNV88-DSA (D)=4TNV88-GGE
(B)=4TNV88-DSA2 (E)=
(C)=4TNV88-DSA3 (F)=

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	129400-77012	STARTING MOTOR	1	1	1					
2	2	129486-77400	ARMATUER	1	1	1					
3	3	171008-77410	BEARING(1)	1	1	1					
4	3	171008-77420	BEARING(2)	1	1	1					
5	2	129400-77441	FIELD COIL ASSY	1	1	1					
6	3	129486-77460	BRUSH	2	2	2					
7	2	129486-77470	HOLDER ASSY, BRUSH	1	1	1					
8	3	129486-77460	BRUSH	2	2	2					

Blurred on purpose. The manual you buy has this page in full quality.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 5 of 30 pages

The full manual includes:

- All 30 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Yanmar 4TNV88-GGE, TNV SERIES Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual