

```
1,1,,772149-03100,,"LABEL ASSY",1,,,,,,,,,,,,,,,,
1-1,1,,772149-03101,,"LABEL SET, (B12-1)",1,,,,,,N,,,M10501,,,,,,,,
2,1,,772150-03100,,"LABEL ASSY",,,1,,,,,,,,,,,,,,
2-1,1,,772150-03101,,"LABEL SET, (B17-1)",,,1,,,,N,,,,,,,M10501,,,,
3,2,,172149-03110,,"LABEL, SPECIFICATION",1,,,,,,,,,,,,,,,,
3-1,2,,172149-03111,,"LABEL, SPECIFICATION",1,,,,,,S,,,M10501,,,,,,,,
4,2,,172150-03110,,"LABEL, SPECIFICATION",,,1,,,,,,,,,,,,,,
4-1,2,,172150-03111,,"LABEL, SPECIFICATION",,,1,,,,S,,,,,,M10501,,,,
5,2,,172141-03130,,"LABEL, GREASING",1,,1,,,,,,,,,,,,,,
6,2,,172149-03130,,"LABEL, OIL & WATER",1,,1,,,,,,,,,,,,,,
7,2,,172122-03141,,"LABEL, GREASE",1,,1,,,,,,,,,,,,,,
8,2,,172149-03160,,LABEL,2,,,,,,,,,,,,,,,,
9,2,,172150-03120,,LABEL,,,2,,,,,,,,,,,,,,
10,2,,172141-03170,,"LABEL, RESTART",1,,1,,,,,,,,,,,,,,
11,2,,172149-03170,,"LABEL, STRIPE(F)",1,,1,,,,,,,,,,,,,,
12,2,,172141-03181,,"LABEL, RESERVER(C)",1,,1,,,,,,,,,,,,,,
13,2,,172149-03180,,LABEL,1,,1,,,,,,,,,,,,,,
14,2,,172141-03190,,LABEL(D,1,,1,,,,,,,,,,,,,,
14-1,2,,172131-03670,,"LABEL, DANGER",1,,1,,,,R,,,M00771,,,M00661,,,,
15,2,,172149-03190,,LABEL,1,,1,,,,,,,,,,,,,,
16,2,,172149-03200,,"LABEL, STRIPE(R)",1,,1,,,,,,,,,,,,,,
17,2,,172149-03210,,LABEL,1,,1,,,,,,,,,,,,,,
18,2,,172141-03220,,LABEL,1,,1,,,,,,,,,,,,,,
18-1,2,,172141-03201,,"LABEL,ENGINE ROOM(C)",1,,1,,,,N,,,M00501,,,,M00501,,,,
19,2,,172149-03230,,LABEL,1,,1,,,,,,,,,,,,,,
20,2,,172149-03240,,LABEL,1,,1,,,,,,,,,,,,,,
21,2,,172141-03250,,"LABEL, OILING",1,,1,,,,,,,,,,,,,,
21-1,2,,172155-03310,,"LABEL, OILING",1,,1,,,,N,,,MX,,,,M11330,,,,
22,2,,172149-03250,,LABEL,1,,1,,,,,,,,,,,,,,
23,2,,172149-03260,,LABEL,2,,2,,,,,,,,,,,,,,
23-1,2,,172149-03261,,LABEL,2,,2,,,,N,,,M00654,,,,M00645,,,,
24,2,,172149-03270,,LABEL,1,,1,,,,,,,,,,,,,,
24-1,2,,172149-03271,,LABEL,1,,1,,,,N,,,M10501,,,,M10501,,,,
25,2,,172149-03280,,LABEL,1,,1,,,,,,,,,,,,,,
26,2,,172519-03290,,"LABEL, ENG.COVER",1,,1,,,,,,,,,,,,,,
27,2,,172137-03300,,"LABEL, TURNING LOCK",1,,1,,,,,,,,,,,,,,
28,2,,172141-03350,,"LABEL, QUICK(C)",1,,1,,,,Z,,,M11861,,,,M11238,,,,
29,2,,172141-03370,,"LABEL, PROTECTOR",2,,2,,,,,,,,,,,,,,
30,2,,172137-03780,,"LABEL, THROTTLE",1,,1,,,,,,,,,,,,,,
31,2,,121470-44540,,"LABEL, SUB-TANK",1,,1,,,,,,,,,,,,,,
32,2,,933112-20200,,"LABEL, KEY SWITCH",1,,1,,,,,,,,,,,,,,
33,2,,933112-52400,,"LABEL, FUEL",1,,1,,,,,,,,,,,,,,
34,2,,172149-03220,,LABEL,1,,1,,,,,,,,,,,,,,
35,2,,172141-03150,,"LABEL, OPERATION",1,,1,,,,Z,,,M11861,,,,M11238,,,,
36,2,,172149-53400,,"TREE CLIP",2,,,,,,,,,,,,,,,,
37,2,,172142-03300,,LABEL,1,,1,,,,W,,,M10501,,,,M10501,,,,
38,2,,172151-03540,,"LABEL,PATTERN A",1,,1,,,,W,,,M11861,,,,M11238,,,,
41,1,,172168-03400,,LABEL,1,,1,,,,,1,,,,,,,,,
```

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

Fig.66 安全銘板 SAFETY LABEL

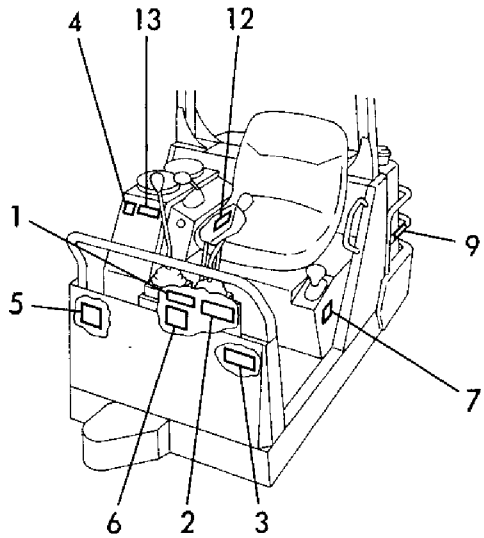

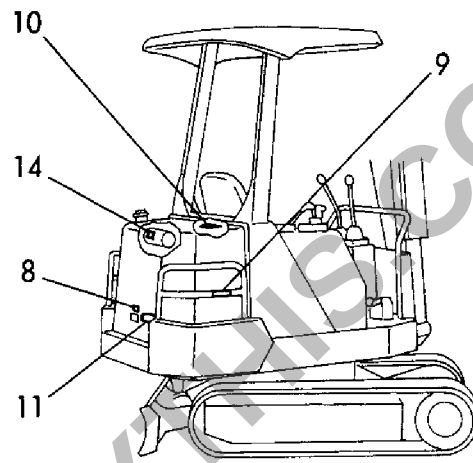


安全銘板の貼付け位置は、取扱説明書をご参照下さい。

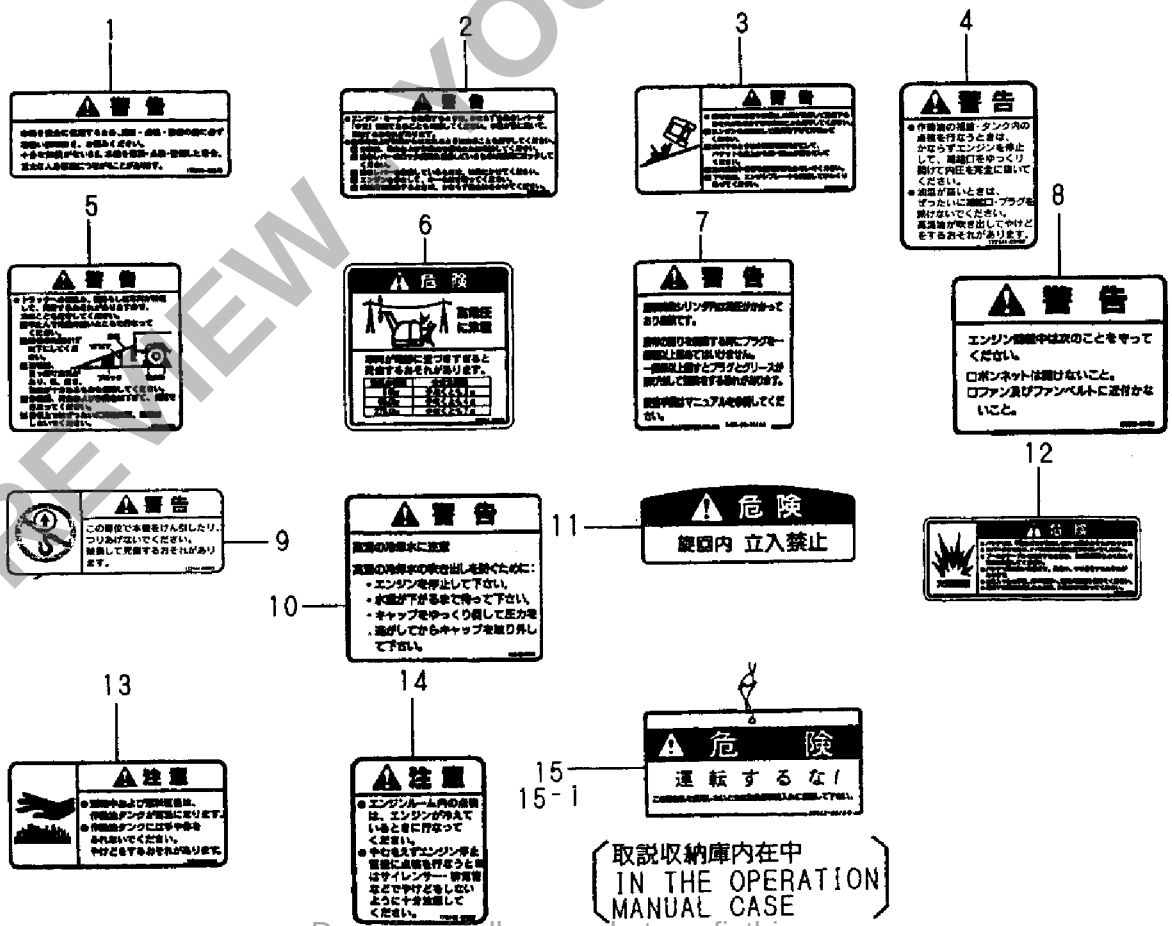

PREVIEW YOUFIXTHIS.COM
Download full manual at youfixthis.com


Fig. 7 エンジンマウント＆ラジエータ
ENGINE MOUNT & RADIATOR

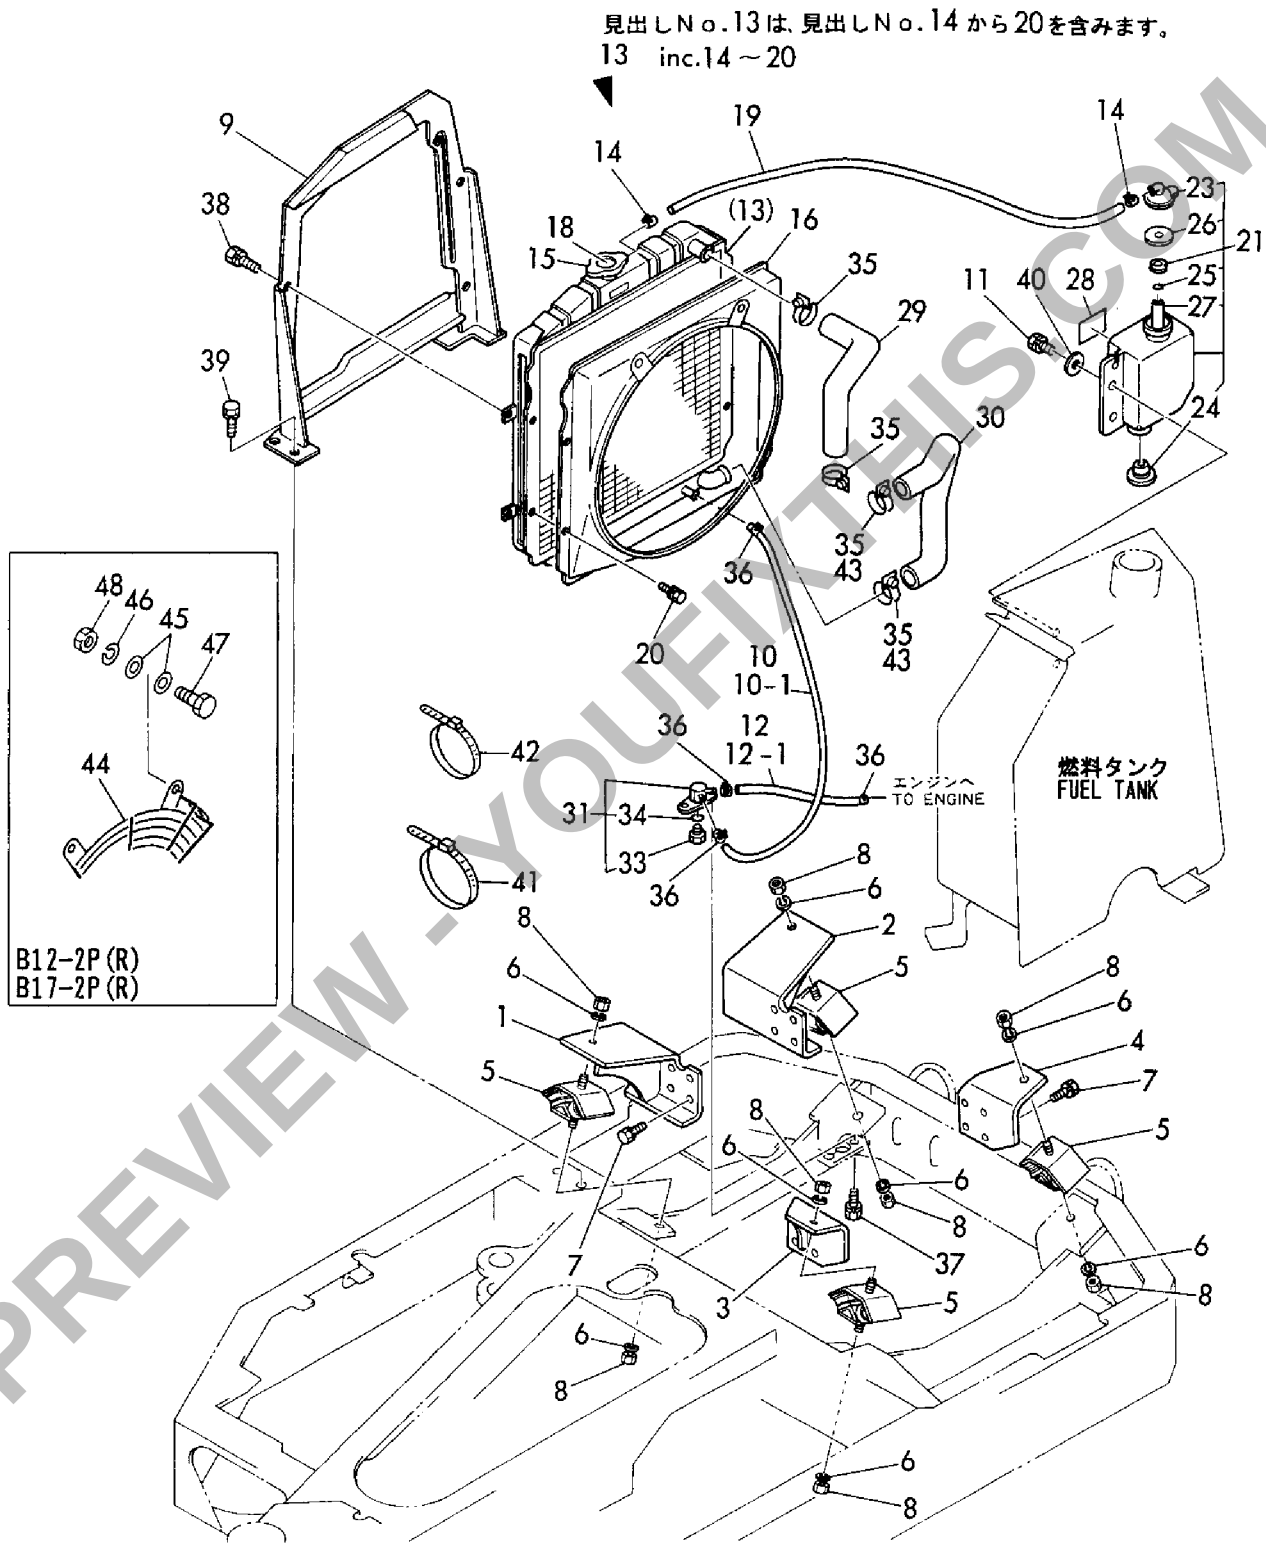

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.37 油圧ポンプ&軸継手 HYD.OIL PUMP & JOINT

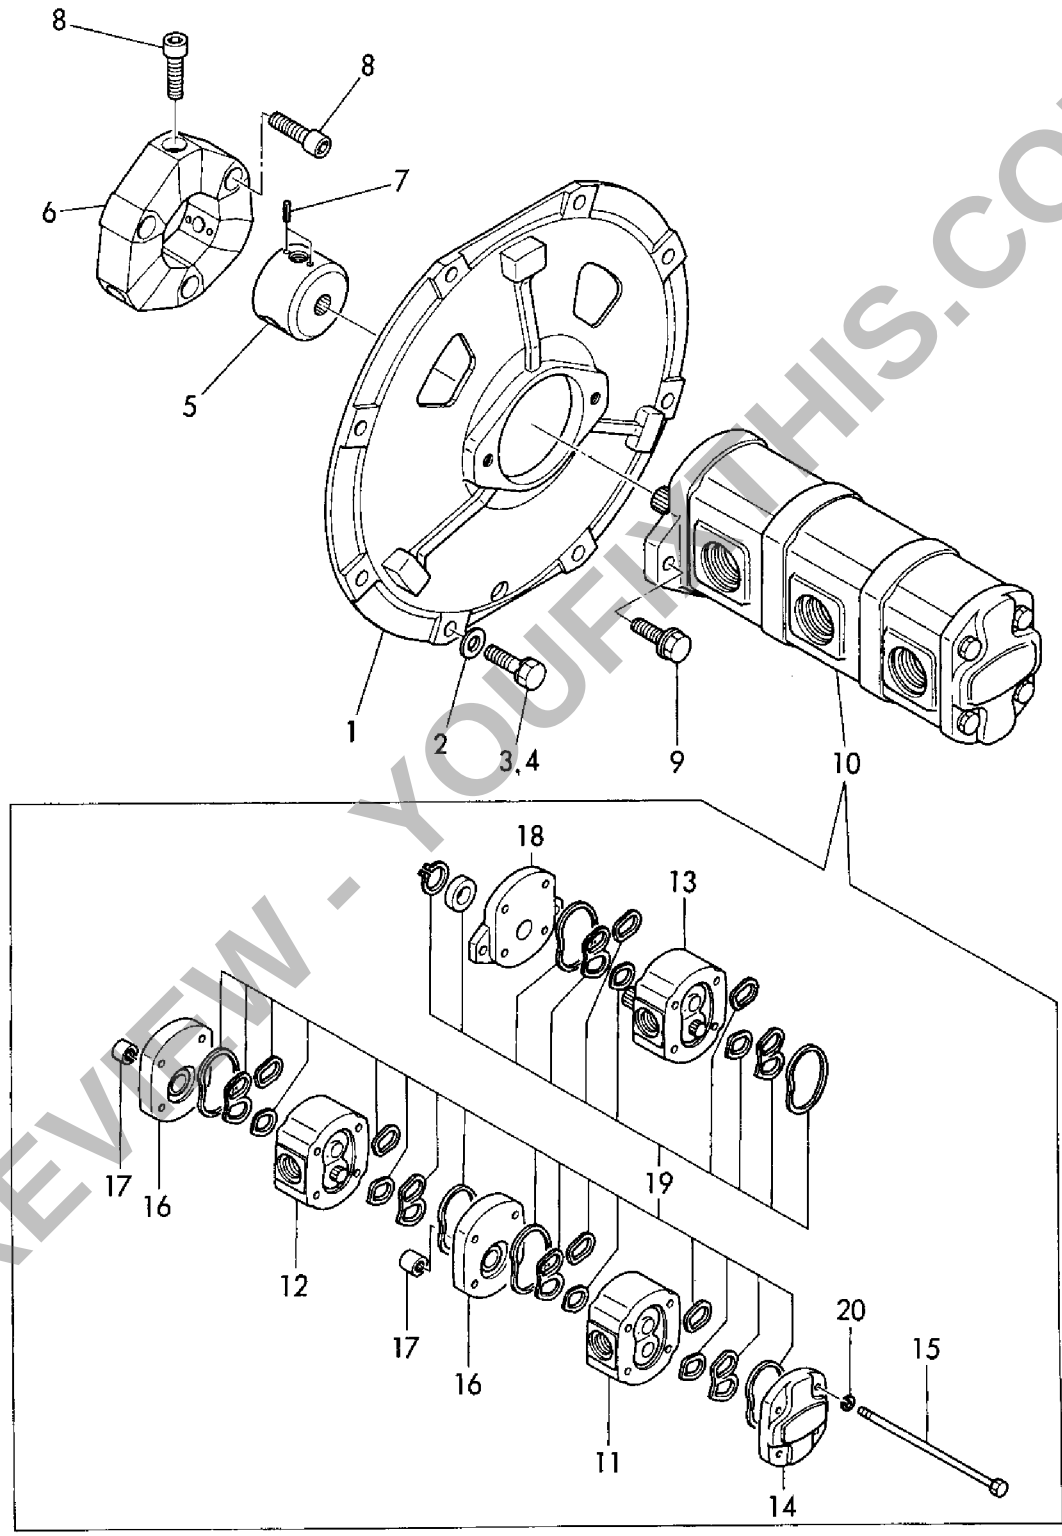


PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

発行No. 000Y00K2492-1
更新年月：1996. 09
REVISED : Sep., 1996

Fig.39 走行モータ TRAVEL MOTOR

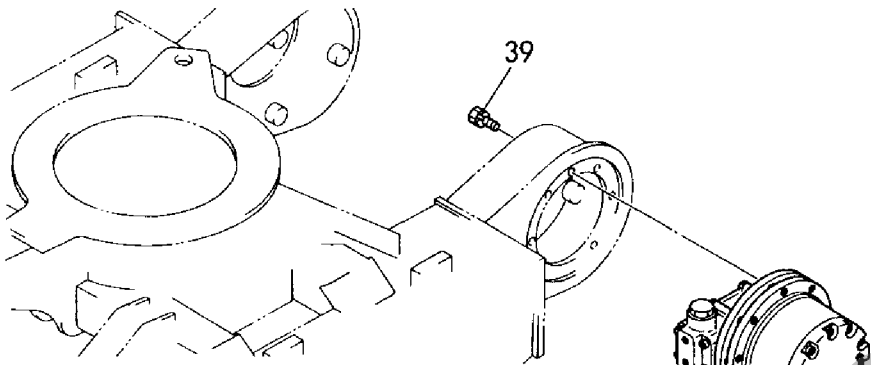

見出しNo．2は、見出しNo．3から36を含みます。
2inc．3 ～ 36

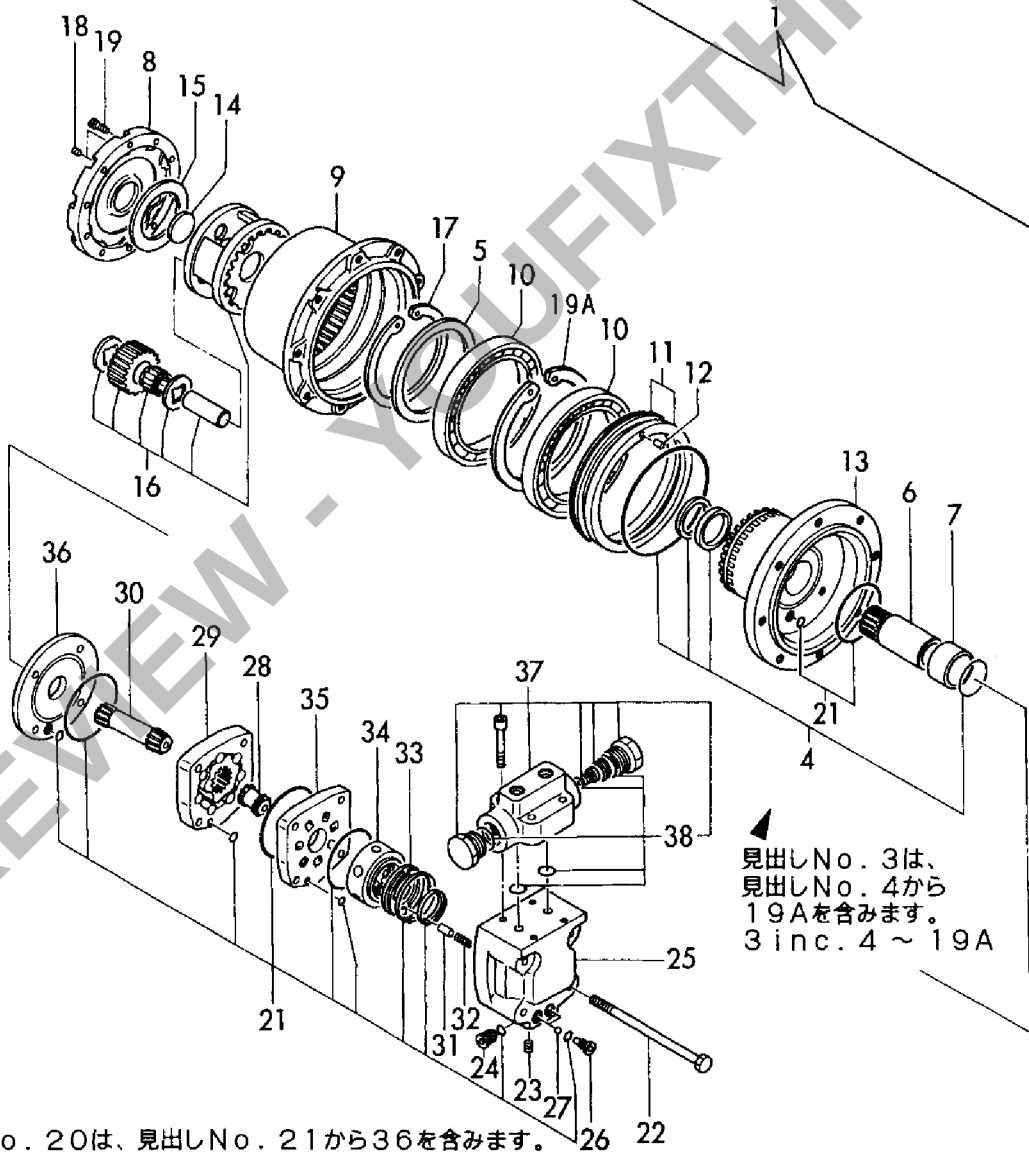


見出しNo．3は、
見出しNo．4から
19Aを含みます。
3inc．4 ～ 19A

見出しNo．20は、見出しNo．21から36を含みます。
20inc．21 ～ 36

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Fig. 13 トラックフレーム＆アイドラ TRACK FRAME & IDLER

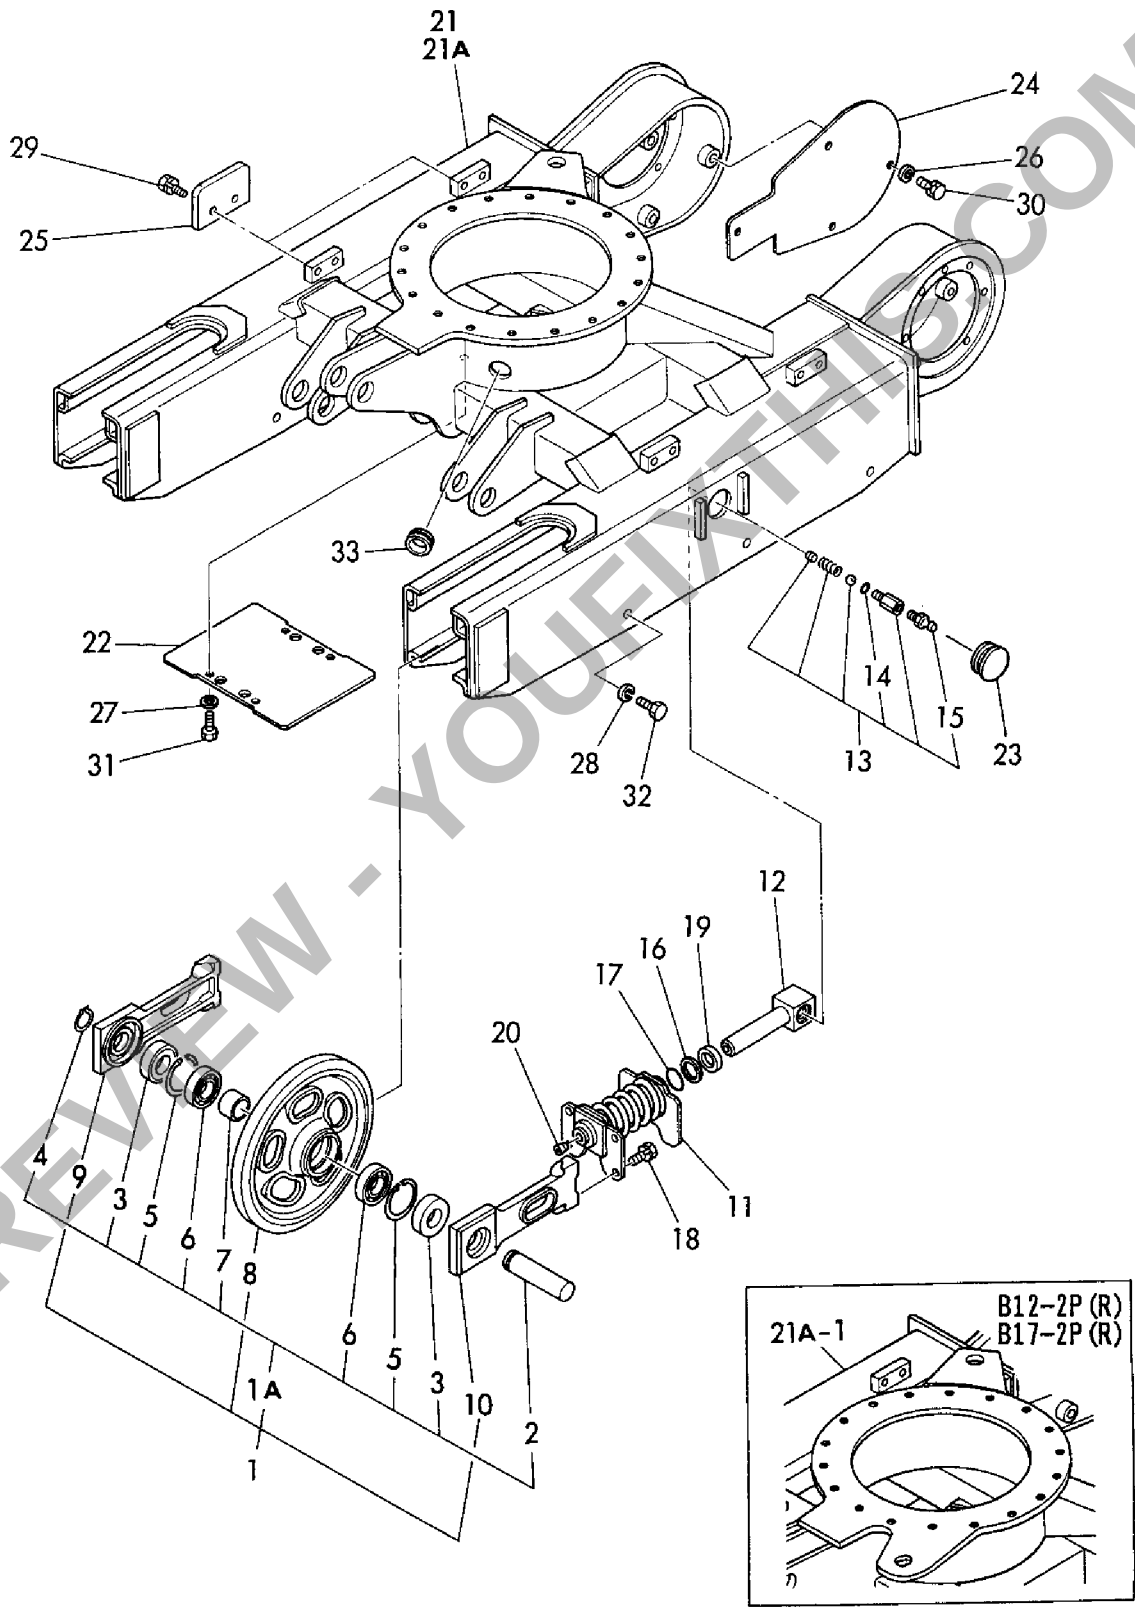

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.55 ブーム&バケット((B12)(-1))
BOOM & BUCKET ((B12) (-1))

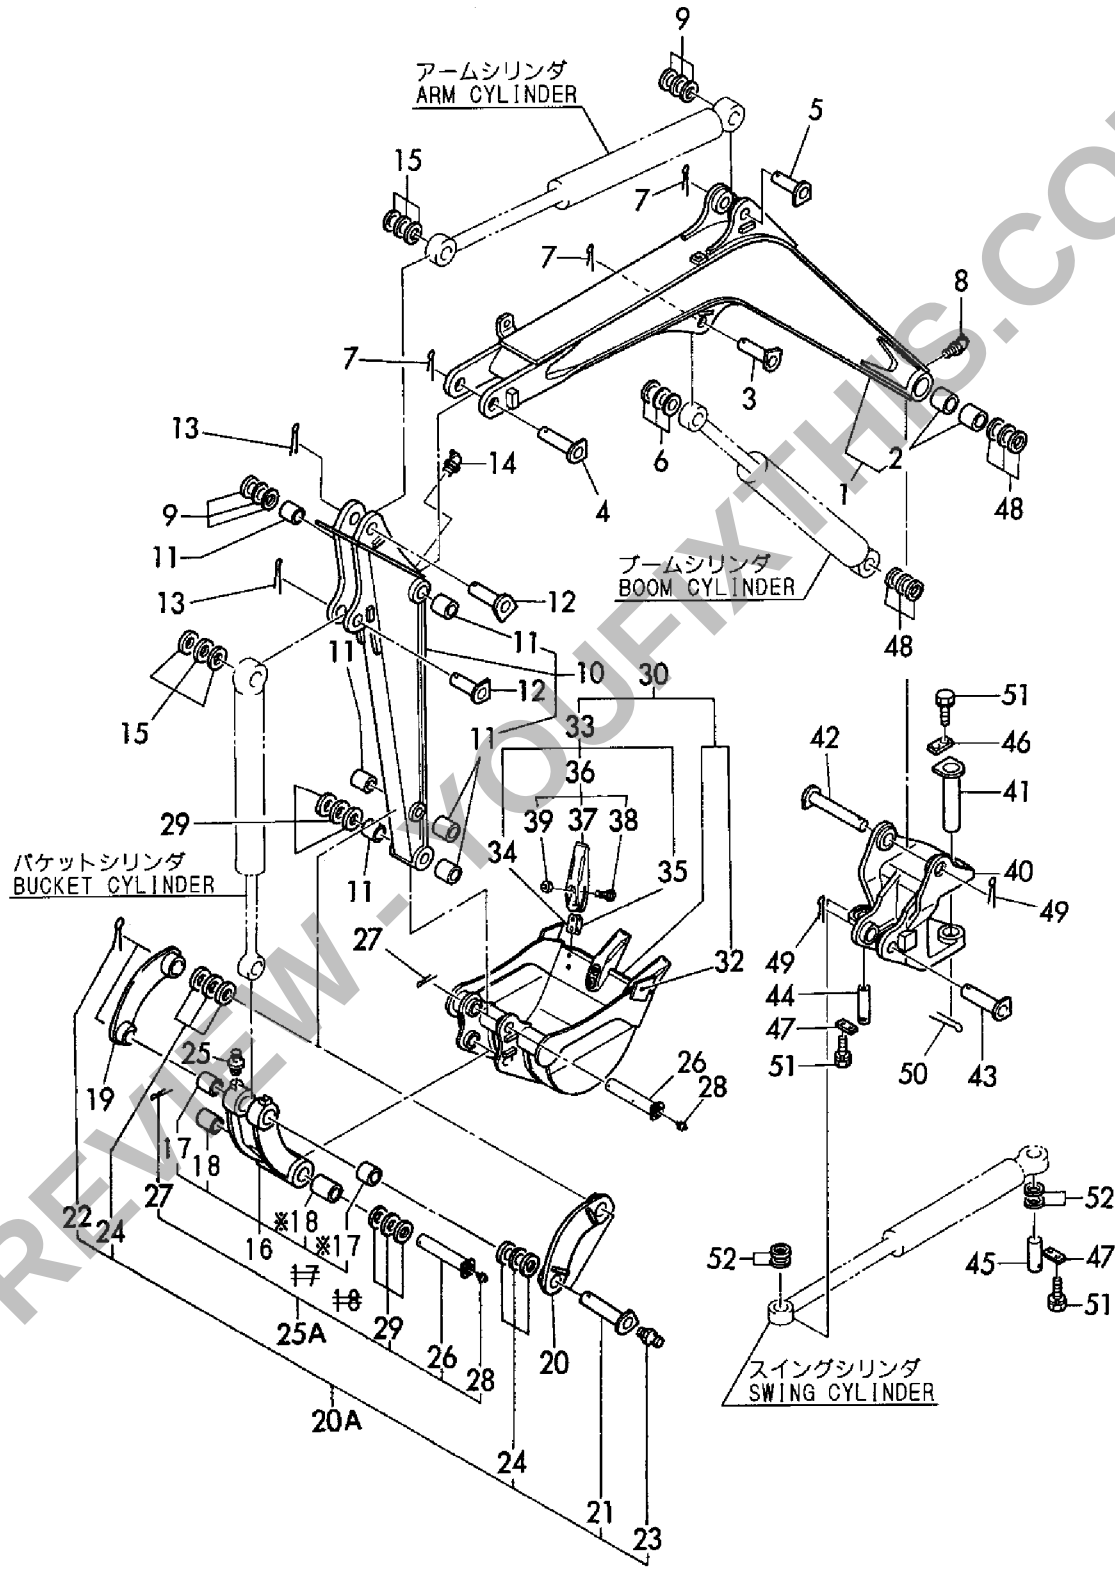


※印が今回変更した箇所です。
※ MARKED PART HAS BEEN CHANGED.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig. 23 ボンネット BONNET

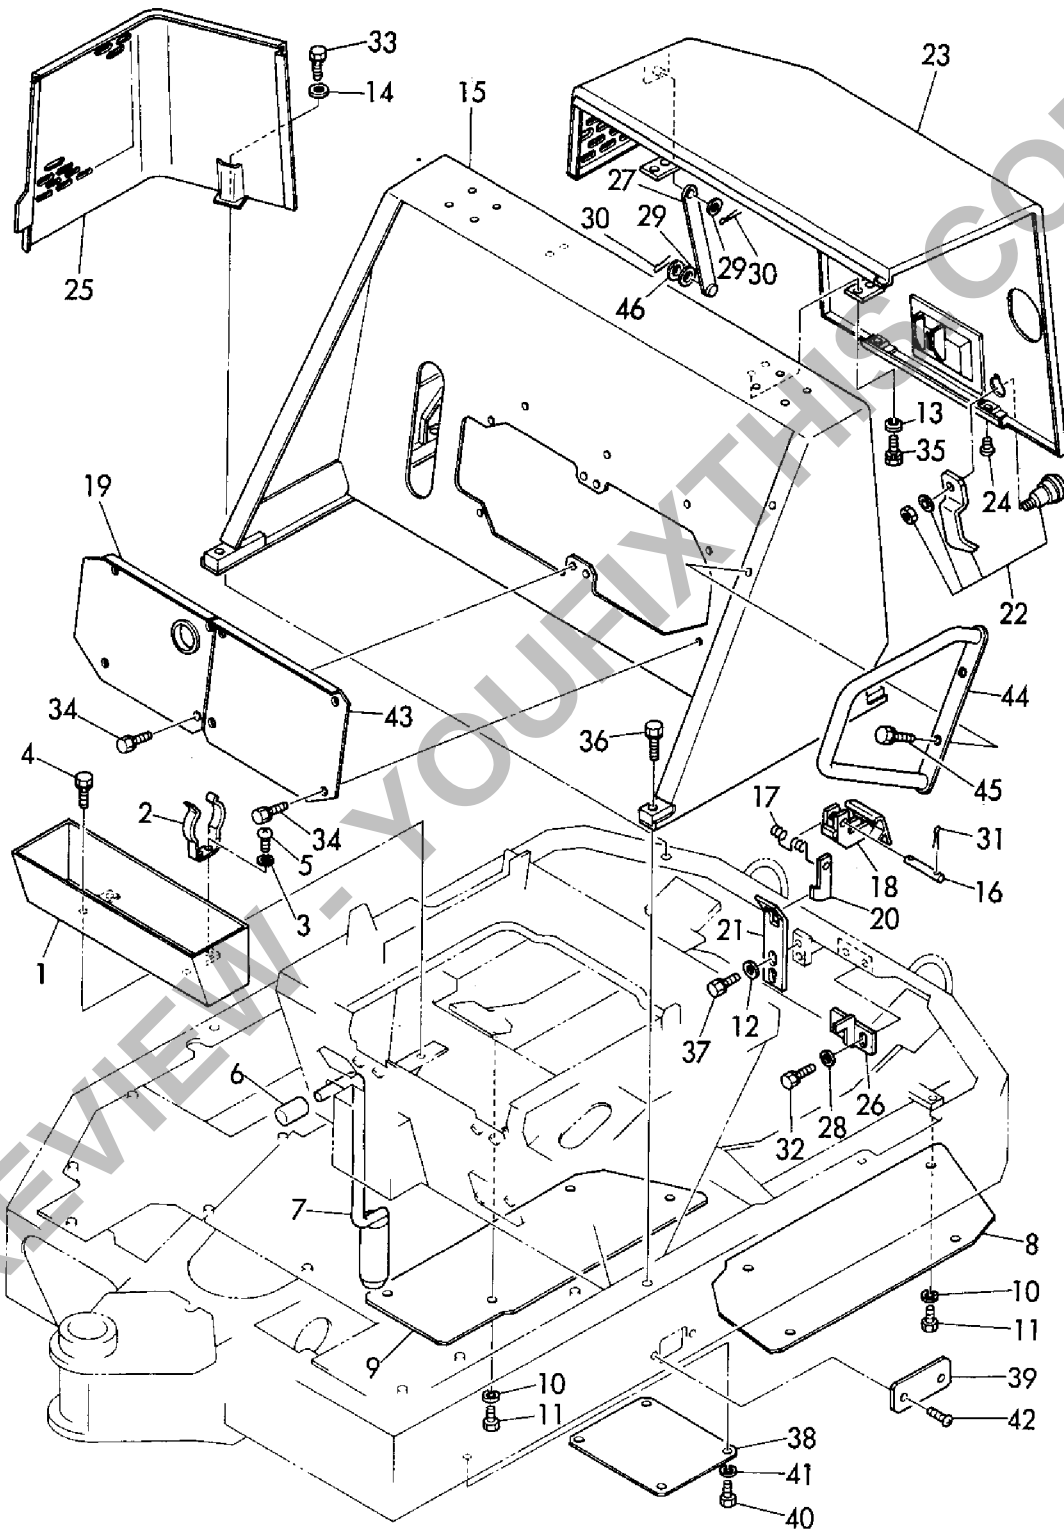

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

```
0,Y00K2492
1,001,,"VEHICLE B12/17(-1)(-2)"
2,1,,LABEL(B12/17(-1)),B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-2P(R),"B17-
2(AS,EX)"
2,2,,LABEL(B12/17-2),B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-2P(R),"B17-2(AS,EX)"
2,3,,"LABEL(B17-2(AS,EX))",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-2P(R),"B17-
2(AS,EX)"
2,4,,TOOL,B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-2P(R),"B17-2(AS,EX)"
2,5,,"INLETHOUSE & EXHAUST PIPE",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-
2P(R),"B17-2(AS,EX)"
2,6,,ACCELERATOR,B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-2P(R),"B17-2(AS,EX)"
2,7,,"ENGINE MOUNT & RADIATOR",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-2P(R),"B17-
2(AS,EX)"
2,8,,"FUEL TANK & FUEL LINE",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-2P(R),"B17-
2(AS,EX)"
2,9,,BATTERY,B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-2P(R),"B17-2(AS,EX)"
2,10,,"ELECTRIC PART",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-2P(R),"B17-2(AS,EX)"
2,11,,"WORK LAMP",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-2P(R),"B17-2(AS,EX)"
2,12,,"TRACK ROLLER",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-2P(R),"B17-2(AS,EX)"
2,13,,"TRACK FRAME & IDLER",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-2P(R),"B17-
2(AS,EX)"
2,14,,CRAWLER,B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-2P(R),"B17-2(AS,EX)"
2,15,,"LINK STAND",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-2P(R),"B17-2(AS,EX)"
2,16,,"CONTROL EQUIPMENT(BOOM&BUCKET)",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-
2P(R),"B17-2(AS,EX)"
2,17,,"CONTROL EQUIPMENT(ARM&TURNING)",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-
2P(R),"B17-2(AS,EX)"
2,18,,"CONTROL EQUIPMENT(TRAVEL&SWING",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-
2P(R),"B17-2(AS,EX)"
2,19,,"CONTROL EQUIPMENT(BLADE)",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-
2P(R),"B17-2(AS,EX)"
2,20,,"OPERATION LEVER STOPPER",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-
2P(R),"B17-2(AS,EX)"
2,21,,"TURNING FRAME",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-2P(R),"B17-2(AS,EX)"
2,22,,"TURNING BEARING",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-2P(R),"B17-
2(AS,EX)"
2,23,,BONNET,B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-2P(R),"B17-2(AS,EX)"
2,24,,"SEAT & STEP(B12/17(-1))",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-
2P(R),"B17-2(AS,EX)"
2,25,,"SEAT & STEP(B12/17-2)",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-2P(R),"B17-
2(AS,EX)"
2,26,,CANOPY,B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-2P(R),"B17-2(AS,EX)"
2,27,,"BOOM CYLINDER(B12/17(-1))",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-
2P(R),"B17-2(AS,EX)"
2,28,,"BOOM CYLINDER(B12/17-2)",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-
2P(R),"B17-2(AS,EX)"
2,29,,"ARM CYLINDER(B12/17(-1))",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-
2P(R),"B17-2(AS,EX)"
2,30,,"ARM CYLINDER(B12/17-2)",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-2P(R),"B17-
2(AS,EX)"
2,31,,"BUCKET CYLINDER(B12/17(-1))",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-
2P(R),"B17-2(AS,EX)"
2,32,,"BUCKET CYLINDER(B12/17-2)",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-
2P(R),"B17-2(AS,EX)"
2,33,,"SWING CYLINDER(B12/17(-1))",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-
2P(R),"B17-2(AS,EX)"
2,34,,"SWING CYLINDER(B12/17-2)",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-
2P(R),"B17-2(AS,EX)"
2,35,,"BLADE CYLINDER(B12/17(-1))",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-
2P(R),"B17-2(AS,EX)"
2,36,,"BLADE CYLINDER(B12/17-2)",B12(-1)P(R),B12-2P(R),B17(-1)P(R),B17-
2P(R),"B17-2(AS,EX)"
```

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

```
1,1,,772149-03140,,"LABEL SET",,1,,,,,,,,,,,,,,
1-1,1,,772149-03141,,"LABEL SET",,1,,,,,N,,,,,M21247,,,,,,
2,1,,772150-03140,,"LABEL ASSY",,,,1,,,,,,,,,,,,
2-1,1,,772150-03141,,"LABEL ASSY",,,,1,,,N,,,,,,,,,M20673,,
3,2,,172149-03112,,"LABEL, SPECIFICATION",,1,,,,,,,,,,,,,,
4,2,,172150-03112,,"LABEL, SPECIFICATION",,,,1,,,,,,,,,,,,
5,2,,172165-03130,,"LABEL,GREASE FEED",,1,,1,,,,,,,,,,,,
6,2,,172149-03131,,"LABEL, OIL & WATER",,1,,1,,,,,,,,,,,,
7,2,,172122-03141,,"LABEL, GREASE",,1,,1,,,,,,,,,,,,
8,2,,172149-03160,,LABEL,,2,,,,,,,,,,,,,,
9,2,,172150-03120,,LABEL,,,,2,,,,,,,,,,,,
10,2,,172141-03170,,"LABEL, RESTART",,1,,1,,,,,,,,,,,,
11,2,,172149-03300,,"LABEL,FRONT",,1,,1,,,,,,,,,,,,
12,2,,172141-03181,,"LABEL, RESERVER(C)",,1,,1,,,,,,,,,,,,
12-1,2,,172141-03182,,LABEL,,1,,1,,,N,,,,,M21247,,,,M20673,,
13,2,,172149-03180,,LABEL,,1,,1,,,,,,,,,,,,
14,2,,172131-03670,,"LABEL, DANGER",,1,,1,,,,,,,,,,,,
14-1,1,,172156-03280,,LABEL,,1,,1,,,N,,,,,M21247,,,,M20673,,
15,2,,172149-03190,,LABEL,,1,,1,,,,,,,,,,,,
16,2,,172149-03200,,"LABEL, STRIPE(R)",,1,,1,,,,,,,,,,,,
17,2,,172149-03210,,LABEL,,1,,1,,,,,,,,,,,,
18,2,,172141-03201,,"LABEL,ENGINE ROOM(C)",,1,,1,,,,,,,,,,,,
18-1,2,,172141-03202,,LABEL,,1,,1,,,N,,,,,M21247,,,,M20673,,
19,2,,172149-03230,,LABEL,,1,,1,,,,,,,,,,,,
20,2,,172519-03680,,"LABEL,BRAND",,1,,1,,,,,,,,,,,,
21,2,,172155-03310,,"LABEL, OILING",,1,,1,,,,,,,,,,,,
22,2,,172149-03261,,LABEL,,2,,2,,,,,,,,,,,,
23,2,,172149-03272,,LABEL,,1,,1,,,,,,,,,,,,
24,2,,172519-03680,,"LABEL,BRAND",,1,,,,,,,,,,,,,,
25,2,,172519-03290,,"LABEL, ENG.COVER",,1,,1,,,,,,,,,,,,
25-1,2,,172519-04180,,LABEL,,1,,1,,,N,,,,,M21247,,,,M20673,,
26,2,,172137-03300,,"LABEL, TURNING LOCK",,1,,1,,,,,,,,,,,,
27,2,,172141-03370,,"LABEL, PROTECTOR",,2,,2,,,,,,,,,,,,
27-1,2,,172141-03372,,LABEL,,2,,2,,,N,,,,,M21247,,,,M20673,,
28,2,,172137-03780,,"LABEL, THROTTLE",,1,,1,,,,,,,,,,,,
29,2,,121470-44540,,"LABEL, SUB-TANK",,1,,1,,,,,,,,,,,,
30,2,,933112-20200,,"LABEL, KEY SWITCH",,1,,1,,,,,,,,,,,,
31,2,,933112-52400,,"LABEL, FUEL",,1,,1,,,,,,,,,,,,
31-1,2,,172183-03250,,LABEL,,1,,1,,,N,,,,,M21247,,,,M20673,,
32,2,,172149-03220,,LABEL,,1,,1,,,,,,,,,,,,
33,2,,172149-53400,,"TREE CLIP",,2,,,,,,,,,,,,,,
34,2,,172142-03300,,LABEL,,1,,1,,,,,,,,,,,,
34-1,2,,172142-03302,,LABEL,,1,,1,,,N,,,,,M21247,,,,M20673,,
35,2,,172151-03540,,"LABEL,PATTERN A",,1,,1,,,,,,,,,,,,
36,2,,172183-03280,,"LABEL, LOCK",,1,,1,,,W,,,,,M20768,,,,M20530,,
36-1,2,,172183-03280,,"LABEL, LOCK",,2,,2,,,K,,,,,M21277,,,,M20679,,
37,2,,172164-03500,,LABEL,,1,,1,,,W,,,,,M21247,,,,M20673,,
38,2,,172164-03510,,LABEL,,1,,1,,,W,,,,,M21247,,,,M20673,,
39,2,,172164-03520,,LABEL,,1,,1,,,W,,,,,M21247,,,,M20673,,
40,2,,172164-03540,,LABEL,,1,,1,,,W,,,,,M21247,,,,M20673,,
41,2,,172165-03661,,LABEL,,1,,1,,,W,,,,,M21247,,,,M20673,,
42,2,,172519-04300,,LABEL,,1,,1,,,W,,,,,M21247,,,,M20673,,
43,2,,172964-03390,,LABEL,,1,,1,,,W,,,,,M21247,,,,M20673,,
44,2,,172964-03480,,LABEL,,1,,1,,,W,,,,,M21247,,,,M20673,,
44-1,2,,172964-03481,,LABEL,,1,,1,,,N,,,,,M21273,,,,M50001,,
45,2,,172964-03610,,"LABEL A",,1,,1,,,W,,,,,M21247,,,,M20673,,
48,1,,172168-03400,,LABEL,,1,,1,,,,1,,,,,,,,,
```

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


```
1,1,,172149-05300,,"BOX, TOOL",1,1,1,1,1,,,,,,,,,,,,
2,1,,172122-55061,,"BRACKET, GREASE PUMP",2,2,2,2,2,,,,,,,,,,,,
3,1,,22217-060000,,"SPRING WASHER  6",2,2,2,2,2,,,,,,,,,,,,
4,1,,26013-100202,,"BOLT W/WASHER M10X20",2,2,2,2,2,,,,,,,,,,,,
5,1,,26557-060102,,"SCREW M 6X 10",2,2,2,2,2,,,,,,,,,,,,
6,1,,172116-46630,,"KNOB, LOCK LEVER",1,1,1,1,1,,,,,,,,,,,,
7,1,,172149-58800,,"PIN, LOCK",1,1,1,1,1,,,,,,,,,,,,
8,1,,172149-61100,,"COVER(L), UNDER",1,1,1,1,1,,,,,,,,,,,,
9,1,,172149-61110,,"COVER, UNDER(R)",1,1,1,1,1,,,,,,,,,,,,
10,1,,22217-100000,,"SPRING WASHER 10",8,8,8,8,8,,,,,,,,,,,,
11,1,,26116-100162,,"BOLT M10X 16 PLATED",8,8,8,8,8,,,,,,,,,,,,
12,1,,194145-04810,,"WASHER 10",2,2,2,2,2,,,,,,,,,,,,
13,1,,194145-04810,,"WASHER 10",4,4,4,4,4,,,,,,,,,,,,
14,1,,194145-04810,,"WASHER 10",3,3,3,3,3,,,,,,,,,,,,
15A,1,,172149-65100,,COVER(B),1,,1,,,,,,,,,,,,,,
15B,1,,172149-65100-3,,"COVER(B)     (GREEN)",,1,,1,1,,,,,,,,,,,,
16,1,,172734-65260,,"PIN, BONNET LEVER",1,1,1,1,1,,,,,,,,,,,,
17,1,,172734-65270,,"SPRING, CATCH",1,1,1,1,1,,,,,,,,,,,,
18,1,,172124-65450,,"LEVER, LOCK",1,1,1,1,1,,,,,,,,,,,,
19,1,,172149-65450,,PLATE(R),1,1,1,1,1,,,,,,,,,,,,
20,1,,172124-65480,,CATCHER,1,1,1,1,1,,,,,,,,,,,,
21,1,,172124-65490,,"PLATE,CATCH",1,1,1,1,1,,,,,,,,,,,,
22,1,,172126-65500,,KEY,1,1,1,1,1,,,,,,,,,,,,
23A,1,,172149-65500,,COVER(C),1,,1,,,,,,,,,,,,,,
23B,1,,172149-65500-1,,COVER,,1,,1,1,,,,,,,,,,,,
24,1,,172137-65700,,"RUBBER, CUSHION",2,2,2,2,2,,,,,,,,,,,,
25A,1,,172149-65740,,"COVER(R)    (YELLOW)",1,,1,,,,,,,,,,,,,,
25B,1,,172149-65740-1,,COVER(R),,1,,1,1,,,,,,,,,,,,
26,1,,172149-65840,,HOOK,1,1,1,1,1,,,,,,,,,,,,
27,1,,172149-65850,,"PLATE, ROD",1,1,1,1,1,,,,,,,,,,,,
28,1,,22137-080000,,"WASHER 8, POLISHED",2,2,2,2,2,,,,,,,,,,,,
29,1,,22157-080000,,"WASHER  8",2,2,2,2,2,,,,,,,,,,,,
30,1,,22417-200100,,"COTTER PIN 2.0X10",2,2,2,2,2,,,,,,,,,,,,
31,1,,22417-200200,,"COTTER PIN 2.0X20",2,2,2,2,2,,,,,,,,,,,,
32,1,,26013-080162,,"BOLT W/WASHER M8X16",2,2,2,2,2,,,,,,,,,,,,
33,1,,26013-100162,,"BOLT M10X 16",3,3,3,3,3,,,,,,,,,,,,
34,1,,26013-100162,,"BOLT M10X 16",8,8,8,8,8,,,,,,,,,,,,
35,1,,26013-100252,,"BOLT W/WASHER M10X25",4,4,4,4,4,,,,,,,,,,,,
36,1,,26013-120452,,"BOLT M12X 45",4,4,4,4,4,,,,,,,,,,,,
37,1,,26013-100202,,"BOLT W/WASHER M10X20",2,2,2,2,2,,,,,,,,,,,,
38,1,,172149-64370,,"PLATE, UNDER",1,1,1,1,1,,,,,,,,,,,,
39,1,,172149-64360,,"PLATE, FRAME(L)",1,1,1,1,1,,,,,,,,,,,,
40,1,,26116-100162,,"BOLT M10X 16 PLATED",4,4,4,4,4,,,,,,,,,,,,
41,1,,22217-100000,,"SPRING WASHER 10",4,4,4,4,4,,,,,,,,,,,,
42,1,,172137-69850,,SCREW,2,2,2,2,2,,,,,,,,,,,,
43,1,,172149-65430,,PLATE(L),1,1,1,1,1,,,,,,,,,,,,
44A,1,,172141-68200,,GRIP,1,,1,,,,,,,,,,,,,,
44B,1,,172141-68200-3,,"GRIP ASSY",,1,,1,1,,,,,,,,,,,,
45,1,,26013-100252,,"BOLT W/WASHER M10X25",2,2,2,2,2,,,,,,,,,,,,
46,1,,1A1380-48040,,"SEAL WASHER 8",1,1,1,1,1,,W,,,M01179,,,,M00906,,,,
46-1,1,,22190-080000,,"SEAL WASHER  8(BOLT)",1,1,1,1,1,,,N,,,M10501,,,,M10501,,,,
```

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig. 44 コントロールバルブ（ブレード，P．T．O．）
CONTROL VALVE (BLADE, P.T.O.)

コントロールバルブＡＳＳＹ
CONTROL VALLE ASSY
(172149-74100)
Fig. 41 REF. NO. 1
INC. Fig. 41 REF. NO. 2~28
Fig. 42 REF. NO. 1~36
Fig. 43 REF. NO. 1~39
Fig. 44 REF. NO. 1~35
Fig. 45 REF. NO. 1~39

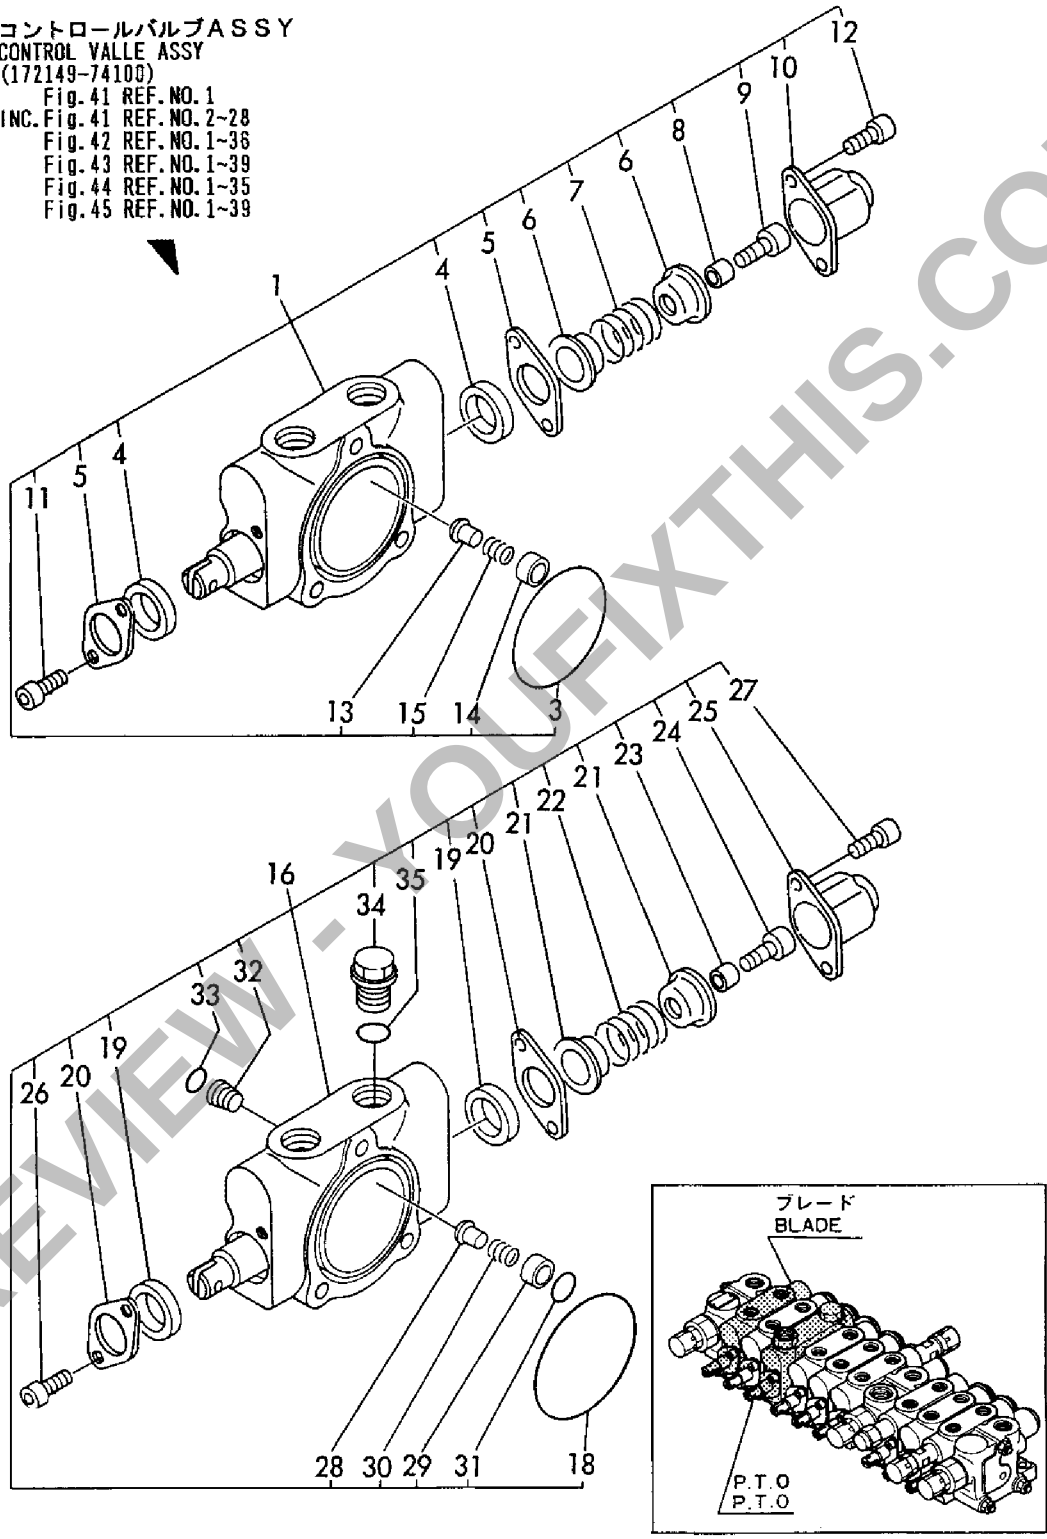

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 12 of 136 pages

The full manual includes:

- All 136 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Yanmar B12/17, B12, B17, B12P, B12-1P, B17P, B17-1P, B12-2P, B17-2P, B17-2P AS, B17-2P EX Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual