
```
1,1,,172179-13100,,"MOUNT ASSY,ENG",2,2,,,,,,,,,,,,,,,
2,1,,172179-13150,,"MOUNT ASSY,ENG",2,2,,,,,,,,,,,,,,,
3,1,,172179-13200,,"STOPPER,ENG",4,4,,,,,,,,,,,,,,,
4,1,,172179-13210,,CUSHION,4,4,,,,,,,,,,,,,,,
5,1,,22217-100000,,"SPRING WASHER 10",8,8,,,,,,,,,,,,,,,
6,1,,26013-100252,,"BOLT W/WASHER M10X25",16,16,,,,,,,,,,,,,,,
7,1,,26716-100002,,"NUT M10",8,8,,,,,,,,,,,,,,,
8,1,,26013-100202,,"BOLT W/WASHER M10X20",8,8,,,,,,,,,,,,,,,
```

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig. 25 ポンプ&ジクツギテ HYD. OIL PUMP & JOINT

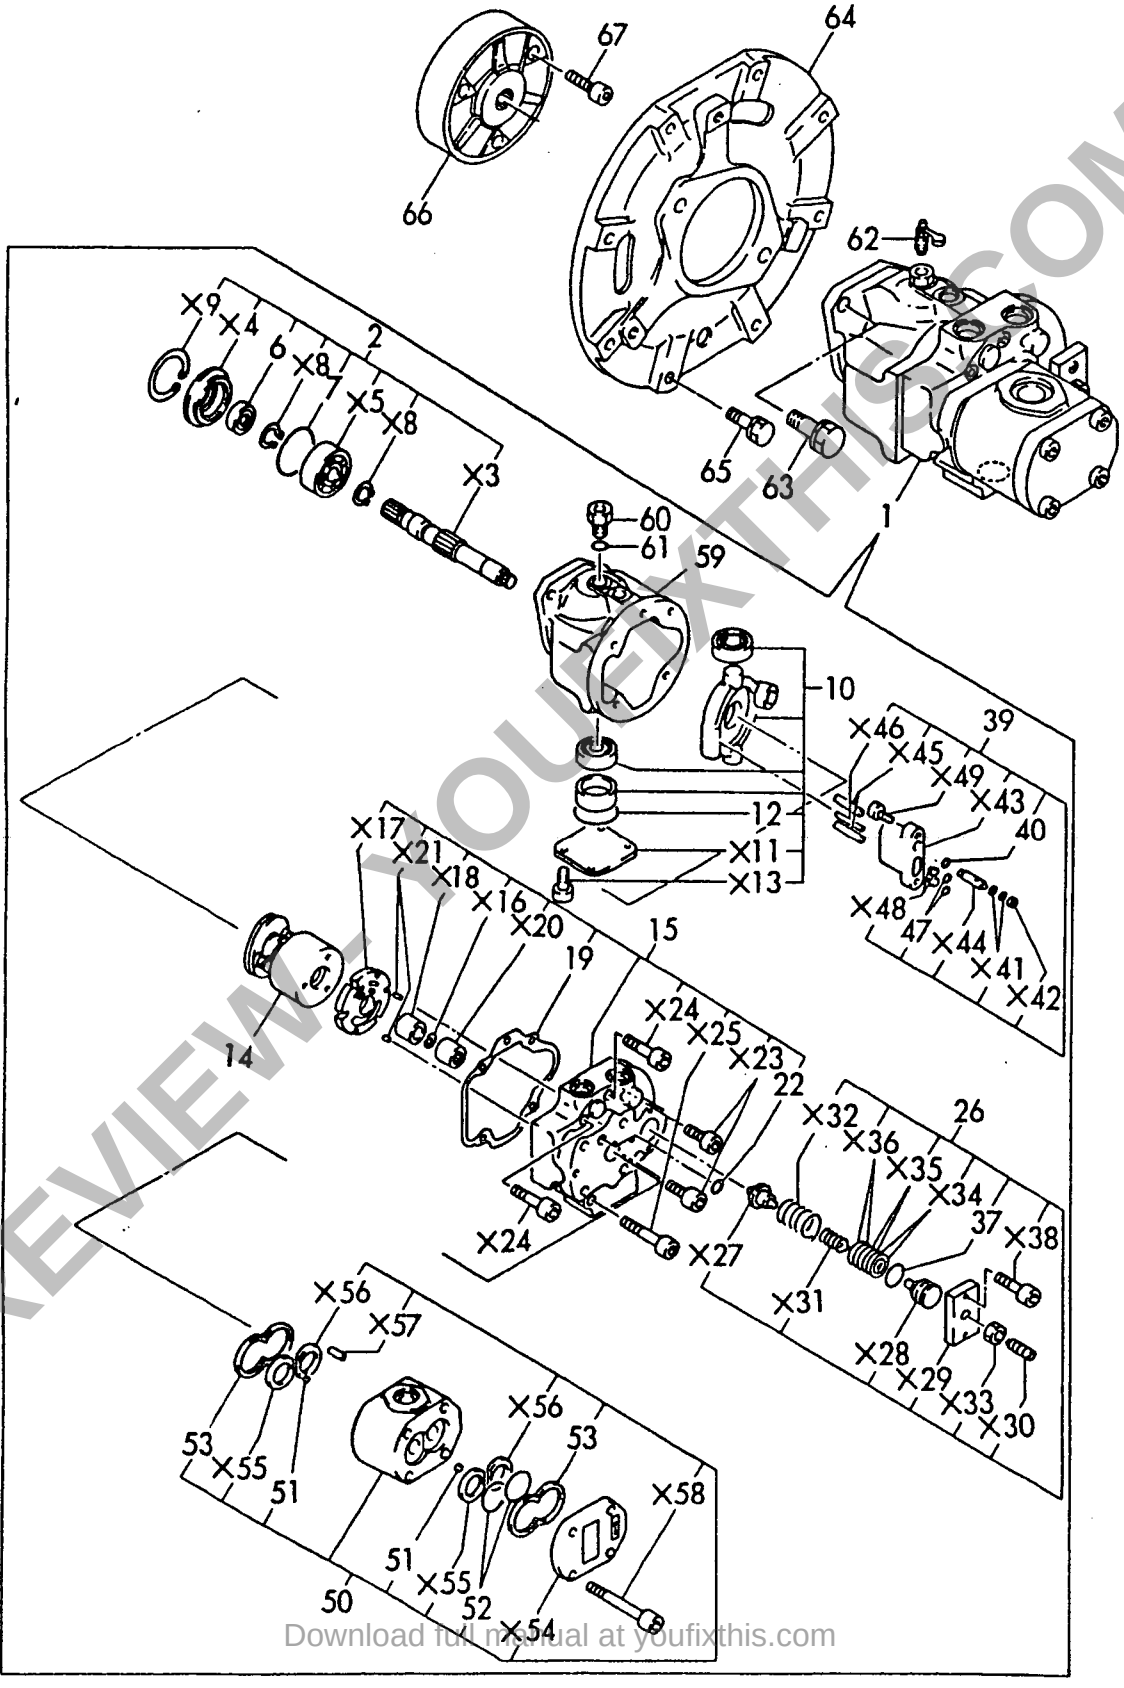

REVIEW YOUFIXTHIS.COM


Download full manual at youfixthis.com

1,1,,772180-03110,,"LABEL SET, CABIN",1,,,,,,,,,,,,,,,,
2,2,,172180-03110,,"LABEL,SPECIFICATION",1,,,,,,,,,,,,,,,,
3,2,,172180-03120,,"LABEL,B17 L.H",1,,,,,,,,,,,,,,,,
4,2,,172180-03130,,"LABEL,B17 R.H",1,,,,,,,,,,,,,,,,
5,2,,172180-03140,,"LABEL,OIL & WATER",1,,,,,,,,,,,,,,,,
6,2,,172179-03160,,"LABEL,SWING LOCK",1,,,,,,,,,,,,,,,,
7,2,,172179-03170,,"LABEL,REAR YANMAR",1,,,,,,,,,,,,,,,,
8,2,,172174-03190,,"LABEL,ACCELERATOR",1,,,,,,,,,,,,,,,,
9,2,,172159-03242,,"LABEL, BOOM",2,,,,,,,,,,,,,,,,
10,2,,172174-03270,,"LABEL, P.T.O.",1,,,,,,,,,,,,,,,,
11,2,,172159-03290,,LABEL,1,,,,,,,,,,,,,,,,
12,2,,172174-03290,,"LABEL,CAB",1,,,,,,,,,,,,,,,,
13,2,,172174-03330,,"LABEL,GREASE FEED",1,,,,,,,,,,,,,,,,
14,2,,172159-03340,,"LABEL, OIL FEED",1,,,,,,,,,,,,,,,,
15,2,,172174-03340,,"LABEL, GREASE",1,,,,,,,,,,,,,,,,
16,2,,172159-03350,,"LABEL, FUEL",1,,,,,,,,,,,,,,,,
17,2,,172159-03360,,"LABEL, AIR CLEANER",1,,,,,,,,,,,,,,,,
18,2,,172161-03360,,"LABEL,STARTER SWITCH",1,,,,,,,,,,,,,,,,
19,2,,172174-03360,,"LABEL,PATTERN A",1,,,,,,,,,,,,,,,,
20,2,,172159-03370,,"LABEL, SUBTANK",1,,,,,,,,,,,,,,,,
21,2,,172174-03380,,LABEL,1,,,,,,,,,,,,,,,,
22,2,,172159-03390,,"LABEL, ANTI-FREEZING",1,,,,,,,,,,,,,,,,
23,2,,172159-03450,,LABEL,1,,,,,,,,,,,,,,,,
24,2,,172174-03550,,"LABEL,HEATER SWITCH",1,,,,,,,,,,,,,,,,
25,2,,172174-03560,,"LABEL,WIPER SWITCH",1,,,,,,,,,,,,,,,,
26,2,,172174-03600,,LABEL,1,,,,,,,,,,,,,,,,
27,2,,172174-03630,,LABEL,2,,,,,,,,,,,,,,,,
28,2,,172174-03640,,"LABEL,TRANSPORT",1,,,,,,,,,,,,,,,,
29,2,,172174-03650,,"LABEL,GREASE CYL.",2,,,,,,,,,,,,,,,,
30,2,,172174-03660,,"LABEL,CABLE",1,,,,,,,,,,,,,,,,
31,2,,172174-03670,,"LABEL,NEUTRAL",1,,,,,,,,,,,,,,,,
32,2,,172174-03680,,"LABEL,SWING AREA",1,,,,,,,,,,,,,,,,
33,2,,172174-03690,,"LABEL,RADIATOR",1,,,,,,,,,,,,,,,,
34,2,,172174-03700,,LABEL,1,,,,,,,,,,,,,,,,
35,2,,172174-03710,,LABEL,1,,,,,,,,,,,,,,,,
36,2,,22857-300050,,"SCREW 3X 5",4,,,,,,,,,,,,,,,,
37,2,,172174-03570,,"LABEL,DANGER",1,,,,,,,,,,,,,,,,

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Fig. 11 ヒータ HEATER

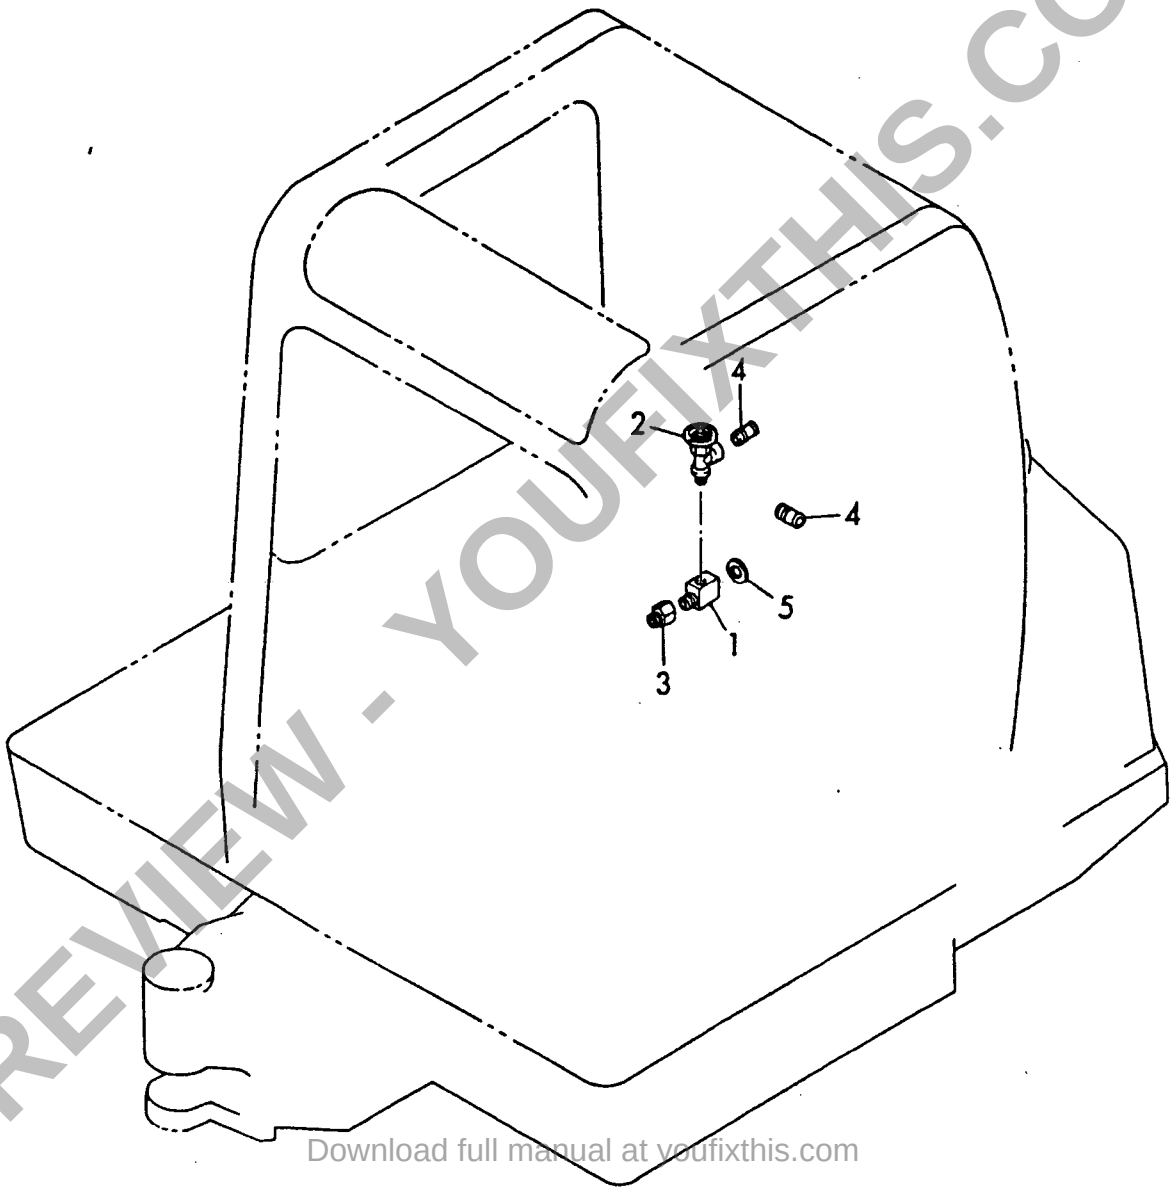

REVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.48 グリーシング GREASING

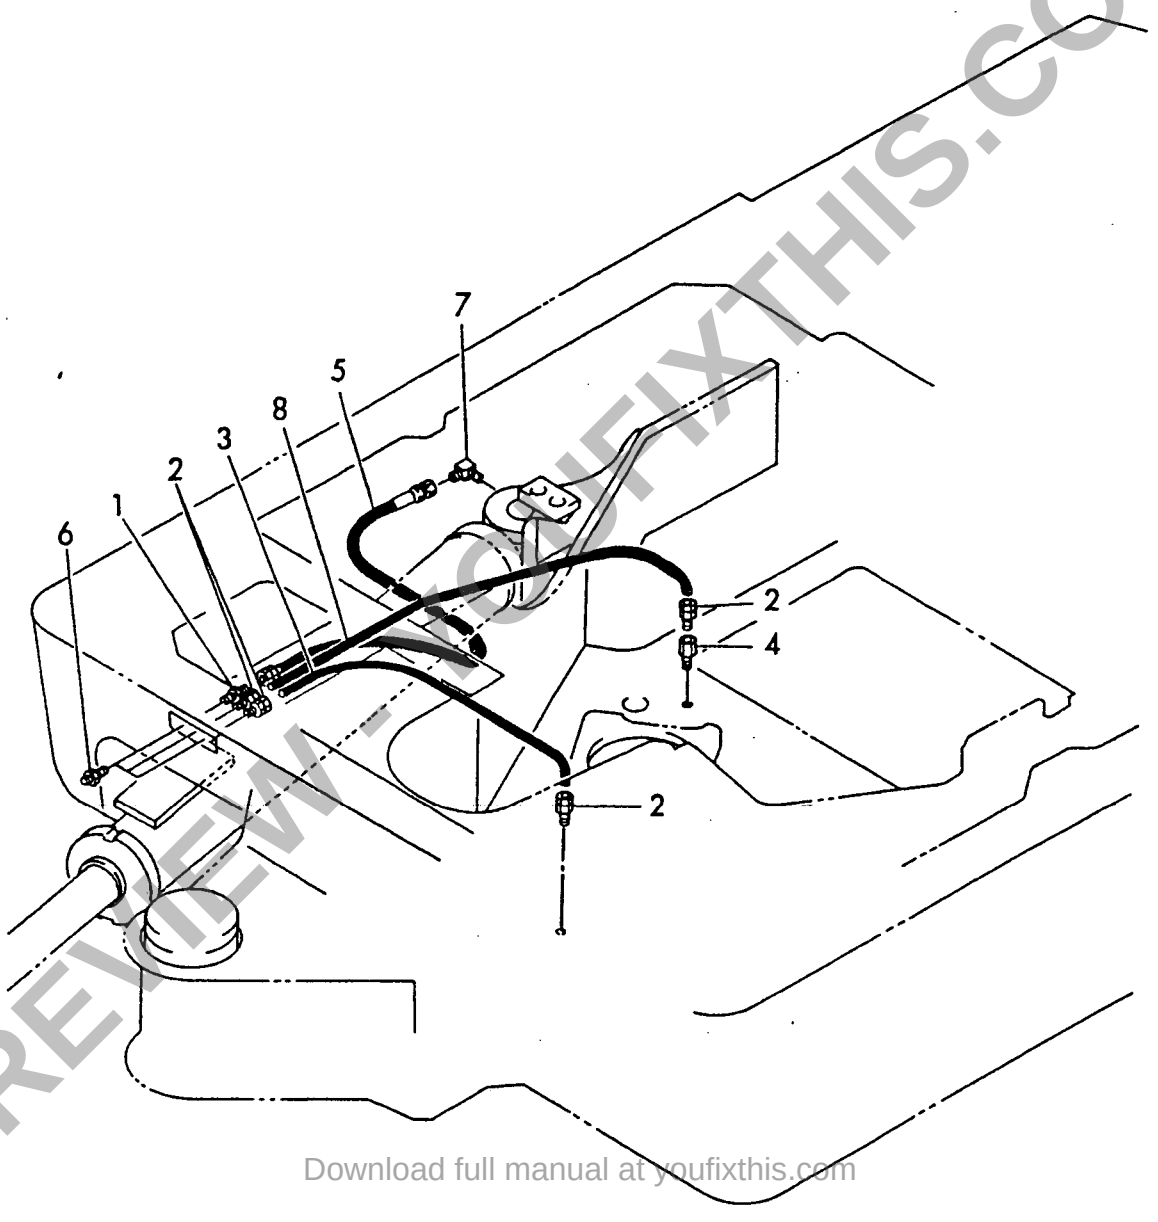

REVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

0,Y00S3390
1,001,,"VEHICLE B17-2(EP"
2,1,,LABEL(CABIN),"B17-2 C(R)AY","B17-2 P(R)AY",,
2,2,,LABEL(CANOPY),"B17-2 C(R)AY","B17-2 P(R)AY",,
2,3,,"AIR CLEANER & SILENCER","B17-2 C(R)AY","B17-2 P(R)AY",,
2,4,,ACCELERATOR,"B17-2 C(R)AY","B17-2 P(R)AY",,
2,5,,"ENGINE MOUNT","B17-2 C(R)AY","B17-2 P(R)AY",,
2,6,,"RADIATOR & MOUNT","B17-2 C(R)AY","B17-2 P(R)AY",,
2,7,,"FUEL TANK & FUEL LINE","B17-2 C(R)AY","B17-2 P(R)AY",,
2,8,,BATTERY,"B17-2 C(R)AY","B17-2 P(R)AY",,
2,9,,"ELECTRIC PART","B17-2 C(R)AY","B17-2 P(R)AY",,
2,10,,"WORK LAMP","B17-2 C(R)AY","B17-2 P(R)AY",,
2,11,,HEATER,"B17-2 C(R)AY","B17-2 P(R)AY",,
2,12,,"ROLLER & ADJUST","B17-2 C(R)AY","B17-2 P(R)AY",,
2,13,,CRAWLER,"B17-2 C(R)AY","B17-2 P(R)AY",,
2,14,,"CONTROL EQUIPMENT(LEVER&STAND)","B17-2 C(R)AY","B17-2 P(R)AY",,
2,15,,"CONTROL EQUIPMENT(TRAVEL)","B17-2 C(R)AY","B17-2 P(R)AY",,
2,16,,"CONTROL EQUIPMENT(SWING)","B17-2 C(R)AY","B17-2 P(R)AY",,
2,17,,"CONTROL EQUIPMENT(BLADE)","B17-2 C(R)AY","B17-2 P(R)AY",,
2,18,,"CONTROL EQUIP.(CUT OFF LEVER","B17-2 C(R)AY","B17-2 P(R)AY",,
2,19,,"CONTROL EQUIP.(P.T.O.CONTROL)","B17-2 C(R)AY","B17-2 P(R)AY",,
2,20,,"FRAME & TURNING BEARING","B17-2 C(R)AY","B17-2 P(R)AY",,
2,21,,"FRAME COVER","B17-2 C(R)AY","B17-2 P(R)AY",,
2,22,,"SEAT MOUNT & STEP","B17-2 C(R)AY","B17-2 P(R)AY",,
2,23,,BONNET,"B17-2 C(R)AY","B17-2 P(R)AY",,
2,24,,CANOPY,"B17-2 C(R)AY","B17-2 P(R)AY",,
2,25,,"HYD. OIL PUMP & JOINT","B17-2 C(R)AY","B17-2 P(R)AY",,
2,26,,"BOOM CYLINDER","B17-2 C(R)AY","B17-2 P(R)AY",,
2,27,,"ARM CYLINDER","B17-2 C(R)AY","B17-2 P(R)AY",,
2,28,,"BUCKET CYLINDER","B17-2 C(R)AY","B17-2 P(R)AY",,
2,29,,"SWING CYLINDER","B17-2 C(R)AY","B17-2 P(R)AY",,
2,30,,"BLADE CYLINDER","B17-2 C(R)AY","B17-2 P(R)AY",,
2,31,,"TRAVEL MOTOR","B17-2 C(R)AY","B17-2 P(R)AY",,
2,32,,"TURNING MOTOR","B17-2 C(R)AY","B17-2 P(R)AY",,
2,33,,"SWIVEL JOINT","B17-2 C(R)AY","B17-2 P(R)AY",,
2,34,,"CONTROL VALVE","B17-2 C(R)AY","B17-2 P(R)AY",,
2,35,,"REMOTE CONTROL VALVE(LEFT)","B17-2 C(R)AY","B17-2 P(R)AY",,
2,36,,"REMOTE CONTROL VALVE(RIGHT)","B17-2 C(R)AY","B17-2 P(R)AY",,
2,37,,"LOW-HIGH VALVE","B17-2 C(R)AY","B17-2 P(R)AY",,
2,38,,"HYD. OIL TANK","B17-2 C(R)AY","B17-2 P(R)AY",,
2,39,,"HYD. OIL PIPING(TANK-PUMP-VALV","B17-2 C(R)AY","B17-2 P(R)AY",,
2,40,,"HYD. OIL PIPING(VALVE-MOTOR,BO","B17-2 C(R)AY","B17-2 P(R)AY",,
2,41,,"HYD. OIL PIPING(VALVE-SWIVEL,S","B17-2 C(R)AY","B17-2 P(R)AY",,
2,42,,"HYD. OIL PIPING(RETURN)","B17-2 C(R)AY","B17-2 P(R)AY",,
2,43,,"HYD. OIL PIPING(TRAVEL)","B17-2 C(R)AY","B17-2 P(R)AY",,
2,44,,"HYD. OIL PIPING(BOOM)","B17-2 C(R)AY","B17-2 P(R)AY",,
2,45,,"HYD. OIL PIPING(3RD VALVE)","B17-2 C(R)AY","B17-2 P(R)AY",,
2,46,,"CONTROL PIPING(DIRECT)","B17-2 C(R)AY","B17-2 P(R)AY",,
2,47,,"CONTROL PIPING(PUMP,LOW-HIGH V","B17-2 C(R)AY","B17-2 P(R)AY",,
2,48,,GREASING,"B17-2 C(R)AY","B17-2 P(R)AY",,
2,49,,"BOOM & BOOM BRACKET","B17-2 C(R)AY","B17-2 P(R)AY",,
2,50,,"ARM & BUCKET LINK","B17-2 C(R)AY","B17-2 P(R)AY",,
2,51,,BLADE,"B17-2 C(R)AY","B17-2 P(R)AY",,
2,52,,"CONTROL VALVE(TRAVEL&PTO,I/P","B17-2 C(R)AY","B17-2 P(R)AY",,
2,53,,"CONTROL VALVE(ARM&SWING,I/P","B17-2 C(R)AY","B17-2 P(R)AY",,
2,54,,"CONTROL VALVE(BOOM&BUCKET,I/P","B17-2 C(R)AY","B17-2 P(R)AY",,
2,55,,"CONTROL VALVE(TURNING&BLADE,","B17-2 C(R)AY","B17-2 P(R)AY",,

PREVIEW | YOUFIXTHIS.COM

Download full manual at youfixthis.com

[Vehicle Painted Color]

Part	Paint Color Munsel No.	Color Division	Paint No.		
			16ℓ Can	4ℓ Can	Spray
①	YANMAR New Permanent Yellow 5.2Y8.5/11	87	981101-09519	977620-40870	977620-30871
②	YANMAR Deep Green 6.3BG2.11/1.76	82	981101-09517	977620-40820	977620-30N31
③	YANMAR New Deep Green 0.6B2.2/4.2	88	981101-09588	977620-40880	977620-30881
④	YANMAR New Grayish Green 2.9BG4.8/3.0	86	981101-09616	977620-40860	977620-30861
⑤	YANMAR Dark Olive Grey 5.39Y2.92/0.78	72	----------	977620-40720	TDR-90460003
⑥	YANMAR Charcoal Gray N2	71	981101-09516	977620-40710	977620-30371

[Kind of painted color]

No.	Part code		Paint color
1	OOOOOO-OOOOO		YANMAR New Permanent Yellow
2	OOOOOO-OOOOO		YANMAR Deep Green
3	OOOOOO-OOOOO	-2	YANMAR New Deep Green
4	OOOOOO-OOOOO		YANMAR New Grayish Green
5	OOOOOO-OOOOO		YANMAR Dark Olive Grey
6	OOOOOO-OOOOO		YANMAR Charcoal Gray

[Effective Machine No.]

00501～

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

```
1,1,,172159-16100,,"BATTERY NS60",1,1,,,,,,,,,,,,,,,
2,1,,172179-16100,,"PLUS WIRE,BATTERY",1,1,,,,,,,,,,,,,,,
3,1,,172179-16110,,"MINUS WIRE,BATTERY",1,1,,,,,,,,,,,,,,,
4,1,,22137-100000,,"WASHER 10,POLISHED",1,1,,,,,,,,,,,,,,,
5,1,,22217-080000,,"SPRING WASHER  8",1,1,,,,,,,,,,,,,,,
6,1,,22217-100000,,"SPRING WASHER 10",1,1,,,,,,,,,,,,,,,
7,1,,26716-080002,,"NUT M 8",1,1,,,,,,,,,,,,,,,
8,1,,26716-100162,,"BOLT 10X 16",1,1,,,,,,,,,,,,,,,
9,1,,172179-16300,,"CLAMP ASSY,BATTERY",1,1,,,,,,,,,,,,,,,
10,1,,172179-16350,,"BOLT ASSY",2,2,,,,,,,,,,,,,,,
11,1,,22217-080000,,"SPRING WASHER  8",2,2,,,,,,,,,,,,,,,
```

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Fig. 16 ソウジュウソウチ(スイング) CONTROL EQUIPMENT (SWING)

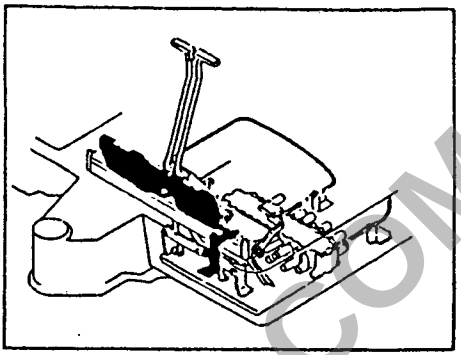

REVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com


Fig. 34 コントロールバルブ CONTROL VALVE

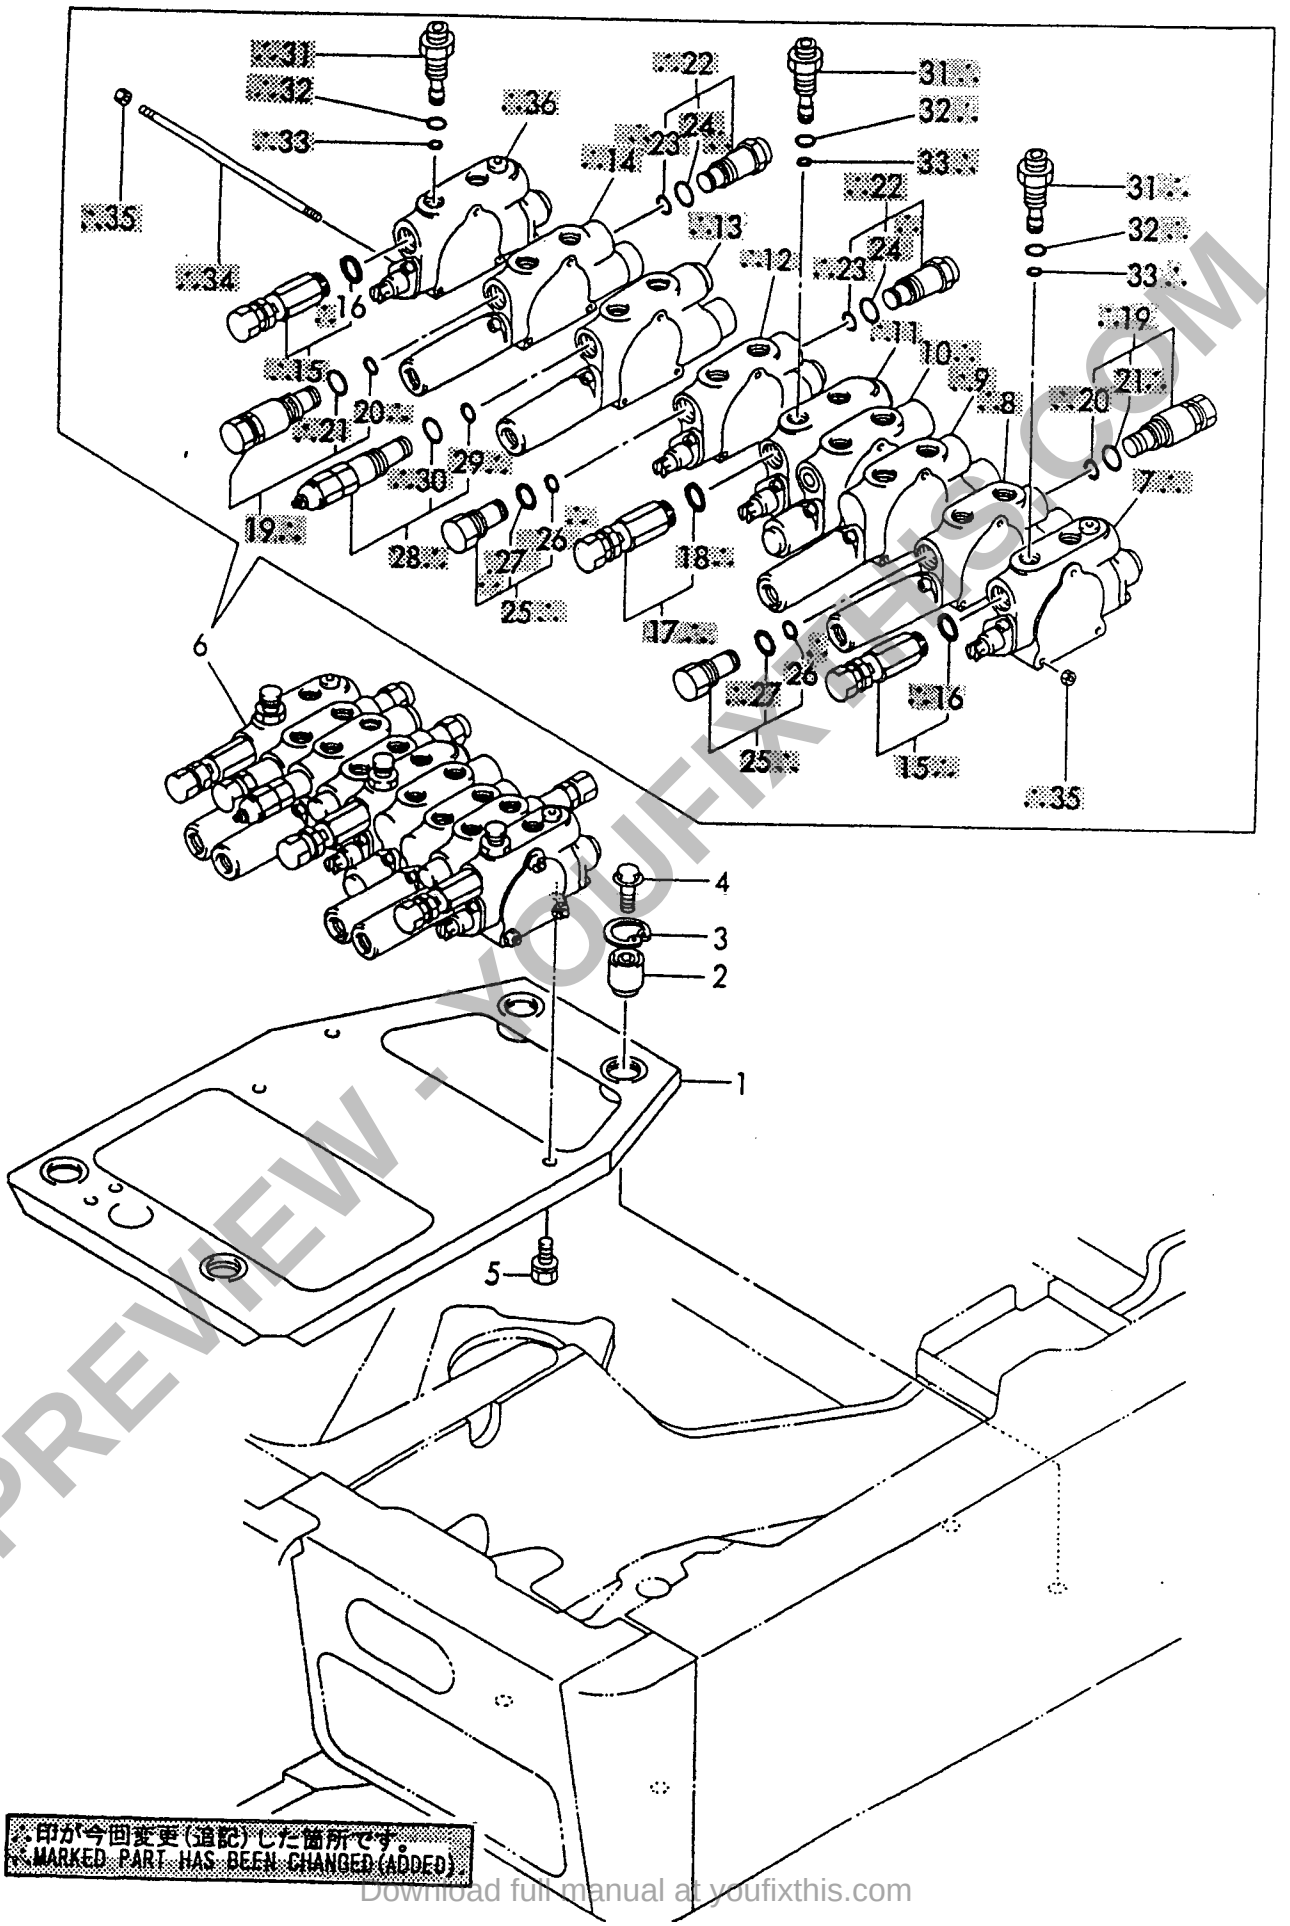

※印が今回変更(追記)した箇所です。
※MARKED PART HAS BEEN CHANGED(ADDED).

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

Fig. 43 ユアツハイカン（ソウコウ） HYD. OIL PIPING (TRAVEL)

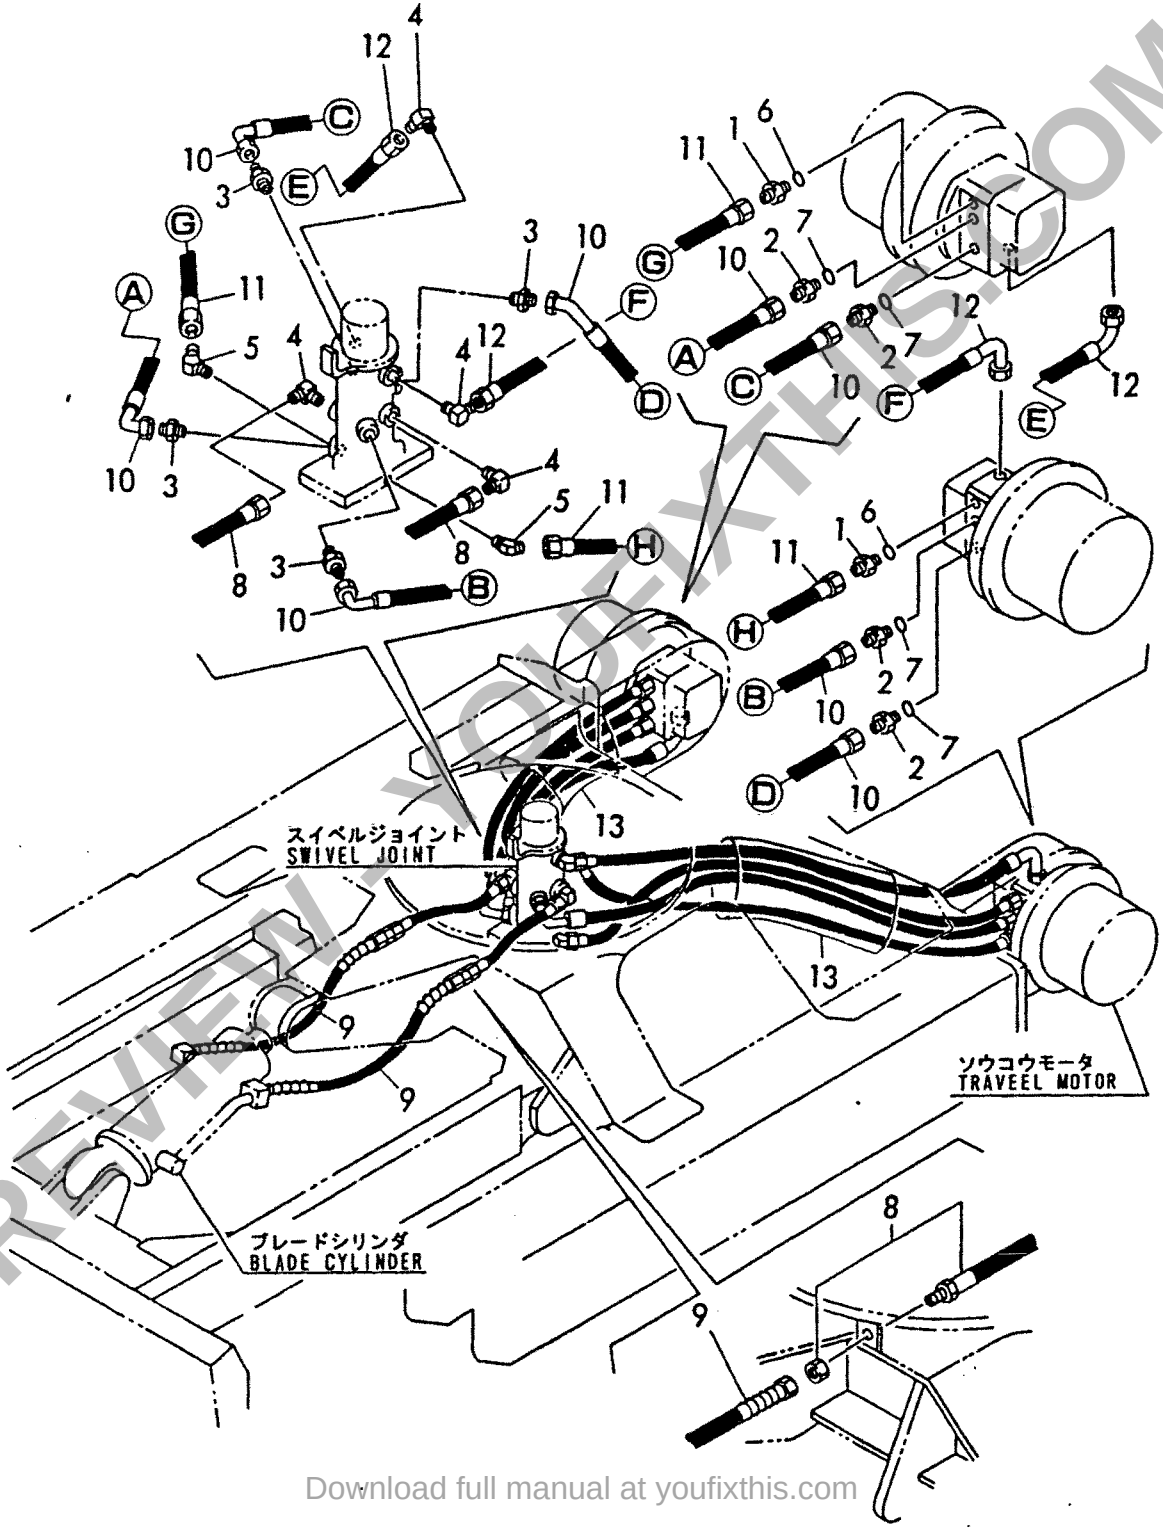

REVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 11 of 116 pages

The full manual includes:

- All 116 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Yanmar B17-2, 3TNE68L-UBD, B17-2 CR AY, B17-2 C AY, B17-2 PR AY, B17-2 P AY, B17-2-P[R], B17-2-C[R], YANMAR CRAWLER BACHOE Parts Catalog



Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual