
How to read this Parts Catalog.

1. Parts mentioned in this Parts Catalog may not necessarily be standard equipping parts.
2. Parts change may be made without prior notice.
3. Form of this Parts Catalog.

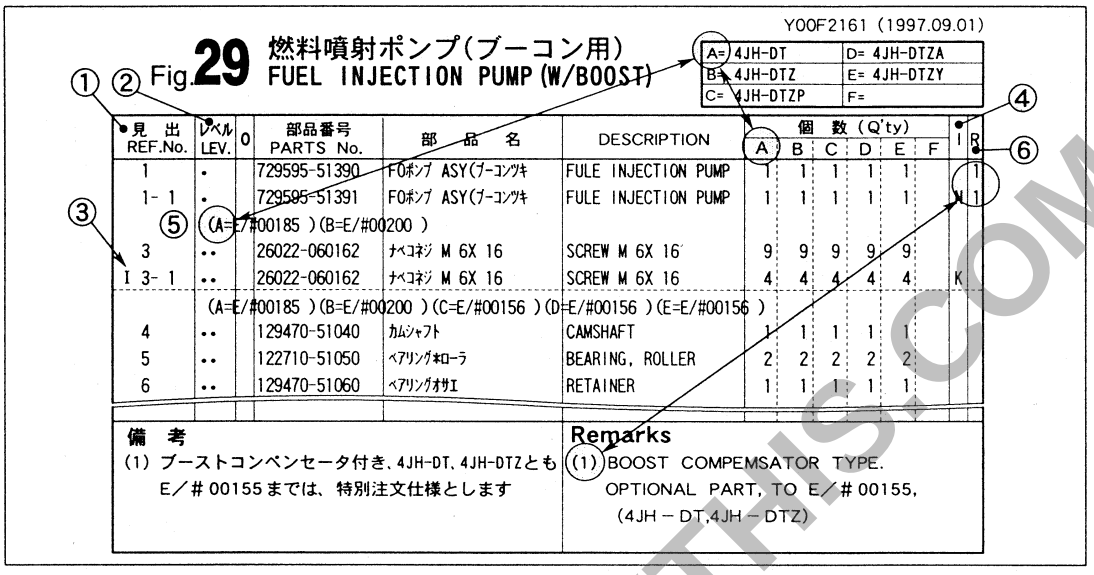

Y00F2161 (1997.09.01)

Fig. 29 燃料噴射ポンプ(ブーコン用)
FUEL INJECTION PUMP (W/BOOST)

A=	4JH-DT	D=	4JH-DTZA
B=	4JH-DTZ	E=	4JH-DTZY
C=	4JH-DTZP	F=	

① 見出 REF.No.	② レベル LEV.	0	部品番号 PARTS No.	部品名	DESCRIPTION	個数 (Q'ty) A	B	C	D	E	F	I	R ⑥
1	•		729595-51390	FOポンプ ASY(ブーコンツキ	FULE INJECTION PUMP	1	1	1	1	1			1
1- 1	•		729595-51391	FOポンプ ASY(ブーコンツキ	FULE INJECTION PUMP	1	1	1	1	1		I	1
	⑤ (A=E/#00185) (B=E/#00200)												
3	••		26022-060162	ナベコネジ M 6X 16	SCREW M 6X 16	9	9	9	9	9			
I 3- 1	••		26022-060162	ナベコネジ M 6X 16	SCREW M 6X 16	4	4	4	4	4		K	
	(A=E/#00185) (B=E/#00200) (C=E/#00156) (D=E/#00156) (E=E/#00156)												
4	••		129470-51040	カムシャフト	CAMSHAFT	1	1	1	1	1			
5	••		122710-51050	ベアリング*ローラ	BEARING, ROLLER	2	2	2	2	2			
6	••		129470-51060	ベアリングオサエ	RETAINER	1	1	1	1	1			

備考	Remarks
(1) ブーストコンペンセータ付き、4JH-DT、4JH-DTZとも E／# 00155までは、特別注文仕様とします	(1) BOOST COMPEMSATOR TYPE. OPTIONAL PART, TO E／# 00155, (4JH－DT,4JH－DTZ)

① Ref. No.

The Ref. No. in the list may not be accord with the Ref. No. on illustration.

(Ex.) Illustration No. 1 — List head No. 1 (Befor change) ⟶ 1 [－1] (After change)

When interchangeable symbol N, R, and K, illustrations for new parts are sometimes omitted.

② Lev.(Level)

Indication and Meaning of Level

Level : Hereunder is given the relation among the number of dots(•),the level and the nominal parent- child relationship.

- • ……Parent parts(Assembly parts)
- •• ……Child parts included in "•" (Semi- Assembly parts,component parts of Assembly parts.)
- ••• ……Child parts included in "••", Grand- child parts in terms of "•". (Compornent parts of Semi- Assembly parts.)

Note) A parts of non- sale parts are illustlated but not listed.

③ Change Mark

Change Mark "I" is given to the part for which a desigh change was made at this time.
The design change was not shown in the last published Parts Catalog.

④ Interchangeability Mark

In the case where a part change took place,one of the following interchangeability marks is indicated for that part.

Symbol	interchangeability	Contents note
N	Old ⟵○ ✕ ⟶ New	New Part is interchangeable for Old Part but not interchangeable conversely.
Q	Old ⟵✕ ○⟶ New	New Part is not interchangeable for Old Part but interchangeable conversely.
R	Old ⟵○ ○⟶ New	New Part is interchangeable for Old Part and vice versa.
S	Old ⟵✕ ✕⟶ New	New Part is not interchangeable for Old Part and vice versa.
W		Part newly added.
Z		Part discontinued.
F		Not interchangeable single part but interchangeable by set of the related parts.
K		Changed only in quantity used.

⑤ Effective Machine No.

When a part is changed,Effective Machine No. of a Model for which the part is applicable is indication in each column of (A)- (F).

Product Symbol	Product No.	Product Symbol	Product No.
C	Clutch No. Compressor No.	M	Machine No.
D	Drive No.	T	Tractor No.
E	Engine No.	Note1) ※	Date

Note1) Date may follow the symbol in some cases. (Ex.) ※ 1996.01
Note2) As far as engine models shown by "XXX" are concerned, the modification of the parts could not be predicted or the engine models themselves could not be identified.
Note3) (A=E/#00185) means that the design change on the part has been effective for the model at the column (A)(in this case, for 4JH- DT) on and from E/#(Engine Serial Number) 00185.

⑥ Remarks Mark

Figures or alphabets (Symbols) are entered in the remark column.
The comments(remarks)on the pertinent parts are indicated in the lower part of the list by the same symbols as those stated above.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

NAME	PAGE
CYLINDER BLOCK	Fig. 1
GEAR HOUSING	Fig. 2
FLYWHEEL HOUSING & OIL SUMP	Fig. 3
CYLINDER HEAD & BONNET	Fig. 4
SUCTION MANIFOLD & AIR CLEANER	Fig. 5
EXHAUST MANIFOLD & SILENCER	Fig. 6
CAMSHAFT & DRIVING GEAR	Fig. 7
CRANKSHAFT & PISTON	Fig. 8
LUB. OIL SYSTEM	Fig. 11
COOLING WATER SYSTEM	Fig. 12
RADIATOR	Fig. 13
FUEL INJECTION PUMP	Fig. 14
FUEL INJECTION VALVE	Fig. 15
FUEL LINE	Fig. 16
STARTING MOTOR	Fig. 18
GENERATOR	Fig. 20
TOOL & GASKET SET	Fig. 21
PARTS No. INDEX	

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

NUMERICAL INDEX

Part number	Page	Item
101304-59020	13	6
101720-55750	13	57
102103-55520	13	52
103854-59191	13	7
104200-55321	13	48
104200-55330	13	49
104200-55341	13	50
104200-55750	13	58
105010-39140	9	7
105025-59580	13	22
105840-59100	10	47
106500-44810	16	14
110250-55610	13	53
114250-39450	9	19
114250-53080	12	8
114250-53120	12	12
114250-53130	12	13
114250-53140	12	14
114250-53210	12	15
114250-53400	12	16
119000-35140	9	10
119000-55601	13	2
119005-12571	5	10
119100-11330	4	52
119130-44760	10	17
119131-18320	6	8
119140-12680	5	14
119259-44570	10	33
119260-34810	9	2
119266-49350	10	31
119305-59120	12	28
119560-59110	13	20
	13	39
119625-11870	4	20
	17	5
119625-11880	4	21
	17	6
119625-11900	4	22
119640-01640	3	9
119808-12540	5	13
119810-77340	16	15
119836-77201	16	1
119836-77920	16	4
119840-66811	14	6
120130-22301	8	22
121023-01550	2	31
121023-26070	2	13
121250-44901	10	11
121250-49110	13	37
121250-59550	13	26
121254-77402	15	2
121254-77430	15	5
121254-77480	15	9
121254-77521	15	13
121254-77541	15	14
121254-77550	15	15
121254-77571	15	16
121254-77581	15	17
121254-77590	15	18
121254-77600	15	19
121254-77610	15	21
121254-77640	15	23
121254-77681	15	26
121254-77690	15	27
121254-77700	15	28
121254-77730	15	31
121254-77770	15	35
121254-77780	15	40
121254-77790	15	36
121254-77810	15	37
121257-55720	13	54
121257-55731	13	55
121267-44510	10	34
121267-44590	10	37
121400-11340	4	17
	17	11
121450-44530	10	35
121470-44550	10	38
121550-49111	10	18
121750-59890	13	41
121850-21130	8	11
121850-21290	8	5
121850-21680	8	10
121850-21920	8	6
121850-49530	10	22
121850-49540	10	23
	17	18
121850-49550	10	21
	17	16
121850-49800	10	24
121850-77021	5	5
	17	17
121855-59880	13	25
	13	43
	13	45
124060-59380	13	9
124064-55510	13	51
124066-59100	13	17
	13	28
124160-01751	2	29
	4	58
124160-11360	4	45
124411-01780	3	7
124450-44560	10	36
124460-11340	4	18
	17	4
124465-44950	10	10
	17	29
124550-77030	15	43
124722-59050	10	46
124766-59050	13	23
	13	42
	13	46
128300-59910	13	30
128300-77920	16	16
129001-91810	2	26
	2	27
129062-12560	5	11
129100-01580	2	17
	3	1
129100-53100	12	9
129100-77910	5	18
129136-77100	16	13
129150-02450	7	4
129150-11230	4	35
	4	39
129150-11370	4	19
129150-11750	4	37
	4	41
129150-11810	4	9
129150-14200	7	1
129150-25920	7	14
129150-35152	9	9
129150-49080	10	40
129150-49100	10	39
129150-49360	10	30
	17	25
129150-59131	12	31
	12	35
129150-59580	13	44
129150-77340	16	8
129322-77401	13	62
129335-55700	13	47
129335-59090	13	19
	13	40
129400-13201	6	7
	6	15
	17	23
129400-92450	17	30
129467-42290	10	15-1
129470-55610	13	3
129495-59300	13	5
129550-59120	12	32
129566-66880	14	4
129566-66890	14	5
129612-12650	5	15
129612-77260	16	10
129612-77700	16	2
129612-77710	16	3
129612-77730	16	5
129612-77740	16	6
129612-77750	16	7
129795-11180	4	16
129900-01200	1	28
129900-01250	1	13
129900-01500	2	8
129900-01780	2	4
129900-01800	2	7
129900-01950	12	1
129900-02020	1	7
129900-02340	1	30
129900-02410	1	10
129900-02800	1	16
129900-02930	1	25
129900-02940	1	33
129900-11100	4	13
129900-11110	4	14
129900-11120	4	15
129900-11200	4	27
129900-11240	4	28
129900-11280	4	31
129900-11310	4	47
	17	7
129900-11510	4	32
129900-11520	4	33
129900-11530	4	62
129900-11600	4	50
129900-11650	4	34
129900-11660	4	38
129900-12050	5	1
	17	8
129900-12100	5	2
129900-12530	5	12
129900-13200	6	1
129900-13252	6	3
	17	9
129900-14100	7	7
129900-14400	7	2
129900-14580	7	3
129900-21200	8	4

Download full manual at youfixthis.com

PREVIEW - YOUFIXTHIS.COM

Engine for TL130 4TNE98-TBL S/N 21300004-21301932

CYLINDER BLOCK

Item ID	Parts Number	部品種類	Qty
1	729902-01560	BLOCK ASSY, CYLINDER	1
5	23876-030000	· PLUG PT3/8,SCREW	1
6	171051-01921	· PLUG	1
7	129900-02020	· BOLT, METAL CAP	10
10	129900-02410	· BUSH, CAMSHAFT	1
11	22351-060012	· SPRING PIN 6X12	2
12	23876-030000	· PLUG PT3/8,SCREW	1
13	129900-01250	· PLUG 55	1
14	23876-030000	· PLUG PT3/8,SCREW	1
15	27241-300000	· PLUG 30	8
16	129900-02800	· BEARING ASSY, MAIN	5
25	129900-02930	· BEARING ASSY, THRUST	2
28	129900-01200	BOLT, HEAD	18
29	129902-01331	GASKET, HEAD	1
30	129900-02340	MAIN BEARING US=0.25	5
33	129900-02940	BEARING,THRUST .250S	2


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

CYLINDER BLOCK

Y00D7500
4TNE98-TBL

1 シリンダブロック
CYLINDER BLOCK

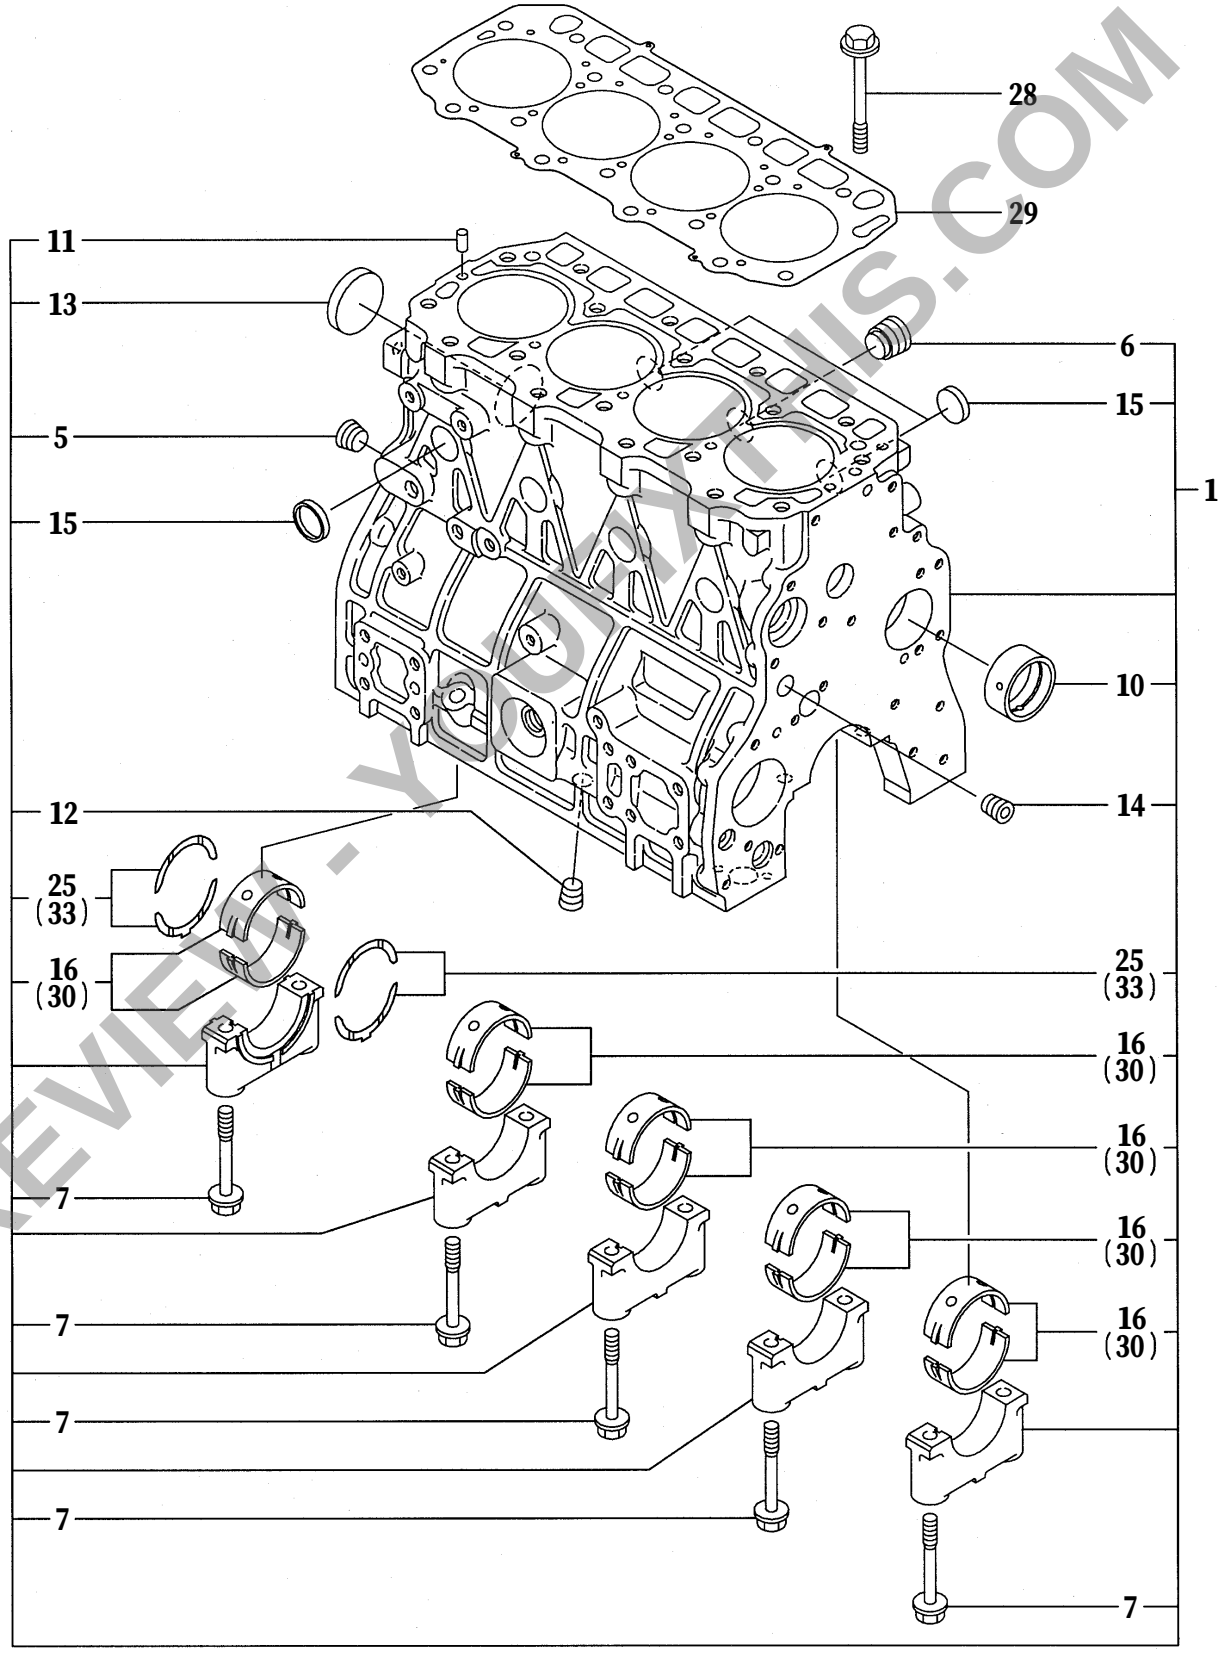


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Y00D7500
4TNE98-TBL

10 CWシステム
COOLING WATER SYSTEM

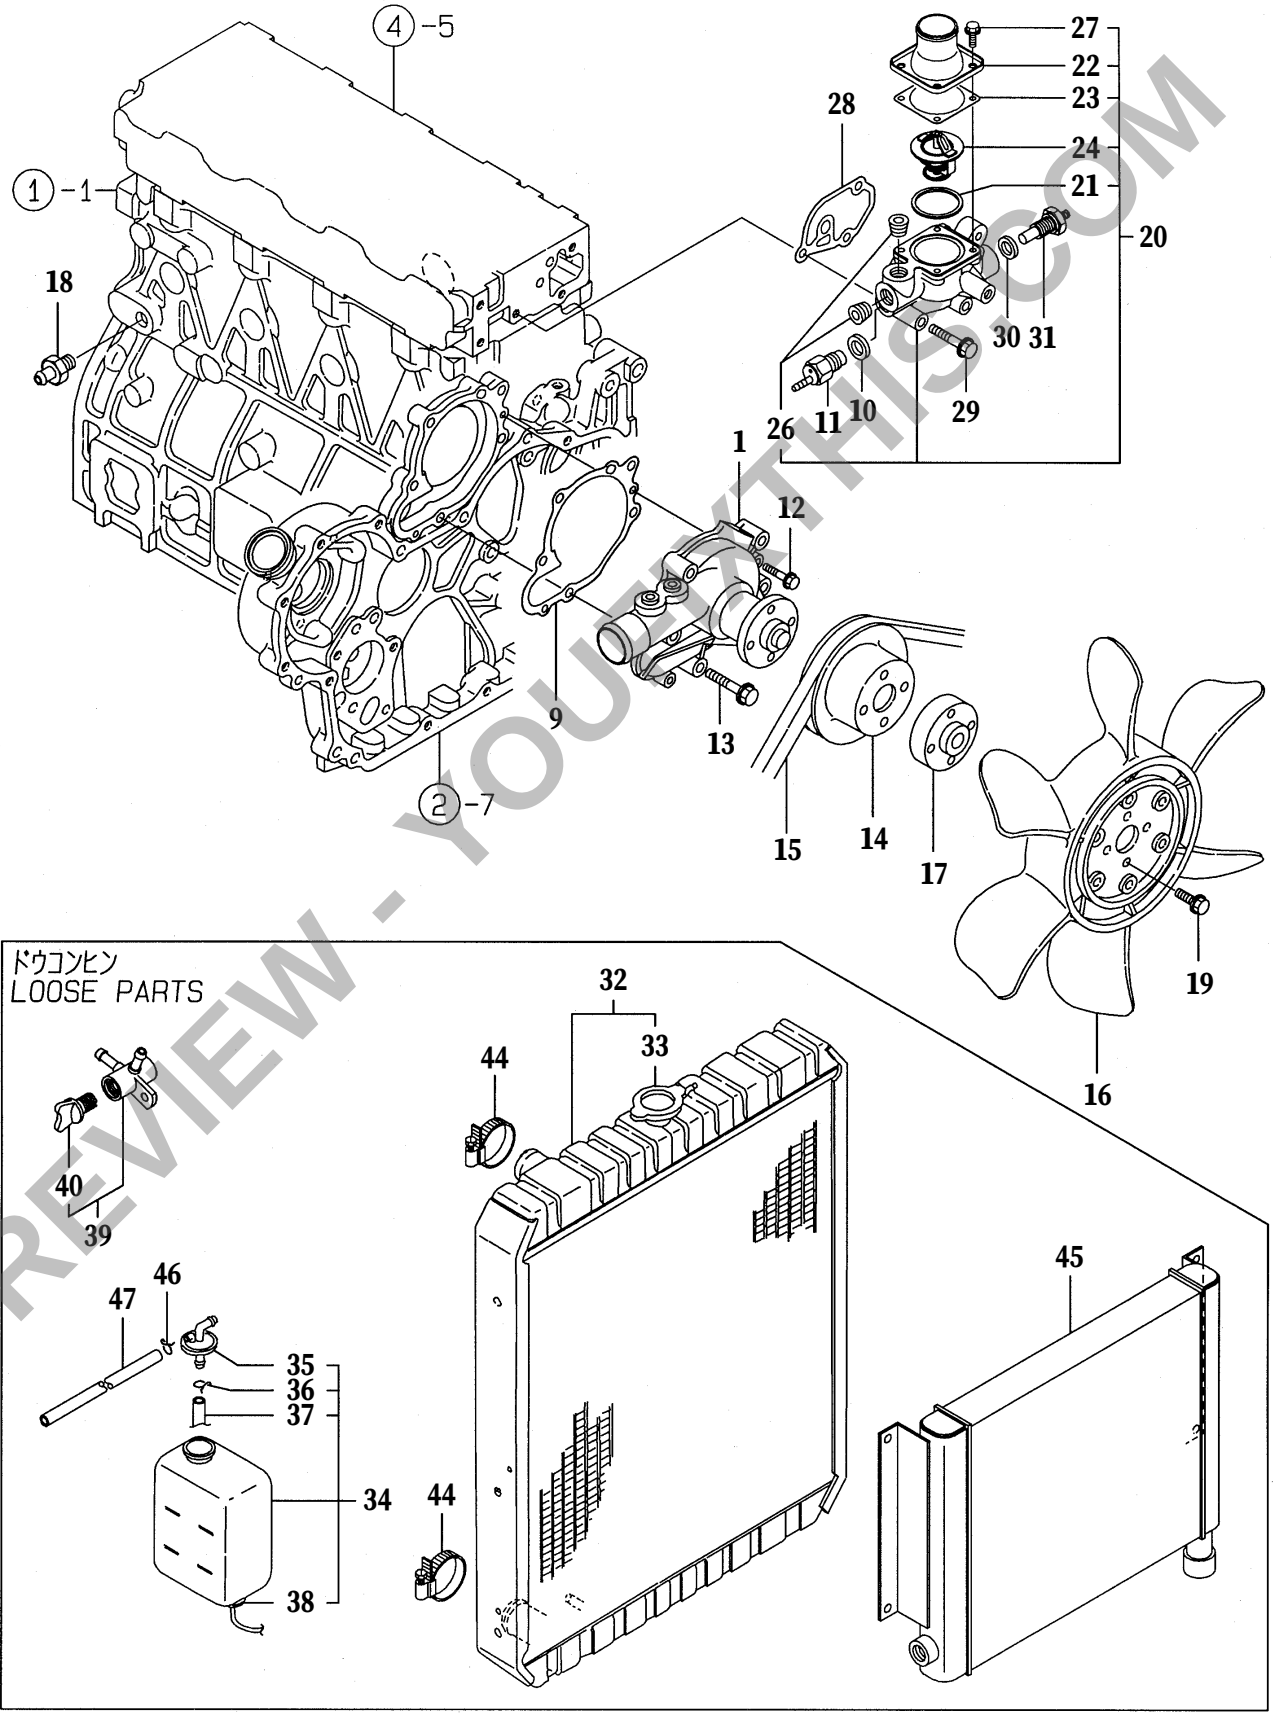


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Y00D7500
4TNE98-TBL

15 スターティングモータ STARTING MOTOR

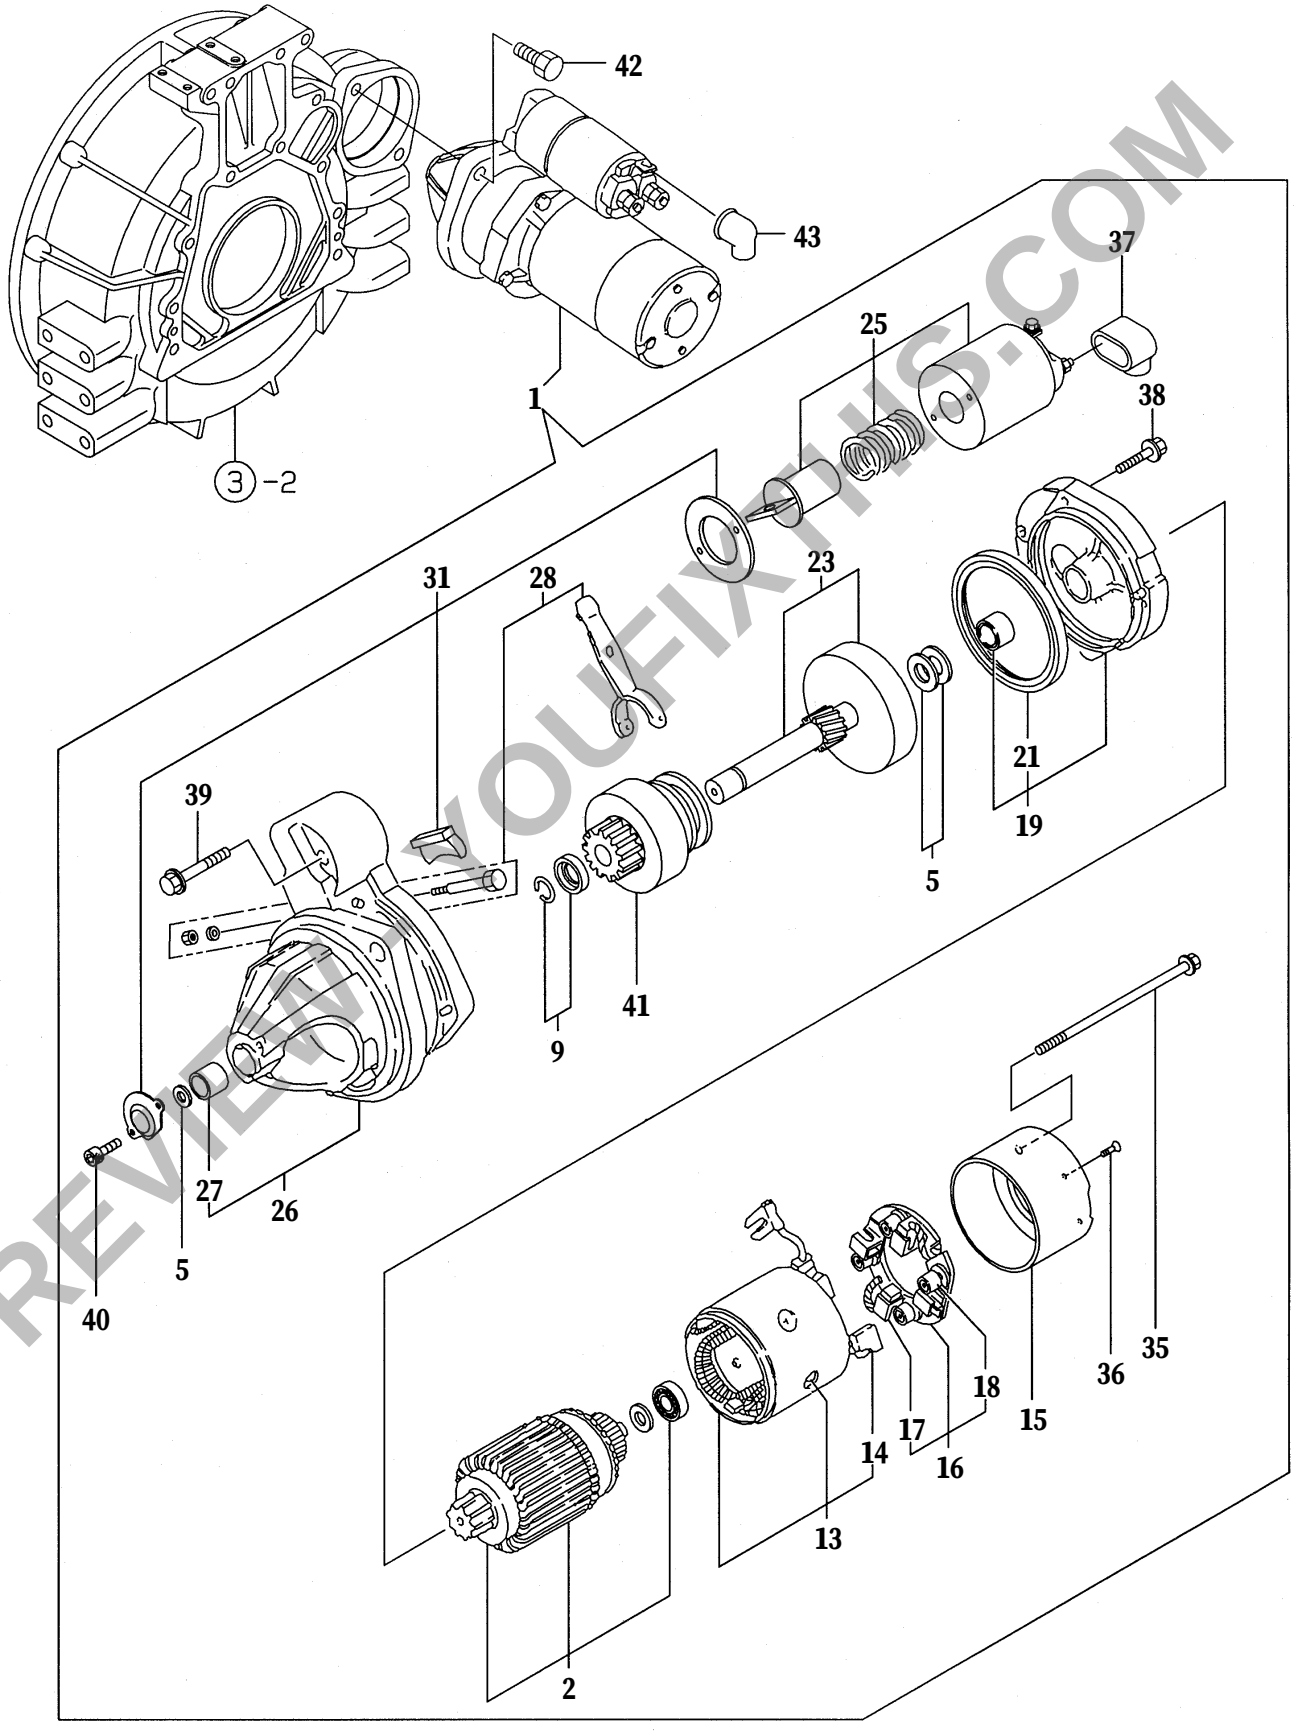


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Y00D7500
4TNE98-TBL


11 FOフンシャポンプ
11 FUEL INJECTION PUMP

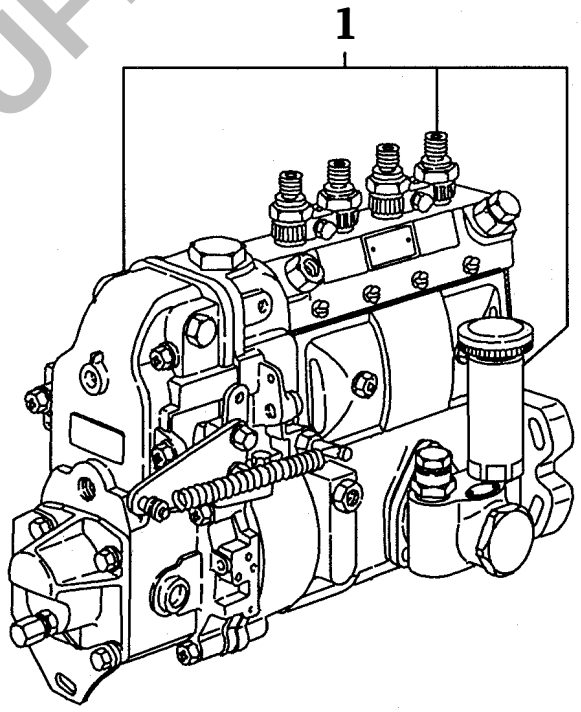

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


LUB.OIL SYSTEM

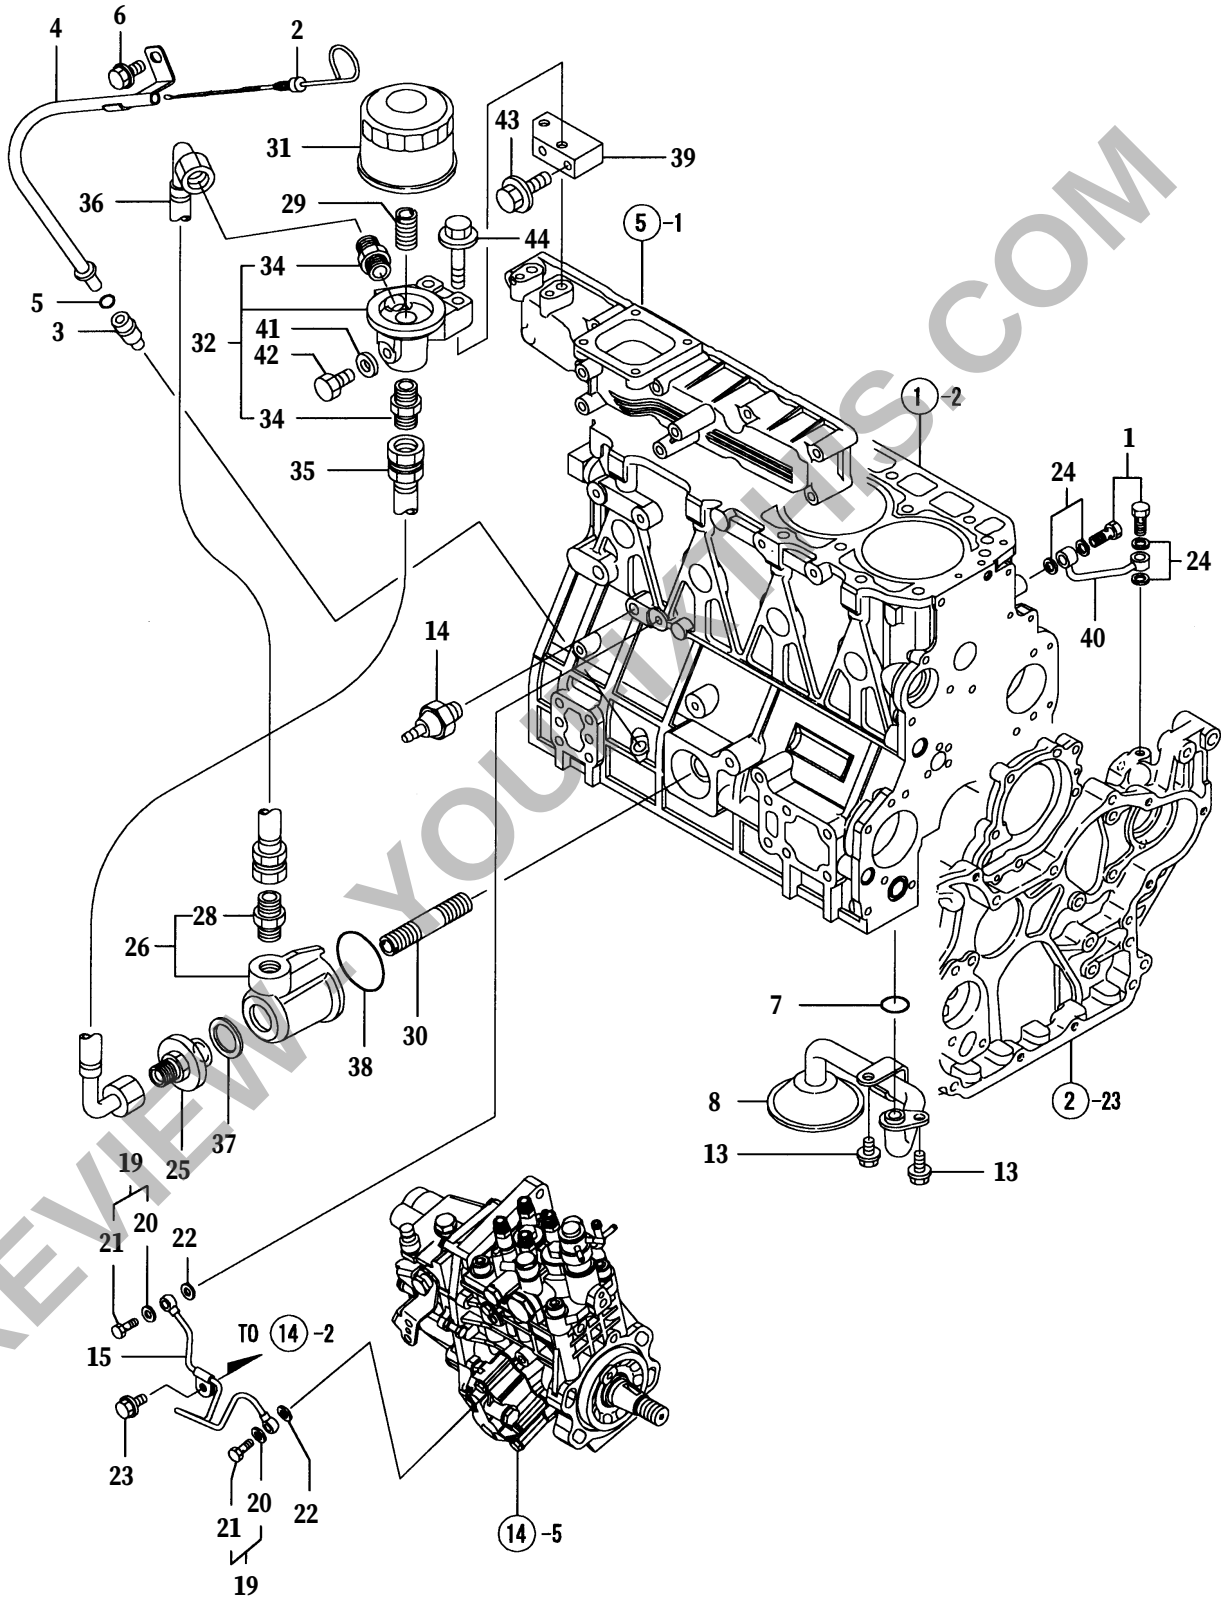

PREVIEW YOUFIXTHIS.COM

Y00D8020	011. LUB. OIL SYSTEM				
4TNV98-VTBZ, XTBW, YTBL	1:2003.11				PLUS

Download full manual at youfixthis.com

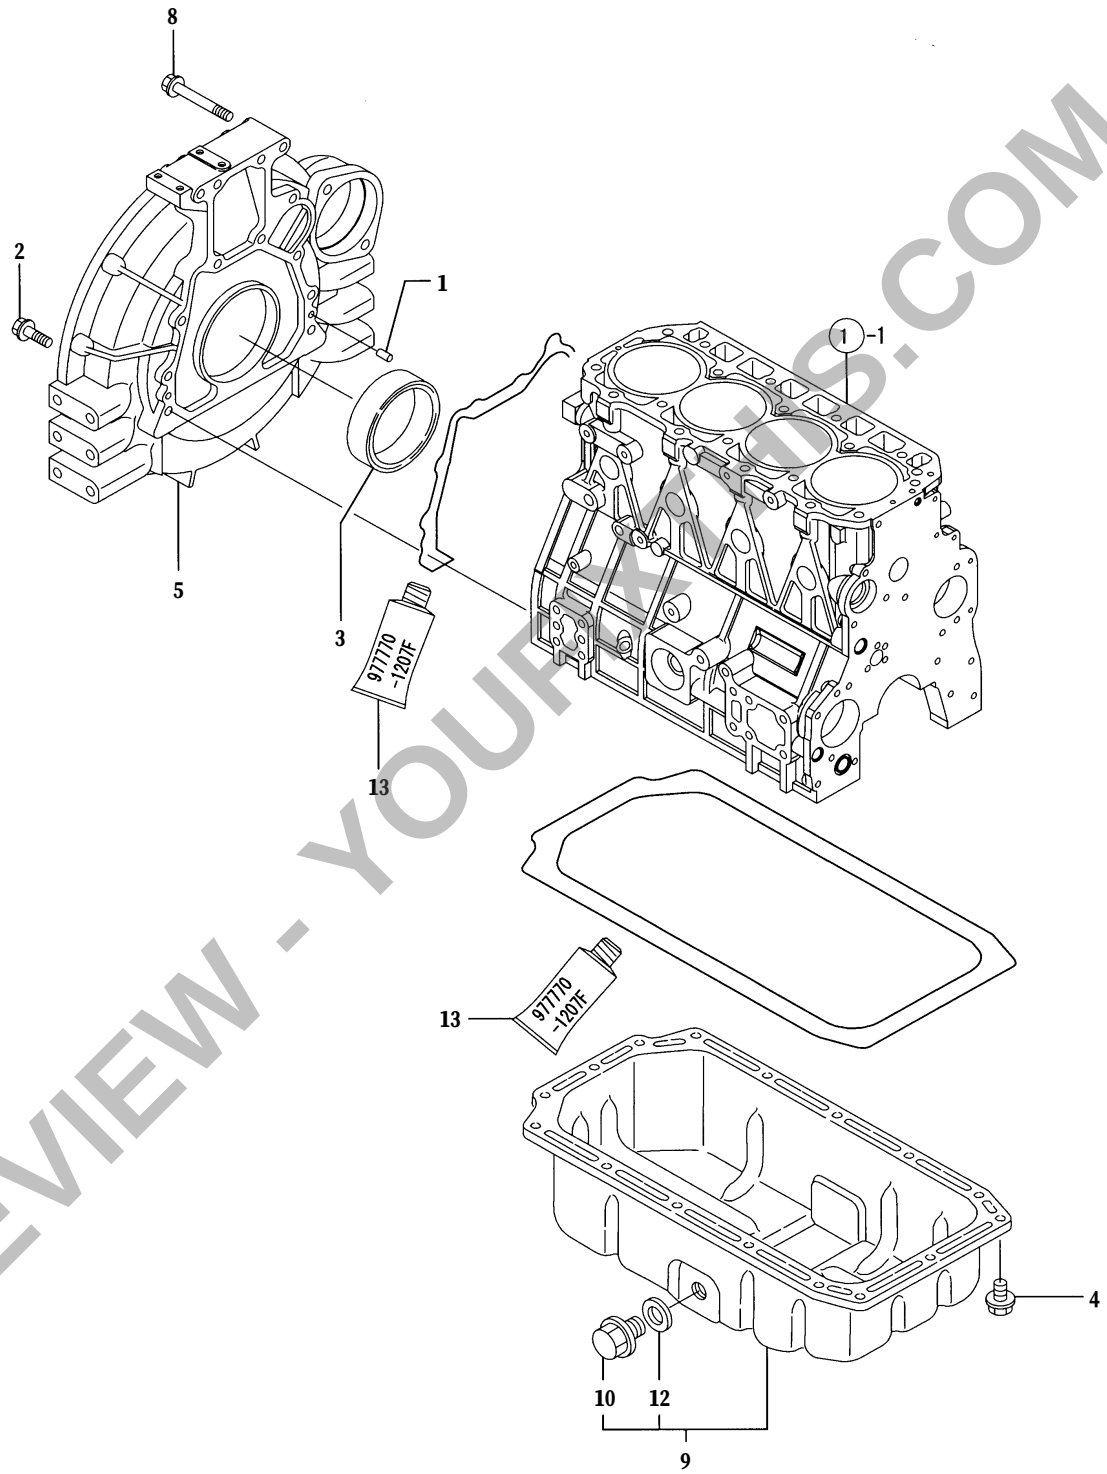

Y00D8670	003. フライホイルハウジング & オイルパン				
4TNV98-YTBL1		1.05.06			PLUS

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 10 of 120 pages

The full manual includes:

- All 120 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Yanmar TL130, 4TNE98-TBL, 4TNV98-YTBL, 4TNV98-YTBL1 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual