YANMAR

PARTS CATALOG

PREVIEW - YOUFIXTHIS.COM

0CS10-M57800EN

Last update Nov., 2017

Download full manual at youfixthis.com

Contents

Fig. No. Fig. Name

LABEL & ACCESSORY

1. LABEL(EXTERIOR)(TO MAF000)
199. (1A)LABEL(EXTERIOR)(FROM MAF001)
2. LABEL(BONNET INSIDE)
3. LABEL(CANOPY)(TO MAF000)
200. (3A)LABEL(CANOPY)(FROM MAF001)
154. (3B)LABEL(CANOPY)(ANGLE BLADE SPEC.)(TO MAF000)
201. (3C)LABEL(CANOPY)(ANGLE BLADE SPEC.)(FROM MAF001)
4. LABEL(CABIN)(TO MAF000)
202. (4A)LABEL(CABIN)(FROM MAF001)
155. (4B)LABEL(CABIN)(ANGLE BLADE SPEC.)(TO MAF000)
203. (4C)LABEL(CABIN)(ANGLE BLADE SPEC.)(FROM MAF001)
5. LABEL(QUICK COUPLER)
6. CASE(TOOL)

ENGINE RELATED

7. MUFFLER
8. AIR CLEANER
9. ACCELERATOR
10. ENGINE MOUNT
11. RADIATOR SHURAUD
12. RADIATOR & OIL COOLER
13. DUCT
14. FUEL TANK
15. FUEL PIPING

Fig. No. Fig. Name

ELECTRICAL PARTS


16. BATTERY
17. AROUND THE ENGINE(TO M61125)
190. (17A)AROUND THE ENGINE(FROM M61126)
18. HORN
19. SEAT MOUNT
20. GUIDE HARNESS
21. STARTER SWITCH
22. ELECTRIC PARTS(A/D)
23. TRAVEL BUZZER
24. QUICK COUPLER(SWITCH BOX)
25. CANOPY LAMP
26. WORK LAMP
27. INSTRUMENT PANEL
28. ELECTRIC PARTS(ESS)
29. HEATER
30. BRACKET CONTROL
156. (30A)ELECTRIC PARTS(P.T.O.)(ANGLE BLADE SPEC.)
157. (30B)ELECTRIC PARTS(ANGLE BLADE LEVER)(ANGLE BLADE SPEC.)
158. (30C)ELECTRIC PARTS(ANGLE BLADE LEVER)(ANGLE BLADE & ESS SPEC.)

AIR CONDITIONER & HEATER

31. AIR CONDITIONER(ELECTRIC PARTS)
32. AIR CONDITIONER(UNIT)

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

Fig.1. LABEL(EXTERIOR)(TO MAF000)

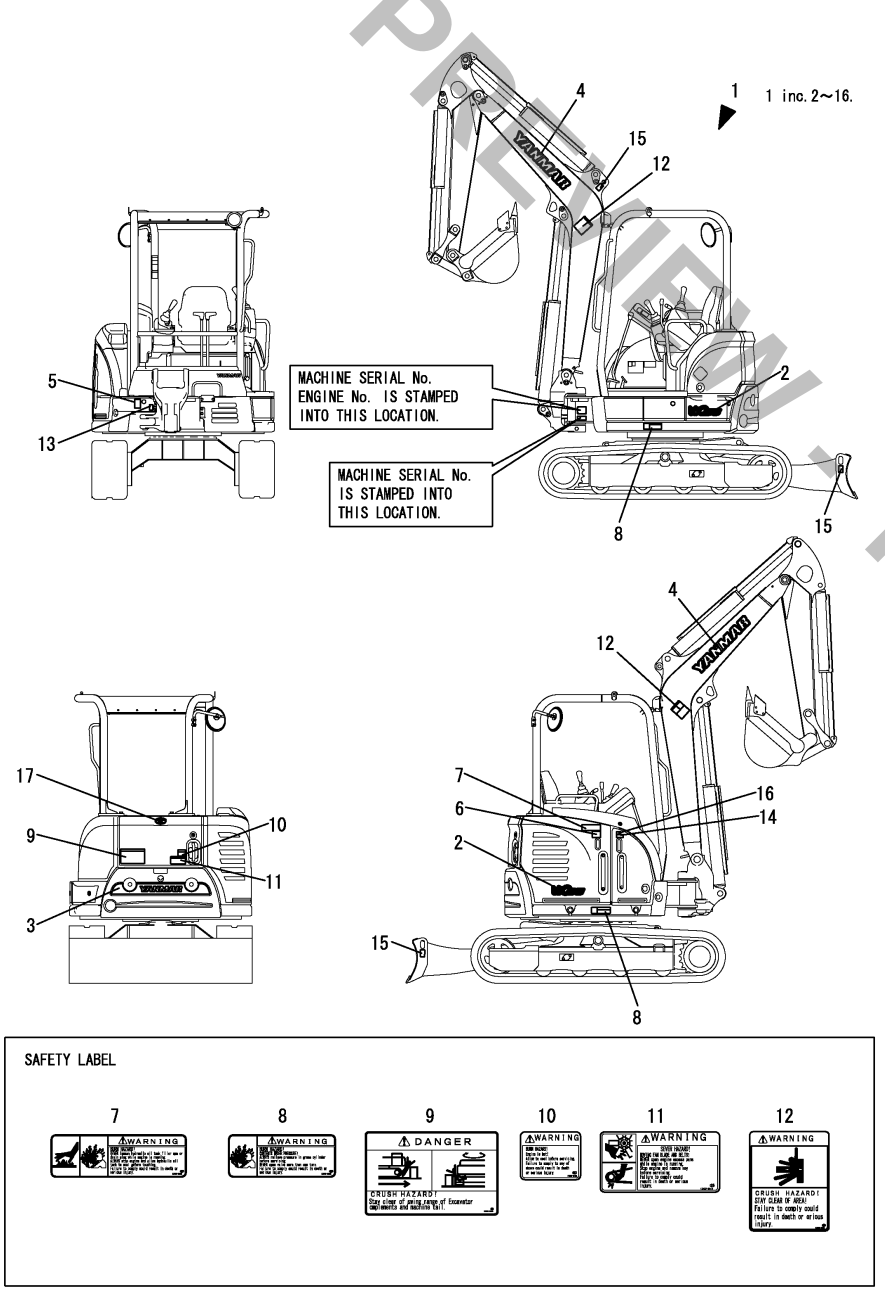

(A)=VIO35-6A P(US)
(B)=VIO35-6A C(US)
(C)=
(D)=
(E)=
(F)=

No.	Lev.	Parts No.	Description	Q'ty (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	172B03-08130	LABEL SET,OUT US	1	1						
1-1	1	172B03-08131	LABEL SET,OUT US	1	1					N	
	(A=M60895)		(B=M60895)								
2	2	172B03-03150	LABEL, MODEL L R	2	2						
2-1	2	172B03-03151	LABEL, MODEL L R	2	2					S	1
	(A=M60895)		(B=M60895)								
3	2	172B03-03160	LABEL,REAR	1	1						
4	2	172A65-03230	LABEL,YANMAR 627	2	2						
5	2	172A79-03160	LABEL,PTO SELCT	1	1						
6	2	172463-03290	LABEL, HYD.OIL	1	1						
7	2	172437-03322	LABEL, RESEVOIR	1	1						
8	2	172437-03352	LABEL, CYLINDER	2	2						
9	2	172437-03381	LABEL, SWING AREA	1	1						
10	2	172437-03402	LABEL, ENGINE COVER	1	1						
11	2	172A36-03411	LABEL, ENGINE ROOM	1	1						
12	2	172437-03461	LABEL, BOOM	2	2						
13	2	172B03-03460	LABEL, GREASE US	1	1						
14	2	172437-03501	LABEL, FUEL	1	1						
15	2	172437-03511	LABEL, HOOK	3	3						
16	2	114110-07761	LABEL, FUEL OIL CAUT	1	1						
17	1	41800-210040	EMBLEM, M 04	1	1						

Remarks
(1)Interchangeable replacement by simultaneous with two.


N:Old ⇔ New, Q:Old ⇔ New, R:Old ⇔ New, S:Old ⇔ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

Copyright (C) YANMAR CO., LTD. All RightsReserved.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.12. RADIATOR & OIL COOLER

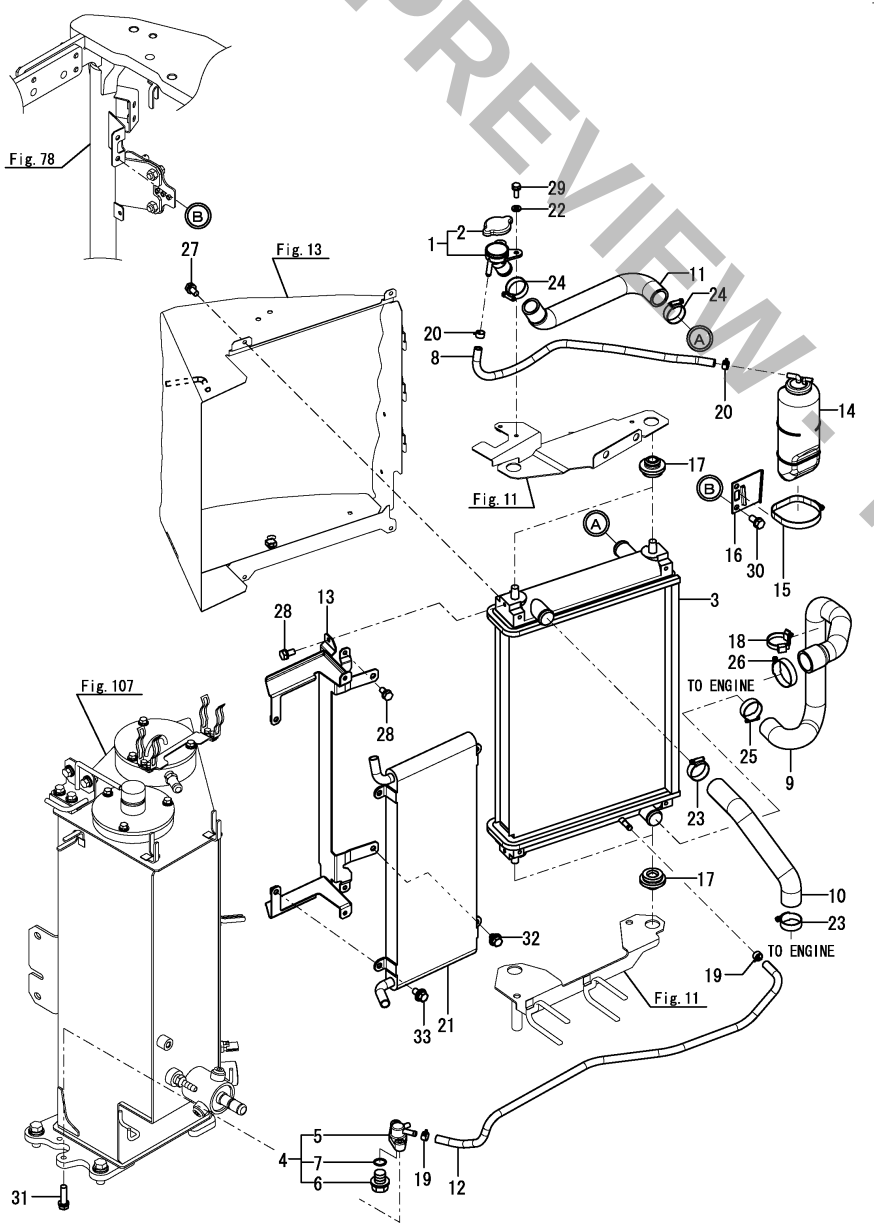

(A)=VIO35-6A P(US)
(B)=VIO35-6A C(US)
(C)=
(D)=
(E)=
(F)=

No.	Lev.	Parts No.	Description	Q'ty (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	1D4105-11950	FILLER ASSY	1	1						
2	2	1D4105-11990	CAP, FILLER	1	1						
3	1	172B03-13160	RADIATOR ASSY	1	1						
4	1	172444-13210	COCK ASSY, 2-WAY	1	1						
5	2	172444-13220	BODY	1	1						
6	2	121250-49121	PLUG, DRAIN	1	1						
7	2	24311-000160	O-RING, 1AP16.0	1	1						
8	1	172122-13381	HOSE	1	1						
9	1	172B03-13550	HOSE, CW-T A	1	1						
10	1	172B03-13560	HOSE, CW-T B	1	1						
11	1	172B03-13570	HOSE, CW-T C	1	1						
12	1	172B03-13580	HOSE ASSY, 800	1	1						
13	1	172B03-13800	BRACKET ASSY, S	1	1						
14	1	129263-44510	TANK ASSY, SUB	1	1						1
14A	1	172A38-03201	LABEL, SUB TANK	1	1						2
15	1	124450-44550	BAND	1	1						
16	1	121256-44600	BRACKET, SUB TANK	1	1						
17	1	184015-44680	ABSORBER, SHOCK	4	4						
18	1	194680-51670	BAND, CLIP	1	1						
19	1	124766-59050	CLIP, HOSE 12	2	2						
20	1	124766-59050	CLIP, HOSE 12	2	2						
21	1	172B03-74800	COOLER ASSY, OIL	1	1						
22	1	22137-060000	WASHER, 6	2	2						
23	1	23001-041000	CLAMP, HOSE 41	2	2						
24	1	23001-041000	CLAMP, HOSE 41	2	2						
25	1	23001-041000	CLAMP, HOSE 41	1	1						
26	1	23001-048000	CLAMP, HOSE 48	1	1						
27	1	26013-060122	BOLT, M6X 12	4	4						
28	1	26013-060122	BOLT, M6X 12	4	4						
29	1	26013-060162	BOLT, M6X 16	2	2						
30	1	26013-080162	BOLT, M8X 16	2	2						
31	1	26013-080302	BOLT, M8X 30	2	2						
32	1	26014-080122	BOLT, M8X 12	2	2						
33	1	26014-080162	BOLT, M8X 16	2	2						

Remarks
(1)Attach the No.14A label to this part.
(2)Label is not illustrated.


N:Old $\overset{\text{Yes}}{\underset{\text{No}}{\leftrightarrows}}$ New, Q:Old $\overset{\text{No}}{\underset{\text{Yes}}{\leftrightarrows}}$ New, R:Old $\overset{\text{Yes}}{\underset{\text{Yes}}{\leftrightarrows}}$ New, S:Old $\overset{\text{No}}{\underset{\text{No}}{\leftrightarrows}}$ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

Copyright (C) YANMAR CO., LTD. All RightsReserved.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.17. AROUND THE ENGINE(TO M61125)

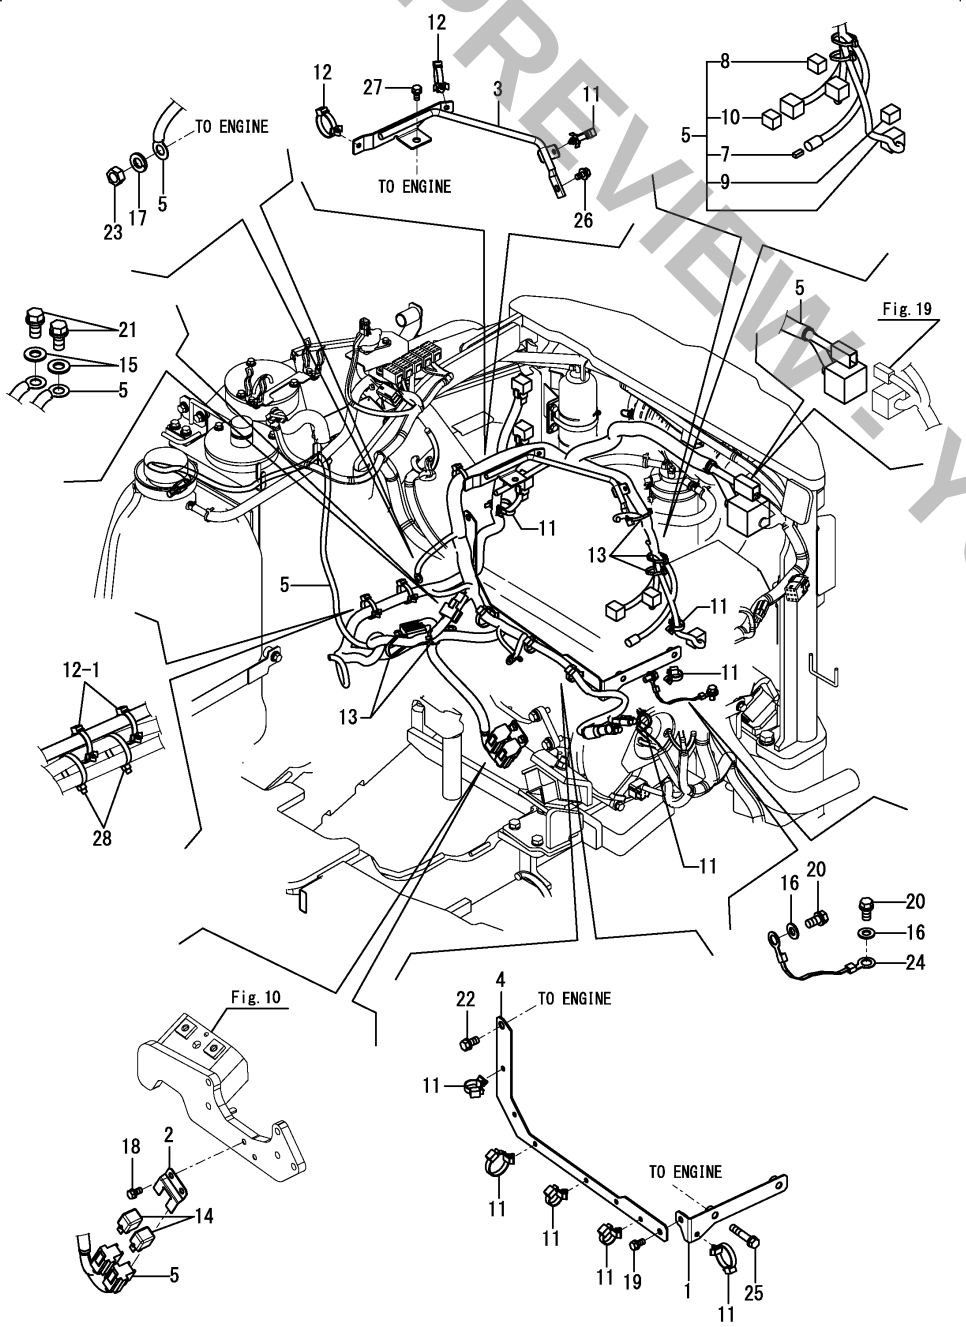

(A)=VIO35-6A P(US)
(B)=VIO35-6A C(US)
(C)=
(D)=
(E)=
(F)=

No.	Lev.	Parts No.	Description	Q'ty (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	172B03-11450	BRACKET ASSY, COVER	1	1						
2	1	172B03-16170	STAY, RELAY	1	1						
3	1	172B03-16300	STAY ASSY, HARNESS	1	1						
4	1	172B03-16440	SUPPORT, HARNESS	1	1						
5	1	172B03-16500	HARNESS ASSY,ENGINE	1	1						
7	2	172458-16550	FUSE, SLOWBLOW	1	1						
8	2	172A65-16550	FUSE, SLOWBLOW	1	1						
9	2	172447-17150	FUSE 40A	1	1						
10	2	198153-51700	FUSE, SLOW BLOW 80A	1	1						
11	1	194680-51670	BAND, CLIP	10	10						
12	1	194680-51670	BAND, CLIP	2	2						
12-1	1	194680-51670	BAND, CLIP	4	4					K	
	(A=MZZZZZ)		(B=MZZZZZ)								
13	1	194202-56460	BAND, 200	5	5						
14	1	129927-77920	RELAY	2	2						
15	1	22137-100000	WASHER, 10	2	2						
16	1	22137-100000	WASHER, 10	2	2						
17	1	22217-060000	WASHER, SPRING 6	1	1						
18	1	26013-080162	BOLT, M8X 16	2	2						
19	1	26013-080162	BOLT, M8X 16	1	1						
20	1	26013-100202	BOLT, M10X 20	2	2						
21	1	26013-100202	BOLT, M10X 20	2	2						
22	1	26013-100202	BOLT, M10X 20	1	1						
23	1	26716-060002	NUT, M6	1	1						
24	1	933171-15801	CORD, ENGINE EARTH	1	1						
25	1	26013-100502	BOLT, M10X 50	2	2						
26	1	26014-080162	BOLT, M8X 16	1	1						
27	1	26013-080162	BOLT, M8X 16	1	1						
28	1	194202-56460	BAND, 200	2	2					W	
	(A=MZZZZZ)		(B=MZZZZZ)								


N:Old $\overset{\text{Yes}}{\underset{\text{No}}{\leftrightarrows}}$ New, Q:Old $\overset{\text{No}}{\underset{\text{Yes}}{\leftrightarrows}}$ New, R:Old $\overset{\text{Yes}}{\underset{\text{Yes}}{\leftrightarrows}}$ New, S:Old $\overset{\text{No}}{\underset{\text{No}}{\leftrightarrows}}$ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

Copyright (C) YANMAR CO., LTD. All RightsReserved.

PREVIEW: YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.149. (32A)AIR CONDITIONER(UNIT INNER PARTS)

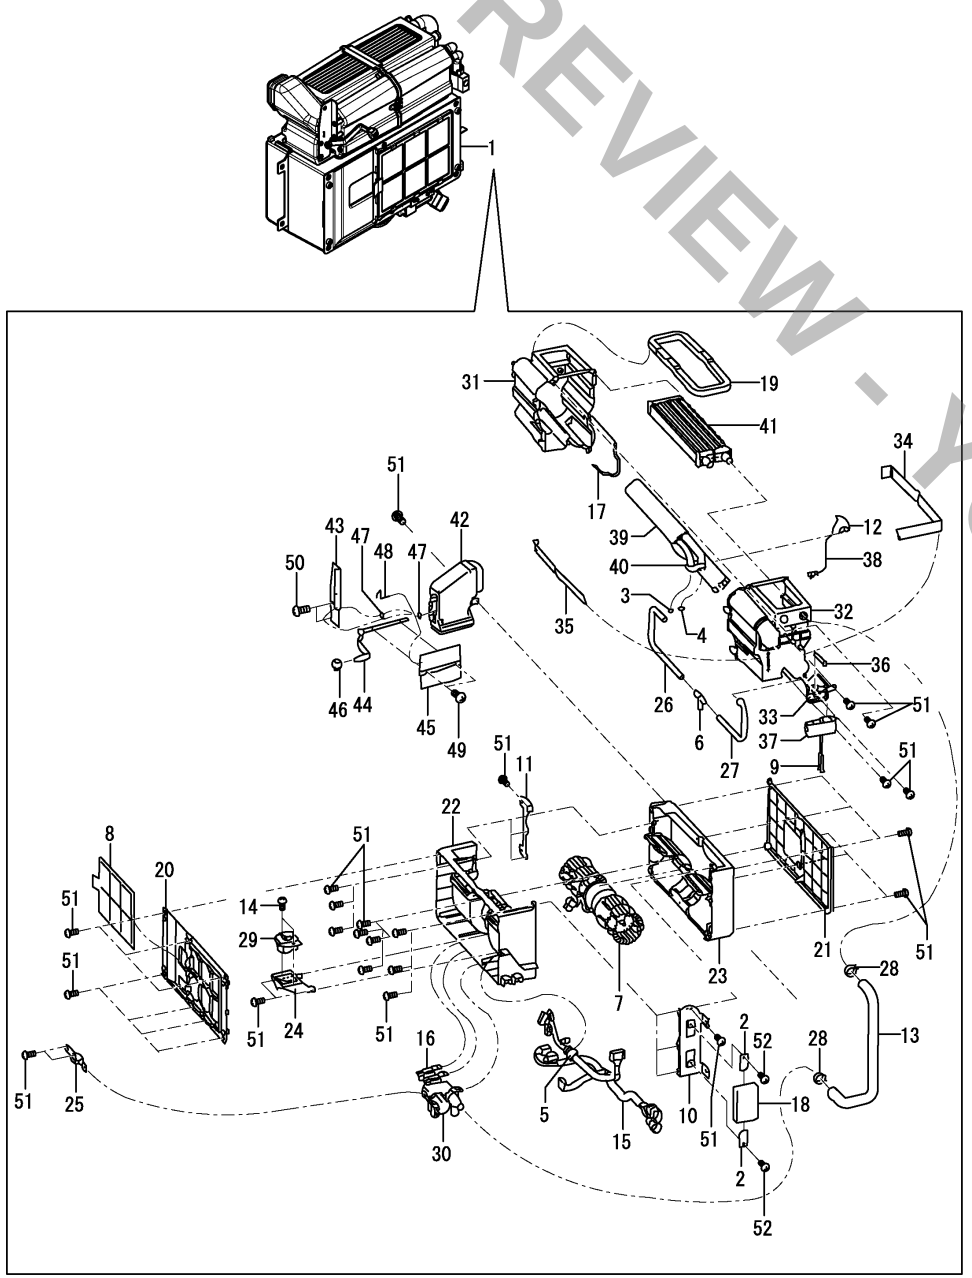

(A)=VIO35-6A P(US)
(B)=VIO35-6A C(US)
(C)=
(D)=
(E)=
(F)=

No.	Lev.	Parts No.	Description	Q'ty (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	172B03-19100	CONDITIONER, AIR		1						
2	2	172B06-18550	BRACKET,AMP		2						
3	2	172B06-18680	O-RING		1						
4	2	172B06-18690	O-RING		1						
5	2	172B06-18930	INSULATOR,HARNESS		1						
6	2	172B06-18960	ELBOW,DRAIN		1						
7	2	172B06-18970	MOTOR ASSY,BLOWER		1						
8	2	172B03-19120	FILTER, REC		1						
9	2	172B06-19120	BOLT, SOCKET M5X40		2						
10	2	172B03-19130	BRACKET, 1		1						
11	2	172B03-19140	BRACKET, 2		1						
12	2	172B06-19140	HOLDER,THERMISTOR		1						
13	2	172B03-19150	HOSE, HEATER		1						
14	2	172B06-19150	SCREW, PAN HEAD		2						
15	2	172B03-19190	HARNESS ASSY, HVAC		1						
16	2	172B03-19200	RELAY		2						
17	2	172B06-19200	SEAL,CASE		1						
18	2	172B03-19210	CONTROLLER, HVAC		1						
19	2	172B03-19220	SEAL, OUTLET		1						
20	2	172B03-19230	COVER, FRONT		1						
21	2	172B03-19240	COVER, BACK		1						
22	2	172B03-19250	CASE ASSY, LOW FRONT		1						
23	2	172B03-19260	CASE ASSY, LOW BACK		1						
24	2	172B03-19270	MOUNT, RESISTOR		1						
25	2	172B03-19280	RETAINER, VALVE		1						
26	2	172B03-19290	HOSE, DRAIN 1		1						
27	2	172B03-19300	HOSE, DRAIN 2		1						
28	2	172B03-19310	CLAMP, HOSE		2						
29	2	172B03-19320	RESISTOR		1						
30	2	172B03-19330	VALVE ASSY, WATER		1						
31	2	172B03-19340	CASE ASSY, UP FEMALE		1						
32	2	172B03-19350	CASE ASSY, UP MALE		1						
33	2	172B03-19360	COVER ASSY, PAF		1						
34	2	172B03-19370	SEAL, AC-UNIT 1		1						
35	2	172B03-19380	SEAL, AC-UNIT 2		1						
36	2	172B03-19390	RETAINER, TXV		1						
37	2	172B03-19400	VALVE, EXPANSION		1						
38	2	172B03-19410	SENSOR, TEMPERATURE		1						
39	2	172B03-19420	EVAPORATOR ASSY		1						
40	2	172B03-19430	STAY		1						
41	2	172B03-19440	HEATER ASSY		1						
42	2	172B03-19450	DUCT ASSY		1						
43	2	172B03-19460	BRACKET, DUCT		1						
44	2	172B03-19470	LEVER ASSY, DOOR		1						
45	2	172B03-19480	DOOR ASSY		1						
46	2	172B03-19490	KNOB		1						
47	2	172B03-19500	SPACER, C		2						
48	2	172B03-19510	SPRING		1						
49	2	172B03-19520	SCREW, 3X6		2						
50	2	172B03-19530	SCREW, 4X10		2						
51	2	172B03-19540	SCREW, 4X16		36						

N:Old $\overset{\text{Yes}}{\underset{\text{No}}{\rightleftarrows}}$ New, Q:Old $\overset{\text{No}}{\underset{\text{Yes}}{\rightleftarrows}}$ New, R:Old $\overset{\text{Yes}}{\underset{\text{Yes}}{\rightleftarrows}}$ New, S:Old $\overset{\text{No}}{\underset{\text{No}}{\rightleftarrows}}$ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change


++ CONTINUE ++

Copyright (C) YANMAR CO., LTD. All RightsReserved.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.44. CRAWLER

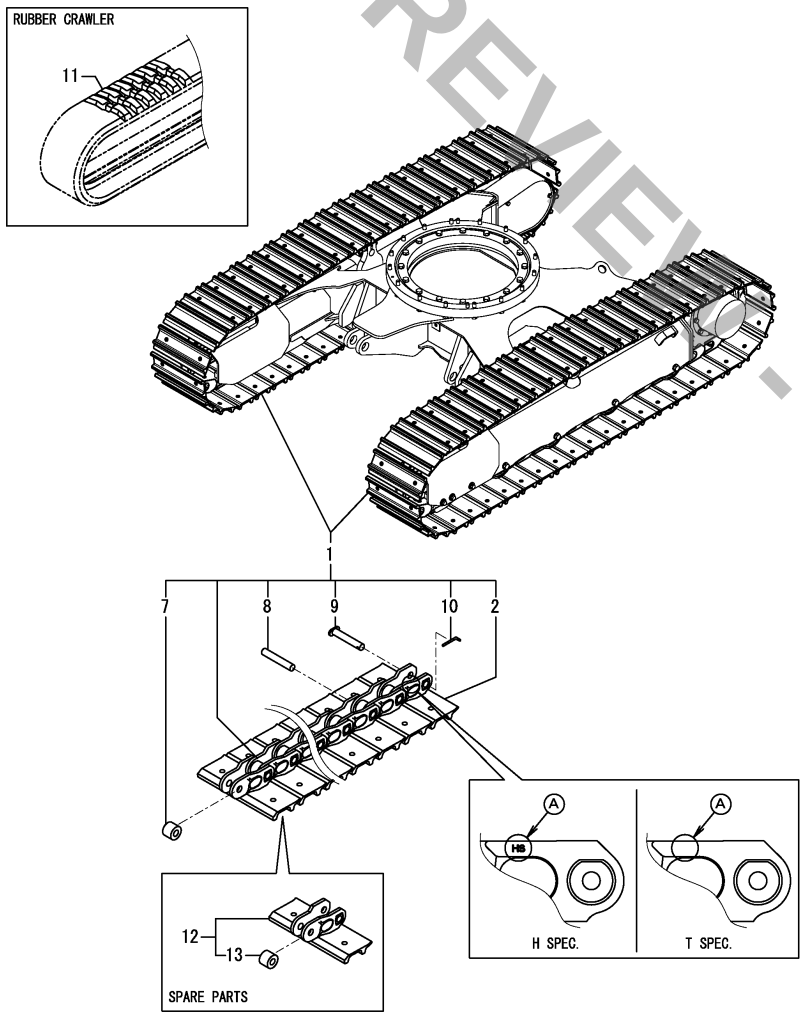

(A)=VIO35-6A P(US)
(B)=VIO35-6A C(US)
(C)=
(D)=
(E)=
(F)=

No.	Lev.	Parts No.	Description	Q'ty (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	172B03-38100	SHOE ASSY, TRACK 300	2	2					Z	1
	(A=M61870)	(B=M61870)									
2	2	172B03-38110	PLATE, SHOE 300	88	88						
7	2	172A85-38200	BUSH, TRACK	88	88						
8	2	172A85-38210	PIN, TRACK	86	86						
9	2	172A85-38220	PIN, MASTER	2	2						
10	2	172A85-38230	PIN, CLAMPING	2	2						
11	1	172B03-38600	CRAWLER, RUBBER 300	2	2						
12	1	172B03-38300	TRACK, MASTER 300	1	1					W	
	(A=*2012.11.)	(B=*2012.11.)									
13	2	172A85-38200	BUSH, TRACK	1	1						

Remarks
(1)H specification. : Interchangeable by Fig.197(44A) No.1 T specification.
The inner parts are not compatible.
H specification. : Letters HS are stamped in A part.
T specification. : Letters HS are not stamped in A part.


N:Old $\overset{\text{Yes}}{\underset{\text{No}}{\rightleftarrows}}$ New, Q:Old $\overset{\text{No}}{\underset{\text{Yes}}{\rightleftarrows}}$ New, R:Old $\overset{\text{Yes}}{\underset{\text{Yes}}{\rightleftarrows}}$ New, S:Old $\overset{\text{No}}{\underset{\text{No}}{\rightleftarrows}}$ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

Copyright (C) YANMAR CO., LTD. All RightsReserved.

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

Fig.49. BLADE LEVER

(A)=VIO35-6A P(US)
(B)=VIO35-6A C(US)
(C)=
(D)=
(E)=
(F)=

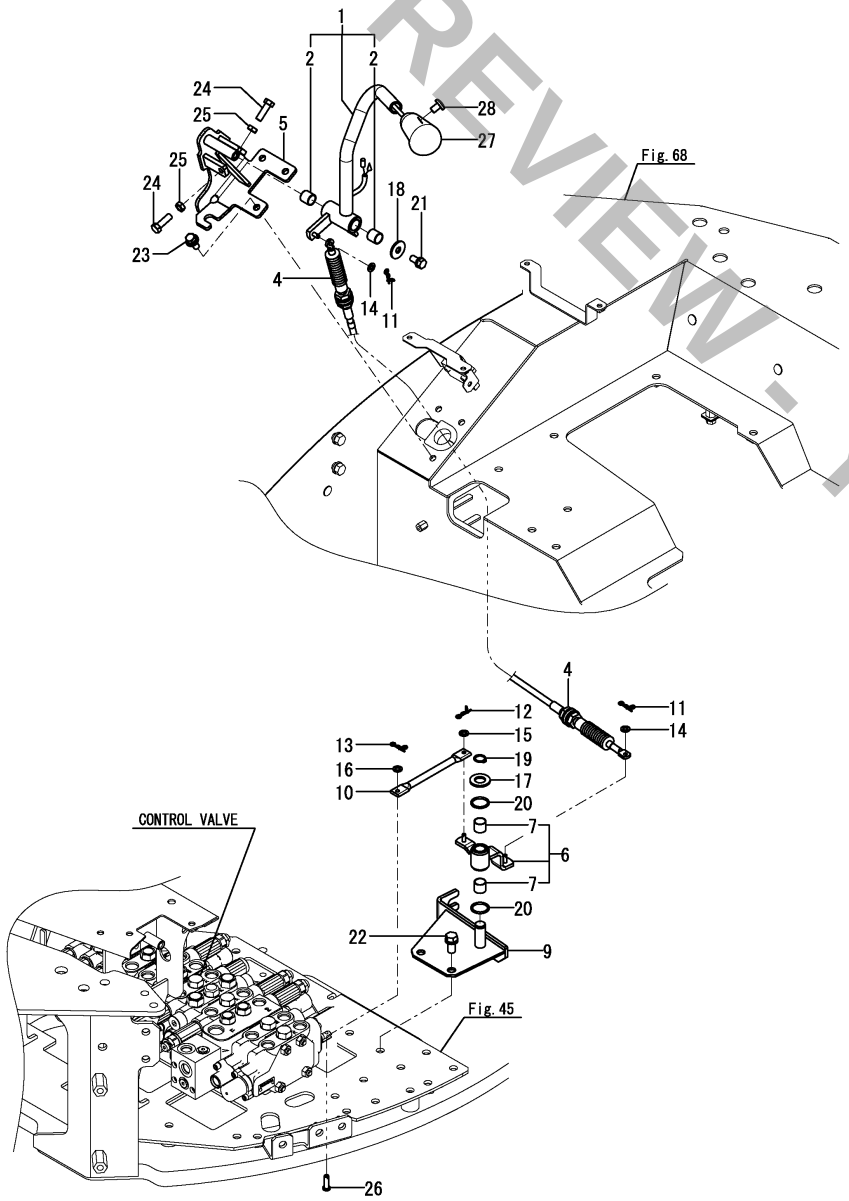

No.	Lev.	Parts No.	Description	Q'ty (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	172B03-45450	LEVER ASSY, BLADE EX	1	1						
2	2	172141-41360	BUSH	2	2						
4	1	172B03-45800	CABLE, BLADE	1	1						
5	1	172B03-45850	BRACKET ASSY, BLADE	1	1						
6	1	172B03-45900	BOSS ASSY, LINK	1	1						
7	2	172141-41360	BUSH	2	2						
9	1	172B03-45950	SHAFT ASSY, LINK	1	1						
10	1	172B03-45990	ROD, 130	1	1						
11	1	1C6281-52310-1	PIN, SNAP 6	2	2						
12	1	1C6281-52310-1	PIN, SNAP 6	1	1						
13	1	1C6281-52310-1	PIN, SNAP 6	1	1						
14	1	22137-050000	WASHER, 5	2	2						
15	1	22137-050000	WASHER, 5	1	1						
16	1	22137-050000	WASHER, 5	1	1						
17	1	22137-140000	WASHER, 14	1	1						
18	1	22157-080000	WASHER, 8	1	1						
19	1	22242-000140	RING, 14	1	1						
20	1	24311-000210	O-RING, 1AP21.0	2	2						
21	1	26013-080162	BOLT, M8X 16	1	1						
22	1	26013-100202	BOLT, M10X 20	2	2						
23	1	26014-080202	BOLT, M8X 20	3	3						
24	1	26116-080252	BOLT, M8X 25 PLATED	2	2						
25	1	26756-080002	NUT, LOCK M8	2	2						
26	1	933110-54100	PIN	1	1						
27	1	172B03-17500	KNOB ASSY,BLADE SW	1	1						
28	1	26587-040062	SCREW, M4X 6	1	1						


Remarks
* Not applied for angle blade specification.

N:Old ⇔(Yes/No) New, Q:Old ⇔(No/Yes) New, R:Old ⇔(Yes/Yes) New, S:Old ⇔(No/No) New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

Copyright (C) YANMAR CO., LTD. All RightsReserved.

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

Fig.55. TURNING FRAME

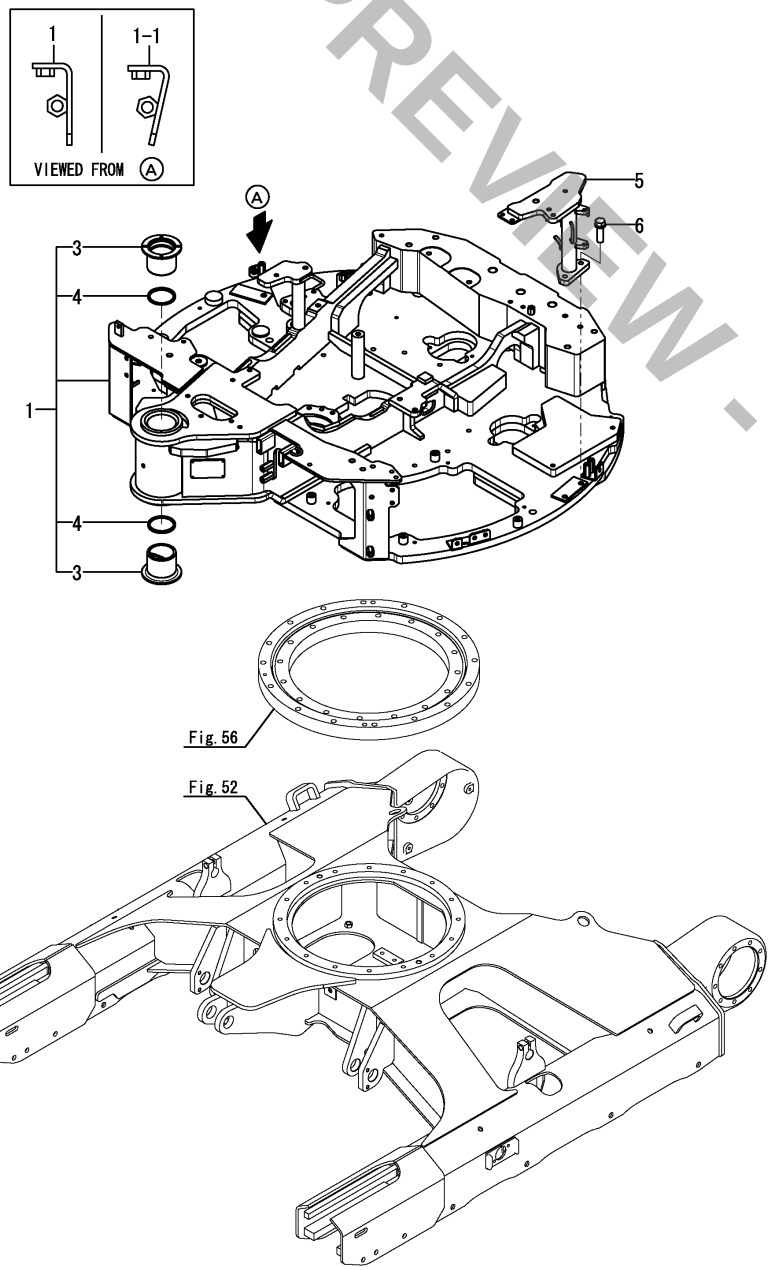

(A)=VIO35-6A P(US)
(B)=VIO35-6A C(US)
(C)=
(D)=
(E)=
(F)=


No.	Lev.	Parts No.	Description	Q'ty (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	172B03-54090	FRAME ASSY, TURNING	1	1						
1-1	1	172B03-54091	FRAME ASSY, TURNING	1	1					S	
	(A=MZZZZZ)		(B=MZZZZZ)								
3	2	172B03-54710	BUSH, 90X85	2	2						
4	2	172455-81380	SEAL, DUST 90X105X6	2	2						
5	1	172B03-54800	MOUNT ASSY, FRAME	1	1						
6	1	26013-120402	BOLT, M12X 40	2	2						

N:Old $\overset{\text{Yes}}{\underset{\text{No}}{\rightleftarrows}}$ New, Q:Old $\overset{\text{No}}{\underset{\text{Yes}}{\rightleftarrows}}$ New, R:Old $\overset{\text{Yes}}{\underset{\text{Yes}}{\rightleftarrows}}$ New, S:Old $\overset{\text{No}}{\underset{\text{No}}{\rightleftarrows}}$ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

Copyright (C) YANMAR CO., LTD. All RightsReserved.

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

Fig.57. COVER(MULTI)

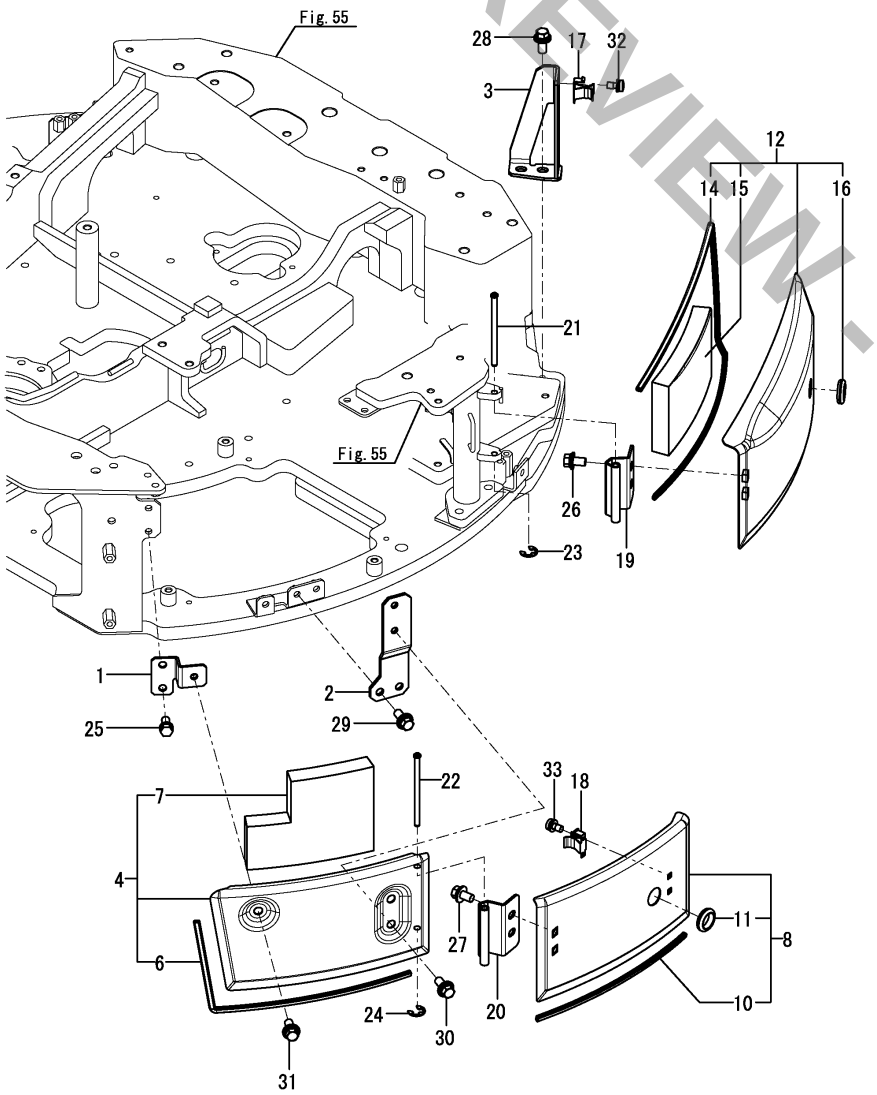

(A)=VIO35-6A P(US)
(B)=VIO35-6A C(US)
(C)=
(D)=
(E)=
(F)=

No.	Lev.	Parts No.	Description	Q'ty (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	172B03-61050	STAY ASSY, MULTI	1	1						
2	1	172B03-61070	STAY ASSY, MULTI	1	1						
3	1	172B03-61090	STAY, HOLDER	1	1						
4	1	172B03-61200	COVER ASSY, MULTI	1	1						
6	2	172B03-61450	SEAL, MULTI	1	1						
7	2	172B03-61480	SPONGE	1	1						
8	1	172B03-61230	COVER ASSY, MULTI	1	1						
10	2	172B03-61460	SEAL, MULTI	1	1						
11	2	172137-66230	GROMMET	1	1						
12	1	172B03-61260	COVER ASSY, MULTI	1	1						
14	2	172B03-61470	SEAL, MULTI	1	1						
15	2	172B03-61490	SPONGE	1	1						
16	2	172137-66230	GROMMET	1	1						
17	1	198220-61480	HOLDER, ROD	1	1						
18	1	198220-61480	HOLDER, ROD	1	1						
19	1	172B03-61540	HINGE ASSY,MULTI	1	1						
20	1	172B03-61540	HINGE ASSY,MULTI	1	1						
21	1	172448-65490	SHAFT, HINGE	1	1						
22	1	172448-65490	SHAFT, HINGE	1	1						
23	1	22272-000070	RING, E- 7	1	1						
24	1	22272-000070	RING, E- 7	1	1						
25	1	26013-100202	BOLT, M10X 20	2	2						
26	1	26014-100202	BOLT, M10X 20	2	2						
27	1	26014-100202	BOLT, M10X 20	2	2						
28	1	26014-100252	BOLT, M10X 25	2	2						
29	1	26014-100252	BOLT, M10X 25	2	2						
30	1	26014-100252	BOLT, M10X 25	2	2						
31	1	26014-100252	BOLT, M10X 25	1	1						
32	1	26023-050102	SCREW, M5X10	2	2						
33	1	26023-050102	SCREW, M5X10	2	2						

N:Old $\overset{\text{Yes}}{\underset{\text{No}}{\leftrightarrows}}$ New, Q:Old $\overset{\text{No}}{\underset{\text{Yes}}{\leftrightarrows}}$ New, R:Old $\overset{\text{Yes}}{\underset{\text{Yes}}{\leftrightarrows}}$ New, S:Old $\overset{\text{No}}{\underset{\text{No}}{\leftrightarrows}}$ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change


Copyright (C) YANMAR CO., LTD. All RightsReserved.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.80. CABIN(BODY)

CABIN ASSY
Fig. 80 Ref. No. 1
INC. Fig. 140～147.

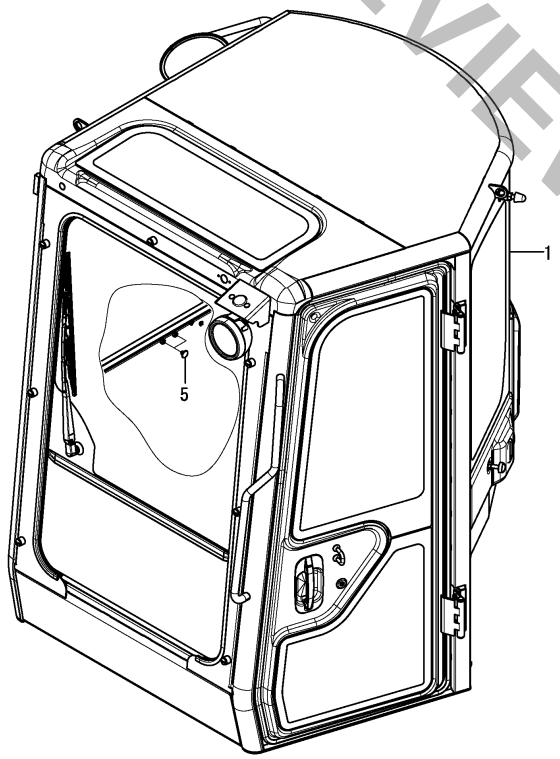

(A)=VIO35-6A P(US)
(B)=VIO35-6A C(US)
(C)=
(D)=
(E)=
(F)=

No.	Lev.	Parts No.	Description	Q'ty (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	172B02-68000	CABIN ASSY		1						1
1-1	1	172B02-68001	CABIN ASSY		1					N	1
		(B=MZZZZZ)									
1-2	1	172B02-68002	CABIN ASSY		1					R	1
		(B=*2014.06)									
4A	1	172437-03391	LABEL, RADIATOR		1						2
4B	1	172437-03551	LABEL, WINDOW US		1						2
5	1	172444-17660	CLIP, TREE		2						3

Remarks
(1)Attach the No.4A & 4B label to this part.
(2)Label is not illustrated.
(3)Not applied for quick coupler specification.


N:Old $\overset{\text{Yes}}{\underset{\text{No}}{\leftrightarrows}}$ New, Q:Old $\overset{\text{No}}{\underset{\text{Yes}}{\leftrightarrows}}$ New, R:Old $\overset{\text{Yes}}{\underset{\text{Yes}}{\leftrightarrows}}$ New, S:Old $\overset{\text{No}}{\underset{\text{No}}{\leftrightarrows}}$ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

Copyright (C) YANMAR CO., LTD. All RightsReserved.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.85. HYDRAULIC PUMP(QUICK COUPLER SPEC.)

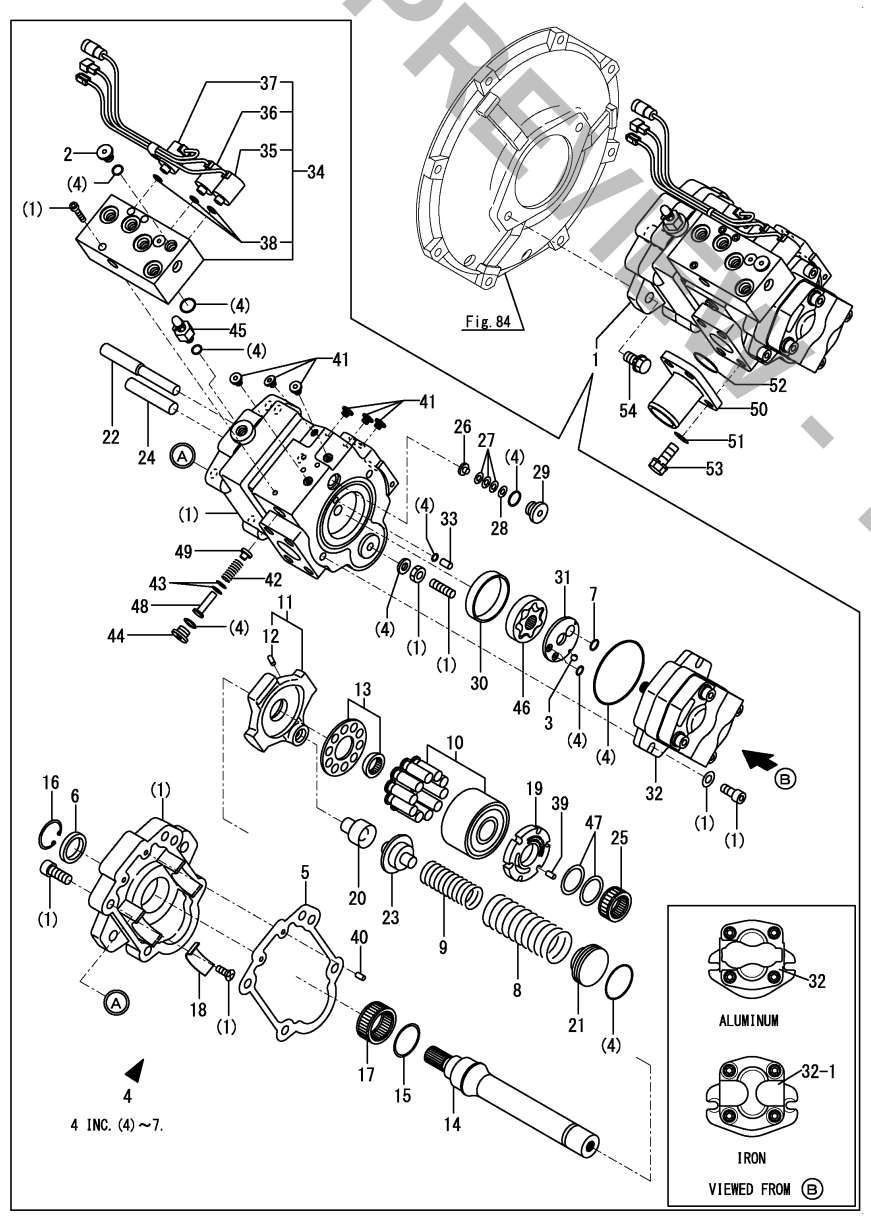

(A)=VIO35-6A P(US)
(B)=VIO35-6A C(US)
(C)=
(D)=
(E)=
(F)=

No.	Lev.	Parts No.	Description	Q'ty (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	172A46-73100	PUMP ASSY	1	1						
2	2	172148-70301	PLUG	1	1						
3	2	172122-70350	BALL, STEEL	1	1						
4	2	172460-73111	SEAL SET	1	1						
5	3	172460-73170	GASKET	1	1						
6	3	172460-73190	SEAL, OIL	1	1						
7	3	172460-73400	O-RING	1	1						
8	2	172461-73110	SPRING	1	1						
9	2	172A46-73110	SPRING	1	1						
10	2	172460-73121	BLOCK KIT, CYLINDER	1	1						
11	2	172A46-73120	PLATE, SWASH	1	1						
12	3	172312-74790	ORIFICE	1	1						
13	2	172460-73130	RETAINER KIT	1	1						
14	2	172460-73150	SHAFT	1	1						
15	2	172460-73160	WASHER, THRUST	1	1						
16	2	172460-73180	RING, SNAP	1	1						
17	2	172460-73200	BEARING, NEEDLE	1	1						
18	2	172460-73210	BUSH	2	2						
19	2	172460-73231	PLATE, VALVE	1	1						
20	2	172460-73240	HOLDER	1	1						
21	2	172461-73270	SEAT, SPRING	1	1						
22	2	172460-73280	PIN	1	1						
23	2	172176-73290	SEAT, SPRING	1	1						
24	2	172460-73290	PIN	1	1						
25	2	172460-73330	BEARING, NEEDLE	1	1						
26	2	172460-73340	STOPPER	1	1						
27	2	172460-73350	SPRING, DISK	3	3						
28	2	172460-73360	WASHER	1	1						
29	2	172460-73370	PLUG	1	1						
30	2	172460-73380	BUSH	1	1						
31	2	172460-73390	PLATE	1	1						
32	2	172460-73410	PUMP, GEAR	1	1						
32-1	2	172A46-73200	REPAIR KIT,GEAR PUMP	1	1						N
	(A=FROM 1ST)		(B=FROM 1ST)								
33	2	172460-73420	PIN	1	1						
34	2	172960-73430	VALVE	1	1						
35	3	172460-73900	VALVE, SOLENOID	1	1						1
36	3	172460-73910	VALVE, SOLENOID	1	1						2
37	3	172460-73920	VALVE, SOLENOID	1	1						3
38	3	24352-190110	O-RING, 219011	3	3						
39	2	172122-73480	PIN	1	1						
40	2	172122-73480	PIN	2	2						
41	2	172452-73480	PLUG	6	6						
42	2	172176-73560	SPRING	1	1						
43	2	172176-73590	SHIM	2	2						
44	2	172176-73600	PLUG	1	1						
45	2	172176-73690	BREEDER, AIR	1	1						
46	2	172176-73880	PUMP ASSY, TROCHOID	1	1						
47	2	172176-73910	WASHER, THRUST	2	2						
48	2	172176-73930	PIN	1	1						
49	2	172176-73940	POPPET	1	1						

Remarks
(1)For safety lock.
(2)For second gear traveling.
(3)For quick coupler.

N:Old $\overset{\text{Yes}}{\underset{\text{No}}{\rightleftarrows}}$ New, Q:Old $\overset{\text{No}}{\underset{\text{Yes}}{\rightleftarrows}}$ New, R:Old $\overset{\text{Yes}}{\underset{\text{Yes}}{\rightleftarrows}}$ New, S:Old $\overset{\text{No}}{\underset{\text{No}}{\rightleftarrows}}$ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

++ CONTINUE ++

Copyright (C) YANMAR CO., LTD. All RightsReserved.

Download full manual at youfixthis.com

PREVIEW - YOUFIXTHIS.COM

PREVIEW ONLY

You're viewing 12 of 261 pages

The full manual includes:

- All 261 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Yanmar VIO35-6A Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual