OVERVIEW

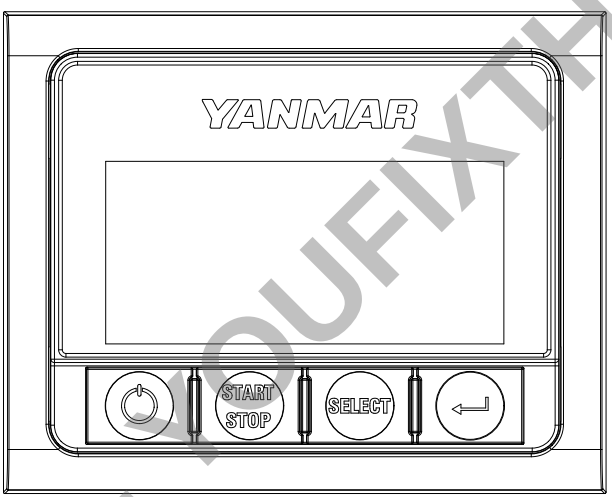


Figure 1

Functions

Button	Function
LCD Display	Indicates engine live data. A popup screen appears when some failure / notification occurs.
Power	Turn ON and OFF the Engine power (and the display power). Pressing and holding for 1 seconds is required. Note: Power OFF is not possible while the Engine is running.
Start/Stop	When Engine is not running: Start Engine. When Engine is running: Stop Engine.
Select	Switch between the Engine monitoring screen pages (1~4). Select the next item in the menu screen.
Enter	Enter the menu and the alarm/error/settings screens. Choose / Apply the setting items.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

SYSTEM SETUP

First Power ON
On the first power ON, please check / change the [ENGINE MODEL] for a correct display of Active Errors.

Press the Enter Button and use the Select Button to navigate to Main menu, System settings, Engine model and press Enter to change the engine model between JH and 4LV **(Figure 2)**.

Power link mode
If 2 or more (up to 4) panels are installed per engine, it is possible to turn ON / OFF all the panels using one panel when power link mode is enabled.

To enable this function, change the [POWER MODE] to [LINK] on every panel. Press the Enter Button and use the Select Button to navigate to Main menu, System settings, Power mode and press Enter to change between IND and LINK.

Factory default is [IND] (= Independent). Power ON / OFF operation is not combined with other YD25 panels in this configuration.

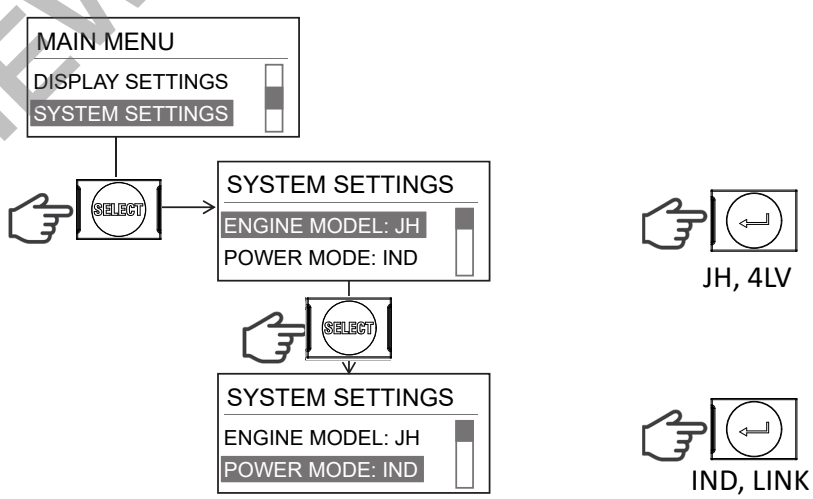


Figure 2

Download full manual at youfixthis.com
PREVIEW - YOUFIXTHIS.COM

OPERATION

Power ON
1. Press and hold the Power Button.
2. LCD is turned up and shows the Yanmar logo for 3 sec.
3. LCD switches to first Engine monitoring screen (Booting up complete).

Power OFF
1. Press and hold the Power Button Note: If the Engine is running, Power OFF is not possible (a popup will appear).
2. LCD shows the Yanmar logo for 3 sec.
3. LCD power shuts OFF. (Shutting down complete)

Engine Start
Press and hold the Start/Stop Button when the Engine is not running.

Engine Stop
Press and hold the Start/Stop Button when the Engine is running.

Engine Monitoring Screens
The YD25 Display can display engine data on 4 customizable Screen Pages. The Select Button is used to scroll between the pages.

The Screen Pages can be customized in the Display Setting screen. The following items can be chosen:
- The number of values in the page. (1 or 2 values can be indicated in one page.)
- The data to be displayed. (Please refer to APPENDIX A)

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

MAIN MENU

The Main Menu can be accessed by pressing the Enter Button while an Engine monitoring screen is being displayed. There are 4 items in the Main Menu:

- Active Alarms
- Active Errors
- Display settings
- System settings

Select [Return] and press the Enter Button to return to the Engine monitoring screen.

Active Alarms

All alarms that are currently active are listed in this screen.

Active Errors

All errors that are currently active are listed in this screen.

Selecting an error using the Select Button and pressing the Enter Button will show further details of the selected error. See **Figure 5**.

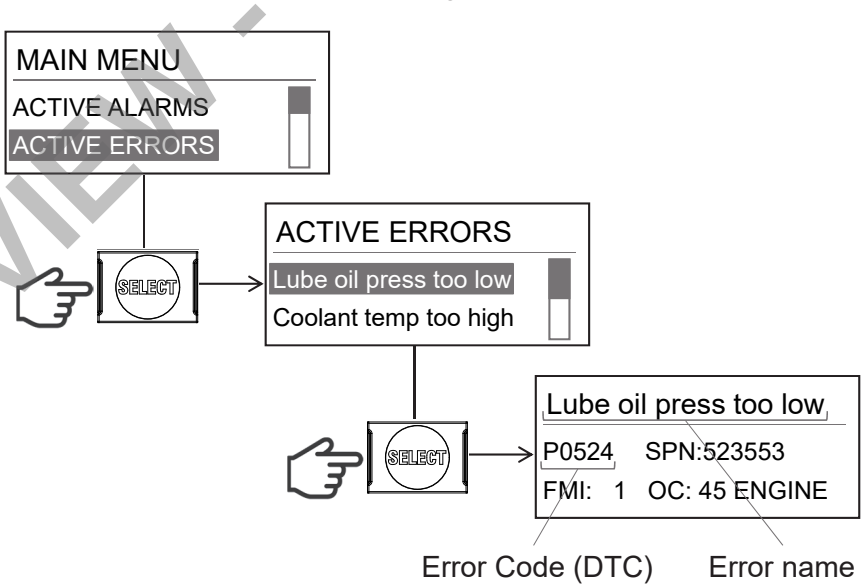


Figure 5

Download full manual at youfixthis.com
PREVIEW - YOUFIXTHIS.COM

APPENDIX A

Menu structure



Blurred on purpose. The manual you buy has this page in full quality.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 5 of 20 pages

The full manual includes:

- All 20 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Yanmar YD25 Operation Manual

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual