
Engine Block
Bloc de moteur
Bloque de motor

TX1241824 A.1

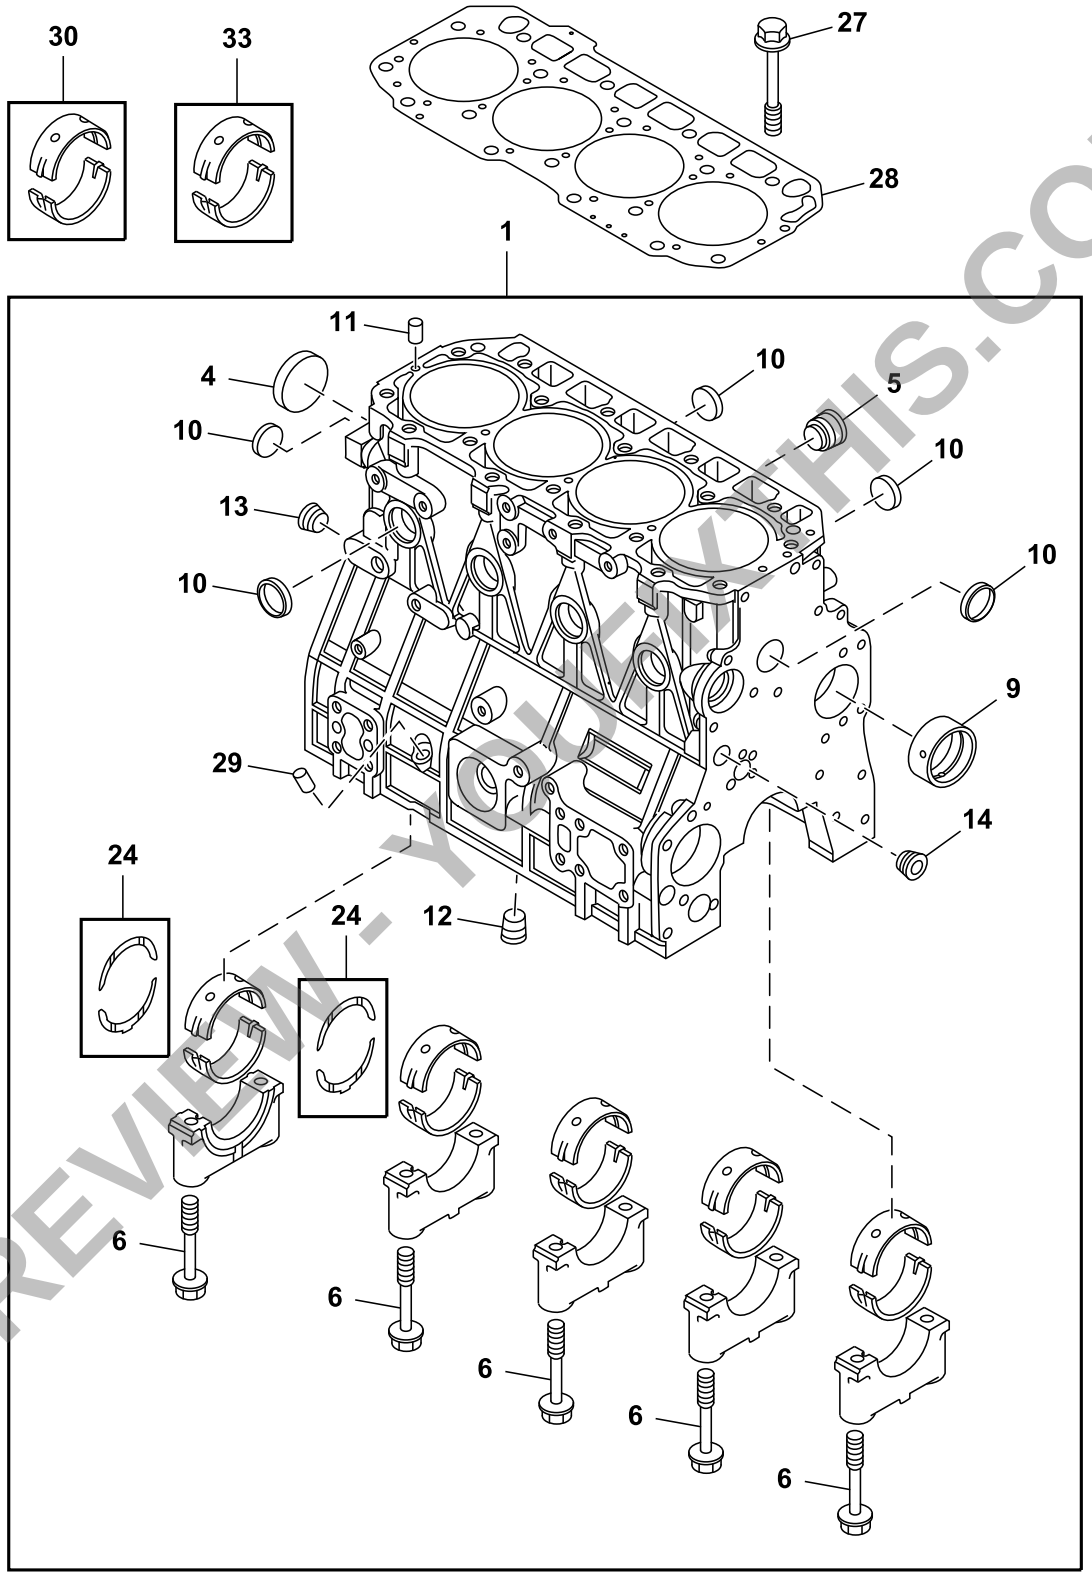


TX1241824

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Main Frame
Châssis principal
Bastidor principal

TX1134550 A.1

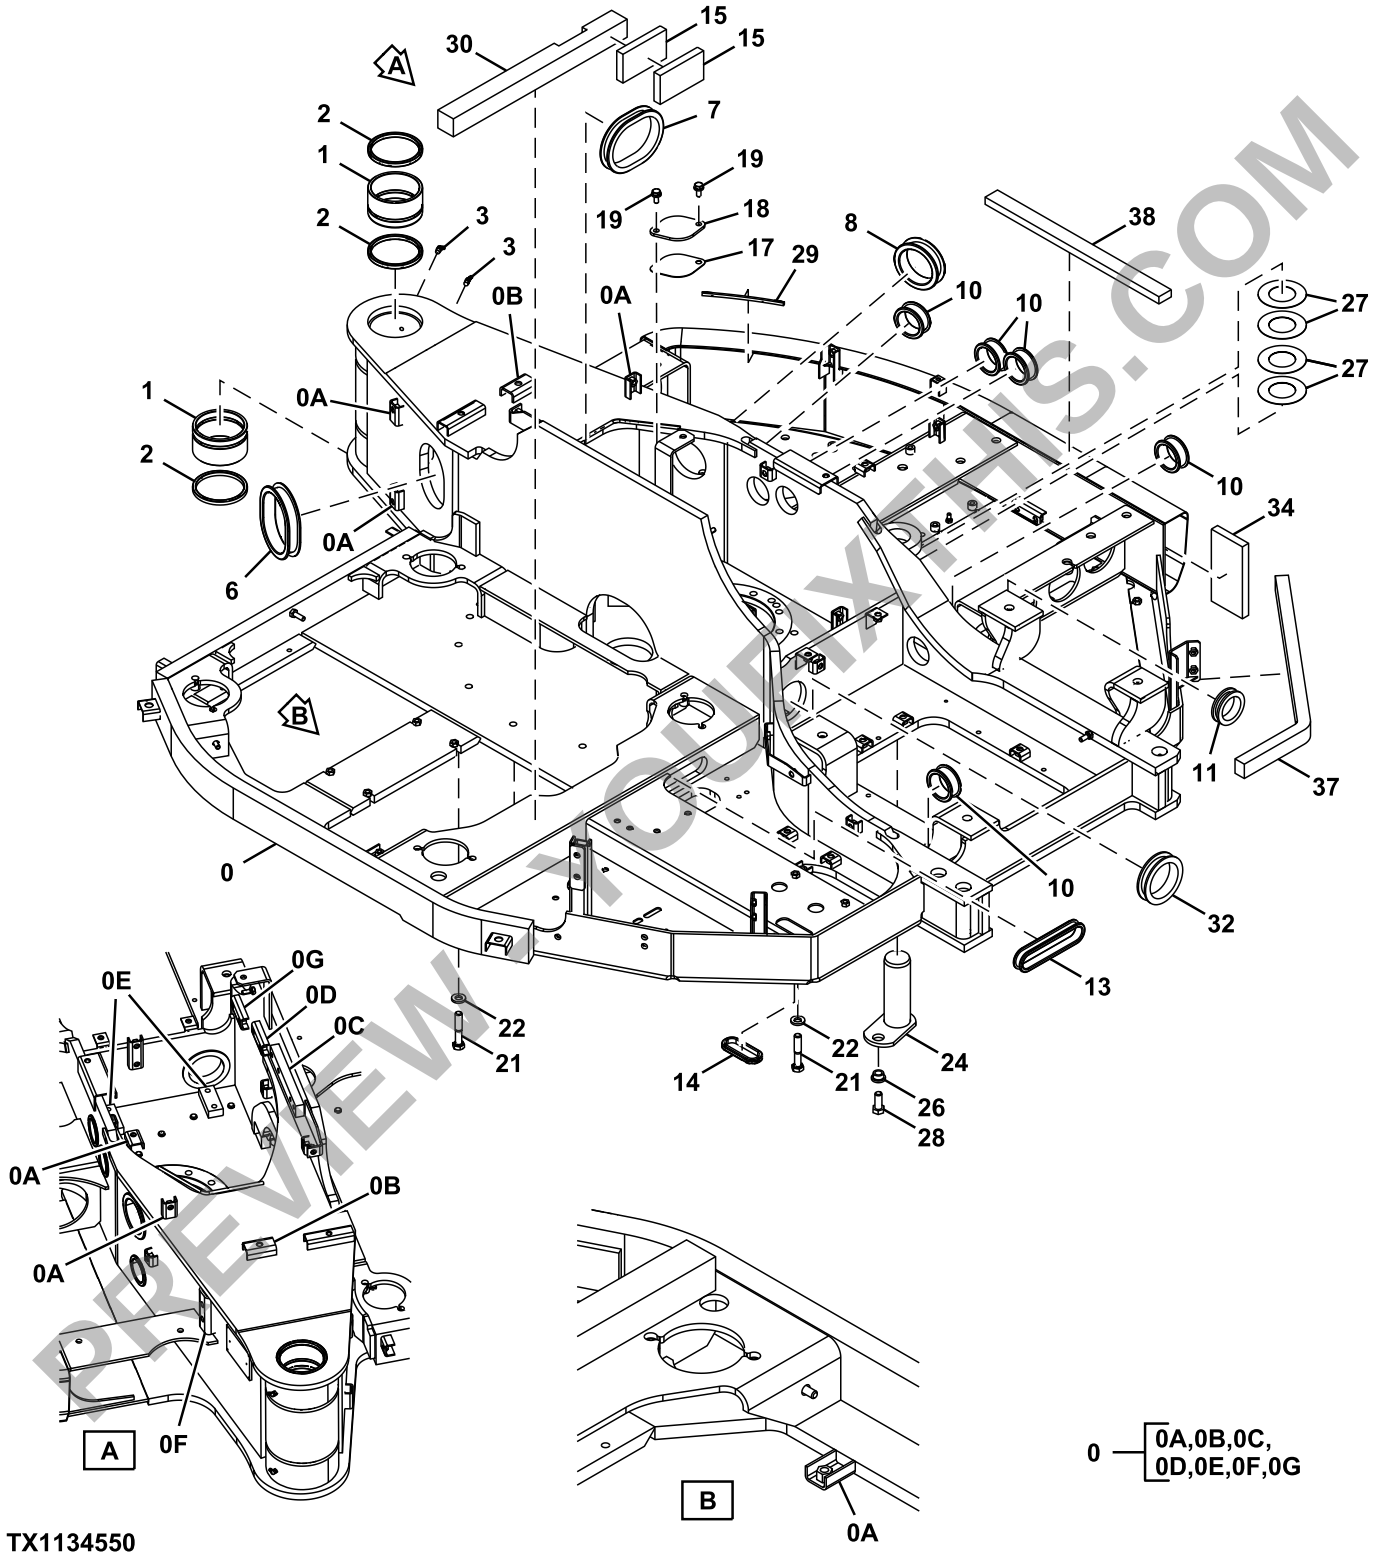


PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

Hydraulic Pump Rotating Group (1 of 2)
Groupe de rotation de pompe hydraulique (1 sur 2)
Grupo giratorio de bomba hidráulica (1/2)

TX1135127 B.1

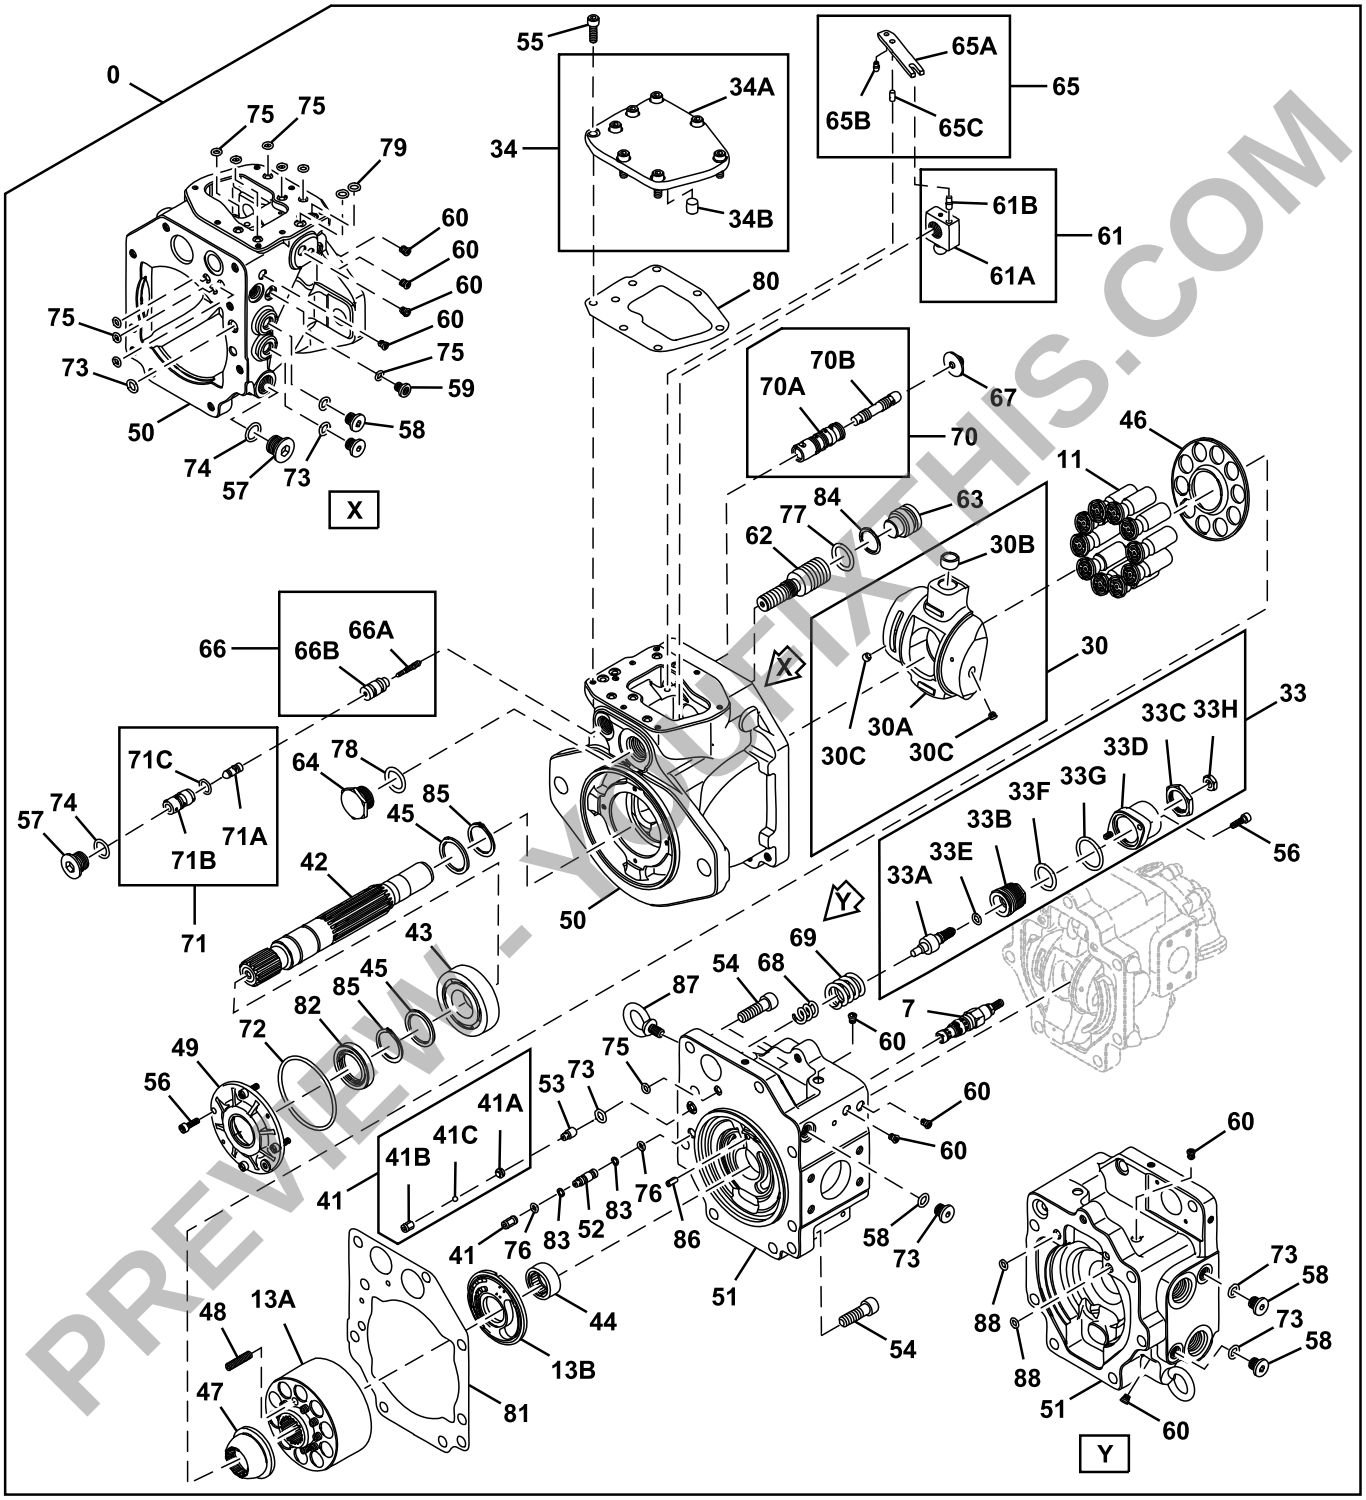

TX1135127


13 — 13A,13B

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Cab Door Lock
Serrure de porte de cabine
Cerradura de la puerta de cabina

TX1131545 B.1

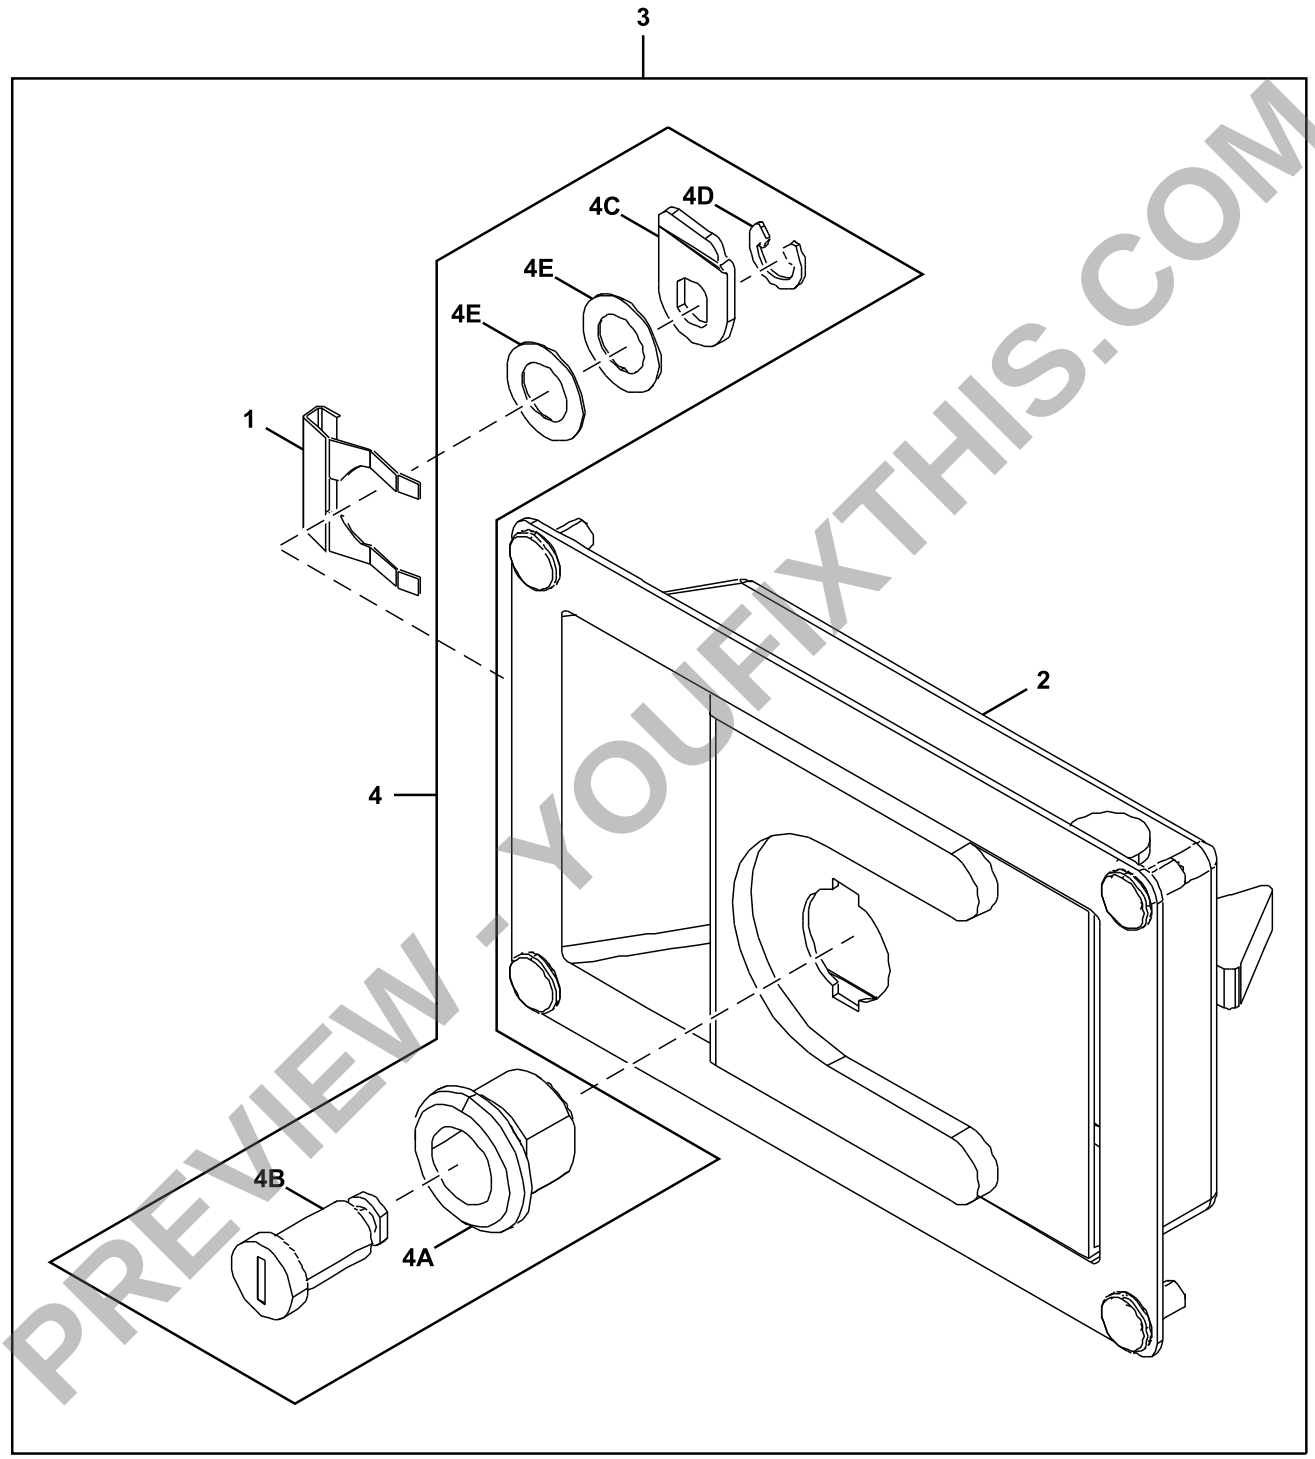


TX1131545

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Boom 3.67 m
Flèche 3,67 m
Aguilón de 3,67 m

TX1134513 B.2

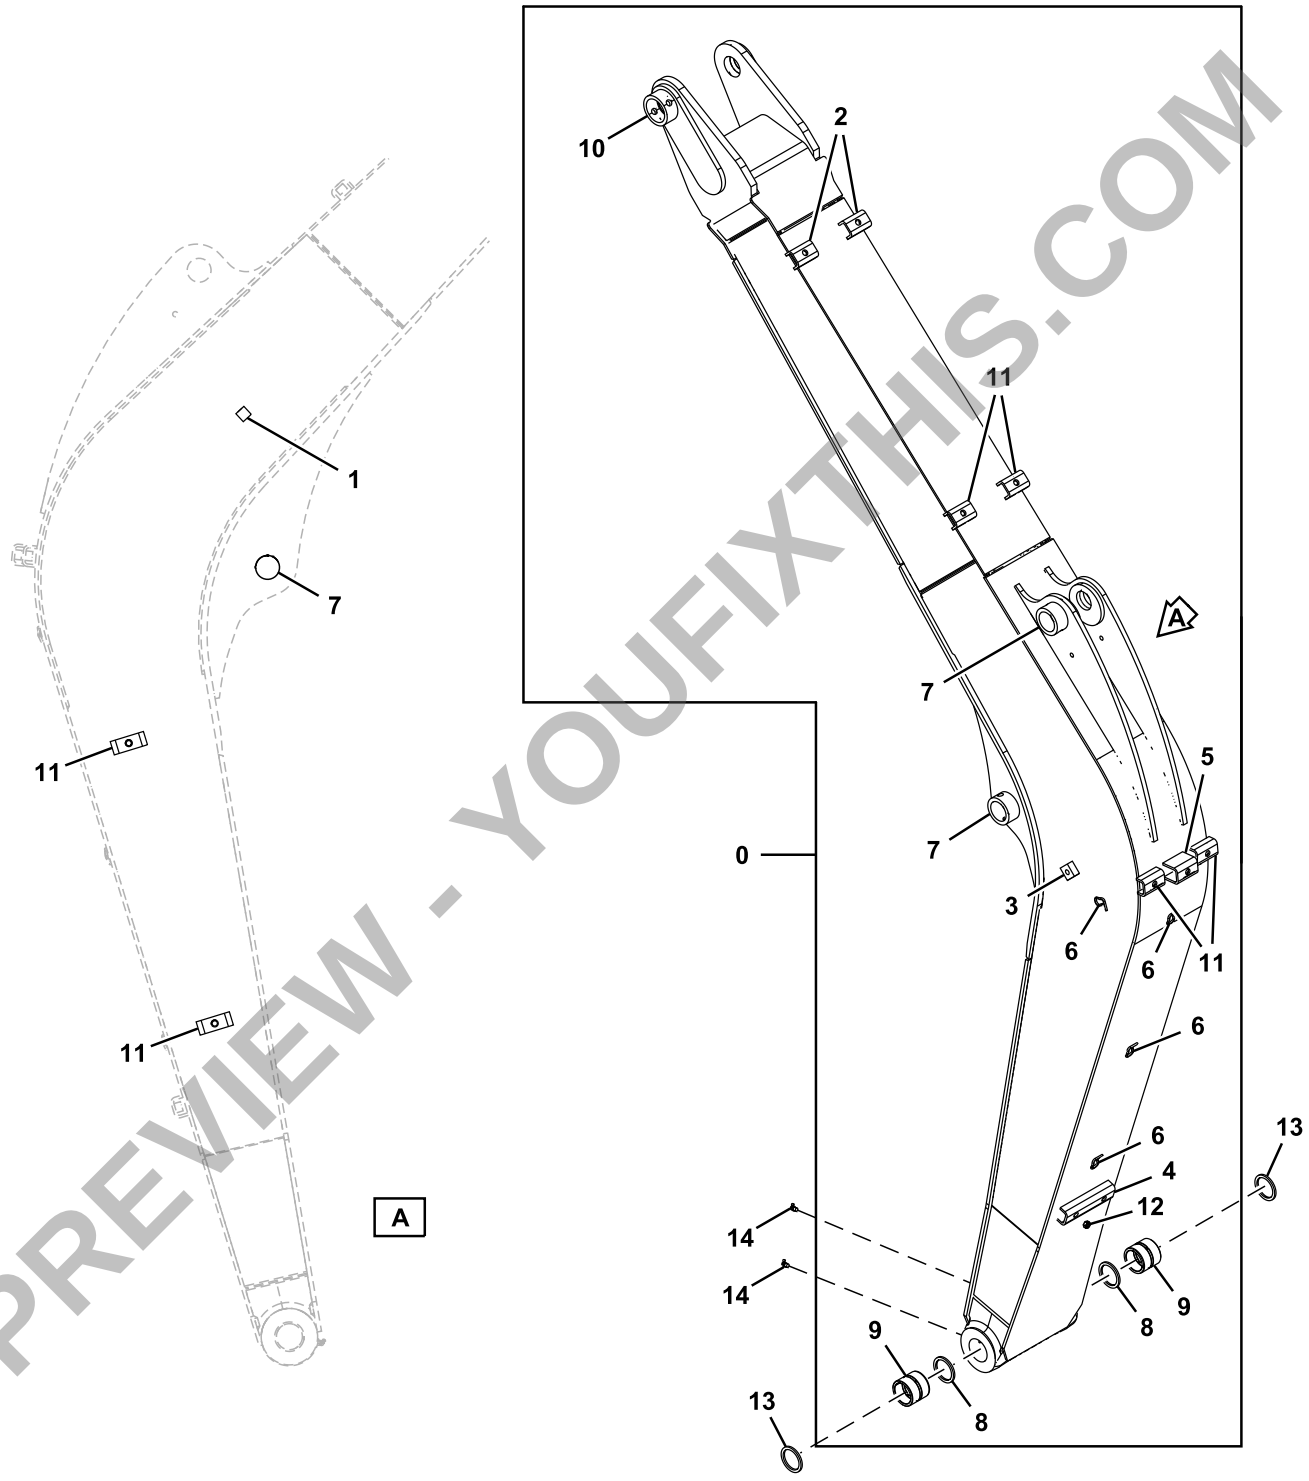

TX1134513

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Table of Contents

01 Wheels & Tires & Tracks
0110 Powered Wheels, Tires & Fastenings 46
0130 Track Systems 48
02 Axles, Differentials & Suspension Systems
0260 Axles, Diff. & Susp. Sys. Hyd. (Incl. Fwd) 72
04 Engine - Miscellaneous Engine / Complete Engine
0404 Cylinder Block 84
05 Engine Auxiliary System
0505 Cold Weather Starting Aids 124
0510 Engine Cooling Systems 126
0520 Intake System 132
0530 External Exhaust Systems 134
0540 Engine Mounting 136
0560 External Fuel Supply Systems 138
13 Miscellaneous Vehicle
1322 Labels & Trademarks 146
16 Vehicle Electrical Systems
1671 Batteries, Support & Cables 152
1673 Vehicle Lighting System 156
1674 Wiring Harnesses & Switches 172
17 Frame Chassis Or Supporting Structure
1740 Frame Installation 216
18 Operator's Station
1810 Operator Enclosure 230
1821 Seat And Seat Belts 272
1830 Heating & Air Conditioning 276
19 Sheet Metal & Styling
1910 Hood Or Engine Enclosure 292
20 Safety, Convenience & Miscellaneous
2001 Radio 310
2002 Mirror 314
2004 Warning Devices Including Horn & Reverse Alarm 318
2007 Sun Visor 322
2010 Miscellaneous 324
21 Vehicle Main Hydraulic System
2161 Hyd Pumps & Drives 326
2164 Hyd Reservoir, Filter & Cooler 336
33 Backhoe & Excavator
3301 Blades & Side Cutters 342
3302 Bucket With Teeth 346
3315 Controls Linkage 368
3344 Boom 392
3361 Hydraulic Pump 416
3362 Control & Load Holding Valves 426
3363 Lines, Hoses & Fittings 466
3364 Hydraulic Reservoir, Filter and Cooler 534
3365 Hydraulic Cylinders 536
43 Swing, Rotation Or Pivoting System
4353 Swing Bearing & Mounting 558
4360 Hydraulics 560

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Alphabetical Index

Page

3.67 m, Boom ... 392

A

Accelerator, Throttle Kit, Intake Manifold ... 94
Accumulator ... 382
Accumulator, Hydraulic Accumulator, Accumulator ... 382
ACCUMULATOR, STEERING ... 382
Adapter, For Esco Ultralok™ (Hammerless) Teeth ... 358
Adapter, TK225 Series Tooth System ... 356
Additional Counterweight ... 220
Additional Fuse Box ... 206
Adjuster, Rubber Tracks ... 58
Adjuster, Track Chain ... 58
Air Cleaner ... 132
Air Cleaner Cover ... 132
Air Conditioner ... 276
Air Conditioner (Sensors) ... 284
Air Conditioner And Heater Blower Motor ... 278
Air Conditioner and Heater Duct ... 290
Air Conditioner And Heater Electric Motor ... 278
Air Conditioner And Heater Relay ... 278
Air Conditioner And Heater Switch ... 278
Air Conditioner And Heater Transistor ... 278
Air Conditioner Case ... 278
Air Conditioner Components ... 278
Air Conditioner Compressor and Condenser Hoses ... 282
Air Conditioner Compressor V-Belt ... 280
Air Conditioner Condenser and Compressor ... 280
Air Conditioner Evaporator ... 278
Air Cooler, Charge ... 126
Air Duct, Cab Inside Rear Cover ... 270
Air Filter, Air Cleaner ... 132
Alarm, Motion ... 176
ALARM, MOTION ... 320
ALARM, PROPEL ... 320
Alarm, Travel ... 176
ALARM, TRAVEL ... 320
Alarm, Travel Motion; Switch ... 186
Alternator ... 118
Alternator Fan Belt ... 106
Alternator Mounting ... 118
Alternator, Alternator ... 118
Ambient Temperature Sensor, Air Conditioner ... 284
Anchor Bolt, Cab ... 256
Anchor, Fuel and Hydraulic Oil Tank Cover ... 298
Antenna, Cab Components (Cab Light and Antenna) ... 236
Antenna, Radio ... 236
Anti Cavitation, Valve ... 456
Arm Cylinder ... 536
Arm Cylinder Components ... 536, 538
Arm Cylinder Hydraulic Lines ... 510
Arm Cylinder Lines To Control Valve ... 476
Arm High Flow Auxiliary Lines Kit, 2.12 M Arm ... 530
Arm Lines, Auxiliary, 1.62 m Arm ... 528
Arm Lines, Auxiliary, High Flow, 2.12 m Arm ... 530
Arm Rest ... 378
Arm, Cab Components (Windshield Assembly and Wiper Arm) ... 244
Arm, Long (2.12m) ... 404
Arm, Long 2.12 m, Pins ... 406
Arm, Long Arm 2.12 m ... 404
Arm, Rocker ... 92
Arm, Rocker Arm Shaft, Cylinder Head and Valve Cover ... 92
Arm, Rocker Arm, Cylinder Head and Valve Cover ... 92
Arm, Standard (1.62 m) ... 400
Arm, Standard Arm 1.62 m ... 400
Arm, Windshield Wiper ... 244
Arm, Wiper Arm, Cab Components (Windshield Assembly and Wiper Arm) ... 244
Armrest, Arm Rest ... 378
Ashtray ... 260
Ashtray, Console Cover ... 260
Assembly, Triple Grouser Shoe Track Chain ... 62
Auto Idle Knob ... 180
Auxiliary Arm Lines, 1.62 m Arm ... 528
Auxiliary Arm Lines, High Flow, 1.62 m Arm ... 528
Auxiliary Arm Lines, High Flow, 2.12 m Arm ... 530
AUXILIARY CONTROL SWITCH ... 188
Auxiliary Foot Control Solenoid Valve Kit, 2 Way ... 464
Auxiliary Function Lever Pilot Lines ... 532
Auxiliary Function Lever Switch and Wiring Harness ... 210
Auxiliary Function Levers ... 390
Auxiliary Function Valve And Wiring Harness ... 212

Page

Auxiliary Function Wiring Harness ... 214
Auxiliary Hydraulic Lines, Arm, 1.62 m Arm ... 528
Auxiliary Hydraulic Lines, Boom ... 518
Auxiliary Hydraulics, Electric Solenoid Valve Kit ... 464
Auxiliary Lines, Body (Hi-Flow) ... 526
Auxiliary Pilot Control Valve Components ... 386
Auxiliary Relief And Anti Cavitation Valve ... 456
Axle, Lower Track Roller ... 70
Axle, Track Chain Idler ... 56

B

Ball Valve, Auxiliary Hydraulics, 1.62 m Arm ... 528
Bar, Single Bar Shoe, Track Chain Assembly ... 60
Bar, Triple Bar Shoe, Track Chain Assembly ... 60
Bar, Triple Bar Shoe, Track Chain Assembly (Triple Grouser Shoe) ... 62
Basic Control Unit (BCU) ... 204
Batteries, Support and Cables ... 154
Battery ... 152
Battery Cables ... 154
Battery Relay Location ... 154
Battery Support ... 154
Battery, Battery Cable, Batteries, Support and Cables ... 154
Battery, Dry Charged Battery, Battery ... 152
BCU, Basic Control Unit ... 204
Bearing Kit, Cylinder Block ... 86
Bearing, Camshaft ... 100
BEARING, LOWER TRACK ROLLER ... 70
Bearing, Swing ... 558
Bearings, Main ... 86
Belt, Adjuster Belt, Alternator ... 118
Belt, Engine Fan ... 106
Belt, Rubber Track ... 66
Belt, Rubber Track Belt, Rubber Track Belt ... 66
Belt, Seat Belt, Suspension Seat ... 272
Beverage Holder ... 262
Blade ... 342
Blade Control Lever ... 372
BLADE CONTROL VALVE HYDRAULIC LINE TO ROTARY MANIFOLD ... 570
Blade Cylinder ... 540
Blade Cylinder Bushings ... 540
Blade Cylinder Components ... 542
Blade Cylinder Seal ... 540
Blade Mounting ... 344
Blade Shuttle Valve Components ... 452
Blade, Blade ... 342
Blade, Windshield Wiper ... 244
Blade, Wiper Blade, Cab Components (Windshield Assembly and Wiper Arm) ... 244
Block Heater, Engine ... 124
Block, Engine Cylinder ... 86
Blower Motor, Heater And Air Conditioner ... 278
Blower, Fan Kit, Cooling Water System ... 106
Blower, Fan Kit, Engine Cooling System ... 128
Body, Valve, Rotary Valve ... 444
Bolt, Anchor ... 256
Bonnet, Engine Cylinder Head ... 92
Boom 3.67 m ... 392
Boom Auxiliary Hydraulic Lines ... 518
Boom Bottom Pin ... 396
Boom Bushings ... 394
Boom Clamps ... 398
Boom Cylinder ... 544
Boom Cylinder Components ... 546
Boom Cylinder Hydraulic Lines ... 510
Boom Cylinder Line To Control Valve ... 474
Boom Light (Right) (With Light Guard) ... 158
Boom Light Mounting, Left ... 160
Boom Light Wiring Harness (Right) (With Light Guard) ... 158
Boom Light, Left ... 156
Boom Lights and Wiring Harness ... 156
Boom Lines ... 510
Boom Lubricate Hose ... 414
Boom Pin ... 396
Boom Pin and Bushings ... 394
Boom Pin, Main Frame ... 46
Boom Swing Cylinder ... 488
Boom Swing Cylinder Lines ... 488
Boom Swing Hydraulic Control Valve ... 500
Boom Swing Pilot Control Valve Components ... 384
Boom Work Lights and Wiring Harness (Right) (With Light Guard) ... 158
Boot, Dig Pilot Controller Lever ... 368

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

TX1129404 A.1



85G Excavator

(Manufactured 2013–)

(Engine 4TNV98C)

(Specifications and design are subject to change without notice)

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Alphabetical Index - Continued

Page

Hose, Hose Guard, Control Valve Lines To Rotary Manifold (Right Travel) ... 484
Hose, Hose Guard, Delivery Lines ... 468
Hose, Hose Guard, Drain Lines ... 472
Hose, Hose Guard, Flow Regulator Valve Pilot Lines (18272 -) ... 498
Hose, Hose Guard, Fuel System ... 140
Hose, Hose Guard, High Flow Auxiliary Lines ... 526
Hose, Hose Guard, Main High Flow Auxiliary Lines ... 516
Hose, Hose Guard, Main Hydraulic Lines (Control Valve To Boom Cylinder) ... 474
Hose, Hose Guard, Main Lines, Arm Cylinder ... 476
Hose, Hose Guard, Main Lines, Control Valve To Swing Motor ... 480
Hose, Hose Guard, Pattern Changers Hoses (18272 -) ... 524
Hose, Hose Guard, Pilot Lines (Control Valve, Swing Motor, Pump, Filter) ... 490
Hose, Hose Guard, Travel Motor Hydraulic Lines ... 74
Hose, Hose Kit, Flywheel Housing and Oil Sump ... 90
Hose, Hydraulic Hose, Accumulator ... 382
Hose, Hydraulic Hose, Auxiliary Arm Lines, High Flow, 1.62 m Arm ... 528
Hose, Hydraulic Hose, Auxiliary Arm Lines, High Flow, 2.12 m Arm ... 530
Hose, Hydraulic Hose, Blade Mounting ... 344
Hose, Hydraulic Hose, Boom Swing Cylinder Lines ... 488
Hose, Hydraulic Hose, Control Valve Lines To Rotary Manifold ... 486
Hose, Hydraulic Hose, Direct Hydraulic Thumb Kit with Coupler ... 354
Hose, Hydraulic Hose, Direct Hydraulic Thumb Kit without Coupler ... 352
Hose, Hydraulic Hose, Drain Lines ... 472
Hose, Hydraulic Hose, Electric Solenoid Valve Kit, 2 Way ... 464
Hose, Hydraulic Hose, Flow Regulator Valve Pilot Lines (18272 -) ... 498
Hose, Hydraulic Hose, High Flow Auxiliary Lines ... 526
Hose, Hydraulic Hose, Hydraulic Filter Restriction Indicator Kit ... 336
Hose, Hydraulic Hose, Main High Flow Auxiliary Lines ... 516
Hose, Hydraulic Hose, Mechanical Pattern Changer Kit (- 18271) ... 522
Hose, Hydraulic Hose, Pilot Lines (Control Valve Front and Rear) ... 494
Hose, Hydraulic Hose, Pilot Lines (Control Valve To Travel Pilot Valve and Pilot Shutoff Valve) ... 502
Hose, Hydraulic Hose, Pilot Lines (Control Valve Top To Pilot Signal Manifold) ... 500
Hose, Hydraulic Hose, Pilot Lines (Control Valve, Swing Motor, Pump, Filter) ... 490
Hose, Hydraulic Hose, Pilot Lines (Right Pilot Controller To Regulator Valve and Pilot Shutoff Valve) (18272 -) ... 506
Hose, Hydraulic Hose, Pilot Lines With Valve (Breaker, Crusher) ... 520
Hose, Hydraulic Hose, Pins, Standard Arm, 1.62 m ... 402
Hose, Hydraulic Hose, Rotary Manifold Cover and Swing Stop ... 570
Hose, Hydraulic Hose, Travel Motor Hydraulic Lines ... 74
Hose, Hydraulic Hose, Two-Way Hydraulic Foot Pedal Control Kit ... 380
HOSE, HYDRAULIC PUMP TO OIL TANK, DRAIN ... 472
Hose, Main High Flow Auxiliary Lines ... 516
Hose, Main Hydraulic Lines (Control Valve To Boom Cylinder) ... 474
Hose, Main Lines, Arm Cylinder ... 476
Hose, Main Lines, Control Valve To Swing Motor ... 480
Hose, Mechanical Pattern Changer Kit (- 18271) ... 522
HOSE, OIL FILTER TO OIL TANK (DRAIN LINE) ... 472
HOSE, OIL TANK TO CONTROL VALVE, DRAIN ... 472
HOSE, OIL TANK TO HYDRAULIC PUMP, DRAIN ... 472
HOSE, OIL TANK TO OIL FILTER ... 472
HOSE, OIL TANK TO SWING MOTOR, DRAIN ... 472
Hose, Pattern Changers Hoses (18272 -) ... 524
Hose, Pilot Lines (Control Valve To Travel Pilot Valve and Pilot Shutoff Valve) ... 502
Hose, Pilot Lines (Control Valve Top To Pilot Signal Manifold) ... 500
Hose, Pilot Lines (Control Valve, Swing Motor, Pump, Filter) ... 490
Hose, Pilot Lines (Left Pilot Controller To Regulator Valve and Pilot Shutoff Valve)(With Pattern Changer) (18272 -) ... 504
Hose, Pilot Lines (Pilot Shutoff Valve To Flow Regulator) ... 508
Hose, Pilot Lines (Right Pilot Controller To Regulator Valve and Pilot Shutoff Valve) (18272 -) ... 506
Hose, Pilot, Breaker ... 520
Hose, Pilot, Crusher ... 520
Hose, Pins, Long Arm, 2.12 m ... 406
Hose, Radiator Hose, Surge Tank ... 130
Hose, Refrigerant Hose, Air Conditioner Compressor and Condenser Hoses ... 282
Hose, Return Lines ... 470
Hose, Rotary Manifold Cover and Swing Stop ... 570
HOSE, ROTARY MANIFOLD TO OIL TANK ... 570
Hose, Rotary Manifold to Travel Motor ... 74
Hose, Steering Accumulator Valve to Filter ... 382
Hose, Suction Lines ... 466
Hose, Surge Tank ... 130
HOSE, SWING MOTOR TO OIL TANK, DRAIN ... 472
Hose, Travel Motor Hydraulic Lines ... 74
Hose, Travel Motor to Rotary Manifold ... 74
Hose, Water Tank ... 130
Hose, Windshield Washer ... 236
Hoses, Arm; Auxiliary, 1.62 m Arm ... 528
Hoses, Arm; Auxiliary, High Flow, 2.12 m Arm ... 530
Hoses, Auxiliary; Arm, 1.62 m Arm ... 528
Hoses, Auxiliary; Arm, High Flow, 2.12 M Arm ... 530
Hoses, Boom Swing Cylinder ... 488
Hoses, Bucket Cylinder; Control Valve To Boom ... 478
Hoses, Bucket Cylinder, Long Arm, 2.12 m ... 406
Hoses, Control Valve To Boom (Bucket Cylinder) ... 478
Hoses, Control Valve To Boom Cylinder ... 474
Hoses, Control Valve To Flow Regulator Valve (18272 -) ... 498
Hoses, Control Valve To Pilot Shutoff Solenoid Valve ... 500
Hoses, Control Valve To Rotary Manifold ... 486
Hoses, Control Valve To Rotary Manifold - Left Travel ... 482
Hoses, Control Valve To Rotary Manifold - Right Travel ... 484
HOSES, CONTROL VALVE TO ROTARY VALVE ... 486
Hoses, Control Valve To Swing Motor ... 480
Hoses, Delivery ... 468
HOSES, DRAIN ... 472
Hoses, Engine Air Intake ... 132
Hoses, Fuel Filter ... 144
Hoses, Fuel System ... 140, 142
Hoses, Heater ... 286
Hoses, Hydraulic Pump To Control Valve ... 468
Hoses, Hydraulic, Boom To Cylinders ... 510
Hoses, Main High Flow Auxiliary Relief ... 516
HOSES, OIL TANK FROM CONTROL VALVE AND COOLING PACKAGE ... 470
Hoses, Pattern Changer To Pilot Controls (- 18271) ... 522
Hoses, Pattern Changer To Pilot Controls (18272 -) ... 524
Hoses, Pilot (Left Pilot Controller To Flow Regulator Manifold)(With Pattern Changer) (18272 -) ... 504
Hoses, Pilot (Left Pilot Controller To Pilot Shutoff Valve)(With Pattern Changer) (18272 -) ... 504
Hoses, Pilot (Pilot Shutoff Valve To Flow Regulator Valves) ... 508
Hoses, Pilot (Pilot Shutoff Valve To Hydraulic Oil Filter) ... 508
Hoses, Pilot (Travel Pilot Valve To Control Valve) ... 502
Hoses, Pilot Controller To Pilot Shutoff Solenoid Valve ... 500
Hoses, Pilot Controls To Pattern Changer (18272 -) ... 524
Hoses, Pilot Shutoff Solenoid Valve To Control Valve ... 500
Hoses, Pilot Shutoff Solenoid Valve To Pilot Controller ... 500
Hoses, Pilot, (Travel Pilot Valve To Pilot Shutoff Valve) ... 502
Hoses, Pilot, Controller Valve To Pilot Shutoff Solenoid (Right) (18272 -) ... 506
Hoses, Pilot, Flow Manifold Valve To Right Pilot Controller Valve (18272 -) ... 506
Hoses, Pilot; Flow Regulator Valve (18272 -) ... 498
Hoses, Pilot, Shutoff Solenoid To Controller Valve (Right) (18272 -) ... 506
Hoses, Radiator ... 126
Hoses, Right Pilot Controller Valve To Flow Manifold Valve (18272 -) ... 506
Hoses, Rotary Manifold To Control Valve ... 486
Hoses, Rotary Manifold To Control Valve - Left Travel ... 482
Hoses, Rotary Manifold To Control Valve - Right Travel ... 484
Hoses, Standard Arm, 1.62 m ... 402
Hoses, Suction, Hydraulic Pump To Oil Tank ... 466
Hoses, Suction, Oil Tank To Hydraulic Pump ... 466
Hoses, Swing Motor To Control Valve ... 480
Hoses, Two-Way Foot Pedal Control Kit ... 380
Housing, Air Cleaner ... 132
Housing, Blade Shuttle Valve Components ... 452
Housing, control valve ... 428
Housing, Control Valve Housing and Plugs ... 428
Housing, Cooling Water System ... 106
Housing, Engine Cooling System ... 128
Housing, Exhaust Manifold ... 96
Housing, Filter Housing, Fuel Line ... 114
Housing, Filter Housing, Fuel System Hoses ... 142
Housing, Flywheel ... 90
Housing, Hydraulic Oil Reservoir ... 338, 534
Housing, Hydraulic Pump Rotating Group (2 of 2) ... 332, 422
Housing, Intake Manifold ... 94
Housing, Left Rearview Mirror ... 316
Housing, Pilot Pump ... 334, 424
Housing, Pilot Shutoff Solenoid Valve Components ... 454
Housing, Pilot Shutoff Valve ... 454
Housing, Rotary Manifold Components (With Blade) ... 568
Housing, Rotary Valve Components ... 444
Housing, Solenoid Valve Components, Auxiliary Function Lever ... 462
Housing, Solenoid Valve Manifold Components ... 450
Housing, Swing Motor Components ... 562

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Key	Part No.	Part Name	Qty.	Serial No.	Remarks
0	AT315315	Carrier Roller	2		SUB FOR 9153288
0C	TH100452	Seal	1		SUB FOR 4176379
0D	4175765	Cap	1		
0E	19M7647	Screw	2		M8 X 16, SUB FOR M340816 AND AT217709
0F	3076620	Cover	1		
0G	94-2010	Fitting Plug	1		
1	19M9172	Cap Screw	2		M14 X 70, SUB FOR J901470 AND P65872
2	J222014	Washer	2		
3	AT315315	Carrier Roller	1		SUB FOR 9153329
3A	.....	Roller	1		3076621 NLA
3B	4175763	Bushing	1		
4	.....	Shaft	1		9153330 NLA
4A	4372840	Bushing	1		
4B	4372847	Shaft	1		

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Crankshaft And Piston
Vilebrequin et piston
Cigüeñal y pistón

TX1128604 A.1

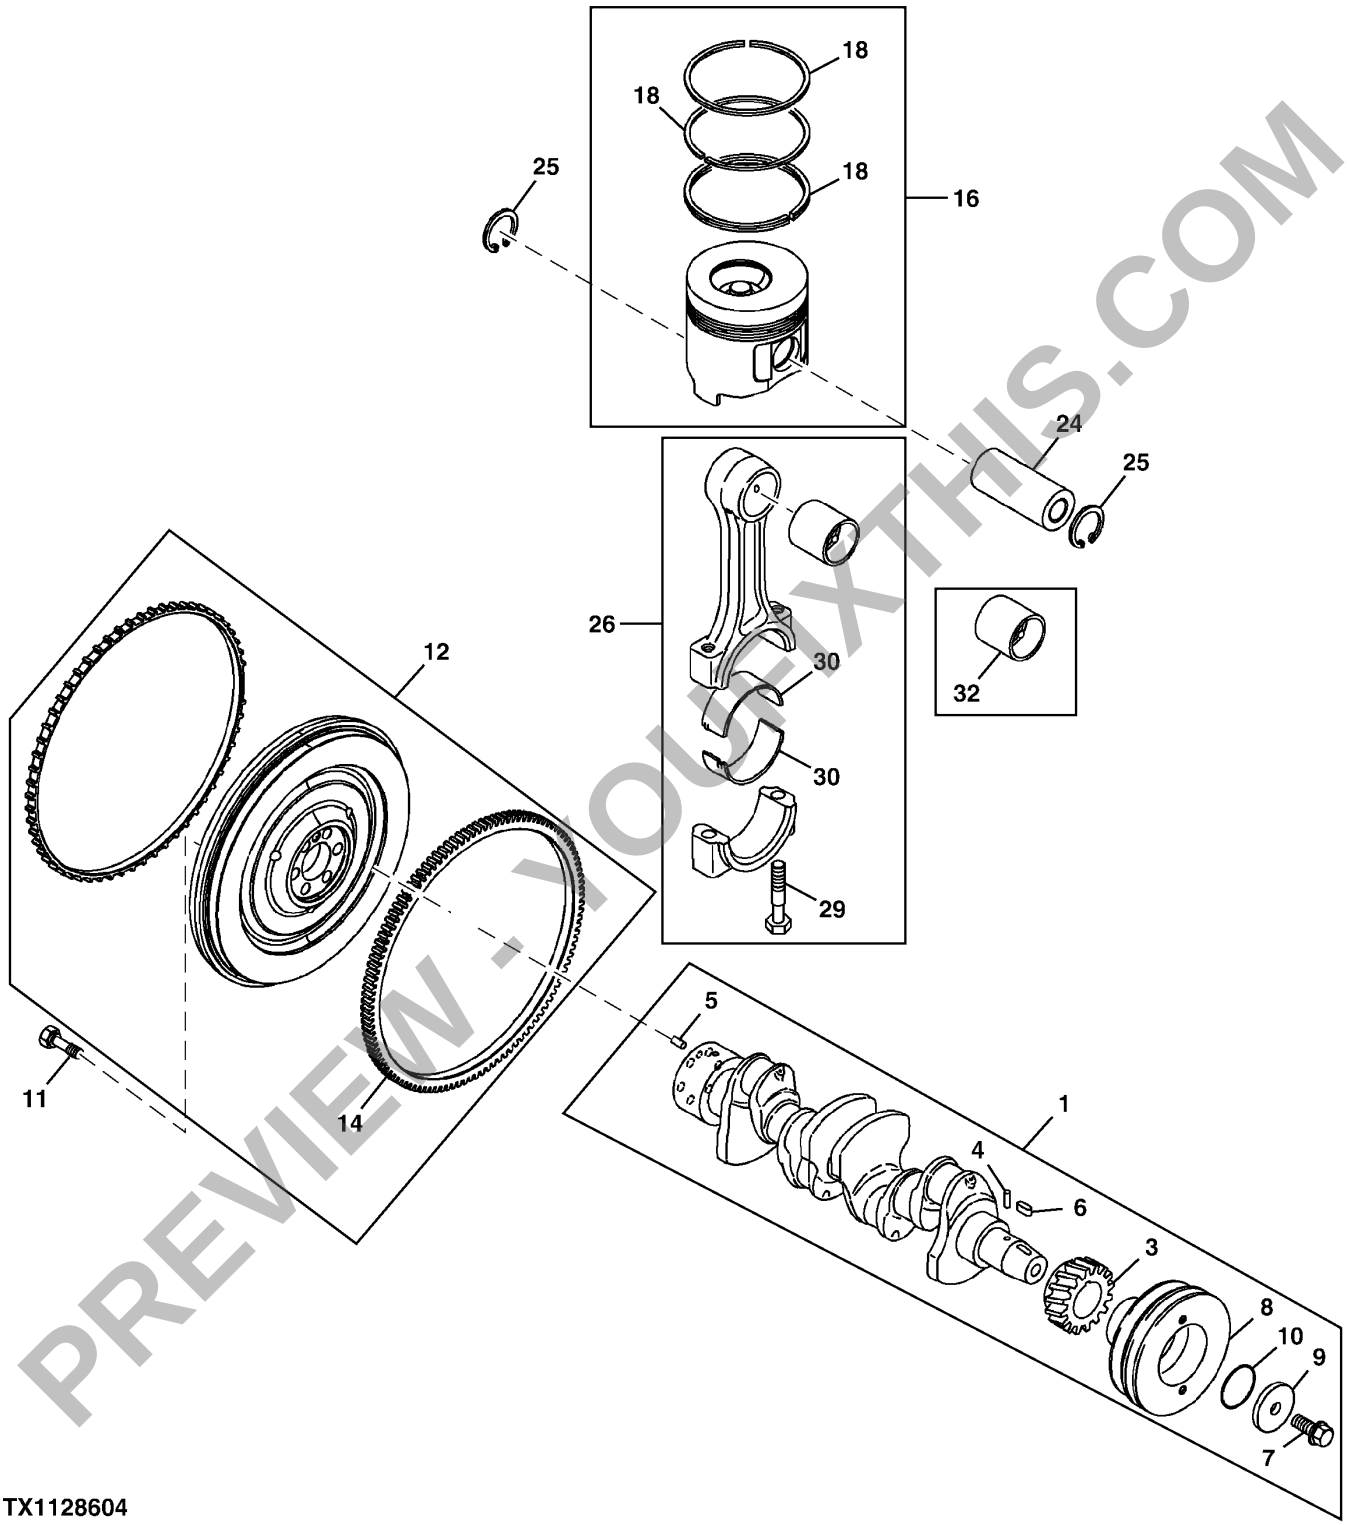

TX1128604

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Key	Part No.	Part Name	Qty.	Serial No.	Remarks
0	FYD00001752	Pipe	1		
1	4620562	Clamp	1		
2	19M7742	Cap Screw	1		M10 X 65, SUB FOR J901065
3	14M7274	Nut	1		M10, SUB FOR J950010
4	12M7066	Lock Washer	1		10 mm, SUB FOR A590910
5	24M7028	Washer	2		10.500 X 20 X 2 mm, SUB FOR A590110
10	FYD40003090	Cover	1		SUB FOR FYD40001301
11	FYD40001212	Pipe	1		
12	19M7402	Cap Screw	4		M10 X 25, J281025 NLA, SUB FOR J901025
	4486055	Washer	4		
13	19M7402	Cap Screw	7		M10 X 25, J271025 NLA, SUB FOR J901025
	24M7346	Washer	7		11 X 20 X 2 mm, SUB FOR J222010
14	19M7662	Cap Screw	2		M10 X 30, J281030 NLA, SUB FOR J901030
	4486055	Washer	2		
16	19M7938	Cap Screw	4		M10 X 20, J271020 NLA, SUB FOR J901020
	24M7346	Washer	4		11 X 20 X 2 mm, SUB FOR J222010
17	FYD40002148	Pipe	1		
18	.....	Bracket	1		FYD00000775 NLA, ORDER FYD00011058
	FYD00011058	Bracket	1		
19	FYD40002149	Bracket	1		
20	FYD00000791	Bracket	1		
27	FYD00005849	Seal	1		
28	4692079	Isolator	1		
30	FYD00002151	Seal	1		
31	FYD00006030	Seal	1		
32	FYD00006031	Seal	1		
34	FYD00006402	Pad	1		
35	FYD00006403	Pad	1		
36	FYD00003839	Clip	6		

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Rotating Beacon Wiring Harness and Switch
Faisceau de fils et interrupteur de gyrophare
Grupo de cables de proyector giratorio y conmutador

TX1133490 A.1

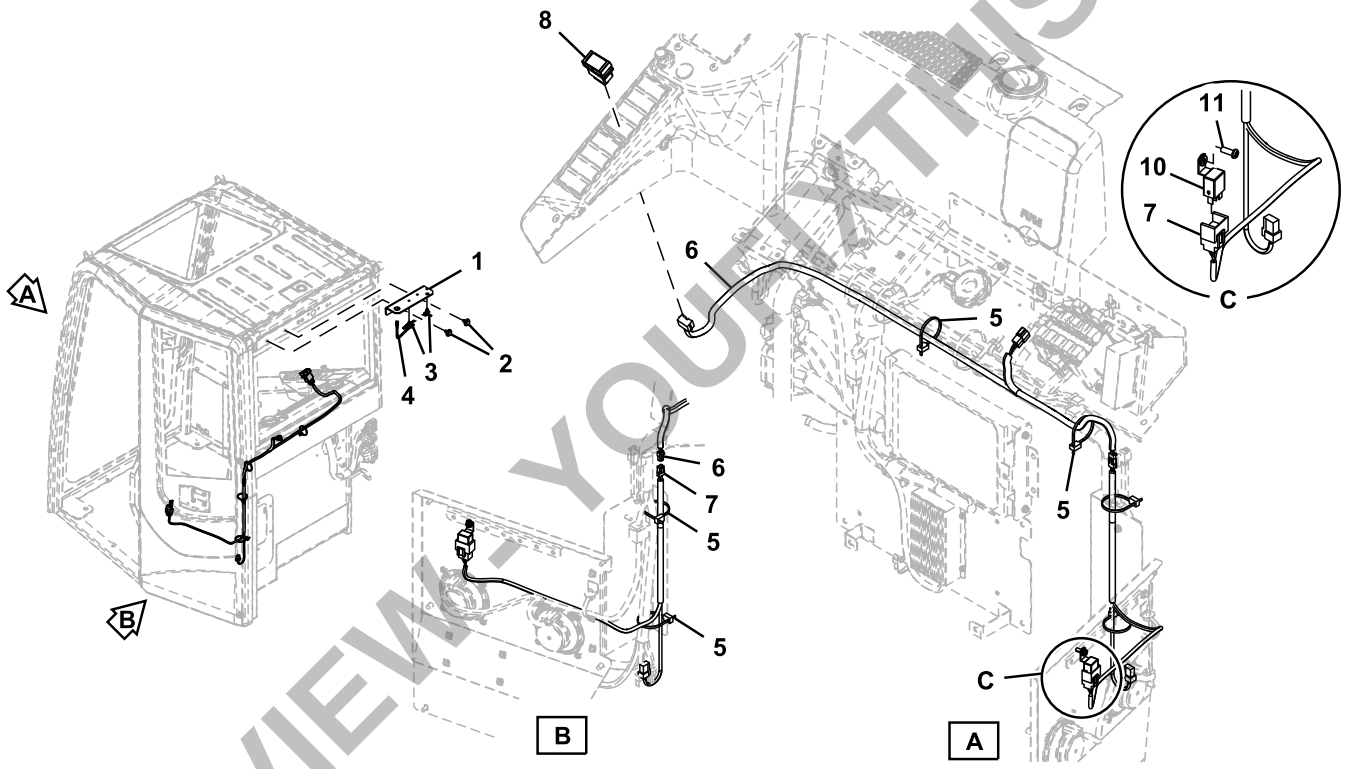


TX1133490

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Pump Control Unit
Contrôleur de la pompe
Unidad de control de bomba

TX1133884 B.1

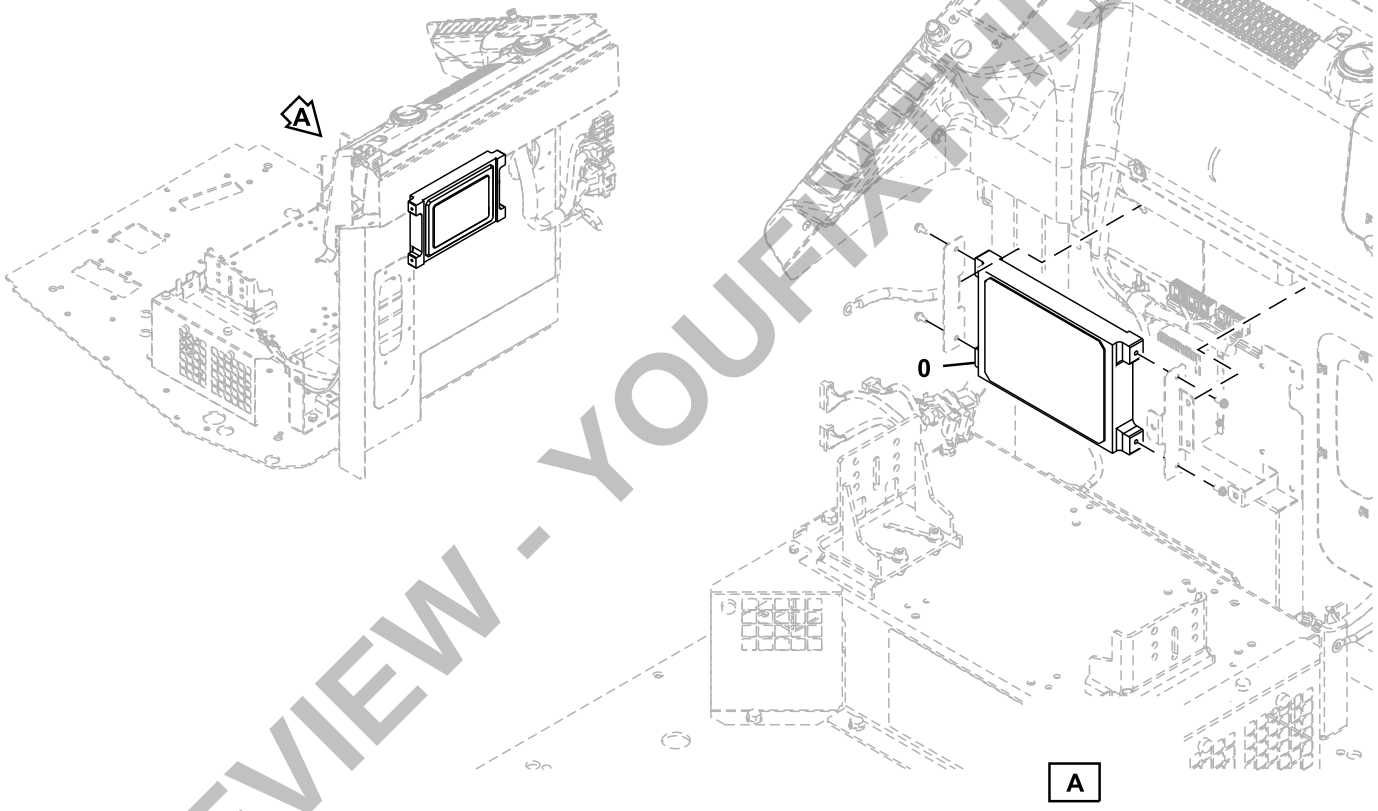


TX1133884

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Cab
Cabine
Cabina

TX1134983 A.1

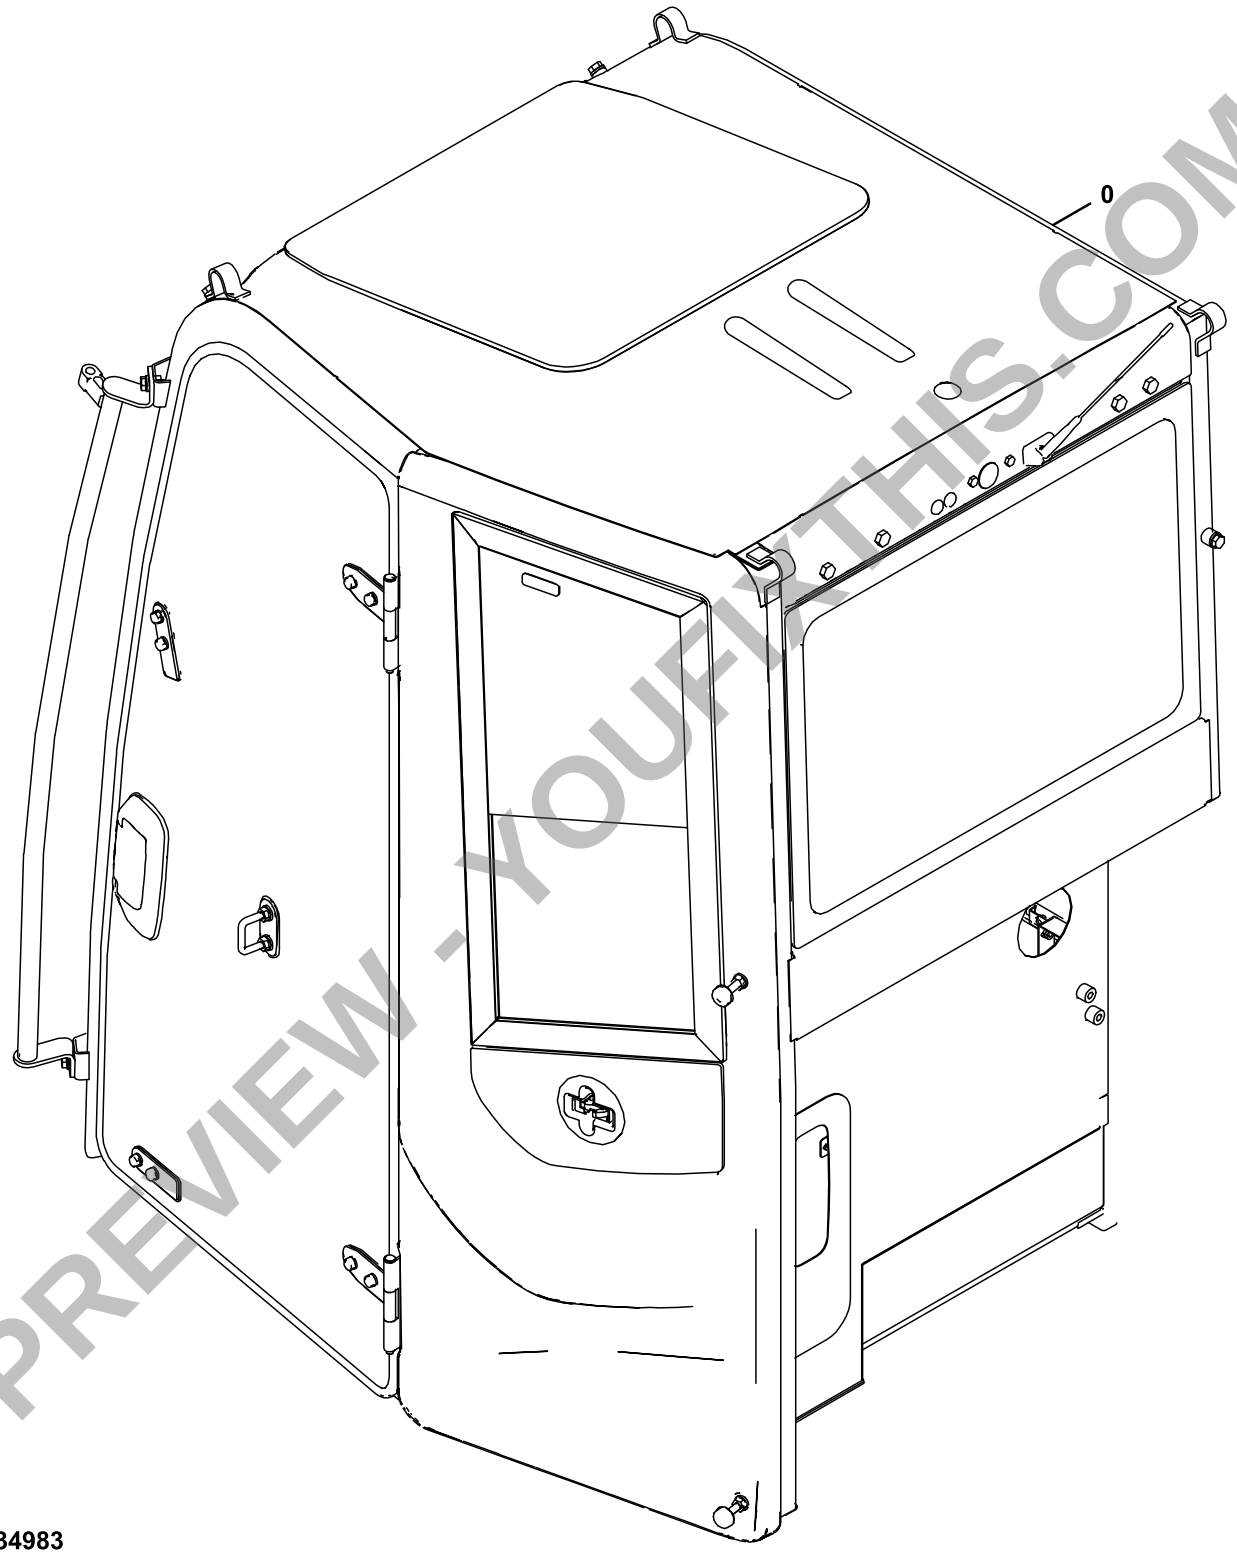


TX1134983

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Foot Rest
Repose-pieds
Apoyapies

TX1133092 A.1

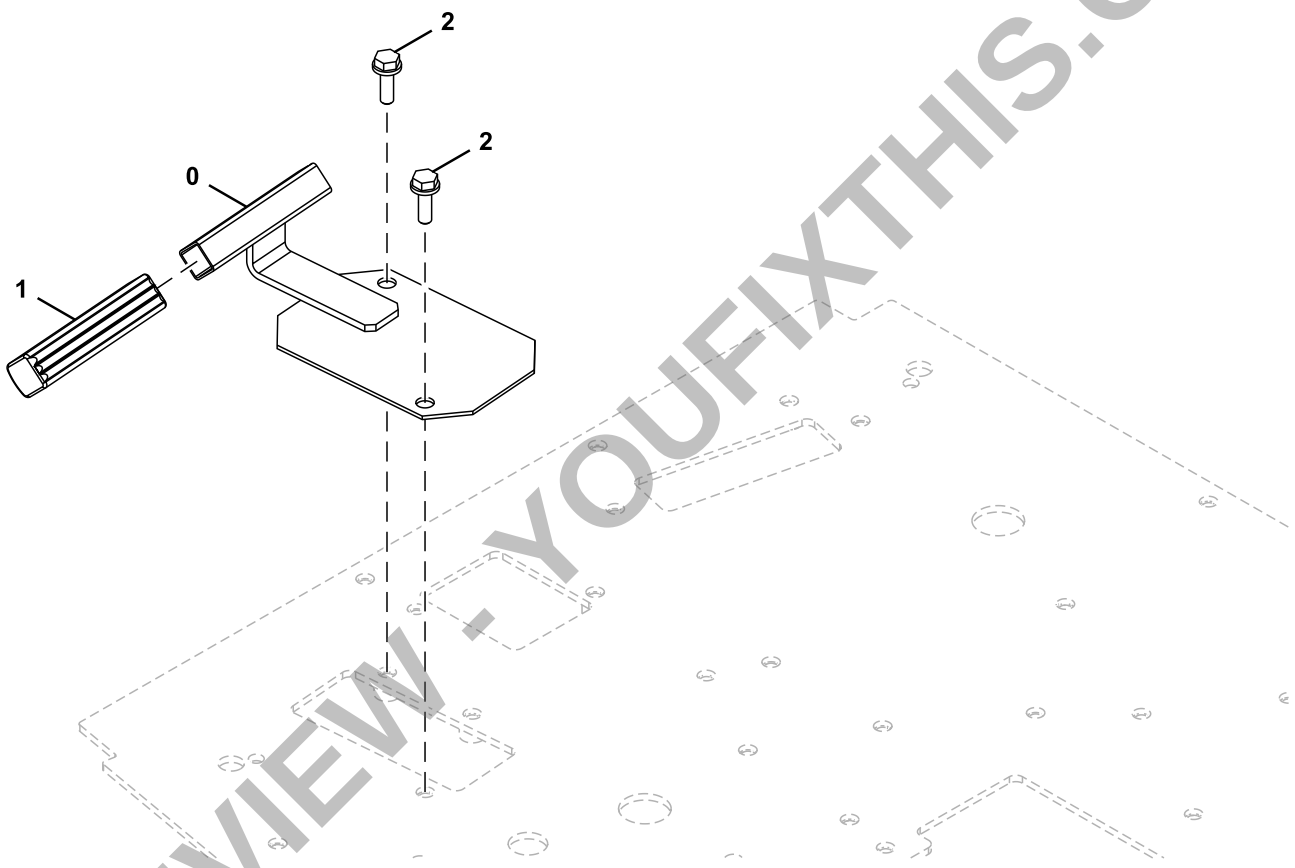


TX1133092

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Cooling Package and Hydraulic Pump Compartment Doors
Portes de compartiments d'ensemble de refroidissement et de pompe hydraulique
Conjunto de enfriamiento y puertas de compartimiento de bomba hidráulica

TX1134820 A.1

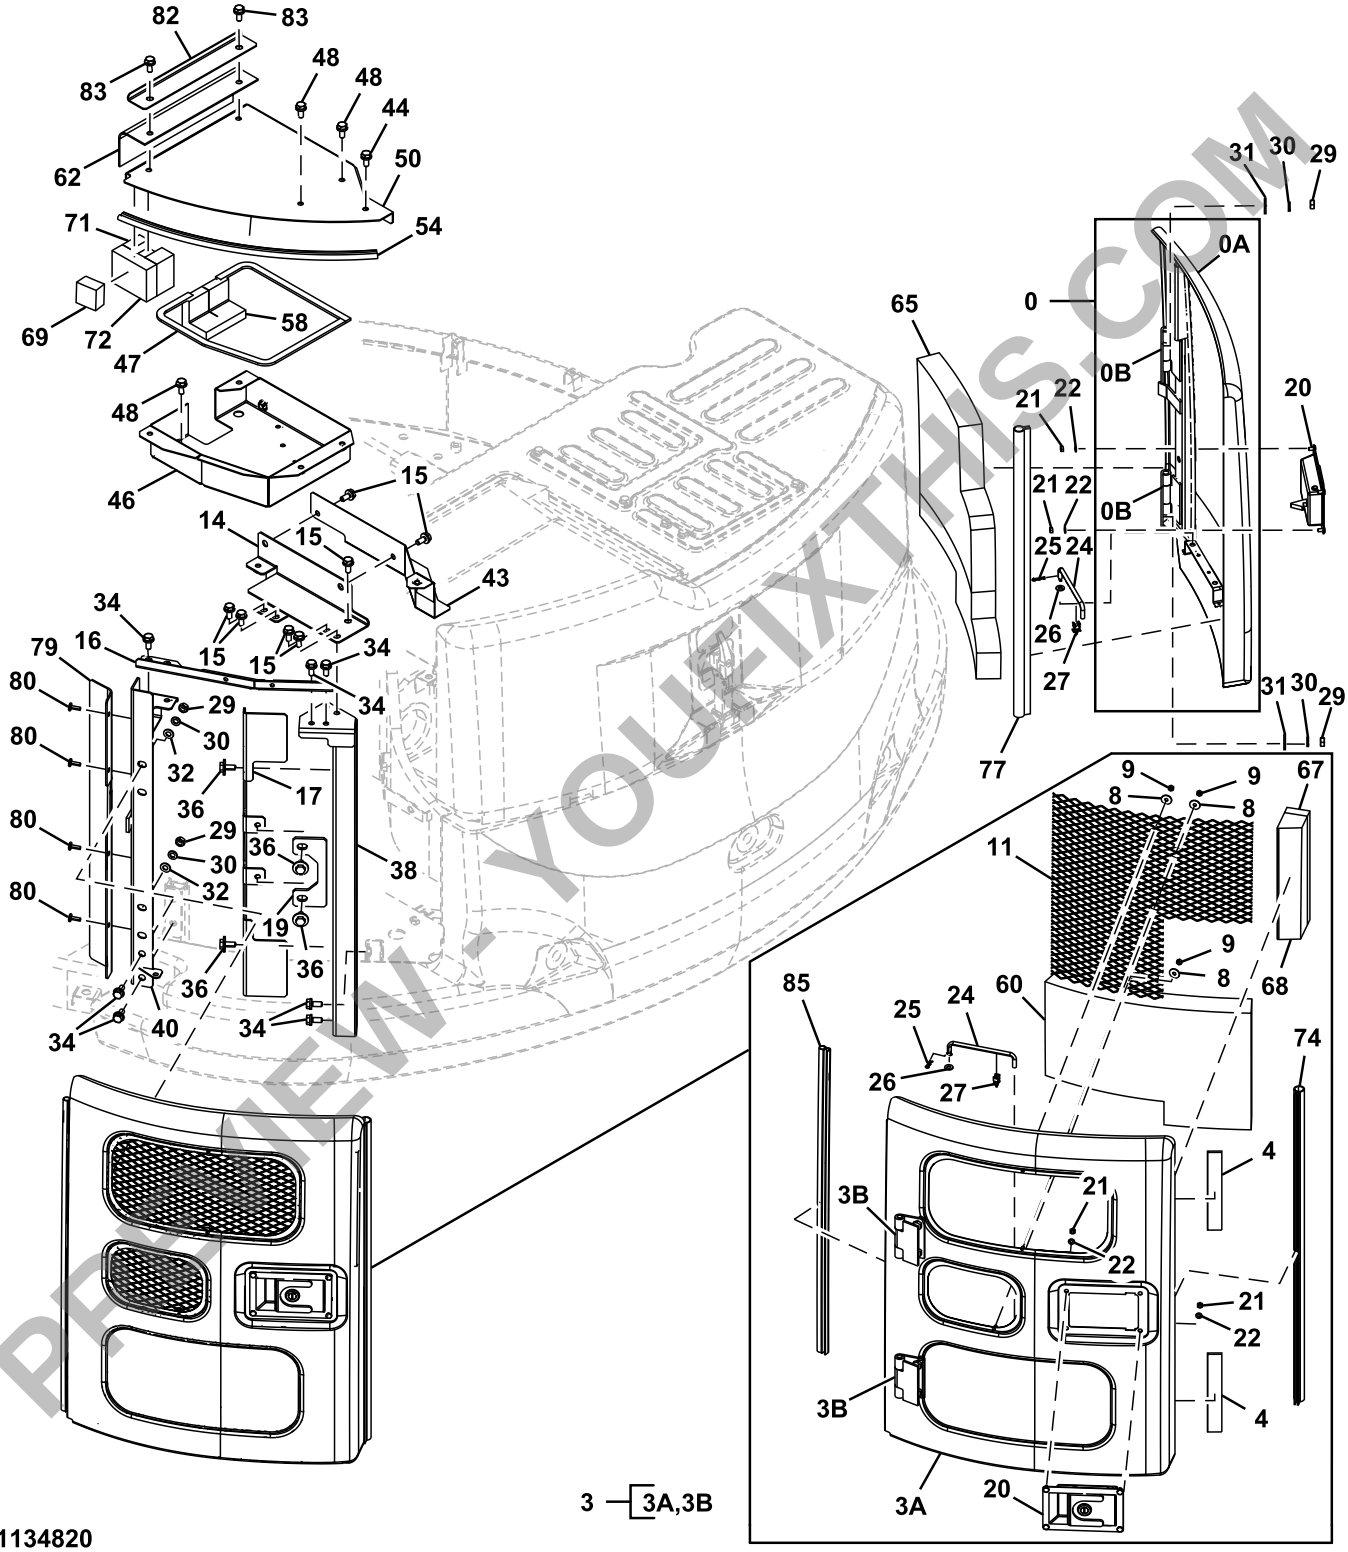

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Key	Part No.	Part Name	Qty.	Serial No.	Remarks
0	FYD00002228	Pump	1		Additional Components On Separate Page
2	957366	O-Ring	1		
3	1184408	Shaft	1		
4	4694758	Pump	1		Components On Seperate Page
5	4506408	O-Ring	2		
6	4506418	O-Ring	1		
7	1250814	Packing	1		
8	40M1828	Snap Ring	1		SUB FOR 942517
9	FXB00001133	Pin	3		
10	0175241	Pin Fastener	1		SUB FOR 0195134
11	1184402	Piston	1		
13	1250801	Cylinder	1		
13A	1250818	Cylinder Block	1		
13B	1250806	Plate	1		
14	19M9163	Screw	1		M12 X 40, SUB FOR J781240
16	1250803	Plug	1		
16A	1250810	Rod	1		
16B	1250813	Plug	1		
16C	4073426	O-Ring	1		
16D	970860	O-Ring	1		
16E	FXB00001241	Nut	1		
16F	1250815	Screw	1		
17	1250809	Spring	1		
18	1250811	Spring	1		
19	1250812	Spring	1		
23	1184409	Bearing	1		
24	1184410	Bearing	1		
27	1184411	Spacer	1		
30	1250802	Plate	1		
30A	.....	Swash Plate	1		NLA
30B	0934502	Plug	2		SUB FOR 0263019
30C	.....	Rod	1		NLA
30D	.....	Pin	1		NLA
30E	40M7202	Snap Ring	1		SUB FOR 991336
31	.....	Label	1		NLA
32	0625509	Cap Screw	2		
40	1184416	Bolt	6		
50	1250807	Case	1		
51	1250804	Support	1		
53	1184412	Plate	1		
55	1250808	Pin	1		
56	1184413	Bushing	1		
57	0818511	Spring	6		
67	0719101	Fitting Plug	1		
68	0998702	Plug	1		
72	FXB00005099	Housing	1		
97	FXB00000799	Plug	1		

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Ditching Bucket, 91.44 cm (36 in), 0.38 m³ (0.49 yd³)
Benne sans dents, 91,44 cm (36 in) 0,38 m³ (0.49 yd³)
Cucharón para zanjas, 91,44 cm (36 in), 0,38 m³ (0.49 yd³)

TX1272325 A.1

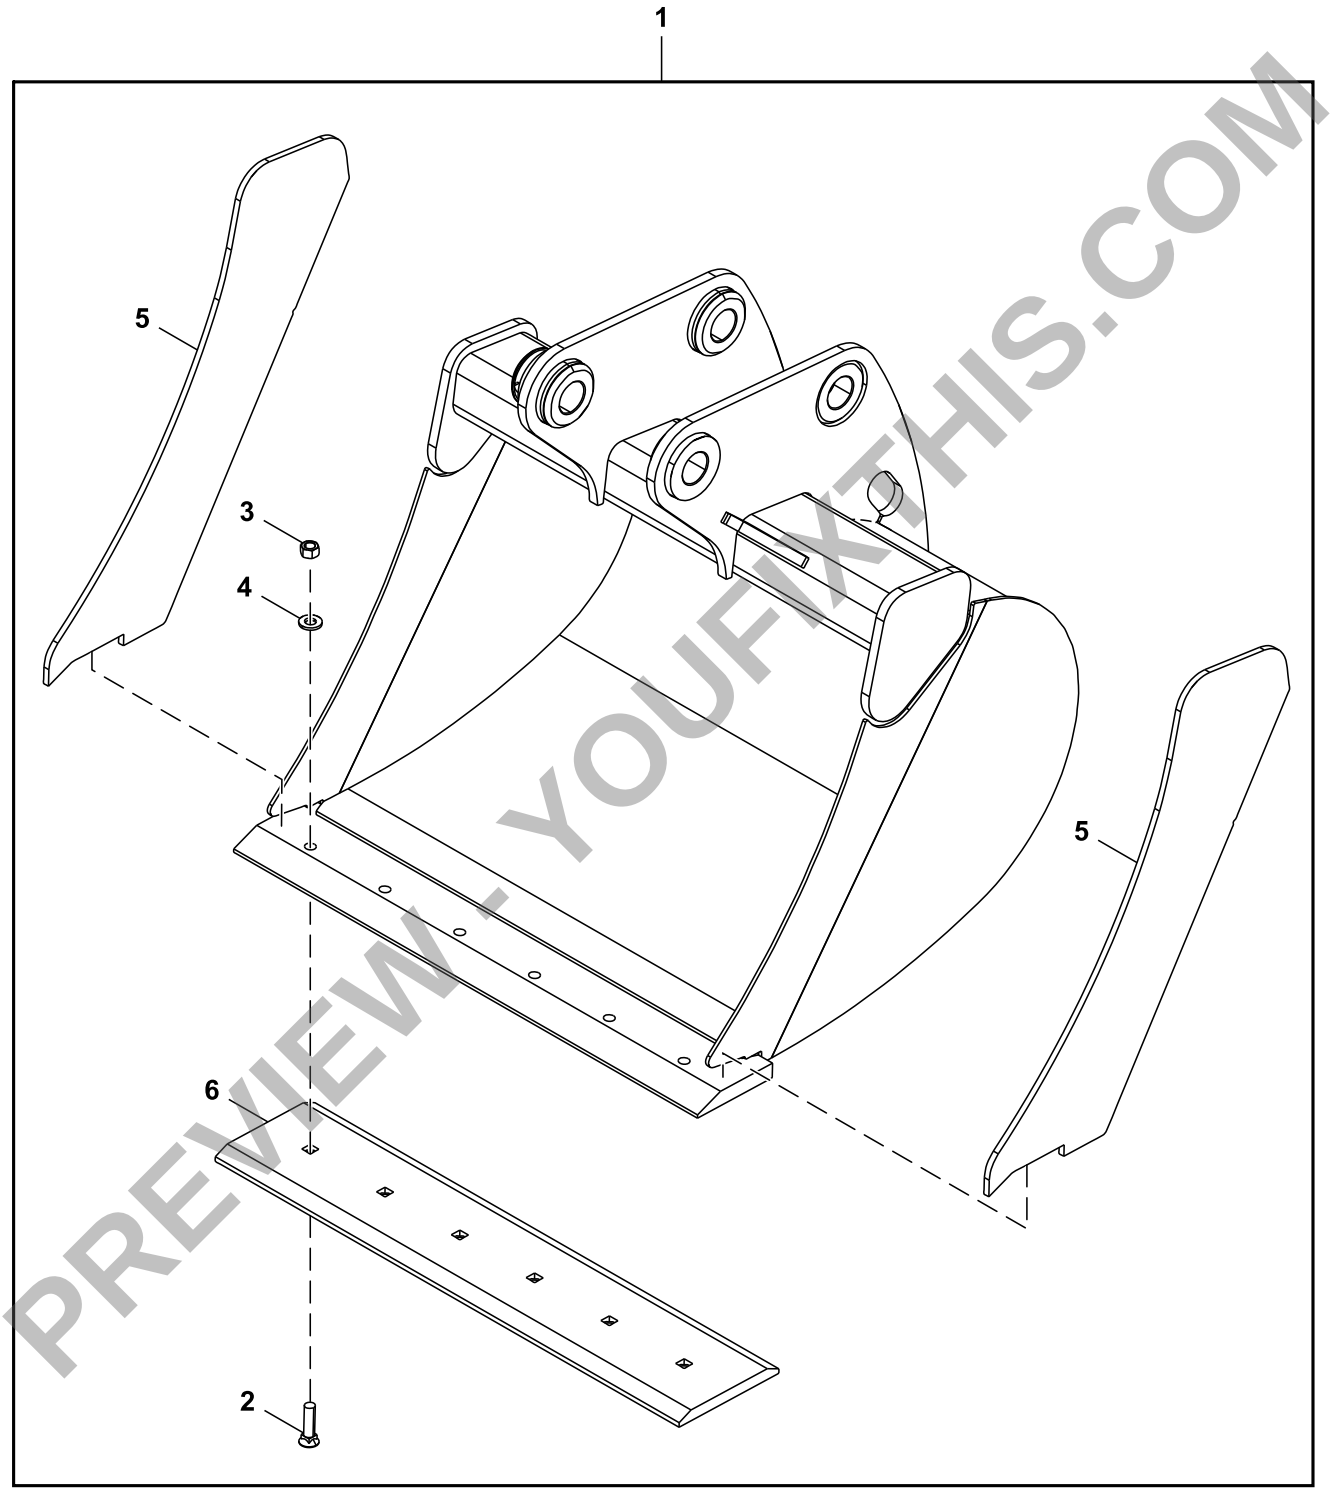

BYT11024_TX1272325

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Key	Part No.	Part Name	Qty.	Serial No.	Remarks
0	4189859	Clamp	3		
1	4141806	Clamp	8		
2	4190125	Clamp	2		
3	19M7363	Cap Screw	11		M12 X 60, J271260 NLA, SUB FOR J901260
	24M7345	Washer	11		13.500 X 24 X 2.500 mm, SUB FOR J222012
4	19M7361	Cap Screw	2		M12 X 50, J271250 NLA, SUB FOR J901250
	24M7345	Washer	2		13.500 X 24 X 2.500 mm, SUB FOR J222012
90	**AT434128**	**Field Installation Kit**	**1**		**Whole Goods, Additional Components on Seperate Page**

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Control Valve Spools (3 Spool Side)
Tiroirs de distributeur (côté à 3 tiroirs)
Carretes de válvula de control (lado de 3 carretes)

TX1135050 B.1

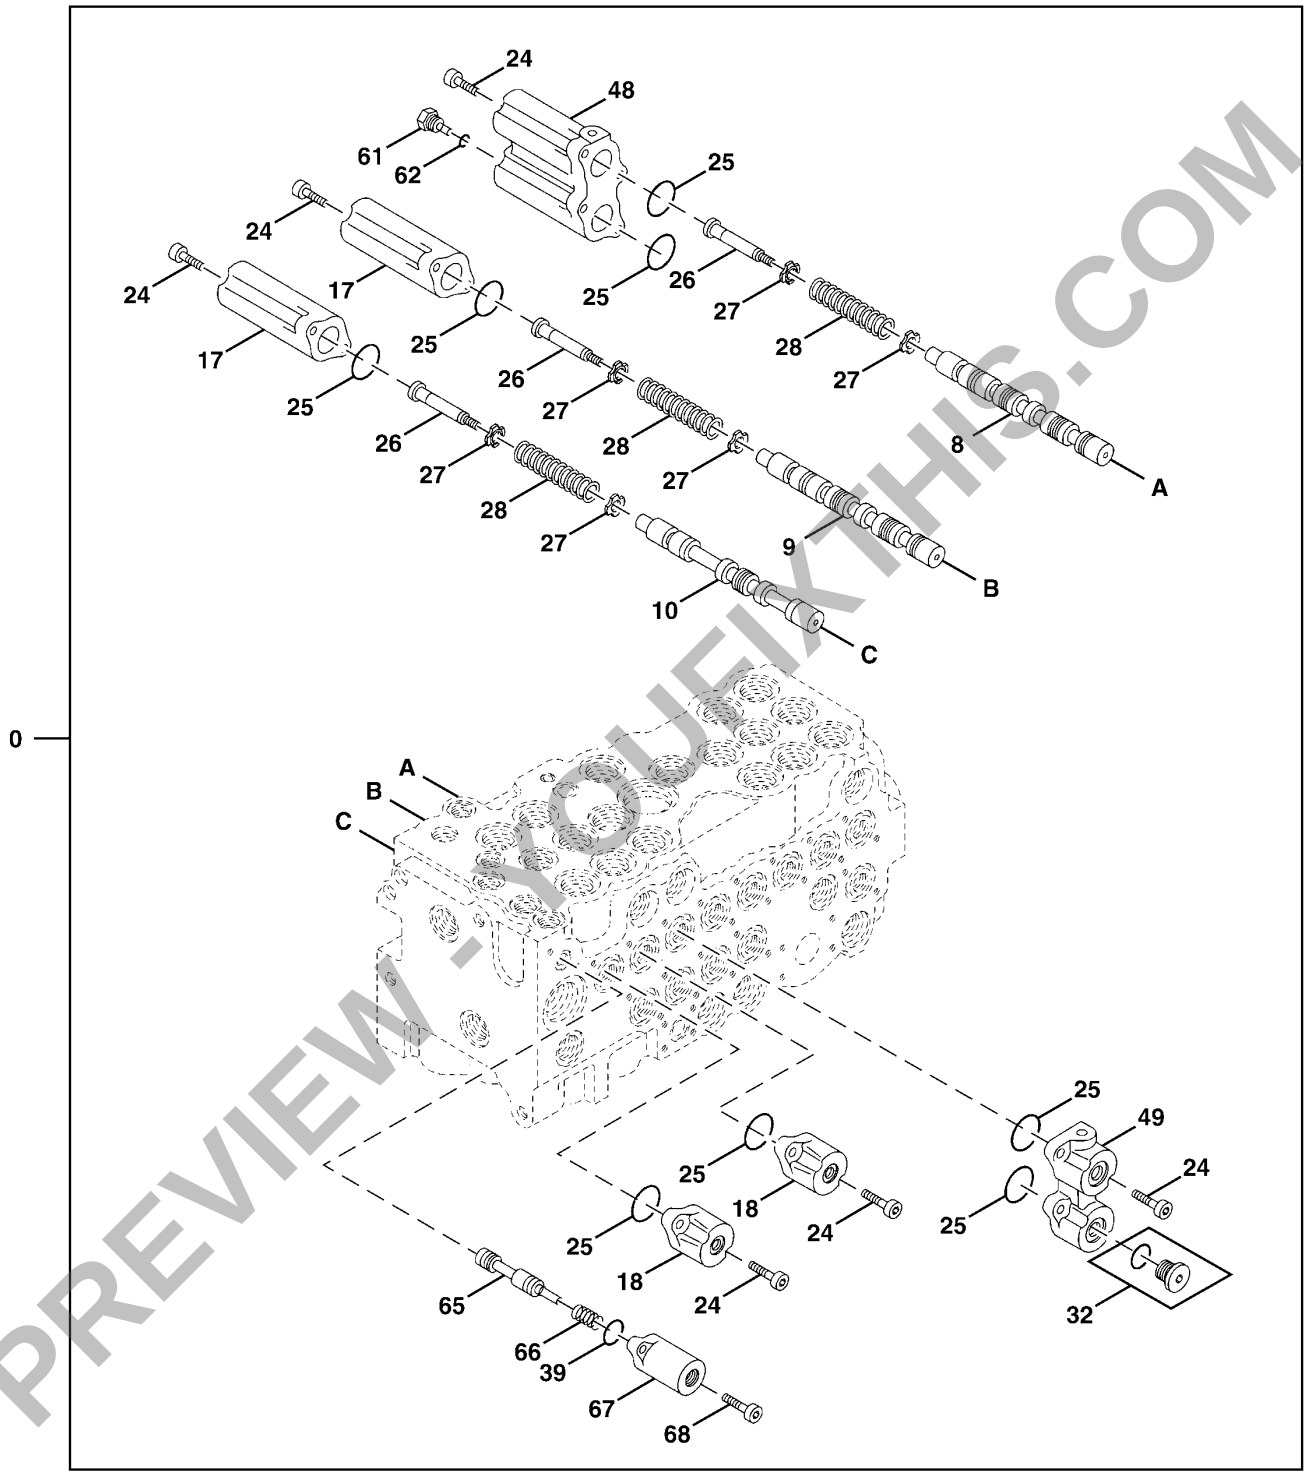

TX1135050

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Key	Part No.	Part Name	Qty.	Serial No.	Remarks
0	**.....**	**Field Installation Kit**	**1**		**AT447836 NLA, Order Components, Whole Goods**
1	AT180585	Solenoid Valve	1		
2	T202379	Strap	2		
3	19M7529	Cap Screw	2		M6 X 55
4	24M7054	Washer	2		6.400 X 12 X 1.600 mm, SUB FOR A590106
5	14M7303	Flange Nut	2		M6
8	H75414	Adapter Fitting	1		
9	AH89069	Elbow Fitting	1		
10	A852132	Adapter Fitting	2		
11	R26448	O-Ring	4		
14	AT356252	Hydraulic Hose	1		
15	4247365-S	Hydraulic Hose	1		SUB FOR 4317872
16	4645516	Hose	1		
18	A852222	Union Fitting	1		
21	AE45056	Tee Fitting	2		
22	AT356251	Hydraulic Hose	1		
23	AT331104	Wiring Harness	1		Solenoid Valve
24	4154670	Elbow Fitting	1		SUB FOR A852322
25	AH75160	Elbow Fitting	1		

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Flow Regulator Valve Pilot Lines (18272 -)
Conduites pilotes de régulateur de débit (18272 -)
Líneas piloto de válvula reguladora de caudal (18272 -)

TX1134266 A.1

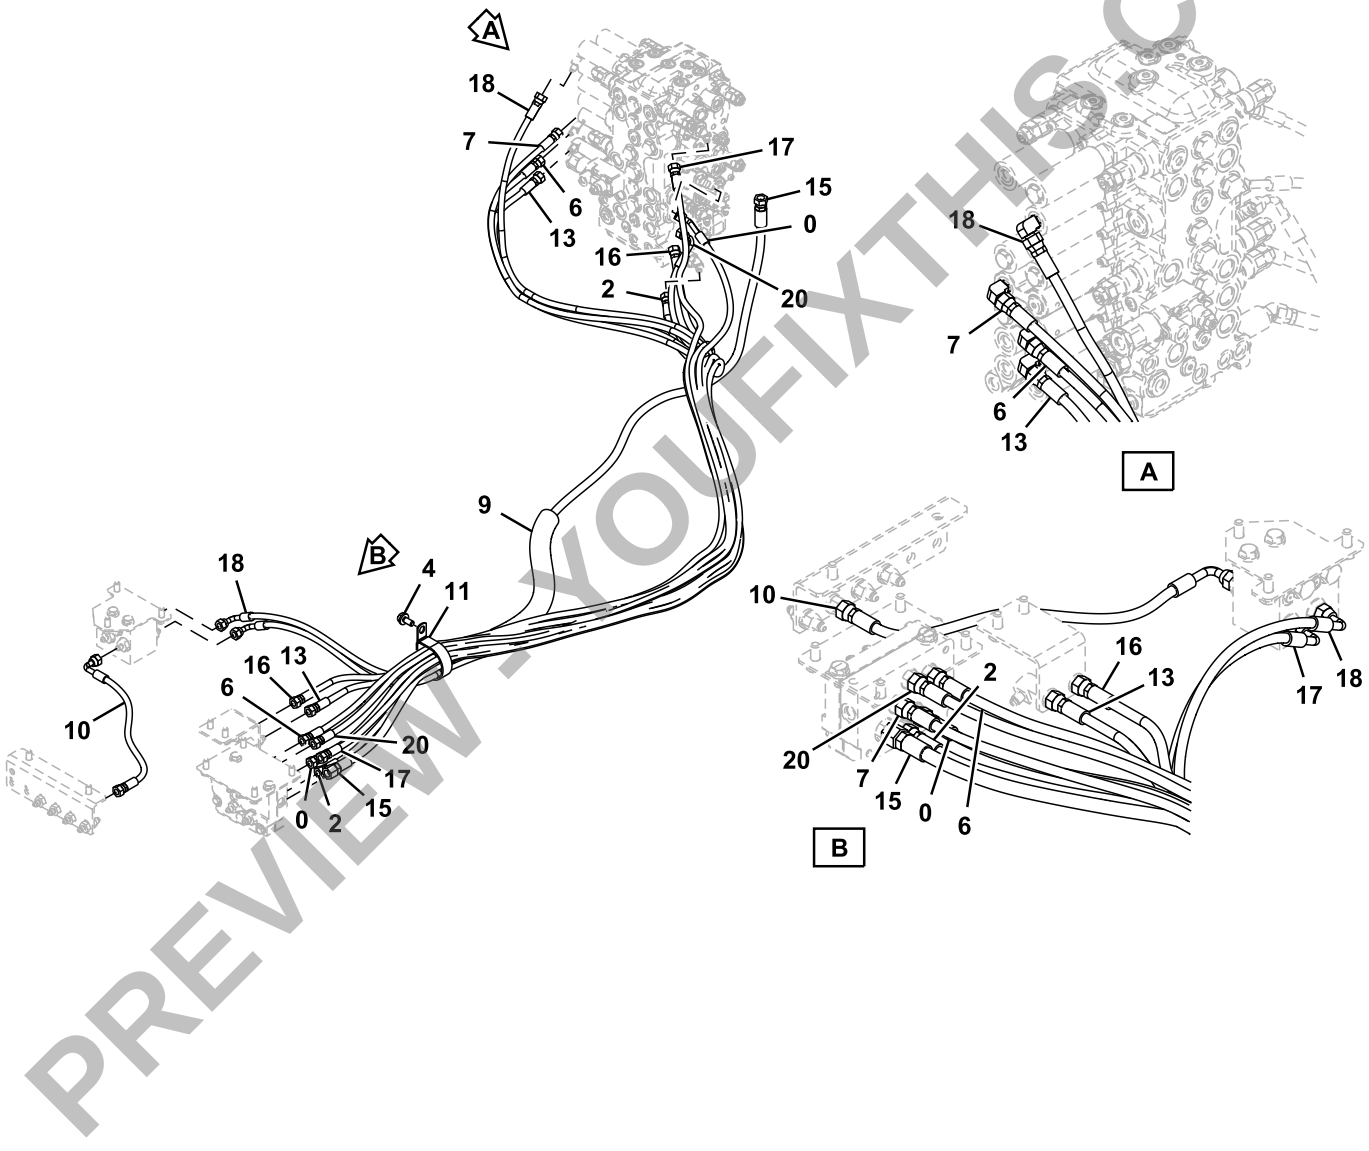

TX1134266

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Key	Part No.	Part Name	Qty.	Serial No.	Remarks
1	9757585G	Pipe	2		SUB FOR 9757585
2	A853188	Adapter Fitting	2		
	TH101926	O-Ring	1		SUB FOR 4506429
3	4447675	Flow Control Hyd. Valve	2		
5	T76938	O-Ring	2		SUB FOR 4187328
8	4463558	Hydraulic Hose	2		
9	T77858	O-Ring	4		SUB FOR 4187308
12	4190126	Clamp	2		
13	.....	Screw With Washer	2		J271260 NLA
	19M7363	Cap Screw	2		M12 X 60, SUB FOR J901260
	24M7345	Washer	2		13.500 X 24 X 2.500 mm, SUB FOR J222012
15	A885008	Pipe Plug	2		SUB FOR 4113926
	TH101926	O-Ring	1		SUB FOR 4506429
20	.....	Screw With Washer	4		J271080 NLA
	19M8081	Cap Screw	4		M10 X 80, SUB FOR J901080
	24M7346	Washer	4		11 X 20 X 2 mm, SUB FOR J222010
30	9763817	Weld Nut	2		
31	4434246	Bracket	2		
90	**AT436726**	**Field Installation Kit**	**1**		**Whole Goods, High Flow, 2.12m Arm**

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Swing Motor Mounting
Support du moteur de pivotement
Montaje de motor de giro

TX1134723 A.1

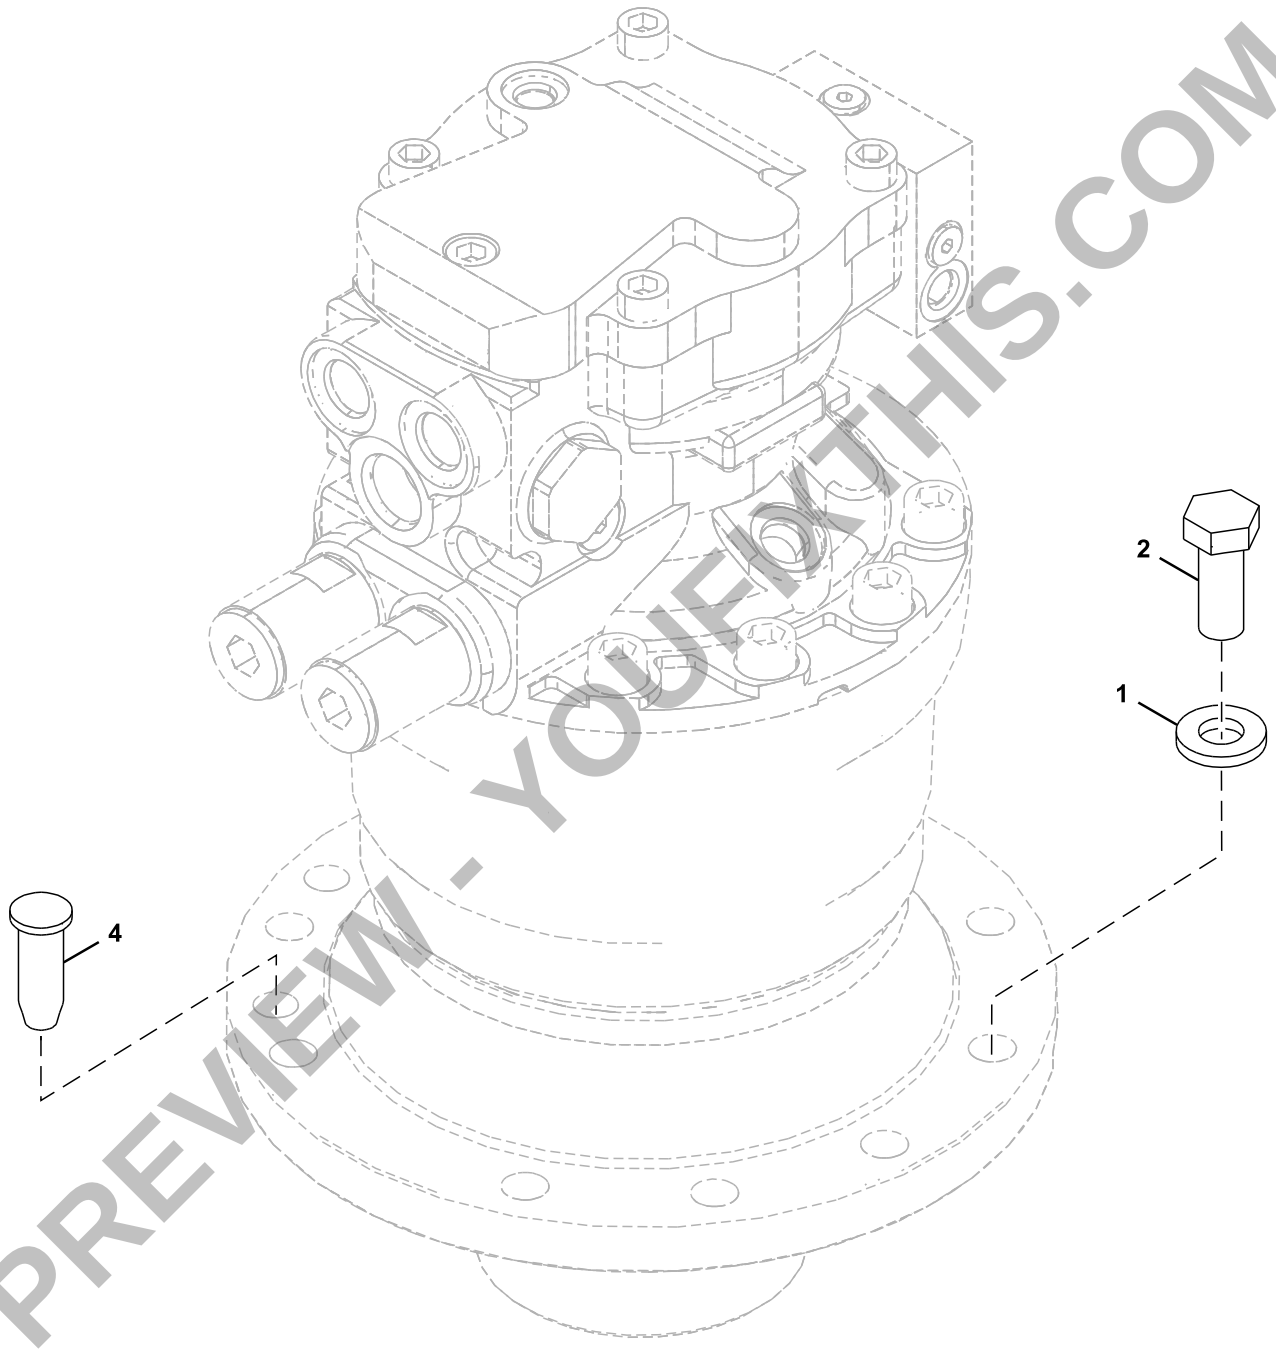

TX1134723

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 25 of 600 pages

The full manual includes:

- All 600 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

John Deere 85G Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual