

FRONT CHASSIS GROUP

SYM-BOL	PART NUMBER	PART NAME	UNIT Q,TY	SERIAL (A) - (B)	REMARKS N P D	(A) (B)	(C) (D)	REMARK
1A	34256-23160	CHASSIS ASSY,FRONT	1	5001 -		Y01		34258-22440
16A	41621-20340	BOSS	3	5001 -		01		WELDING
17A	41621-20320	BOSS	2	5001 -		01		WELDING
21A	40410-24770	FENDER	1	5001 - 5130				FR LH
21B	40410-26920	FENDER	1	5131 -	B			FR LH
22A	40410-24780	FENDER	1	5001 - 5130				FR RH
22B	40410-26930	FENDER	1	5131 -	B			FR RH
51A	61802-12020	BOLT,FLANGED	6	5001 -				

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

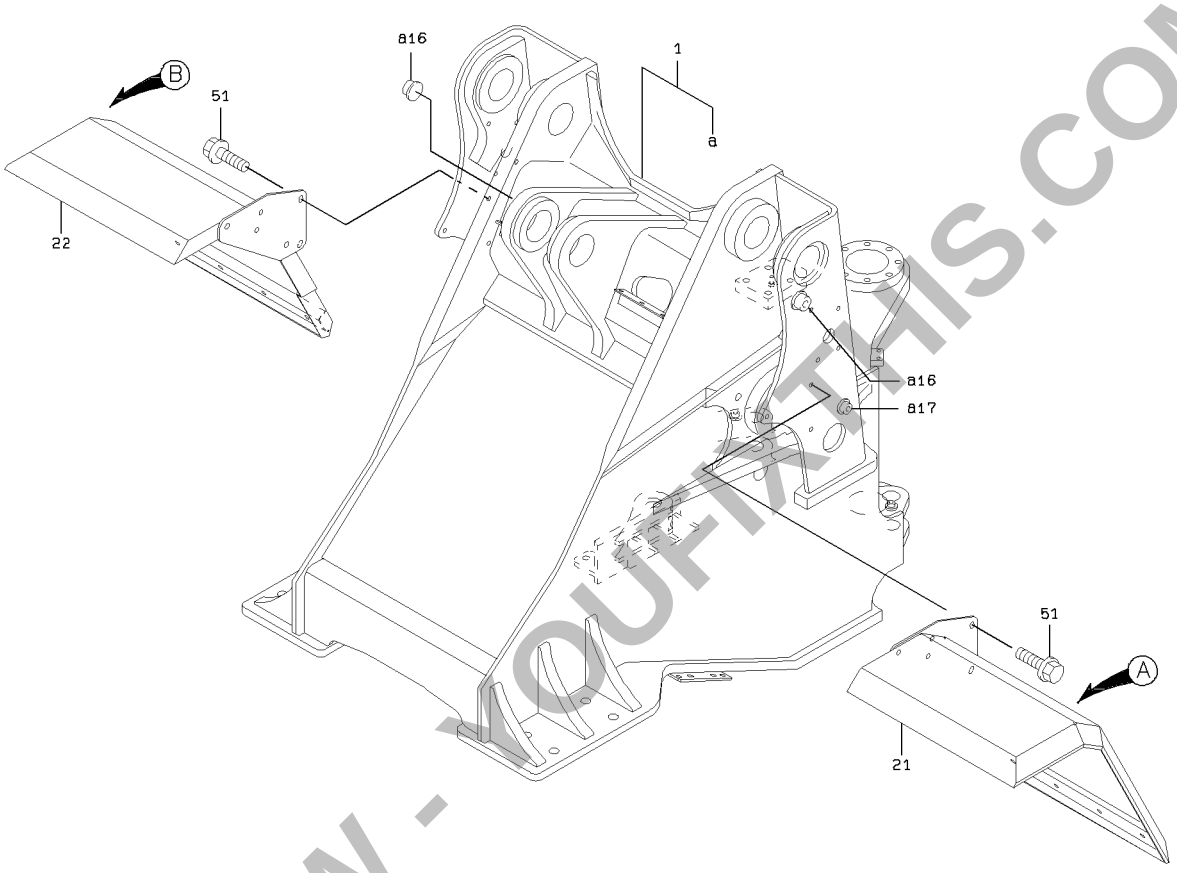


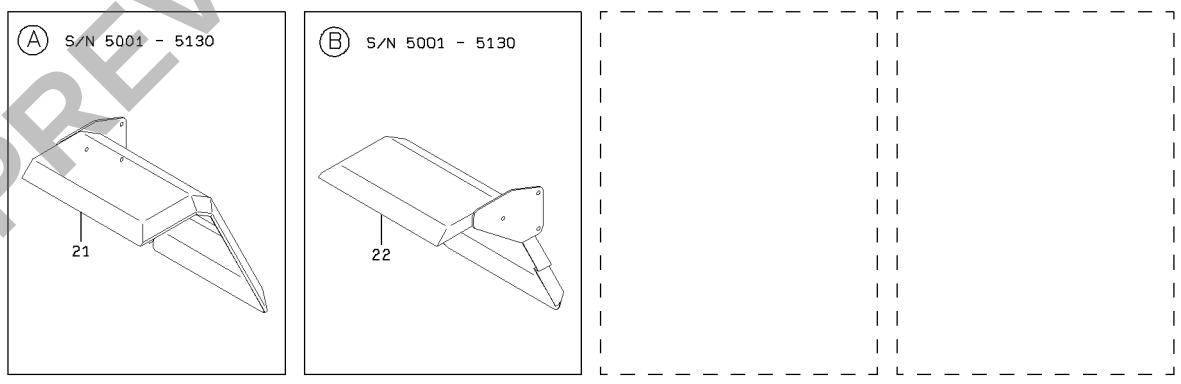


1-A

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

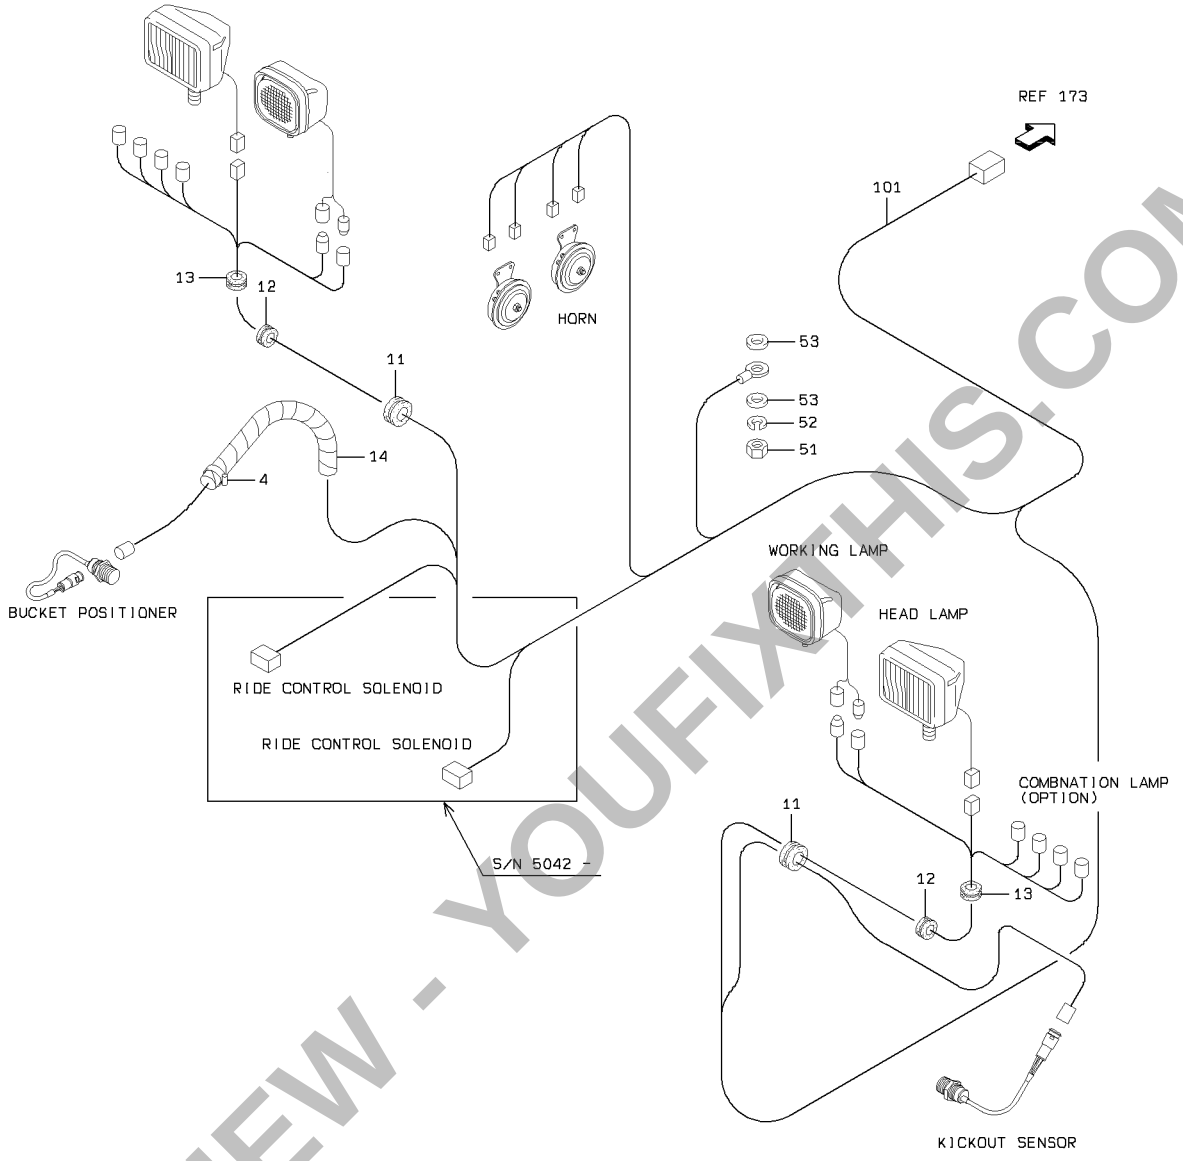

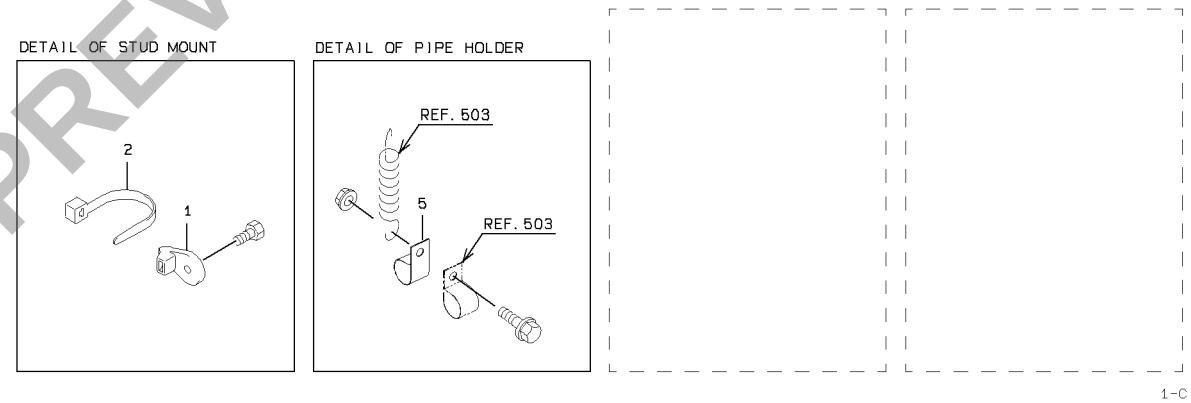


1-C

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

LOADING HYDRAULIC LINE - FRONT CHASSIS

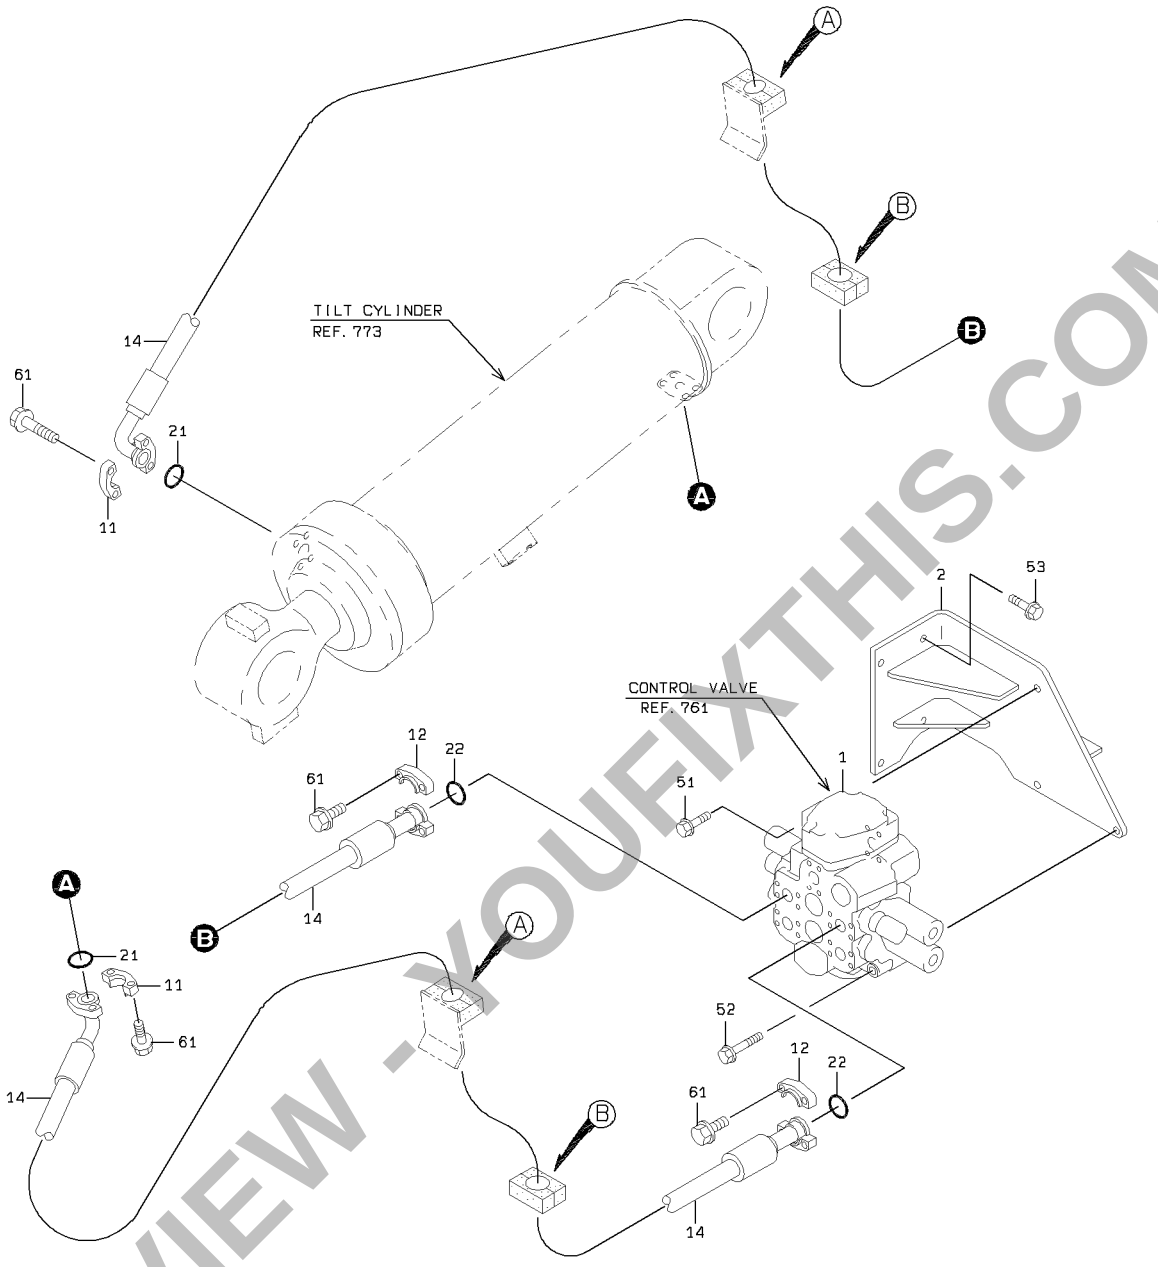


1-A

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


(NOTE):SERIAL NUMBER INDICATES THE TRANSMISSION SERIAL NUMBER.

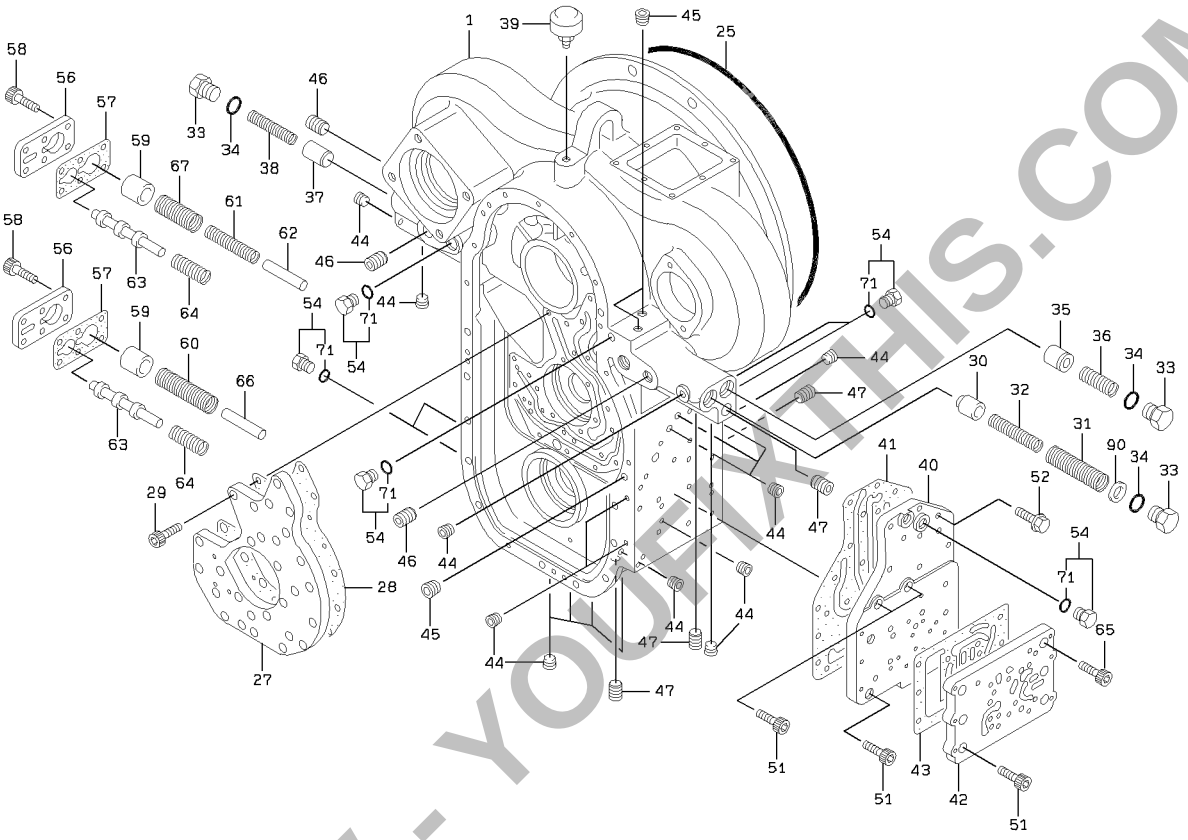

1-A

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

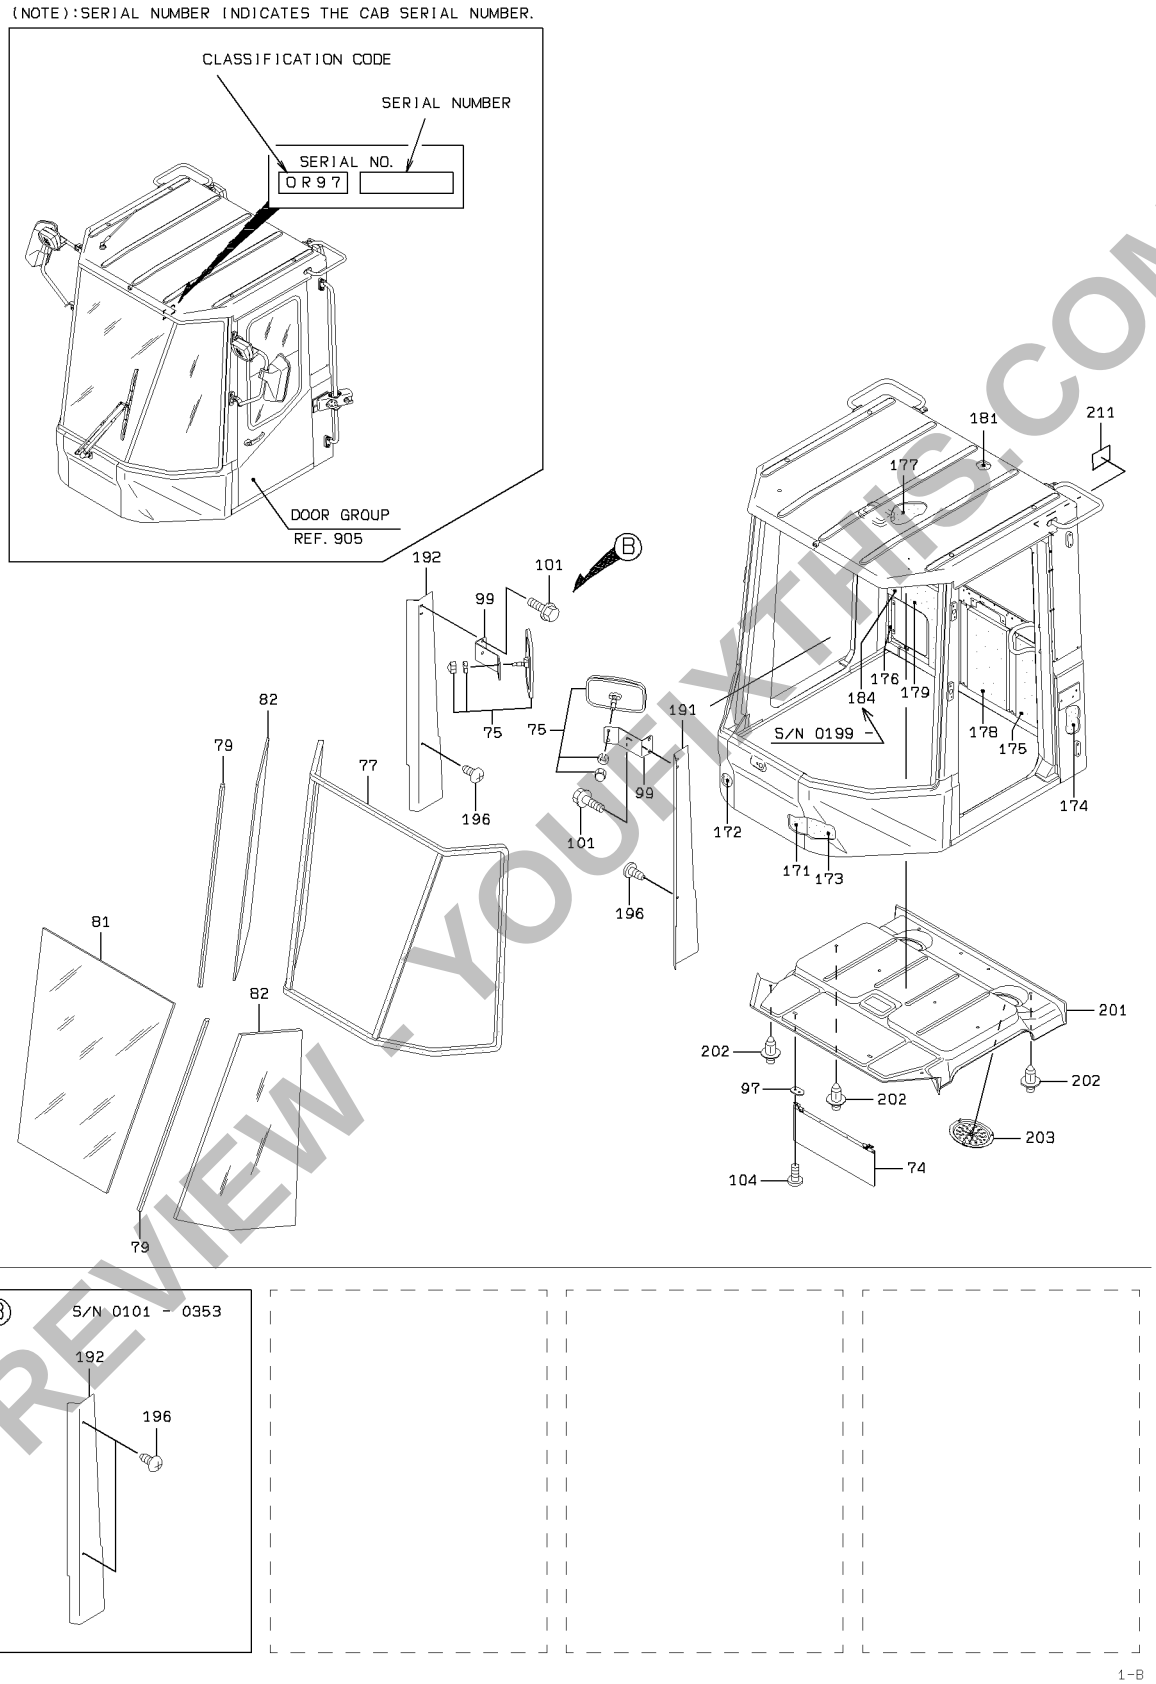

1-B

PREVIEW : YOUFIXTHIS.COM

Download full manual at youfixthis.com

CONTENTS I

• Before Use

• Chassis No. and Manufacturer's Serial No.

• CONTENTS II

• PARTS NAME INDEX

• 70ZV

• CHASSIS AND ELECTRICAL SYSTEM

FRONT CHASSIS GROUP 1
LIFT ARM GROUP 3
PIN MOUNT 5
REAR CHASSIS GROUP 7
CENTER PIN GROUP 9
FUEL TANK GROUP 11
OIL TANK GROUP 15
FLOOR BOARD GROUP 17
SEAT STAND & CONTROL BOX MOUNT 19
CONTOROL BOX COVER MOUNT <S/N 5001 - 513 21
CONTOROL BOX COVER MOUNT <S/N 5131 - 534 23
CONTOROL BOX COVER MOUNT <S/N 5141 - > 25
OPERATION STAND GROUP 27
DECK & FENDER GROUP 29
STEP & HANDRAIL GROUP 31
SCREEN BOARD MOUNT 33
ENGINE ROOM MOUNT 35
REAR GRILLE GROUP 37
WIND SHIELD GROUP 39
COVER MOUNT 41
SEAT GROUP 43
SEAT 45
SUSPENSION 47
GREASE PIPING <FOR FRONT CHASSIS> 49
GREASE PIPING <FOR REAR CHASSIS> 51
GAUGE GROUP 53
ELECTRICAL PARTS MOUNT <S/N 5001 - 5340 55

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PARTS NAME INDEX

	PART NAME	PAGE		PART NAME	PAGE
A	ACCUMULATOR ASSY	160,504,507,510,512	**B**	BREATHER ASSY	108
	ACTUATOR ASSY	311		BUCKET ASSY	266,268
	ADAPTER	54,106,152,156,160,162 ...		BULB	60,62,66,291,298,522
	ADAPTER,ELBOW	106,156,160,162,164,168 ...		BUMPER	48,532
	ADAPTER,ELBOW UNIO	106,168,232,354,356,465		BUSHING	4,8,10,94,134,136,140 ...
	ADAPTER,SOCKET	235		BUSHING,COLUMN	184
	ADAPTER,TEE	156,168,170,222,254,382 ...		BUSHING,ELASTIC	30,34,36,42,68,73,80,90 ...
	ADAPTER,UNION	504,507		BUZZER	56,58,62
	ADJUSTOR ASSY	536	**C**	CAB ASSY,ROPS	280,283
	ADJUSTOR,SEAT	46,532		CABLE	73,74,78,247,294,522
	AIR CONDITIONER UN	314,316,326,328		CABLE ASSY	66,68,73,74,78,187,190 ...
	ANGLE	80,206,340		CAGE,NEEDLE	134,136
	ANTENNA	294		CAM	400,414,430,454,456,494 ...
	ARM	187,390,404,420		CAM ASSY	400,414,430,454,456,494 ...
	ARM ASSY,LIFT	4,346		CAMSHAFT	243,398,400,412,414,428 ...
	ARM,WIPER	291,301		CAP	66,74,80,92,126,176,178 ...
	ARMREST	22,24,26,46,532,536		CAP ASSY	16,96
	ASHTRAY	22,24,26		CAP,ELASTIC	184,187,274,304,460
	AXLE ASSY,FRONT	134		CAP,TERMINAL	74,187,460,470
	AXLE ASSY,REAR	136		CAR RADIO	304
B	BALL	126,198,243,247,400,414 ...		CASE	66,160,187,190,203,220 ...
	BAND	66,160,187,190,504,507		CASE ASSY	243,326,328,330,332,398 ...
	BAND ASSY	96		CATCH	8,22,24,26,34,36,283 ...
	BAND,HOSE	68,82,96,98,100,104,106 ...		CATCH,DOOR	36,92,287,515
	BAND,HOSE-HIGH TOR	13,218		CATCH,MAGNET	36
	BAR,ROUND	36		CHANNEL	152,287
	BATTERY	64		CHASSIS ASSY,FRONT	2
	BEARING ASSY,SPIDE	88		CHASSIS ASSY,REAR	8
	BEARING KIT	536		CLAMP	92,322,326,328,334,359 ...
	BEARING,BALL	110,112,118,122,124,126 ...		CLAMP,HOSE	66,68,73,78,187,190,206 ...
	BEARING,NEEDLE	122,187,198,390,404,420		CLAMP,MULTIPLE	226,228,354,386,388,402 ...
	BEARING,ROLLER	120,122,124,126,144,146 ...		CLEANER ASSY,AIR	100
	BEARING,SPHERICAL	10		CLIP	100,203,262,291,294,296 ...
	BEARING,TAPER ROLL	10,134,136,144,146,148 ...		CLUTCH ASSY	118,122,124,380
	BEARING,THRUST	122		COIL	326,328
	BELT	48,532		COLLAR	172,174
	BELT,SEAT	44,530,538		COLUMN ASSY	184
	BELT,V	324		COMPRESSOR ASSY	324
	BIT,SIDE	266,268		COMPRESSOR KIT	536
	BLADE,WIPER	291,301		CONDENSER	322,334
	BLOCK	16,82,160,170,220,235 ...		CONDENSER ASSY	322
	BLOCK,PILLOW	84		CONNECTOR	74,78,334,492
	BLOWER	330,332		CONTROL UNIT	330,332
	BLOWER ASSY	314,316,330,332		CONTROLLER UNIT	56,58,369
	BOARD ASSY,FLOOR	18		CONVERTER	56,58,294
	BOARD ASSY,SCREEN	34		COOLER,AIR	92
	BODY	16,60,128,130,376,416 ...		COOLER,OIL	92
	BOLT	8,10,13,18,44,46,60,62 ...		CORE ASSY	92,359,374
	BOLT SET	134,140,142		COUPLER,CABLE	470,534
	BOLT(UNIFY)	182,402,418,446		COUPLING	287
	BOLT,FLANGED	2,6,8,10,13,16,18,20,22 ...		COVER	10,16,22,24,26,28,30,34 ...
	BOLT,JOINT	16		COVER ASSY	16,36,38,100,114,116 ...
	BOLT,SOCKET	16,108,110,112,114,126 ...		COVER ASSY,ROD	200,260,336,348
	BOLT,SQUARE NECK	262		COVER,DRIVE	110
	BOLT,STUD	94		COVER,PEDAL	172,174
	BOLT,U	96,98,102,211,388,474		COVER,ROD	176,258
	BOLT,W/WASHER	92,359,374,538		COVER,SEAT	536
	BOOT	22,24,26,48,66,172,174 ...		CUP	287
	BOSS	2,4,206,266,268,346		CUSHION ASSY,SEAT	46,532
	BOSS,PUMP	110		CYLINDER ASSY,OIL	166,176,194,200,203,258 ...
	BOX	8,22,24,26,28,62	**D**	DAMPER ASSY	307,311,536
	BOX ASSY	20,392,406,422		DECK	30
	BOX,FUSE	56,58		DIFFERENTIAL ASSY	134,136,144,146,148
	BRACKET	22,24,56,58,80,90,98 ...		DIODE	74,78
	BRACKET ASSY	92,172,174,334,359		DIODE ASSY	74
	BRACKET,LAMP	60		DISC	243,398,412,428
	BRAKE ASSY	126		DISC,FRICTION	118,122,124,134,136
	BRAKE FLUID	278		DISC,SEPARATION	118,122,124,134,136
	BREATHER	140,142		DOOR	311,326,328

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

ELECTRICAL PARTS MOUNT <S/N 5341 - > 57
FRONT LAMP GROUP 59
REAR LAMP MOUNT 61
BATTERY & GREASE GUN MOUNT 63
RELAY & SWITCH MOUNT 65
ELECTRICAL WIRING - FRONT CHASSIS 67
ELECTRICAL WIRING - REAR CHASSIS 69
ELECTRICAL WIRING - FLOOR BOARD 75

• POWER SYSTEM

POWER GROUP 79
DRAIN LINE 81
2ND PROPELLER SHAFT 83
3RD PROPELLER SHAFT <S/N 5001 - 5309 > 85
3RD PROPELLER SHAFT <S/N 5310 - > 87
RADIATOR GROUP 89
RADIATOR 91
OIL MOTOR <S/N 5396 - > 93
WATER LINE 95
AIR COOLER LINE 97
AIR CLEANER GROUP 99
EXHAUST GROUP 101
FUEL LINE 103


• TORQUE CONVERTER AND TRANSMISSION SYSTEM

TRANSMISSION HYDRAULIC LINE 105
TORQUE CONVERTER AND TRANSMISSION 107
TORQUE CONVERTER INPUT SHAFT GROUP 109
TORQUE CONVERTER GEAR GROUP 111
TRANSMISSION 113
TRANSMISSION CASE GROUP 115
FORWARD & REVERSE CLUTCH GROUP 117
IDLE SHAFT GROUP 119
1ST & 2ND CLUTCH GROUP 121
3RD & 4TH CLUTCH GROUP 123
OUTPUT SHAFT GROUP 125
TRANSMISSION CONTROL VALVE 127


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


CONTROL VALVE (S/N 5205-) p.395

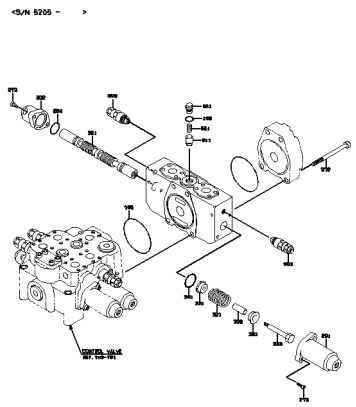


PILOT VALVE p.397

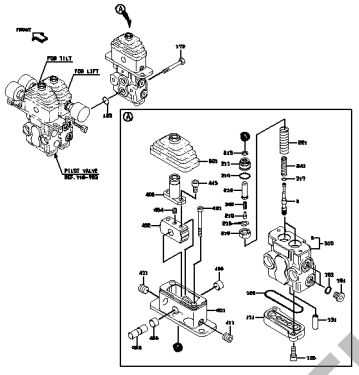


PILOT VALVE (S/N 5341-) p.399

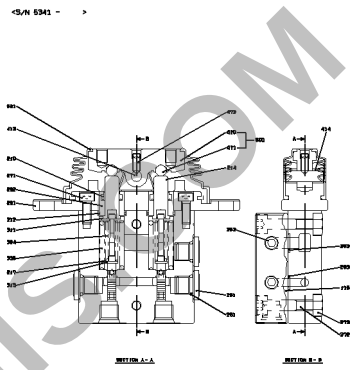


HYDRAULIC LINE (3-WAY PIPING) - SWIVEL p.401

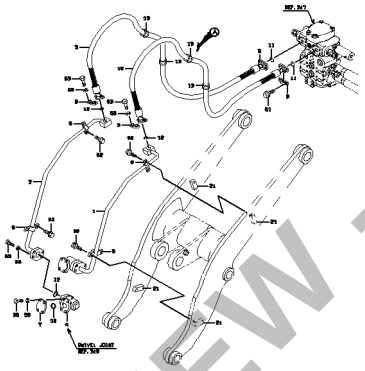


CONTROL GROUP (3-WAY PIPING) - SWIVEL p.403

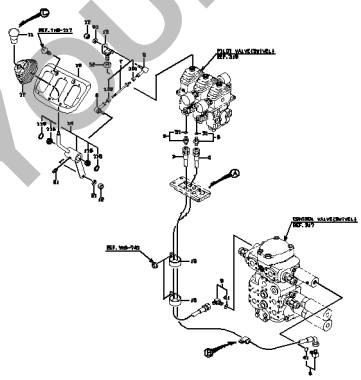


CONTROL GROUP (3-WAY PIPING) - SWIVEL (S/N 5341-) p.405

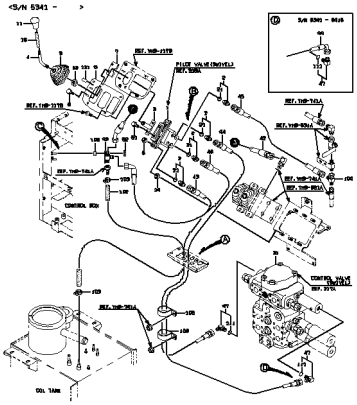


CONTROL VALVE (SWIVEL) (S/N 5001-5204) p.407

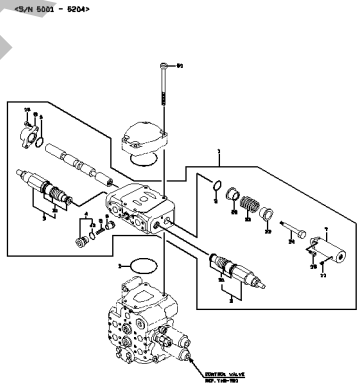

CONTROL VALVE (SWIVEL) (S/N 5205-) p.409

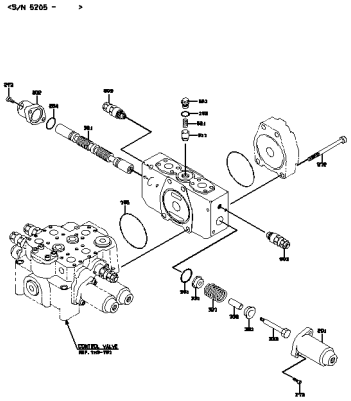

PILOT VALV (SWIVEL) p.411

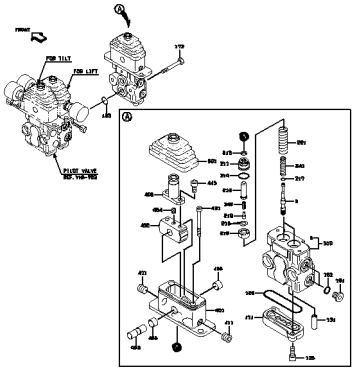

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

CONTOROL BOX COVER MOUNT (S/N 5131 - 5340)

SYM-BOL	PART NUMBER	PART NAME	UNIT Q,TY	SERIAL (A) - (B)	REMARKS N P D	(A) (B)	(C) (D)	REMARK
1A	31200-60140	COVER	1	5131 - 5340				
2A	31200-60420	COVER	1	5131 - 5340				
3A	31200-60110	COVER	1	5131 - 5340				
4A	31200-60320	COVER	1	5131 - 5340				
5A	41618-26050	PLATE	1	5131 - 5340				
6A	41617-32650	PLATE	1	5131 - 5340				
7A	40790-60070	BOOT	2	5131 - 5340				
8A	41613-35410	PLATE	1	5131 - 5340				
9A	41613-34920	PLATE	1	5131 - 5340				
11A	41601-48190	PLATE	1	5131 - 5340				
12A	41610-30180	PLATE	1	5131 - 5340				
13A	41617-32040	PLATE	1	5131 - 5340				
14A	41617-32050	PLATE	1	5131 - 5340				
15A	67015-00001	TUBE,VINYL	1 M	5131 - 5340				L=20 X Q'TY2
16A	32150-20210	CATCH	2	5131 - 5340				
17A	46000-21020	WASHER	2	5131 - 5340				
18A	41635-38650	PLATE	2	5131 - 5340				
19A	35100-20200	SCREW	15	5131 - 5340				
21A	35106-20020	SCREW,TAPPING	10	5131 - 5340				
22A	37600-21750	NUT	2	5131 - 5340				
23A	30320-60030	ASHTRAY	1	5131 - 5340				
24A	43800-26160	BOX	1	5131 - 5340		Y01		
34A	39890-70320	HINGE	1	5131 - 5340		01		WELDING
41A	30062-60050	ARMREST	1	5131 - 5340				
42A	40902-33050	BRACKET	1	5131 - 5340				
43A	41620-24500	PLATE	1	5131 - 5340				
44A	41619-36060	PLATE	1	5131 - 5340				
45A	41619-39010	PLATE	1	5131 - 5340				
46A	45600-24960	LEVER	1	5131 - 5340				
47A	46011-20050	WASHER,PLANE	1	5131 - 5340				
51A	61802-06010	BOLT,FLANGED	6	5131 - 5289				
51B	61802-06016	BOLT,FLANGED	6	5290 - 5340	B			
61A	61802-08020	BOLT,FLANGED	4	5131 - 5340				
62A	61802-06016	BOLT,FLANGED	4	5131 - 5340				
63A	62261-14020	SCREW,TAPPING	4	5131 - 5340				
64A	62701-40041	WASHER,PLANE	4	5131 - 5340				
65A	62710-18101	WASHER,PLANE	1	5131 - 5340				

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

FRONT LAMP GROUP

SYM-BOL	PART NUMBER	PART NAME	UNIT Q,TY	SERIAL (A) - (B)	REMARKS N P D	(A)	(B)	(C)	(D)	REMARK
1A	40968-24850	BRACKET,LAMP	1	5001 -						FR LH
2A	40968-24860	BRACKET,LAMP	1	5001 -						FR RH
3A	44890-60240	LAMP,HEAD	2	5001 -		Y01				HALOGEN
4A	44890-60260	LAMP,HEAD	2	5001 -			Y02			HALOGEN
5A	31828-20490	GUARD,LAMP	2	5001 - 5415						
5B	31828-20600	GUARD,LAMP	2	5416 -	C					
16A	62721-14100	WASHER,SPRING	1	5001 -		01				
17A	62401-81142	NUT	1	5001 -		01				
20A	43890-70420	BODY	1	5001 -		01				
21A	31990-71300	GASKET	1	5001 -		01				
22A	40600-70510	FRAME	1	5001 -		01				
23A	38480-70850	BULB	1	5001 -		01				24V75/70W
25A	62261-15025	SCREW,TAPPING	4	5001 -		01				
33A	61001-08020	BOLT	1	5001 -			02			
34A	62401-81081	NUT	1	5001 -			02			
35A	62721-08100	WASHER,SPRING	1	5001 -	N		02			
36A	61001-06050	BOLT	1	5001 -			02			
37A	37600-72340	NUT	1	5001 -			02			
40A	38480-70770	BULB	1	5001 -			02			24V55W
45A	62261-14018	SCREW,TAPPING	4	5001 -			02			
51A	61802-12025	BOLT,FLANGED	8	5001 -						
53A	61802-06016	BOLT,FLANGED	8	5001 -						

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

WATER LINE

SYM-BOL	PART NUMBER	PART NAME	UNIT Q,TY	SERIAL (A) - (B)	REMARKS N P D	(A) (B)	(C) (D)	REMARK
1A	43110-24480	HOSE,WATER	1	5001 -				
2A	43110-24490	HOSE,WATER	1	5001 -				
3A	67040-19000	HOSE,HEAT RESISTIN	2 M	5001 -				L=1200
4A	67040-09000	HOSE,HEAT RESISTIN	2 M	5001 -				L=1100
5A	37715-20960	NIPPLE,HOSE	1	5001 -				
6A	50201-02070	PLUG	1	5001 -				
7A	50201-00110	GASKET	1	5001 -				
8A	43962-20100	BOLT,U	1	5001 -				
9A	88031-06081	NUT,SELF-LOCKING	2	5001 -				
11A	69002-07100	BAND,HOSE	4	5001 -				
12A	69002-07600	BAND,HOSE	4	5001 -				
13A	69002-03100	BAND,HOSE	2	5001 -				
14A	69002-02200	BAND,HOSE	2	5001 -				
15A	72010-31000	HOLDER,HOSE	1	5001 -				
16A	72010-55000	HOLDER,HOSE	2	5001 -				
17A	72001-11800	HOLDER,PIPE	2	5001 -				
18A	65801-20060	BUSHING,ELASTIC	1	5001 -				
21A	36227-60040	TANK,WATER	1	5001 -		Y01		
22A	38675-20110	BAND ASSY	1	5001 -		Y02		
23A	67040-08000	HOSE,HEAT RESISTIN	1 M	5001 -				L=900
24A	67017-00001	TUBE,VINYL	2 M	5001 -				L=1700
25A	31053-20010	ORIFICE	1	5001 -				
26A	38677-70410	BAND,HOSE	2	5001 -				
27A	69001-01000	BAND,HOSE	1	5001 -				
28A	72001-11800	HOLDER,PIPE	2	5001 -				D=18
29A	72001-11000	HOLDER,PIPE	4	5001 -				D=10
31A	32211-70240	CAP ASSY	1	5001 -		01		
32A	33713-21350	SHEET,RUBBER	3	5001 -		02		
51A	61802-08020	BOLT,FLANGED	2	5001 -				
61A	62480-21081	NUT,FLANGED	3	5001 -				
71A	62701-40081	WASHER,PLANE	2	5001 -				
72A	62401-81081	NUT	4	5001 -				
73A	62480-21081	NUT,FLANGED	6	5001 -				

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

REPAIR KIT

SYM-BOL	PART NUMBER	PART NAME	UNIT Q,TY	SERIAL (A) - (B)	REMARKS N P D	(A) (B)	(C) (D)	REMARK
000A	49691-90440	REPAIR KIT	1	101 - 185				
000B	49691-91150	REPAIR KIT	1	186 - 272	C			
000C	49691-91160	REPAIR KIT	1	273 -	C			
1A	47131-60270	RING,O	1	101 -				REF.311-25
2A	31990-24000	GASKET	1	101 - 185				REF.311-28
2B	31990-25250	GASKET	1	186 -	C			REF.311-28
3A	47131-60290	RING,O	3	101 -				REF.311-34
4A	31990-24010	GASKET	1	101 - 185				REF.311-41
4B	31990-25260	GASKET	1	186 -	C			REF.311-41
5A	31990-24020	GASKET	1	101 - 185				REF.311-43
5B	31990-25270	GASKET	1	186 -	C			REF.311-43
6A	31990-24030	GASKET	2	101 - 185				REF.311-57
6B	31990-25280	GASKET	2	186 -	C			REF.311-57
7A	65210-12011	RING,O	1	101 -				R.311-71,351-1
8A	45301-60280	RING,PISTON	1	101 -				REF.323-6
9A	31990-23970	GASKET	2	101 - 185				R.331-7,333-35
9B	31990-25220	GASKET	2	186 -	C			R.331-7,333-35
11A	65210-12032	RING,O	1	101 -				R.331-11
12A	31990-23980	GASKET	1	101 - 185				REF.331-12
12B	31990-25230	GASKET	1	186 -	C			REF.331-12
13A	31990-23990	GASKET	1	101 - 185				REF.331-25
13B	31990-25240	GASKET	1	186 -	C			REF.331-25
14A	31990-24370	GASKET	1	101 - 185				REF.331-42
14B	31990-25400	GASKET	1	186 -	C			REF.331-42
15A	31990-24040	GASKET	1	101 - 185				REF.333-2
15B	31990-25290	GASKET	1	186 -	C			REF.333-2
16A	31990-24050	GASKET	1	101 - 185				REF.333-7
16B	31990-25300	GASKET	1	186 -	C			REF.333-7
17A	31990-24060	GASKET	2	101 - 185				REF.333-9
17B	31990-25310	GASKET	2	186 -	C			REF.333-9
19A	31990-24650	GASKET	1	101 -				REF.333-59
21A	45301-60580	RING,PISTON	2	101 -				REF.335-2
22A	45301-60590	RING,PISTON	2	101 -				REF.335-4
23A	45301-60550	RING,PISTON	4	101 - 272				REF.335-24
23B	45301-60310	RING,PISTON	4	273 -	C			REF.335-24
24A	65210-22045	RING,O	1	101 -				REF.337-26
25A	45301-60320	RING,PISTON	4	101 -				R.339-2,341-2
26A	45301-60330	RING,PISTON	4	101 -				R.339-4,341-4
27A	45301-60560	RING,PISTON	6	101 - 272				R.339-28,341-2
27B	45301-60340	RING,PISTON	6	273 -	C			R.339-28,341-2
28A	31990-24080	GASKET	1	101 - 185				REF.343-18
28B	31990-25320	GASKET	1	186 -	C			REF.343-18
29A	65210-12053	RING,O	1	101 -				REF.343-23
31A	65084-05913	SEAL,OIL	2	101 -				REF.343-27,107
32A	65054-05913	SEAL,OIL	2	101 -				REF.343-28,108
33A	34042-60420	SEAL,OIL	1	101 -				REF.343-102
34A	65210-12032	RING,O	1	101 -				REF.343-105
35A	65218-12010	RING,O	1	101 -				REF.351-9
36A	31990-24090	GASKET	1	101 - 185				REF.351-18
36B	31990-25330	GASKET	1	186 -	C			REF.351-18
37A	31990-24100	GASKET	1	101 - 185				REF.351-20
37B	31990-25340	GASKET	1	186 -	C			REF.351-20
38A	31990-24110	GASKET	1	101 - 185				REF.351-22
38B	31990-25350	GASKET	1	186 -	C			REF.351-22
39A	31990-24120	GASKET	1	101 - 185				REF.351-28
39B	31990-25360	GASKET	1	186 -	C			REF.351-28
41A	48974-70040	RING KIT,O	5	101 -				R.351-70,352-7
42A	31990-24130	GASKET	1	101 - 185				REF.352-2
42B	31990-25370	GASKET	1	186 -	C			REF.352-2
43A	31990-24140	GASKET	1	101 - 185				REF.352-4
43B	31990-25380	GASKET	1	186 -	C			REF.352-4
44A	31990-24150	GASKET	2	101 - 185				REF.352-9
44B	31990-25390	GASKET	2	186 -	C			REF.352-9

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

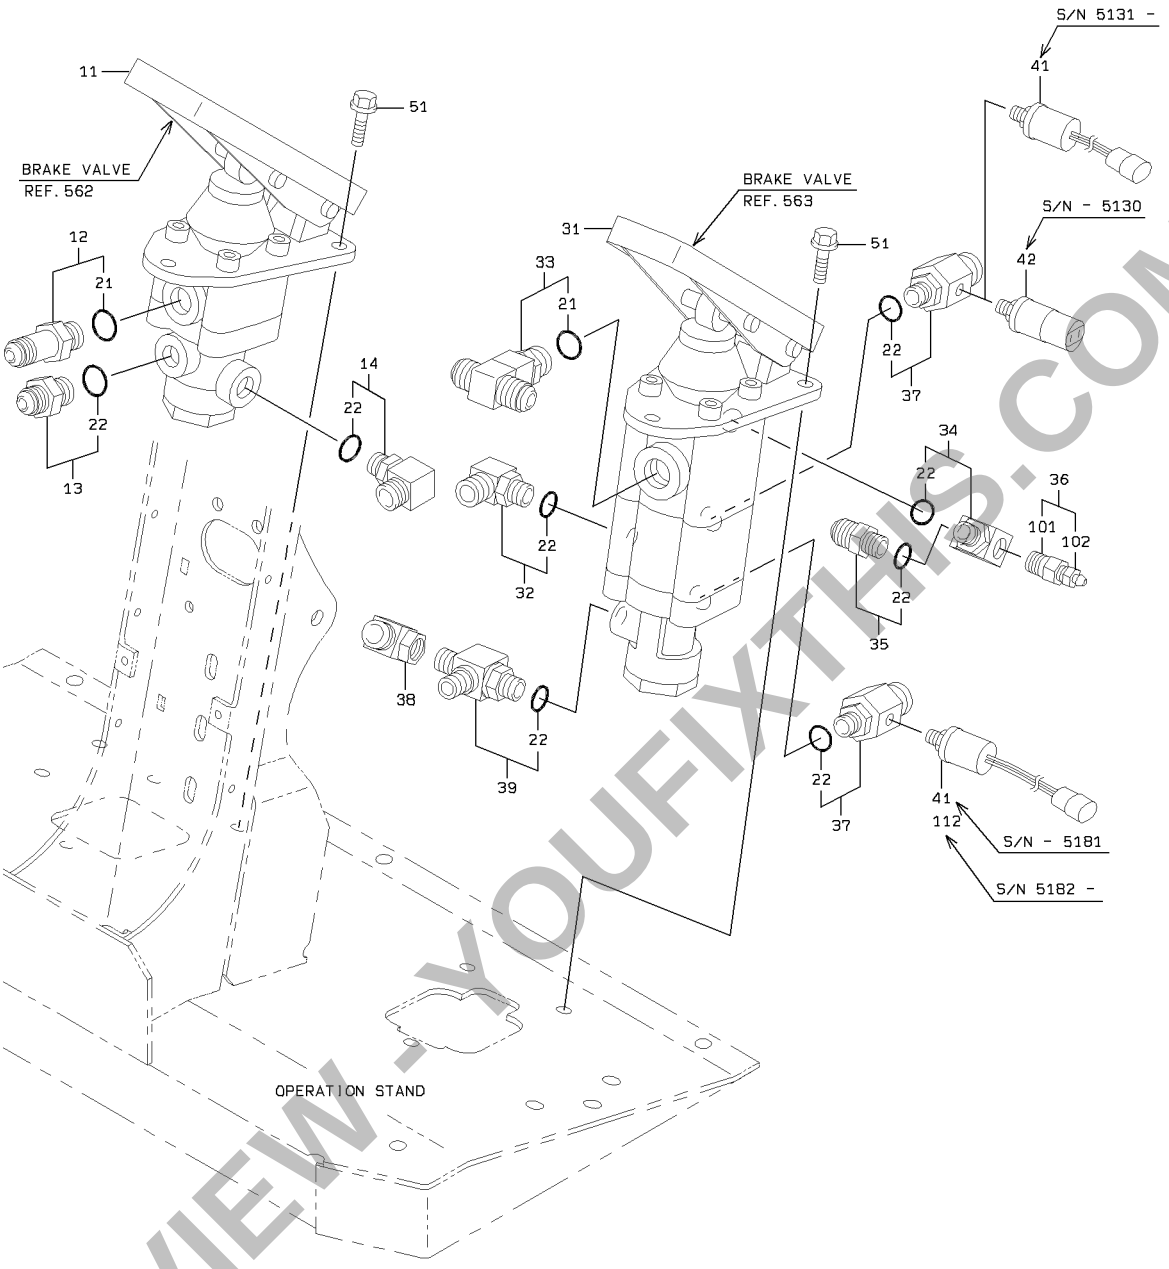

1-A

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


STEERING CYLINDER

SYM-BOL	PART NUMBER	PART NAME	UNIT Q,TY	SERIAL (A) - (B)	REMARKS N P D	(A)	(B)	(C)	(D)	REMARK
000A	34820-66230	CYLINDER ASSY,OIL	1	5315 - 5415						
000B	34820-66590	CYLINDER ASSY,OIL	1	5416 -	C					
1A	36725-73270	TUBE,CYLINDER	1	5315 -						
2A	45886-73090	ROD,PISTON	1	5315 -						
3A	39960-72510	PISTON	1	5315 -						
4A	37636-70320	NUT,PISTON	1	5315 -						
5A	33100-70870	CASE	1	5315 - 5415						
5B	33100-71000	CASE	1	5416 -	B					
6A	47171-70760	RING,WEAR	2	5315 -		K1				
7A	39600-73050	PACKING	1	5315 -		K1				
8A	32970-70420	CLIP	1	5315 -						
9A	40840-73000	BUSHING	1	5315 -						
10A	39600-73060	PACKING	1	5315 -			K2			
11A	47194-71590	RING,BACK-UP	1	5315 -			K2			
12A	34044-71010	SEAL,DUST	1	5315 -			K2			
13A	47131-76880	RING,O	1	5315 -		K1	K2			
14A	47194-71600	RING,BACK-UP	1	5315 -		K1	K2			
15A	47131-76890	RING,O	1	5315 -		K1	K2			
16A	40840-73010	BUSHING	2	5315 -						
17A	34044-71020	SEAL,DUST	4	5315 -						
18A	47195-70130	RING,BUFFER	1	5416 -			K2			
30A	49327-73920	SEAL KIT	1	5315 -		QK1				FR PISTON
40A	49327-73930	SEAL KIT	1	5315 -			QK2			FR ROD COVER

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


KIT(SYMBOL 700) CONSISTS OF THE PARTS WITH a.

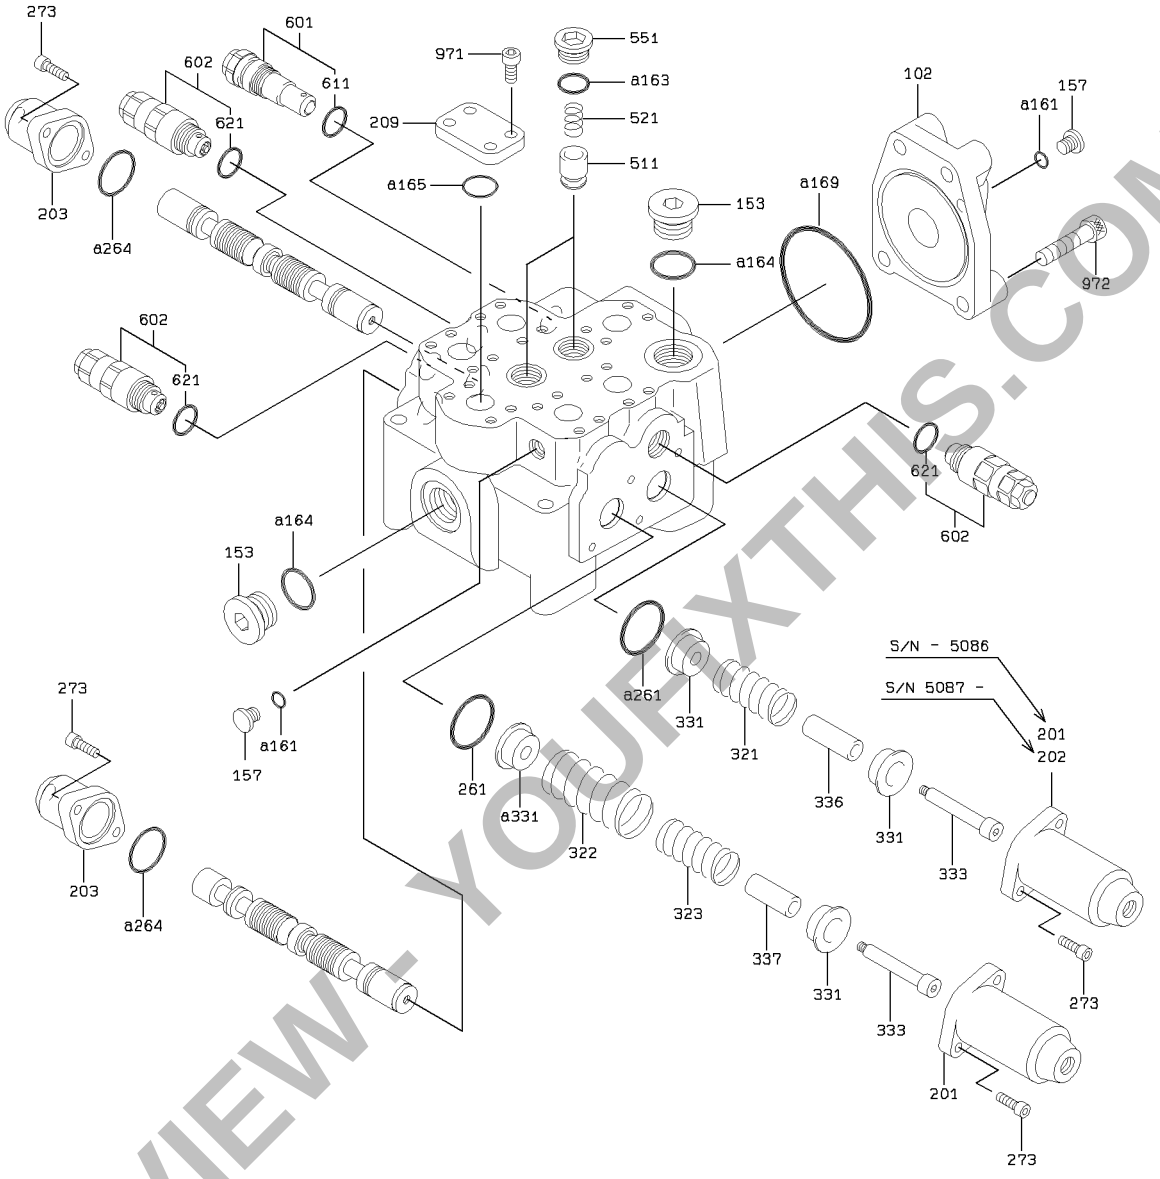

1-A

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

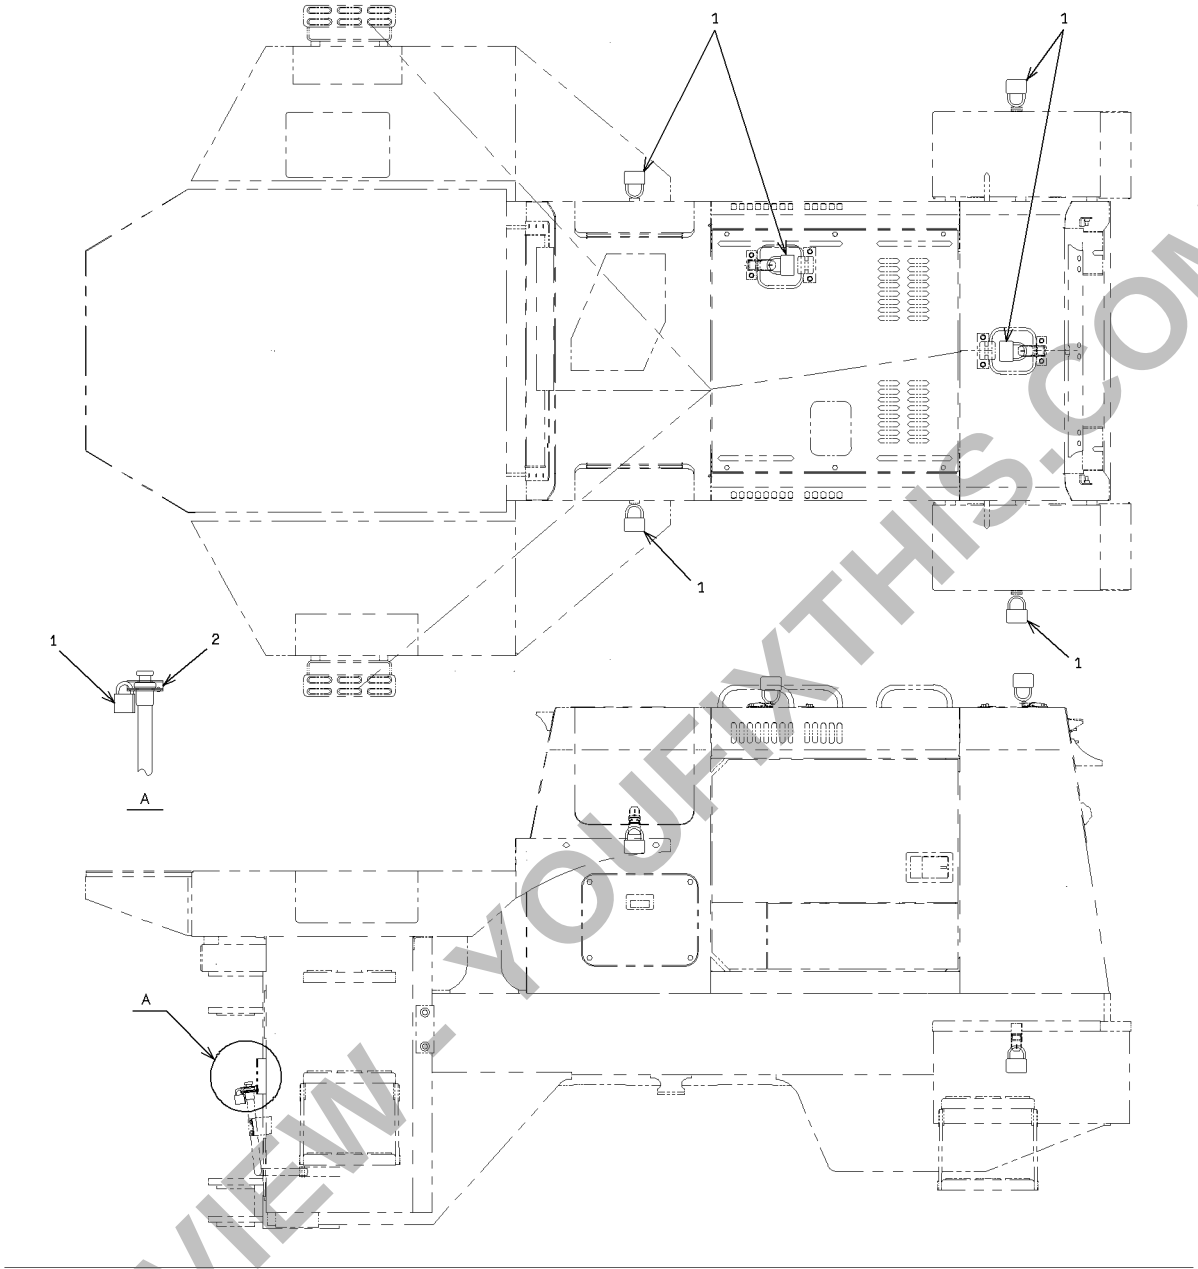

1-A

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


DAMPER ASSY

SYM-BOL	PART NUMBER	PART NAME	UNIT Q,TY	SERIAL (A) - (B)	REMARKS N P D	(A)	(B)	(C)	(D)	REMARK
1A	36505-60060-7	DAMPER ASSY	1	5001 - 5194		Y01				FR LH
1B	36505-60080-7	DAMPER ASSY	1	5195 -	B	Y01				FR LH
11A	40901-70050-7	BRACKET	2	5001 -		01	02			
12A	33057-70700-7	GROMMET	1	5001 -		01	02			
13A	31990-71840-7	GASKET	1	5001 -		01	02			
14A	31990-71850-7	GASKET	1	5001 -		01	02			
15A	31990-71860-7	GASKET	1	5001 -		01	02			
16A	45870-70730-7	ROD	1	5001 -		01	02			
17A	45870-70740-7	ROD	1	5001 -		01	02			
18A	36430-60070-7	DUCT	1	5001 -		01				
19A	40840-72580-7	BUSHING	2	5001 -		01	02			
20A	43100-71390-7	HOSE	1	5001 -		01	02			
21A	35100-72040-7	SCREW	10	5001 -		01	02			
22A	46000-71560-7	WASHER	2	5001 -		01	02			
23A	37634-70020-7	NUT,NYLON	6	5001 -		01	02			
24A	46000-71570-7	WASHER	8	5001 -		01	02			
25A	35700-71870-7	SPACER	6	5001 -		01	02			
26A	46000-71580-7	WASHER	8	5001 -		01	02			
27A	32923-70230-7	CLAMP,HOSE	4	5001 -		01	02			
28A	30201-70040-7	ACTUATOR ASSY	2	5001 -		01				
29A	37520-70170-7	DOOR	1	5001 -		01	02			
30A	40901-70060-7	BRACKET	2	5001 - 5194		01	02			
30B	40901-60130-7	BRACKET	2	5195 -	B	01	02			
31A	40901-70070-7	BRACKET	2	5001 -		01	02			
32A	37520-70180-7	DOOR	1	5001 -		01	02			
41A	36505-60070-7	DAMPER ASSY	1	5001 - 5194			Y02			FR RH
41B	36505-60090-7	DAMPER ASSY	1	5195 -	B		Y02			FR RH
58A	36430-60080-7	DUCT	1	5001 -			02			
68A	30201-70050-7	ACTUATOR ASSY	2	5001 -			02			

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

TILT CYLINDER (HIGH LIFT ARM SPEC.)

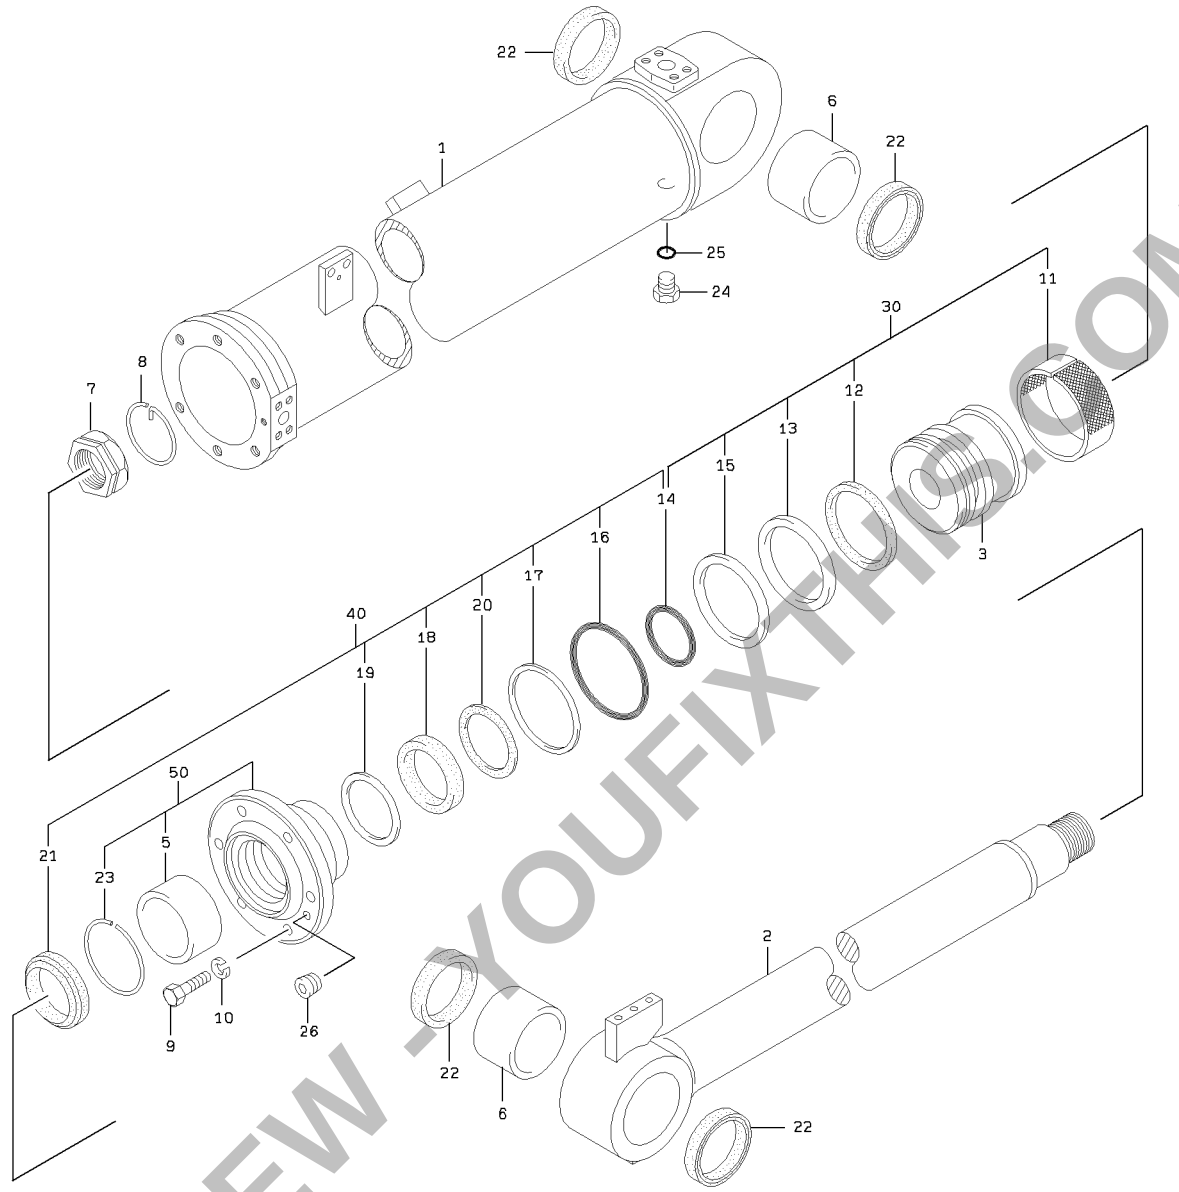

1-A

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

HIDRAULIC LINE (2-WEY QUICK COUPLER)

SYM-BOL	PART NUMBER	PART NAME	UNIT Q,TY	SERIAL (A) - (B)	REMARKS N P D	(A) (B)	(C) (D)	REMARK
1A	68635-10138	HOSE,HIGH PRESSURE	1	5001 -				
2A	68655-10170	HOSE,HIGH PRESSURE	1	5001 -				
3A	68655-10350	HOSE,HIGH PRESSURE	2	5001 -				
4A	38553-61100	VALVE,SOLENOID	1	5001 -		Y01		
5A	41410-60130	BLOCK	1	5001 -				
6A	40510-21340	FLANGE	1	5001 -				
7A	88201-06704	ADAPTER	4	5001 -		Y02		
8A	30246-23080	ADAPTER,TEE	1	5001 -			Y03	
9A	30230-21780	ADAPTER	2	5001 -				
11A	41530-22470	PLUG	2	5001 -				
12A	88241-07104	ADAPTER,ELBOW	1	5001 -		Y02		
14A	69081-04000	TUBE,SPIRAL	2 M	5001 -				L=1200 X Q'TY
15A	65220-31024	RING,O	1	5001 -				
21A	72001-11500	HOLDER,PIPE	2	5001 -				D=15
25A	37600-24210	NUT	2	5001 -				
26A	72010-40000	HOLDER,HOSE	1	5001 -				D=40
51A	61802-08012	BOLT,FLANGED	1	5001 -				
52A	61802-10050	BOLT,FLANGED	4	5001 -				
53A	61101-06020	BOLT,SOCKET	2	5001 -				
55A	62731-06100	WASHER,SPRING	2	5001 -				
101A	65210-12018	RING,O	2	5001 -		01		
102A	65210-12009	RING,O	4	5001 -		01		
103A	61101-05045	BOLT,SOCKET	4	5001 -		01		
111A	65210-12011	RING,O	1	5001 -		02		
124A	65210-12014	RING,O	1	5001 -			03	
131A	41603-53170	PLATE	1	5001 -				WELDING
141A	41609-20290	PLATE	1	5001 -				WELDING
142A	41611-26340	PLATE	1	5001 -				WELDING

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

HYDRAULIC LINE (3-WAY PIPING) - HIGH LIFT

SYM-BOL	PART NUMBER	PART NAME	UNIT Q,TY	SERIAL (A) - (B)	REMARKS N P D	(A)	(B)	(C)	(D)	REMARK
1A	38775-24220	PIPE,OIL	1	5001 -						FR LH
2A	38775-24230	PIPE,OIL	1	5001 -						FR RH
3A	43113-70440	HOSE,HIGH PRESSURE	1	5001 -						
4A	34947-20020	JOINT,SWIVEL	2	5001 -						REF.349
6A	43573-20030	HOLDER,PIPE	6	5001 -						
7A	41641-20300	PLATE	2	5001 -						
8A	69811-25210	FLANGE,SPLIT	4	5001 -						
9A	69811-19210	FLANGE,SPLIT	4	5001 -						
11A	65220-31024	RING,O	2	5001 -						
12A	65220-31019	RING,O	6	5001 -						
13A	40850-70080	BUSHING,ELASTIC	4	5001 -						
14A	32924-20120	CLAMP,MULTIPLE	4	5001 -						
15A	40850-70110	BUSHING,ELASTIC	4	5001 -						
16A	43113-25520	HOSE,HIGH PRESSURE	1	5001 -						
21A	41611-21260	PLATE	6	5001 -						WELDING
51A	61802-10030	BOLT,FLANGED	8	5001 -						
52A	61802-08020	BOLT,FLANGED	12	5001 -						
53A	61275-06030	BOLT(UNIFY)	24	5001 -						
54A	61802-10100	BOLT,FLANGED	12	5001 -						
56A	62722-03100	WASHER,SPRING	24	5001 -						
58A	62480-21101	NUT,FLANGED	2	5001 -						

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PILOT VALVE (SWIVEL) (S/N 5131- 5340)

SYM-BOL	PART NUMBER	PART NAME	UNIT Q,TY	SERIAL (A) - (B)	REMARKS N P D	(A)	(B)	(C)	(D)	REMARK
000A	38560-60570	VALVE,PILOT	1	5131 - 5340						
201A	31205-70220	COVER	1	5131 - 5340						
202A	41530-75150	PLUG	2	5131 - 5340						
210A	39600-72960	PACKING	2	5131 - 5340						
212A	47131-76700	RING,O	2	5131 - 5340						
214A	45887-70380	ROD,PUSH	2	5131 - 5340						
217A	34200-71720	SHIM	2	5131 - 5340						
251A	41530-72790	PLUG	1	5131 - 5340						
261A	65210-12011	RING,O	1	5131 - 5340						
271A	61101-06016	BOLT,SOCKET	2	5131 - 5340						
311A	33930-70980	SEAT,SPRING	2	5131 - 5340						
313A	46000-71760	WASHER	2	5131 - 5340						
324A	35600-77340	SPRING	2	5131 - 5340						
335A	35600-77350	SPRING	2	5131 - 5340						
413A	31611-70040	CAMSHAFT	1	5131 - 5340						
414A	40840-72670	BUSHING	2	5131 - 5340						
420A	31600-70020	CAM	1	5131 - 5340		01				
471A	43751-70300	BALL	2	5131 - 5340		01				
472A	35104-70170	SCREW,SET	1	5131 - 5340						
501A	40790-70540	BOOT	1	5131 - 5340						
600A	31605-70010	CAM ASSY	1	5131 - 5340		Y01				

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

CONTROL VALVE (SINGLE LEVER) (S/N 5205-)

SYM-BOL	PART NUMBER	PART NAME	UNIT Q,TY	SERIAL (A) - (B)	REMARKS N P D	(A) (B)	(C) (D)	REMARK
000A	38521-60470	VALVE ASSY,CONTROL	1	5205 -				
162A	65210-12028	RING,O	1	5205 -				
165A	65210-22110	RING,O	1	5205 -				
201A	31200-73240	COVER	1	5205 -				
202A	31200-73370	COVER	1	5205 -				
261A	47131-75370	RING,O	1	5205 -				
264A	65210-22040	RING,O	1	5205 -				
273A	61101-08025	BOLT,SOCKET	4	5205 -				
301A	35570-71590	SPOOL	1	5205 -				
321A	35600-75270	SPRING	1	5205 -				
331A	33930-70690	SEAT,SPRING	2	5205 -				
333A	43900-73540	BOLT	1	5205 -				
336A	35440-70610	STOPPER	1	5205 -				
511A	44074-70490	POPPET	1	5205 -				
521A	35600-75950	SPRING	1	5205 -				
551A	41530-74540	PLUG	1	5205 -				
602A	38536-70170	VALVE ASSY,RELIEF	2	5205 -				
972A	61101-14135	BOLT,SOCKET	4	5205 -				

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

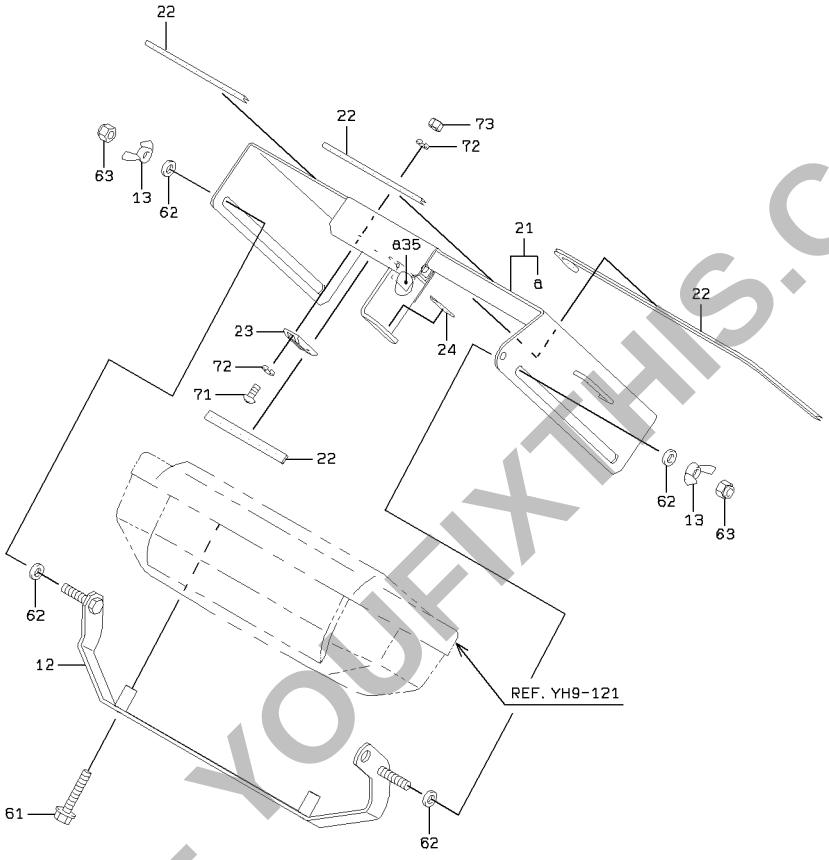

2-A

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 25 of 616 pages

The full manual includes:

- All 616 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kawasaki 70Z V Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual