Item	Part No.	Description	Book
ENGINE	01T001	CRANKCASE	100K0193
	01T002	OIL PAN	100K0193
	01T003	PISTON/CRANKSHAFT	100K0193
	01T004	MAIN BEARING CASE	100K0193
	01T005	FLYWHEEL	100K0193
	01T006	CYLINDER HEAD	100K0193
	01T007	VALVE/ROCKER ARM	100K0193
	01T008	NOZZLE HOLDER	100K0193
	01T009	NOZZLE HOLDER [COMPONENT PARTS]	100K0193
	01T010	CYLINDER HEAD COVER	100K0193
	01T011	INLET MANIFOLD	100K0193
	01T013	EXHAUST MANIFOLD	100K0193
	01T015	CAMSHAFT	100K0193
	01T016	GEAR CASE	100K0193
	01T017	WATER PUMP	100K0193
	01T018	TENSION PULLEY [CA]	100K0193
	01T019	WATER FLANGE	100K0193
	01T020	FUEL PUMP	100K0193
	01T021	INJECTION PUMP	100K0193
	01T022	INJECTION PUMP [COMPONENT PARTS]	100K0193
	01T023	ENGINE STOP LEVER	100K0193
	01T024	SPEED CONTROL PLATE	100K0193
	01T025	GOVERNOR	100K0193
	01T026	UPPER GASKET KIT	100K0193
	01T027	LOWER GASKET KIT	100K0193
ELECTRICAL SYSTEM	01T03501	DYNAMO [A AU]	100K0193
	01T03502	ALTERNATOR [CA]	100K0193
	01T03601	DYNAMO [A AU] [COMPONENT PARTS]	100K0193
	01T03602	ALTERNATOR [CA] [COMPONENT PARTS]	100K0193
CLUTCH	01T045	CLUTCH	100K0193
HYDRAULIC SYSTEM	01T094	HYDRAULIC GEAR PUMP	100K0193
	01T095	HYDRAULIC GEAR PUMP [COMPONENT PARTS]	100K0193
ENGINE	02T012	AIR CLEANER	100K0193
	02T01401	MUFFLER	100K0193
	02T01402	HORIZONTAL MUFFLER [OPTION]	100K0193
	02T028	ENGINE STOP ROD	100K0193
	02T029	ACCELERATOR LEVER	100K0193
FUEL SYSTEM	02T030	FUEL TANK	100K0193
	02T031	FUEL PIPE	100K0193
	02T032	FUEL FILTER [COMPONENT PARTS]	100K0193
COOLING WATER SYSTEM	02T03301	WATER PIPE	100K0193
	02T03401	RADIATOR	100K0193
ELECTRICAL SYSTEM	02T037	STARTER	100K0193
	02T038	STARTER [COMPONENT PARTS]	100K0193
	02T039	BATTERY	100K0193
	02T040	LIGHT	100K0193
	02T041	WORKING LIGHT [OPTION]	100K0193
	02T04201	PANEL / SWITCH [A AU]	100K0193
	02T04202	PANEL / SWITCH [CA]	100K0193
	02T043	PANEL BOARD [COMPONENT PARTS]	100K0193
	02T04401	WIRE HARNESS [A AU]	100K0193
	02T04402	WIRE HARNESS [CA]	100K0193
CLUTCH	02T046	CLUTCH ROD	100K0193
	02T047	CLUTCH PEDAL	100K0193
	02T048	CLUTCH HOUSING	100K0193

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	15956-21110	PISTON	3			STD	0.32	0.704
010	15956-21910	PISTON	3			+0.5MM	0.33	0.726
030	15901-21050	ASSY PISTON RING	3			STD	0.03	0.066
030	15901-21090	ASSY PISTON RING	3			+0.5MM	0.033	0.0726
040	15261-21310	PIN PISTON	3				0.102	0.2244
050	15261-21330	CIRCLIP PISTON PIN	6				0.001	0.0022
060	15381-22010	ASSY CONNECTING ROD	3	<=755815			0	0
060	15694-22010	ASSY CONNECTING ROD	3	>=755816	↔		0.5	1.1
070	15261-21980	BUSH PISTON PIN	3				0.012	0.0264
080	15381-22140	BOLT CONNECTING ROD	6				0.02	0.044
090	15531-22310	METAL CRANKPIN	3	<=755815		STD SET	0	0
090	15694-22310	METAL CRANKPIN	3	>=755816	↔	STD SET	0.02	0.044
090	15531-22970	METAL CRANKPIN	3	<=755815		-0.2MM SET	0	0
090	15694-22970	METAL CRANKPIN	3	>=755816	↔	-0.2MM SET	0.025	0.055
090	15531-22980	METAL CRANKPIN	3	<=755815		-0.4MM SET	0	0
090	15694-22980	METAL CRANKPIN	3	>=755816	↔	-0.4MM SET	0.02	0.044
100	15752-23010	COMP.CRANKSHAFT	1				8	17.6
110	07715-00401	BALL	3				0.001	0.0022
120	09400-14247	SEAL OIL	1				0.004	0.0088
130	66621-14120	BEARING DRY	1				0.006	0.0132
140	19215-23280	SLEEVE CRANKSHAFT	1				0.05	0.11
150	15752-24110	GEAR CRANKSHAFT	1				0.046	0.1012
160	05712-00515	KEY FEATHER	1				0.003	0.0066
170	15752-23310	SLINGER OIL	1				0.002	0.0044
180	15752-23250	COLLAR CRANKSHAFT	1				0.043	0.0946
190	04811-05230	RING	1				0.001	0.0022
200	15261-23470	METAL CRANKSHAFT	1	<=755815		STD	0	0
200	15694-23470	METAL CRANKSHAFT	1	>=755816	↔	STD	0.035	0.077
200	15261-23910	METAL CRANKSHAFT	1	<=755815		-0.2MM	0	0
200	15694-23910	METAL CRANKSHAFT	1	>=755816	↔	-0.2MM	0.04	0.088
200	15261-23920	METAL CRANKSHAFT	1	<=755815		-0.4MM	0	0
200	15694-23920	METAL CRANKSHAFT	1	>=755816	↔	-0.4MM	0.045	0.099
210	15261-23480	METAL CRANKSHAFT	3	<=755815		STD SET	0	0
210	15694-23480	METAL CRANKSHAFT	3	>=755816	↔	STD SET	0.04	0.088
210	15261-23930	METAL CRANKSHAFT	3	<=755815		-0.2MM SET	0	0
210	15694-23930	METAL CRANKSHAFT	3	>=755816	↔	-0.2MM SET	0.05	0.11
210	15261-23940	METAL CRANKSHAFT	3	<=755815		-0.4MM SET	0	0
210	15694-23940	METAL CRANKSHAFT	3	>=755816	↔	-0.4MM SET	0.046	0.1012
220	15261-23530	METAL SIDE	2			STD	0.006	0.0132
220	15261-23950	METAL SIDE	2			+0.2MM	0.006	0.0132
220	15261-23960	METAL SIDE	2			+0.4MM	0.007	0.0154
230	15261-23540	METAL SIDE	2			STD	0.007	0.0154
230	15261-23970	METAL SIDE	2			+0.2MM	0.006	0.0132
230	15261-23980	METAL SIDE	2			+0.4MM	0.007	0.0154
240	07916-28260	KIT PISTON AND RING	3			STD	0.2	0.44
240	07916-28480	KIT PISTON AND RING	3			+0.5MM	0.11	0.242
260	07916-28090	KIT METAL ENGINE	1			STD	0.25	0.55

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	67810-76100	ASSY PUMP HYDRAULIC	1			REFER TO L.No.0F05-R0 FOR COMPONENTS.	1.59	3.498
020	15231-87130	GASKET HYD.PUMP	1				0	0
030	01123-50825	BOLT	2				0.013	0.0286
040	01513-50825	STUD	2				0	0
050	04512-50080	WASHER SPRING	2				0	0
060	02156-50080	NUT	2				0.004	0.0088
070	67810-36410	HOLDER GEAR PUMP	1				1.1	2.42
080	06331-35010	PLUG	2				0.012	0.0264
090	04714-00100	GASKET	2				0.002	0.0044
100	67810-36430	COLLAR	1				0.05	0.11
110	67810-36480	BUSH	1				0.1	0.22
120	66416-83510	GEAR	1			27T	0.21	0.462
130	67810-36490	BEARING NEEDLE	1	<=870440			0	0
130	67850-36490	BEARING NEEDLE	1	>=870441	↔		0.022	0.0484
140	66621-14640	COLLAR	1				0.006	0.0132
150	66416-83520	SHAFT GEAR	1			20T	0.19	0.418
160	08101-06204	BEARING BALL	1				0.102	0.2244
170	67810-36470	RETAINER	1				0.025	0.055
180	04612-00190	CIRCLIP EXTERNAL	1				0.001	0.0022
190	01123-50822	BOLT	4	<=687695			0.012	0.0264
190	01123-50822	BOLT	3	>=687696			0.012	0.0264
200	67810-36420	GASKET	1				0	0
210	01513-50822	STUD	1	>=687696			0.01	0.022
220	04512-50080	WASHER SPRING	1	>=687696			0	0
230	02156-50080	NUT	1	>=687696			0.004	0.0088

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	66416-11110	CASE TRANSMISSION	1	<=50669			0	0
010	66416-11114	CASE TRANSMISSION	1	>=50670	←		4.76	10.472
020	01555-51225	STUD	7				0.039	0.0858
030	02176-50100	NUT	9				0.005	0.011
040	04512-60100	WASHER SPRING	9				0.002	0.0044
050	06311-25030	PLUG	1				0.051	0.1122
060	04717-01700	WASHER WITH RUBBER	1				0.003	0.0066
070	66611-11172	CASE GEAR	1	<=50669			0	0
070	66611-11173	CASE GEAR	1	>=50670	←		0	0
070	66611-11174	CASE DIFF.GEAR	1	>=52355	←		8.5	18.7
080	01555-51035	STUD	6				0.029	0.0638
090	01555-51050	STUD	3				0.038	0.0836
100	66611-11160	PIN KNOCK	2				0.01	0.022
110	01123-50838	BOLT	1				0.02	0.044
120	01123-50825	BOLT	1				0.013	0.0286
130	66611-11140	BOLT	1	<=51479			0	0
130	17381-91010	BOLT	1	>=51480	↔		0.085	0.187
140	04512-60100	WASHER SPRING	1				0.002	0.0044
150	02118-50100	NUT	1				0.005	0.011
160	04013-50100	WASHER PLAIN	1				0	0
170	66905-11130	GASKET	1				0.008	0.0176
190	67211-11140	PLUG BLIND	3				0.001	0.0022
200	66416-11210	PLATE	2	<=52517		[A] [CA]	0.44	0.968
200	66704-11214	COVER PTO	1	>=52518	↔	[A] [CA]	1.5	3.3
200	66704-11214	COVER PTO	1			[AU]	1.5	3.3
210	01123-51235	BOLT	6			[AU]	0.041	0.0902
220	66611-11510	HOLDER DIFF.BRG.LH	1				0.78	1.716
230	01123-50822	BOLT	4				0.012	0.0264
240	66611-11812	HOLDER DIFF.BRG.RH	1				0.72	1.584
250	01123-50822	BOLT	4				0.012	0.0264

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	66426-22300	ASSY BRAKE LH	1				2.4	5.28
020	67061-22312	COVER BRAKE LH	1				0.95	2.09
030	66591-22330	CAM BRAKE LH	1				0.204	0.4488
040	04811-05170	RING	2				0.001	0.0022
050	04612-00200	CIRCLIP EXTERNAL	1				0.001	0.0022
060	66905-22390	KIT SHOE BRAKE	1				0.35	0.77
070	66591-22350	SPRING RETURN	2				0.003	0.0066
080	66611-22360	DRUM BRAKE	1	<=52629			0	0
080	66709-22360	DRUM BRAKE	1	>=52630	↔		0.95	2.09
090	63753-42350	U JOINT	1				0.038	0.0836
100	05122-50820	PIN JOINT	1				0.009	0.0198
110	04012-50080	WASHER PLAIN	1				0.001	0.0022
120	05511-50215	PIN SPLIT	1				0.001	0.0022
130	04612-00220	CIRCLIP EXTERNAL	1				0.001	0.0022
140	66591-22410	GASKET BRAKE	1				0	0
150	01123-50822	BOLT	4				0.012	0.0264
160	66905-22402	ASSY BRAKE RH	1				2.58	5.676
170	66611-22412	COVER BRAKE RH	1				1.05	2.31
180	66591-22370	CAM BRAKE RH	1				0.204	0.4488
190	04811-05170	RING	2				0.001	0.0022
200	04612-00200	CIRCLIP EXTERNAL	1				0.001	0.0022
210	66905-22390	KIT SHOE BRAKE	1				0.35	0.77
220	66591-22350	SPRING RETURN	2				0.003	0.0066
230	66611-22360	DRUM BRAKE	1	<=52629			0	0
230	66709-22360	DRUM BRAKE	1	>=52630	↔		0.95	2.09
240	63753-42350	U JOINT	1				0.038	0.0836
250	05122-50820	PIN JOINT	1				0.009	0.0198
260	04012-50080	WASHER PLAIN	1				0.001	0.0022
270	05511-50215	PIN SPLIT	1				0.001	0.0022
280	04612-00220	CIRCLIP EXTERNAL	1				0.001	0.0022
290	66591-22410	GASKET BRAKE	1				0	0
300	01123-50822	BOLT	4				0.012	0.0264


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
TRANSMISSION	02T049	TRANSMISSION CASE	100K0193
	02T050	TRANSMISSION CASE COVER	100K0193
	02T051	PROPELLER SHAFT	100K0193
	02T052	1ST SHAFT	100K0193
	02T053	2ND SHAFT	100K0193
	02T054	3RD SHAFT/5TH SHAFT	100K0193
	02T055	4TH SHAFT	100K0193
	02T056	PINION SHAFT GEAR	100K0193
	02T057	REVERSE SHAFT	100K0193
	02T058	REAR PTO	100K0193
	02T059	MID PTO	100K0193
	02T060	FRONT PTO [OPTION]	100K0193
SPEED CHANGE LEVER	02T061	MAIN GEAR SHIFT LEVER	100K0193
	02T062	MAIN GEAR SHIFT FORK	100K0193
	02T063	RANGE GEAR SHIFT LEVER	100K0193
	02T064	PTO GEAR SHIFT LEVER	100K0193
REAR AXLE/REAR WHEEL	02T065	REAR DIFFERENTIAL	100K0193
	02T066	DIFF.LOCK PEDAL	100K0193
	02T067	REAR AXLE	100K0193
	02T068	REAR AXLE CASE	100K0193
	02T06902	REAR WHEEL (8-16)	100K0193
	02T06904	REAR WHEEL (29 X 12.00-15)	100K0193
	02T06906	REAR WHEEL (31 X 13.5-15 BAR) [A]	100K0193
BRAKE	02T070	BRAKE	100K0193
	02T071	BRAKE ROD	100K0193
	02T072	BRAKE PEDAL	100K0193
FRONT AXLE/FRONT WHEEL	02T07601	FRONT WHEEL HUB [WITHOUT BI-SPEED TURN]	100K0193
	02T07602	FRONT WHEEL HUB	100K0193
	02T07701	FRONT GEAR CASE [WITHOUT BI-SPEED TURN]	100K0193
	02T07702	FRONT GEAR CASE	100K0193
	02T078	BEVEL GEAR CASE	100K0193
	02T07901	FRONT AXLE CASE [WITHOUT BI-SPEED TURN]	100K0193
	02T07903	FRONT AXLE CASE [WITH BI-SPEED TURN]	100K0193
	02T08001	FRONT DIFFERENTIAL [WITHOUT BI-SPEED TURN]	100K0193
	02T08003	FRONT DIFFERENTIAL [WITH BI-SPEED TURN]	100K0193
	02T081	BEVEL GEAR [WITH BI-SPEED TURN]	100K0193
	02T082	CLUTCH DISK [WITH BI-SPEED TURN]	100K0193
	02T083	FRONT DRIVE SHAFT	100K0193
	02T084	FRONT DRIVE LEVER	100K0193
	02T085	SHIFT FORK [WITH BI-SPEED TURN]	100K0193
	02T086	SHIFT LEVER [WITH BI-SPEED TURN]	100K0193
	02T087	BI-SPEED TURN ROD [WITH BI-SPEED TURN]	100K0193
	02T088	BI-SPEED TURN LEVER [WITH BI-SPEED TURN]	100K0193
	02T08901	FRONT WHEEL (6-12B)	100K0193
	02T08903	FRONT WHEEL (20.5 X 8.00-10)	100K0193
	02T090	FRONT AXEL FRAME	100K0193
	02T09101	KNUCKLE ARM [WITHOUT BI-SPEED TURN]	100K0193
	02T09103	KNUCKLE ARM [WITH BI-SPEED TURN]	100K0193
STEERING	02T09201	MANUAL STEERING	100K0193
	02T09202	POWER STEERING	100K0193
	02T09301	MANUAL STEERING [COMPONENT PARTS]	100K0193
	02T09302	POWER STEERING [COMPONENT PARTS]	100K0193
HYDRAULIC SYSTEM	02T096	HYDRAULIC PIPE (PS)	100K0193


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

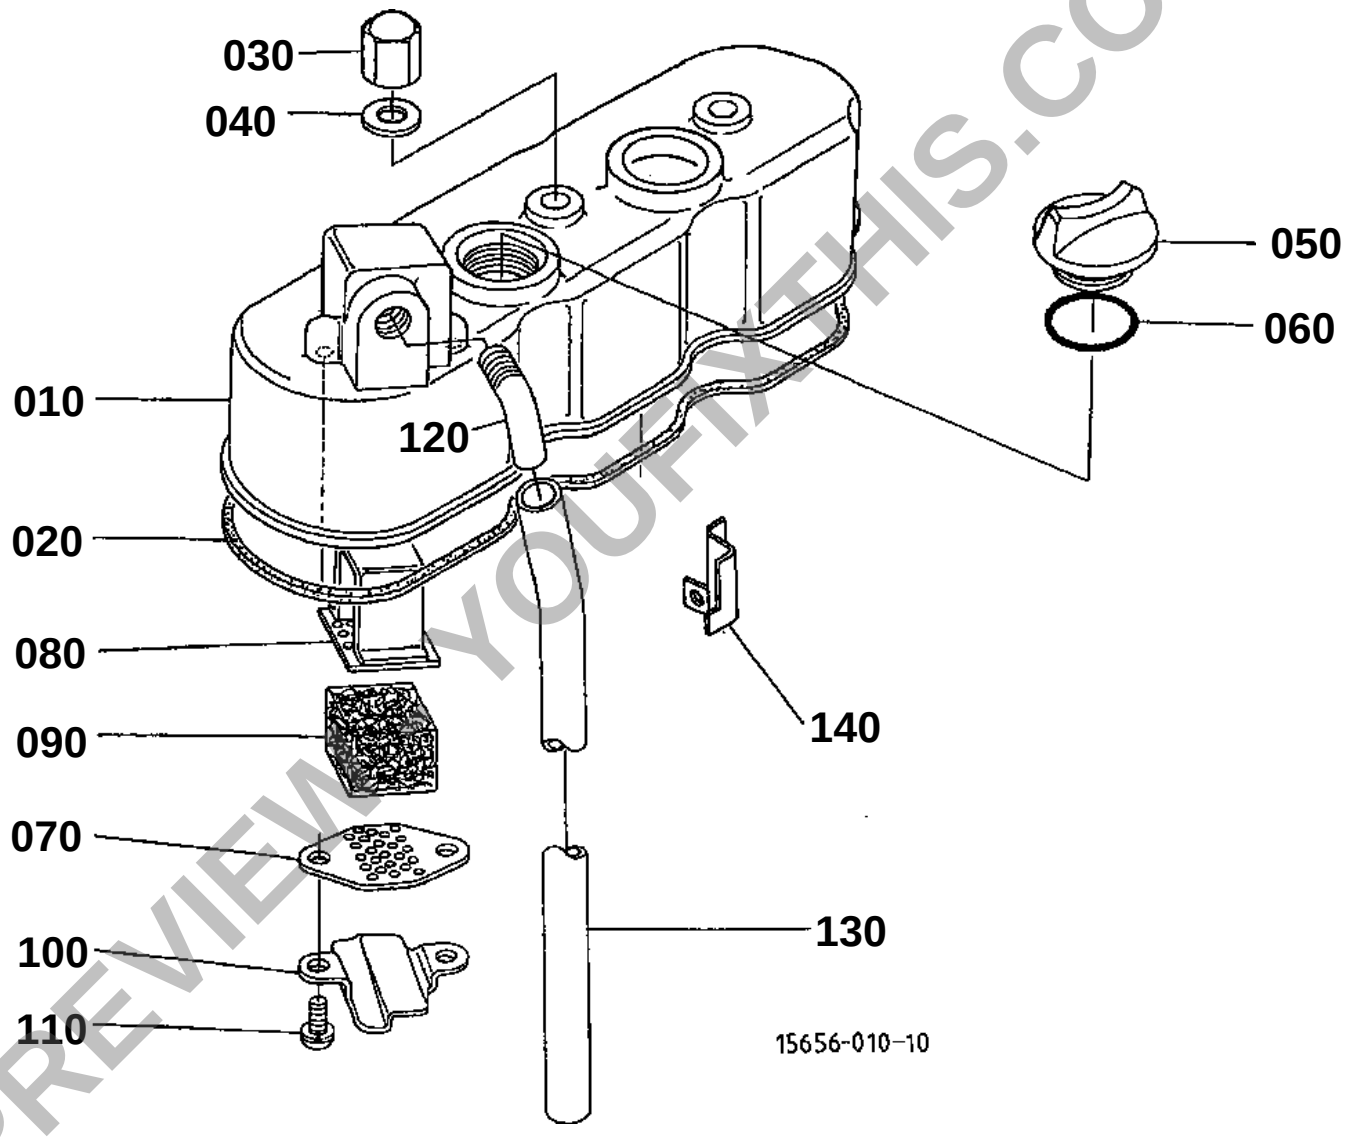

PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

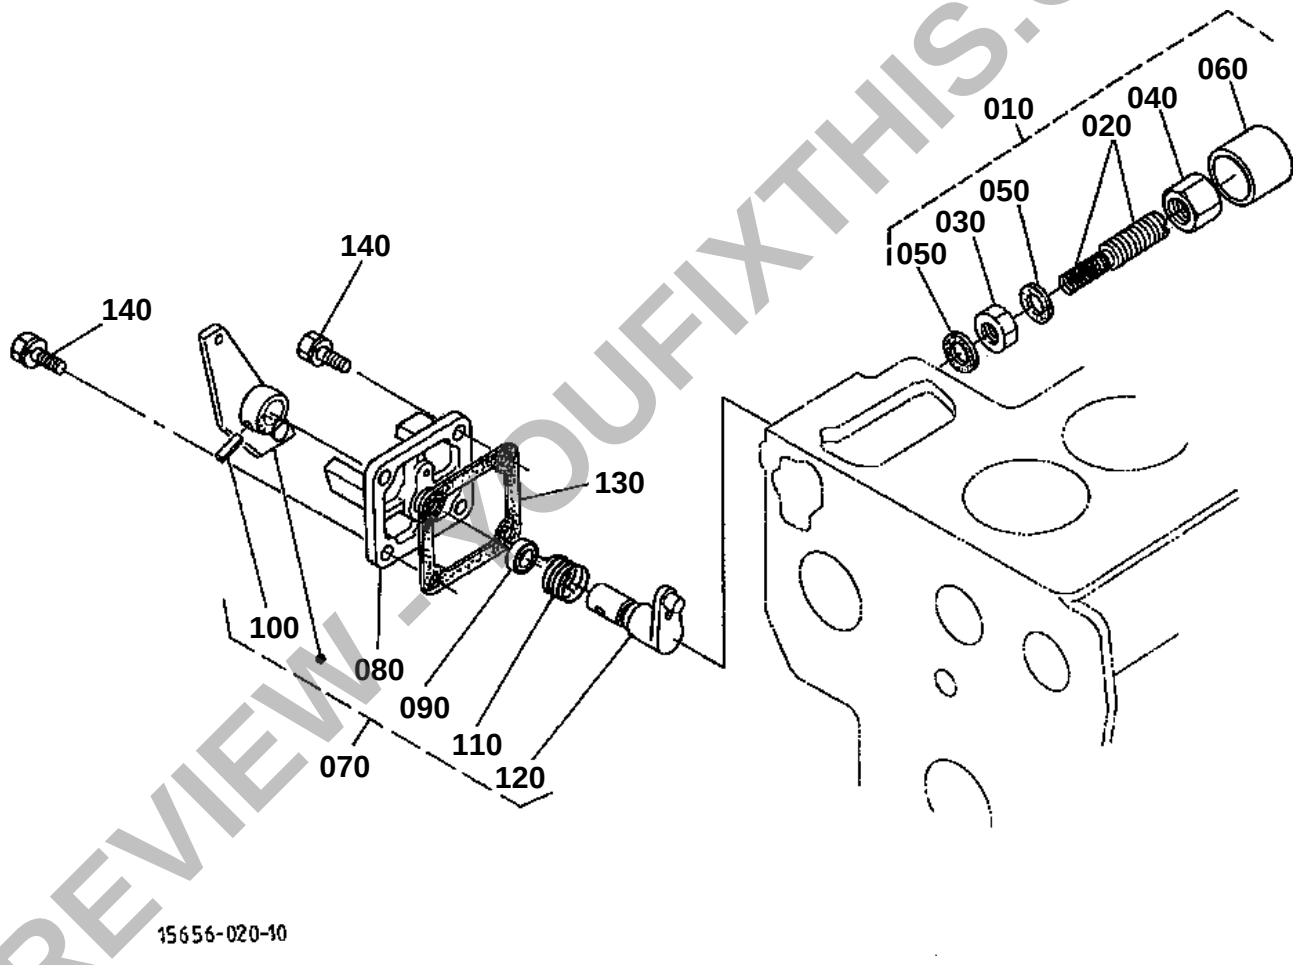


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

060 67211-7624-0


070 04512-50080

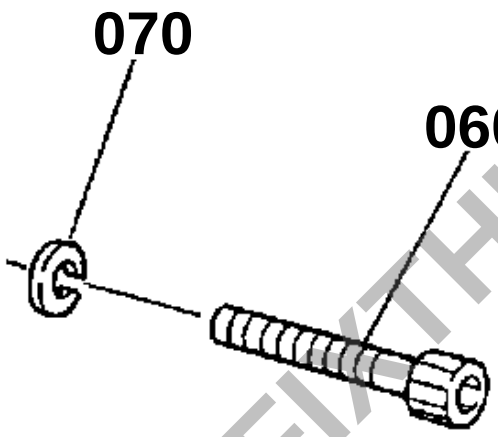

PREVIEW - YOUFIXTHIS.COM

15656-801-10

Download full manual at youfixthis.com

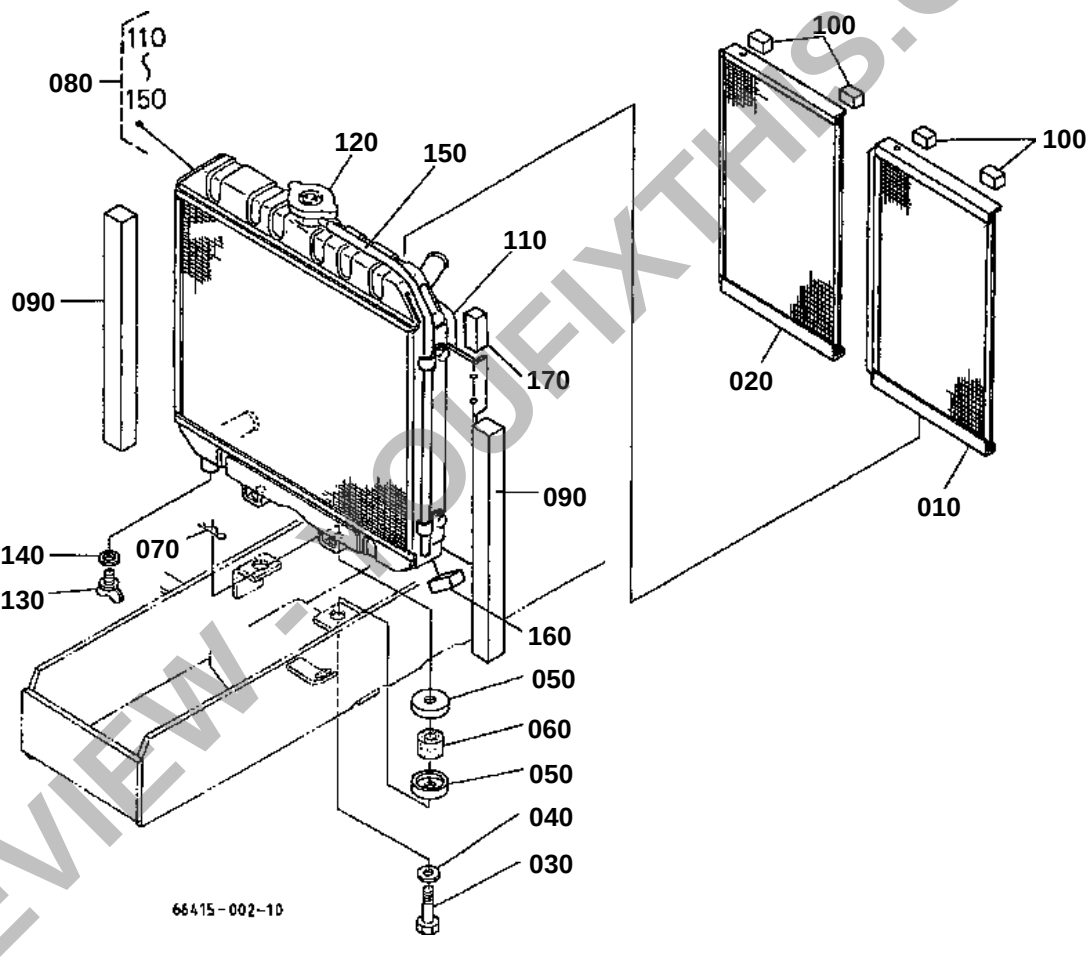

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	66416-55200	ASSY WIRE HARNESS	1				0.4	0.88
020	66416-55150	WIRE HARNESS	1	<=50548			0.63	1.386
020	66416-55153	WIRE HARNESS	1	>=50549	→		0.4	0.88
030	66416-55160	WIRE HARNESS	1				0.23	0.506
040	67111-55190	RING FUSIBLE	1				0.005	0.011
050	66416-55210	WIRE HARNESS	1				0.26	0.572
060	66418-55150	WIRE HARNESS	1				0.07	0.154
070	53581-64150	BAND CORD	7				0.002	0.0044
080	35820-75560	FUSE	2			15A	0.002	0.0044


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

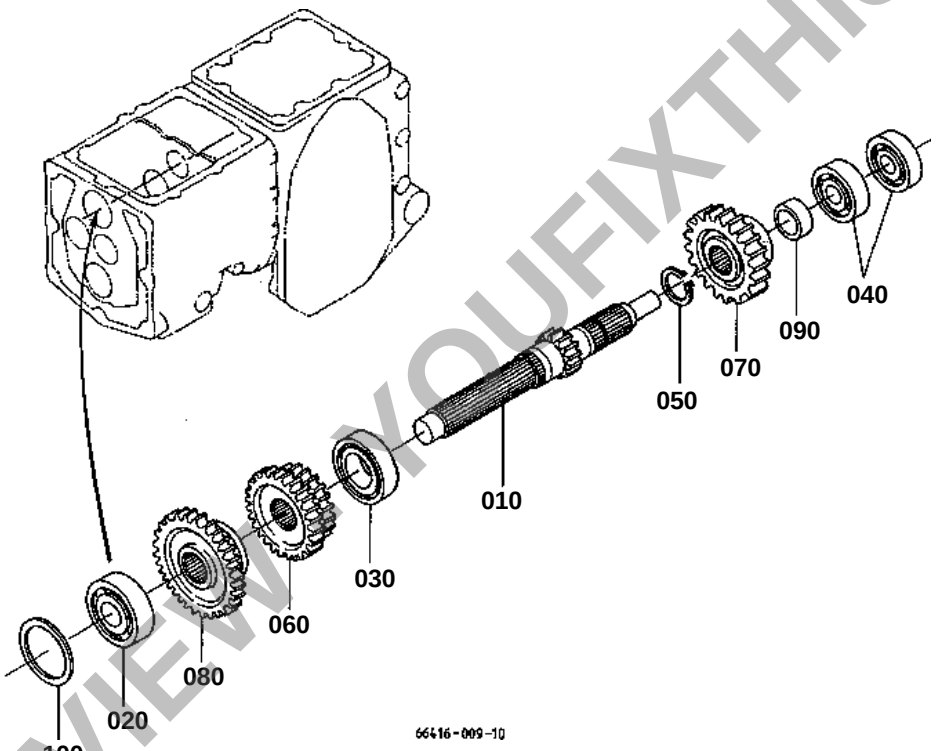


PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

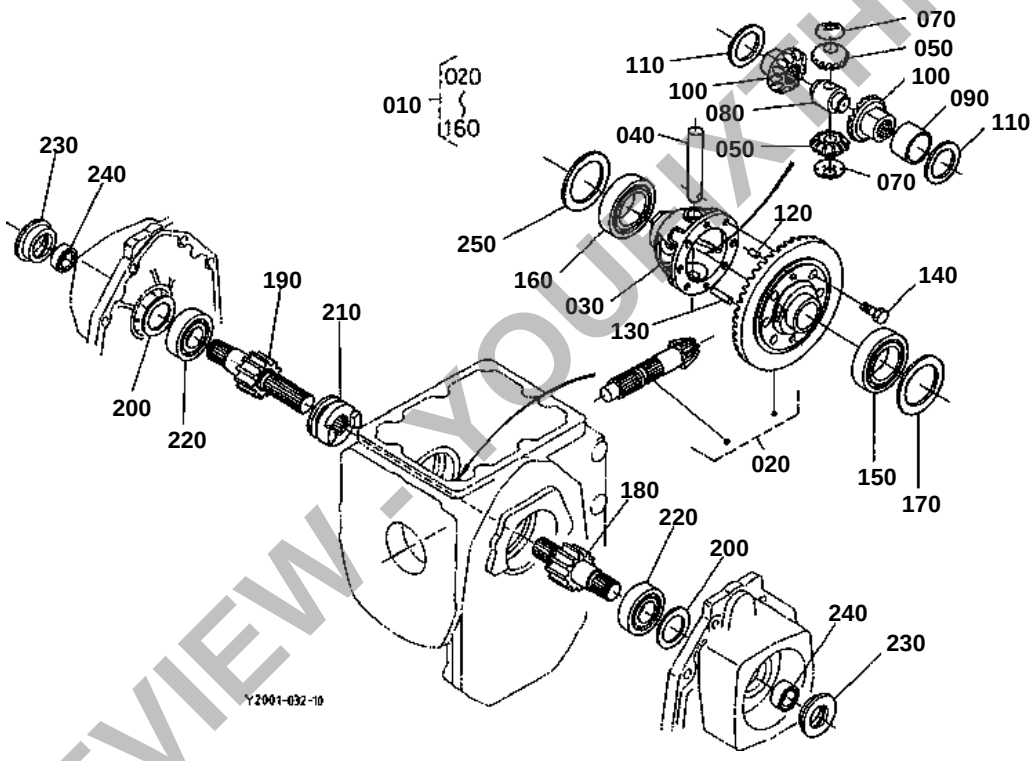

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

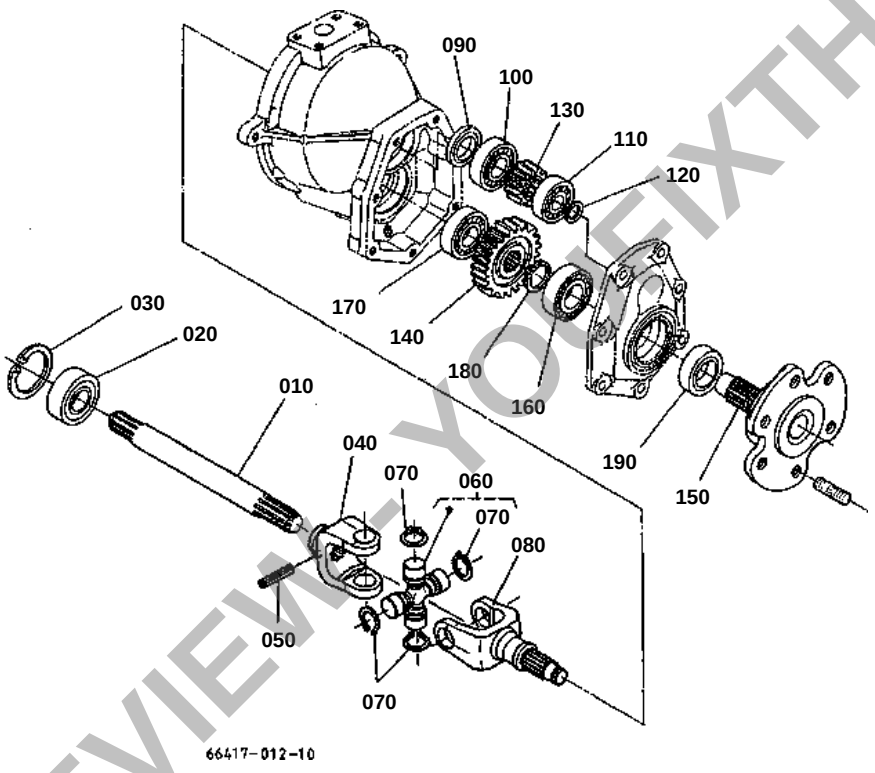

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


030 66591-5722-0

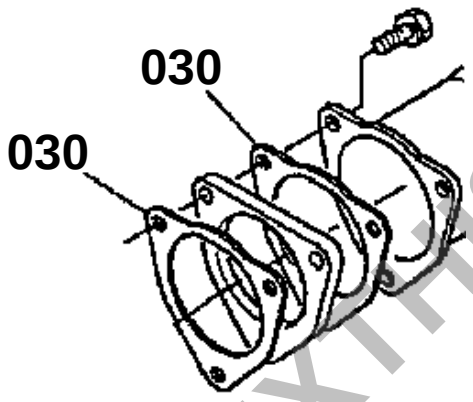

66416-803-10

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

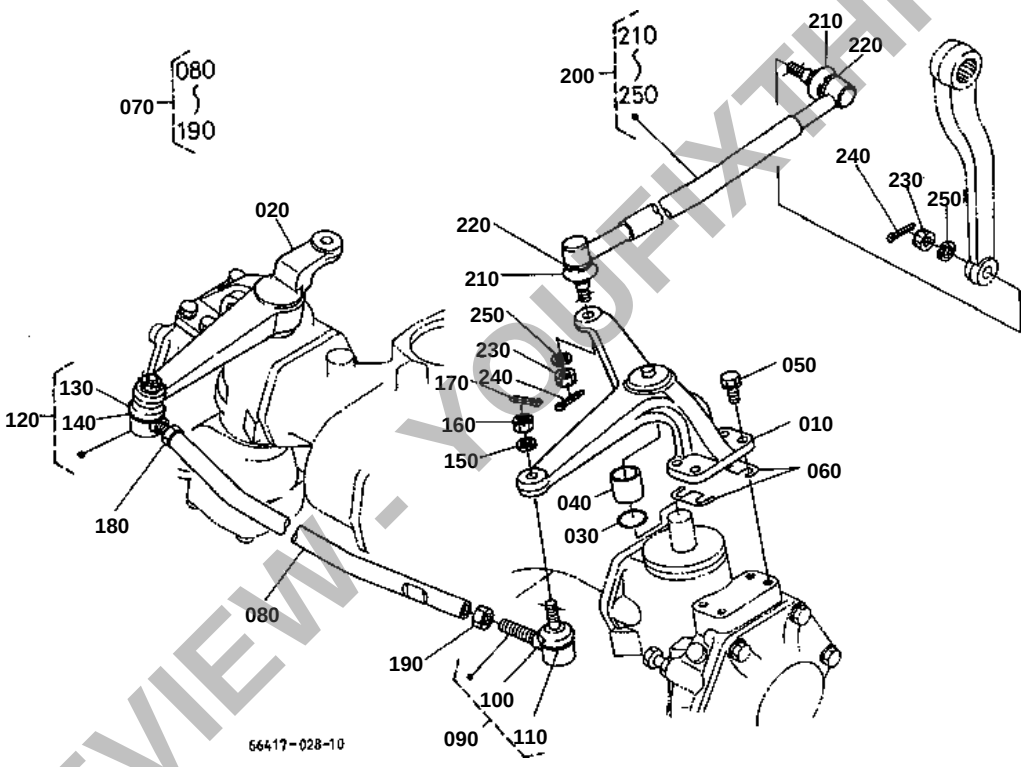

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	66416-36400	ASSY CAP CYLINDER	1	<=52016		REFER TO L. No. 0F10-L0 FOR COMPONENTS.	1.66	3.652
010	66416-36405	ASSY CAP CYLINDER	1	>=52017	≠	REFER TO L. No. 0F10-R0 FOR COMPONENTS.	1.72	3.784
010	66416-36900	ASSY CAP CYLINDER	1	>=52491	≠	REFER TO L. No. 0F11-L0 FOR COMPONENTS.	1.7	3.74
015	01023-50610	BOLT	2	<=52016			0.005	0.011
020	66416-36220	STOPPER	1	<=51772			0.035	0.077
020	66416-36222	STOPPER	1	>=51773	↔		0.03	0.066
020	66416-36240	LEVER HYD.LOCK	1	>=52017	≠		0.03	0.066
020	66416-36242	LEVER HYD.LOCK	1	>=52491	≠		0.04	0.088
030	05411-00440	PIN SPRING	1	<=52016			0.002	0.0044
030	02114-50080	NUT	2	>=52017	≠		0.005	0.011
030	02116-50100	NUT	1	>=52491	≠		0.004	0.0088
040	04810-50600	RING	1				0.002	0.0044
050	04810-05110	O RING	1				0.001	0.0022
060	01123-51250	BOLT	2				0.055	0.121
070	66711-36440	BOLT	2	<=52016			0.045	0.099
070	01123-51240	BOLT	2	>=52017	≠		0.048	0.1056
080	66417-36310	STAY	1	<=52039			0	0
080	66417-36312	STAY	1	>=52040	←		0.1	0.22
090	01123-51025	BOLT	2				0.02	0.044
100	04013-50100	WASHER PLAIN	2				0	0
110	67156-36410	PISTON HYD.	1				0.63	1.386
120	04810-00550	RING	1				0.008	0.0176
130	67156-36420	RING BACK UP	1	<=51383			0.004	0.0088
130	68773-21560	RING BACK UP	1	>=51384	←		0.005	0.011
140	67156-36430	ROD HYD.PISTON	1				0.46	1.012
150	66416-36450	ARM HYDRAULIC	1				0.8	1.76
160	67156-36460	PIN HYD.ARM	1				0.09	0.198
170	01123-50818	BOLT	1				0.012	0.0264
180	66416-36470	SHAFT HYD.ARM	1	<=52016			0	0
180	66416-36472	SHAFT HYD.ARM	1	>=52017	≠		1.35	2.97
190	04612-00320	CIRCLIP EXTERNAL	1				0.004	0.0088
200	09230-30456	SEAL OIL	2				0.011	0.0242
210	66416-36512	ARM LIFT LH	1	<=52016			0	0
210	67950-36515	ARM LIFT LH	1	>=52017	←		1.62	3.564
220	66416-36522	ARM LIFT RH	1	<=52016			0	0
220	67950-36525	ARM LIFT RH	1	>=52017	←		1.7	3.74
230	01123-51055	BOLT	2	<=52016			0.038	0.0836
230	05411-01050	PIN SPRING	2	>=52017	≠		0.019	0.0418
240	66621-36750	PLATE HYD.ARM	1				0.34	0.748
250	67211-36610	BOLT	2				0.015	0.033

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	66416-55113	COVER BONNET REAR	1	<=50784			0	0
010	66416-55114	COVER BONNET REAR	1	>=50785	←		3.5	7.7
020	01754-50616	BOLT FLANGE	2				0.006	0.0132
030	37300-35140	SPACER	2				0.006	0.0132
040	66361-51680	CUSHION	2				0.01	0.022
050	01153-50830	BOLT	2				0	0
060	04015-60080	WASHER PLAIN	2				0.01	0.022
070	67156-41260	CAP POST	1			MANUAL STRG.	0.036	0.0792
070	66418-54950	CAP POST	1			POWER STRG.	0.1	0.22
080	66416-54910	BLOCK DUSTPROOF	1				0.01	0.022
090	38240-29290	PLUG	2	>=50785			0.001	0.0022

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 18 of 302 pages

The full manual includes:

- All 302 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota B1550D Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual