
| Item | Part No. | Description | Book |
|---|---|---|---|
| ENGINE | 010001 | CRANK CASE | 100A0080 |
| | 010002 | OIL PAN | 100A0080 |
| | 010003 | CYLINDER HEAD | 100A0080 |
| | 010004 | GEAR CASE | 100A0080 |
| | 010005 | HEAD COVER | 100A0080 |
| | 010100 | MAIN BEARING CASE | 100A0080 |
| | 010101 | CAMSHAFT AND IDLE GEAR SHAFT | 100A0080 |
| | 010102 | PISTON AND CRANK SHAFT | 100A0080 |
| | 010103 | FLYWHEEL | 100A0080 |
| | 010105 | FUEL CAMSHAFT AND GOVERNOR SHAFT | 100A0080 |
| | 010201 | STOP SOLENOID | 100A0080 |
| | 010202 | INJECTION PUMP | 100A0080 |
| | 010203 | INJECTION PUMP [COMPONENT PARTS] | 100A0080 |
| | 010204 | GOVERNOR | 100A0080 |
| | 010205 | SPEED CONTROL PLATE | 100A0080 |
| | 010206 | NOZZLE HOLDER AND GLOW PLUG | 100A0080 |
| | 010207 | NOZZLE HOLDER [COMPONENT PARTS] | 100A0080 |
| | 010500 | WATER FLANGE AND THERMOSTAT | 100A0080 |
| | 010501 | WATER PUMP | 100A0080 |
| | 010600 | VALVE AND ROCKER ARM | 100A0080 |
| | 010601 | INLET MANIFOLD | 100A0080 |
| | 010602 | EXHAUST MANIFOLD | 100A0080 |
| | 01090001 | UPPER GASKET KIT | 100A0080 |
| | 01090002 | LOWER GASKET KIT | 100A0080 |
| ELECTRICAL SYSTEM | 01A521 | DYNAMO | 100A0080 |
| | 01A523 | DYNAMO [COMPONENT PARTS] | 100A0080 |
| CLUTCH | 01C101 | CLUTCH | 100A0080 |
| HYDRAULIC SYSTEM | 01J120 | HYDRAULIC PUMP | 100A0080 |
| | 01J125 | HYDRAULIC PUMP [COMPONENT PARTS] | 100A0080 |
| ENGINE | 02060301 | AIR CLEANER | 100A0080 |
| | 02060302 | AIR CLEANER | 100A0080 |
| | 02060303 | AIR CLEANER (DOUBLE) [OPTION] | 100A0080 |
| | 020605 | MUFFLER | 100A0080 |
| FUEL SYSTEM | 02A001 | ACCELERATOR LEVER | 100A0080 |
| | 02A101 | FUEL TANK | 100A0080 |
| | 02A110 | FUEL PIPE | 100A0080 |
| | 02A11001 | FUEL PIPE | 100A0080 |
| | 02A130 | FUEL FILTER [COMPONENT PARTS] | 100A0080 |
| COOLING WATER SYSTEM | 02A401 | FAN | 100A0080 |
| | 02A410 | WATER PIPE | 100A0080 |
| | 02A420 | RADIATOR | 100A0080 |
| ELECTRICAL SYSTEM | 02A515 | ALTERNATOR [CA] | 100A0080 |
| | 02A520 | ALTERNATOR [COMPONENT PARTS] [CA] | 100A0080 |
| | 02A525 | STARTER | 100A0080 |
| | 02A530 | STARTER [COMPONENT PARTS] | 100A0080 |
| | 02A535 | BATTERY | 100A0080 |
| | 02B115 | PANEL BOARD | 100A0080 |
| | 02B120 | PANEL BOARD [COMPONENT PARTS] | 100A0080 |
| | 02B301 | HEAD LIGHT | 100A0080 |
| | 02B302 | TAIL LIGHT/HAZARD LIGHT/WORKING LIGHT | 100A0080 |
| | 02B50101 | ELECTRICAL WIRING | 100A0080 |
| | 02B50102 | ELECTRICAL WIRING [CA] | 100A0080 |
| CLUTCH | 02C110 | CLUTCH ROD | 100A0080 |
| | 02C301 | CLUTCH PEDAL | 100A0080 |
| | 02C401 | CLUTCH HOUSING | 100A0080 |
| FRAME | 02C415 | FRAME | 100A0080 |



PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

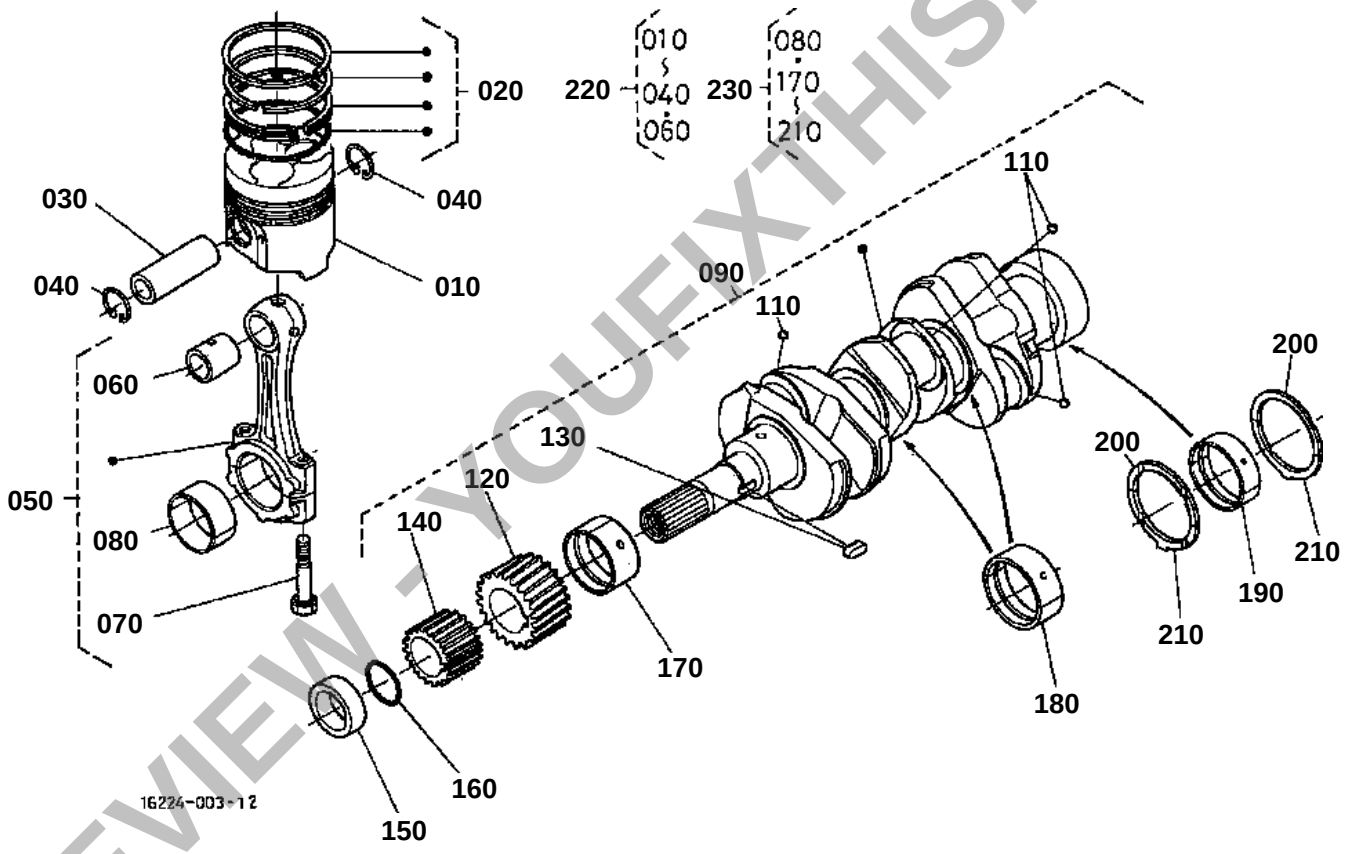


PREVIEW - YOUFIXTHIS.COM



Download full manual at youfixthis.com


↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

| REF.No | Part No. | Description | Q'ty | S.No. | I/C | REMARKS | Weight (kgf) | Weight (lb) |
|---|---|---|---|---|---|---|---|---|
| 010 | 16050-21110 | PISTON | 3 | | | STD | 0.4 | 0.88 |
| 010 | 16050-21910 | PISTON | 3 | | | +0.50MM | 0.4 | 0.88 |
| 020 | 16271-21050 | ASSY PISTON RING | 3 | | | STD | 0.05 | 0.11 |
| 020 | 16271-21090 | ASSY PISTON RING | 3 | | | +0.50MM | 0.06 | 0.132 |
| 030 | 16241-21310 | PIN PISTON | 3 | | | | 0.135 | 0.297 |
| 040 | 16241-21330 | CIR CLIP PISTON PIN | 6 | | | | 0.002 | 0.0044 |
| 050 | 16241-22012 | ASSY ROD CONNECTING | 3 | | | | 0.545 | 1.199 |
| 060 | 16241-21980 | BUSH PISTON PIN | 3 | | | | 0.03 | 0.066 |
| 070 | 16241-22140 | BOLT CONNECTING ROD | 6 | | | | 0.024 | 0.0528 |
| 080 | 16241-22310 | METAL CRANKPIN | 3 | | | STD SET | 0.038 | 0.0836 |
| 080 | 16241-22970 | METAL CRANKPIN | 3 | | | -0.20MM SET | 0.08 | 0.176 |
| 080 | 16241-22980 | METAL CRANKPIN | 3 | | | -0.40MM SET | 0.1 | 0.22 |
| 090 | 16231-23013 | COMP.CRANKSHAFT | 1 | | | | 9.35 | 20.57 |
| 100 | 99999-99999 | BLANK | 0 | | | | 0 | 0 |
| 110 | 07715-00401 | BALL | 3 | | | | 0.001 | 0.0022 |
| 120 | 16241-24110 | GEAR CRANK | 1 | | | | 0.15 | 0.33 |
| 130 | 16271-95230 | KEY | 1 | | | | 0.005 | 0.011 |
| 140 | 16241-35630 | GEAR OIL PUMP DRIVE | 1 | | | | 0.102 | 0.2244 |
| 150 | 16271-23250 | COLLAR CRANKSHAFT | 1 | | | | 0.055 | 0.121 |
| 160 | 04811-10280 | O RING | 1 | <=WH4333 | | | 0.001 | 0.0022 |
| 160 | 04814-10280 | RING | 1 | >=WJ0001 | ← | | 0.001 | 0.0022 |
| 170 | 16241-23470 | METAL CRANKSHAFT | 1 | | | STD | 0.06 | 0.132 |
| 170 | 16241-23910 | METAL CRANKSHAFT | 1 | | | -0.20MM | 0.03 | 0.066 |
| 170 | 16241-23920 | METAL CRANKSHAFT | 1 | | | -0.40MM | 0.068 | 0.1496 |
| 180 | 16241-23480 | METAL CRANKSHAFT | 2 | | | STD SET | 0.05 | 0.11 |
| 180 | 16241-23930 | METAL CRANKSHAFT | 2 | | | -0.20MM SET | 0.1 | 0.22 |
| 180 | 16241-23940 | METAL CRANKSHAFT | 2 | | | -0.40MM SET | 0.05 | 0.11 |
| 190 | 16241-23490 | METAL CRANKSHAFT | 1 | <=XC9968 | | STD SET | 0 | 0 |
| 190 | 16292-23490 | METAL CRANKSHAFT | 1 | >=XE0001 | ↔ | STD SET | 0.07 | 0.154 |
| 190 | 16241-23860 | METAL CRANKSHAFT | 1 | <=XC9968 | | -0.20MM SET | 0.1 | 0.22 |
| 190 | 16292-23860 | METAL CRANKSHAFT | 1 | >=XE0001 | ↔ | -0.20MM SET | 0.05 | 0.11 |
| 190 | 16241-23870 | METAL CRANKSHAFT | 1 | <=XC9968 | | -0.40MM SET | 0.068 | 0.1496 |
| 190 | 16292-23870 | METAL CRANKSHAFT | 1 | >=XE0001 | ↔ | -0.40MM SET | 0.05 | 0.11 |
| 200 | 15521-23530 | METAL SIDE | 2 | | | STD | 0.01 | 0.022 |
| 200 | 15521-23950 | METAL SIDE | 2 | | | +0.20MM | 0.01 | 0.022 |
| 200 | 15521-23960 | METAL SIDE | 2 | | | +0.40MM | 0.01 | 0.022 |
| 210 | 19202-23540 | METAL SIDE | 2 | | | STD | 0.01 | 0.022 |
| 210 | 19202-23970 | METAL SIDE | 2 | | | +0.20MM | 0.01 | 0.022 |
| 210 | 19202-23980 | METAL SIDE | 2 | | | +0.40MM | 0.01 | 0.022 |
| 220 | 07916-26840 | KIT RING PISTON | 3 | | | STD | 0.25 | 0.55 |
| 220 | 07916-26850 | KIT RING PISTON | 3 | | | +0.50MM | 0.62 | 1.364 |
| 230 | 07916-28240 | KIT METAL ENGINE | 1 | | | STD | 0.1 | 0.22 |
| 230 | 07916-28760 | KIT METAL ENGINE | 1 | | | -0.20MM/+0.20MM | 0.34 | 0.748 |
| 230 | 07916-28770 | KIT METAL ENGINE | 1 | | | -0.40MM/+0.40MM | 0.36 | 0.792 |



PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

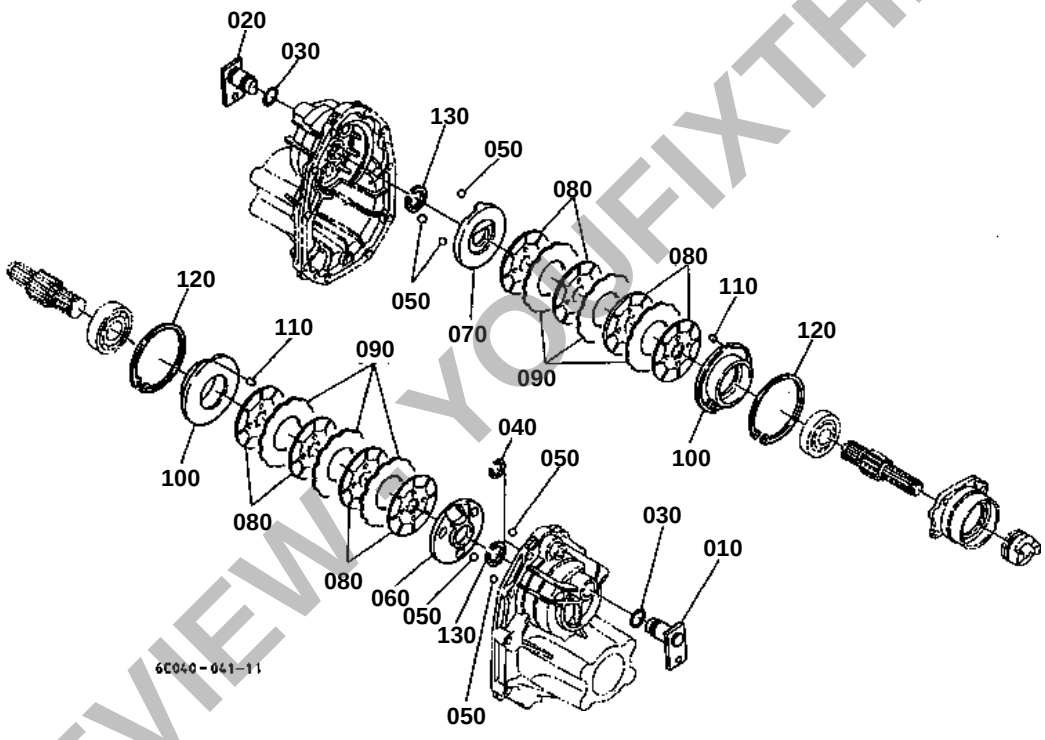


PREVIEW ONLY YOUFIXTHIS.COM




Download full manual at youfixthis.com

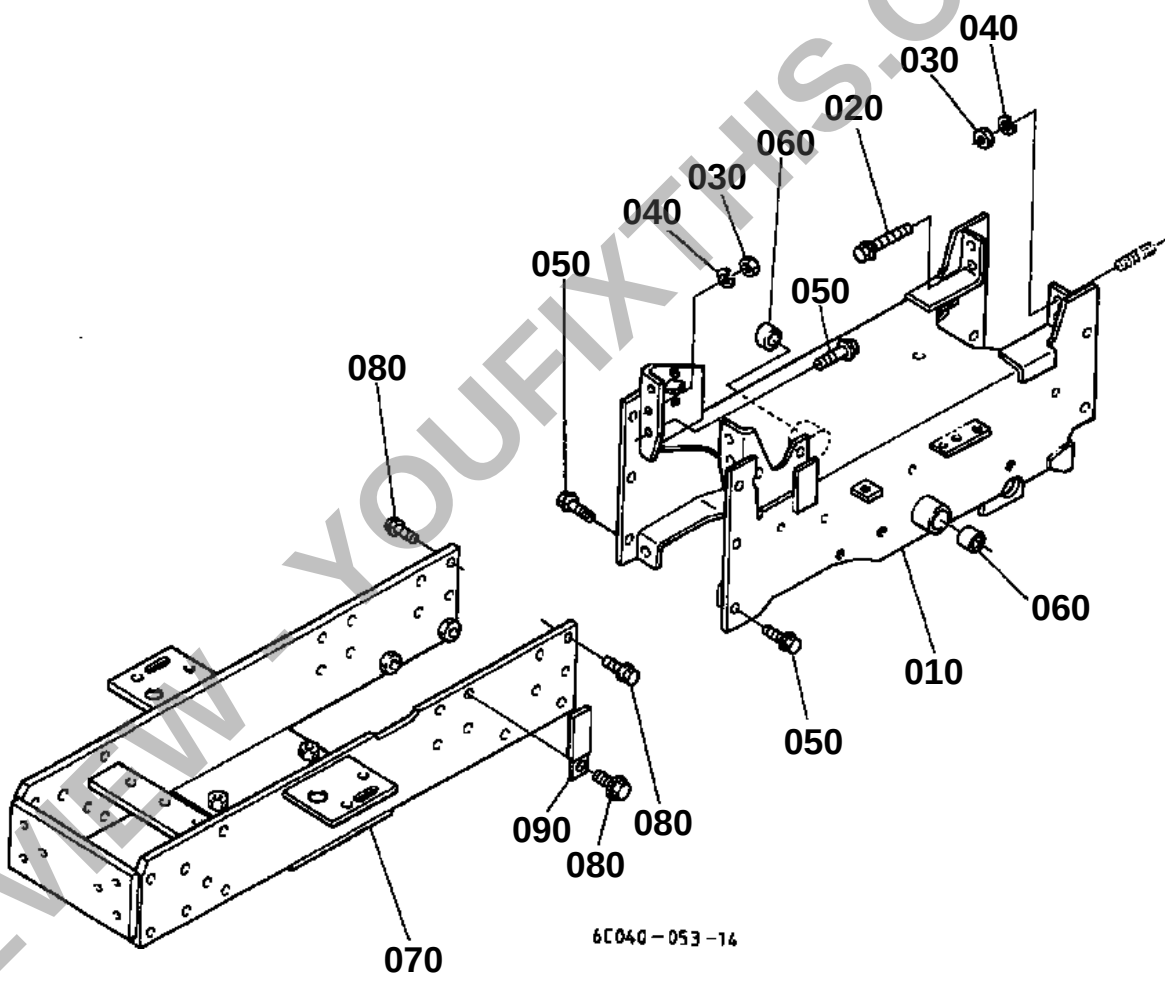


PREVIEW - YOUFIXTHIS.COM




Download full manual at youfixthis.com

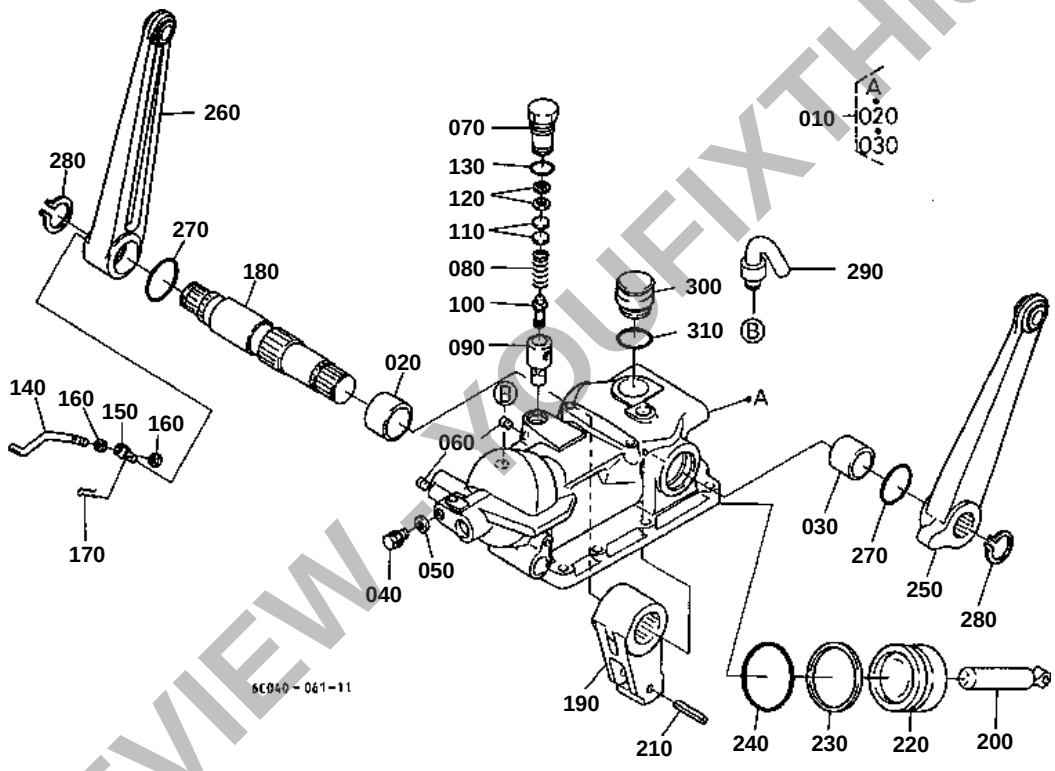


PREVIEW.YOUFIXTHIS.COM



Download full manual at youfixthis.com

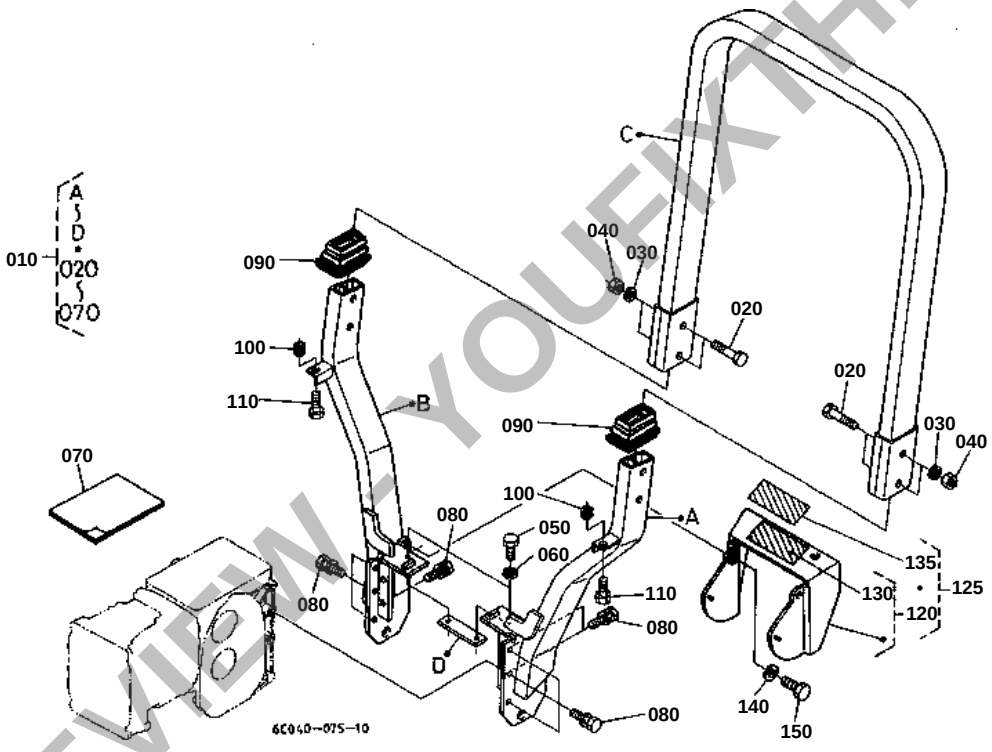


PREVIEW - YOUFIXTHIS.COM



Download full manual at youfixthis.com

| Item | Part No. | Description | Book |
|---|---|---|---|
| TRANSMISSION | 02C420 | TRANSMISSION CASE | 100A0080 |
| | 02C425 | DIFFERENTIAL GEAR CASE | 100A0080 |
| | 02C427 | REAR AXLE CASE | 100A0080 |
| | 02D001 | CLUTCH SHAFT/PRORELLER SHAFT | 100A0080 |
| | 02D010 | HST | 100A0080 |
| | 02D015 | HST [COMPONENT PARTS] | 100A0080 |
| | 02D105 | 2ND SHAFT/3RD SHAFT/4TH SHAFT | 100A0080 |
| | 02D135 | 5TH SHAFT/PTO SHAFT | 100A0080 |
| | 02D137 | MID PTO | 100A0080 |
| REAR AXLE | 02D140 | REAR DIFFERENTIAL | 100A0080 |
| | 02D143 | FRONT WHEEL PROPELLER SHAFT | 100A0080 |
| | 02D301 | REAR AXLE | 100A0080 |
| BRAKE | 02E001 | BRAKE | 100A0080 |
| | 02E015 | PARKING BRAKE LEVER | 100A0080 |
| SPEED CHANGE LEVER | 02F010 | SPEED CHANGE LEVER | 100A0080 |
| | 02F020 | SPEED CONTROL PEDAL | 100A0080 |
| | 02F030 | SPEED SET LEVER | 100A0080 |
| | 02F110 | RANGE GEAR SHIFT LEVER | 100A0080 |
| | 02F113 | FRONT WHEEL DRIVE LEVER | 100A0080 |
| | 02F125 | PTO GEAR SHIFT LEVER | 100A0080 |
| | 02F135 | BI-SPEED TURN LEVER | 100A0080 |
| | 02F140 | POSITION CONTROL LEVER | 100A0080 |
| | 02F201 | BRAKE PEDAL | 100A0080 |
| | 02F205 | DIFFERENTIAL LOCK PEDAL | 100A0080 |
| FRONT AXLE | 02G115 | FRONT DIFFERENTIAL | 100A0080 |
| | 02G123 | BEVEL GEAR CASE | 100A0080 |
| | 02G12501 | FRONT AXLE CASE | 100A0080 |
| | 02G12502 | FRONT AXLE CASE | 100A0080 |
| | 02G13001 | FRONT AXLE | 100A0080 |
| | 02G13002 | FRONT AXLE | 100A0080 |
| | 02G133 | BI-SPEED TURN CLUTCH | 100A0080 |
| | 02G135 | FRONT DRIVE SHAFT | 100A0080 |
| | 02G201 | BI-SPEED TURN GEAR CASE | 100A0080 |
| | 02G205 | BI-SPEED TURN CASE | 100A0080 |
| | 02G210 | BI-SPEED TURN SHIFT LEVER | 100A0080 |
| STEERING | 02H003 | DRAG LINK | 100A0080 |
| | 02H005 | TIE ROD | 100A0080 |
| | 02H101 | STEERING HANDLE | 100A0080 |
| | 02H110 | STEERING CONTROLLER | 100A0080 |
| | 02H11501 | STEERING CONTROLLER [COMPONENT PARTS] | 100A0080 |
| | 02H11502 | STEERING CONTROLLER [COMPONENT PARTS] | 100A0080 |
| HYDRAULIC SYSTEM | 02J201 | HYDRAULIC OIL LINE (SUCTION) | 100A0080 |
| | 02J203 | FLOW DIVIDER VALVE [COMPONENT PARTS] | 100A0080 |
| | 02J215 | HYDRAULIC OIL LINE (STEERING) | 100A0080 |
| | 02J230 | HYDRAULIC OIL LINE (T/M) | 100A0080 |
| | 02J235 | HYDRAULIC OIL LINE (HST) | 100A0080 |
| | 02J240 | HYDRAULIC OIL LINE (OIL COOLER) | 100A0080 |
| | 02J301 | HYDRAULIC CYLINDER CASE | 100A0080 |
| | 02J405 | CONTROL VALVE | 100A0080 |
| | 02J41001 | CONTROL VALVE [COMPONENT PARTS] | 100A0080 |
| | 02J41002 | CONTROL VALVE [COMPONENT PARTS] | 100A0080 |
| | 02K101 | LIFT ROD | 100A0080 |
| | 02K115 | LOWER LINK | 100A0080 |
| | 02K120 | TOP LINK | 100A0080 |
| HOOD(BONNET)/ROPS | 02M101 | FRONT GRILLE | 100A0080 |
| | 02M105 | HOOD (BONNET) | 100A0080 |



PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

| REF.No | Part No. | Description | Q'ty | S.No. | I/C | REMARKS | Weight (kgf) | Weight (lb) |
|---|---|---|---|---|---|---|---|---|
| 010 | 6C040-59250 | ASSY DYNAMO | 1 | | | REFER TO L.No.C06-L FOR COMPONENTS. | 1.33 | 2.926 |
| 020 | 6C040-59310 | COLLAR | 1 | | | | 0.005 | 0.011 |
| 030 | 01123-50825 | BOLT | 1 | <=741870 | | | 0.013 | 0.0286 |
| 030 | 01123-50825 | BOLT | 1 | >=10001 | | | 0.013 | 0.0286 |
| 030 | 01123-50830 | BOLT | 1 | >=139736 | ↔ | | 0.015 | 0.033 |
| 040 | 01153-50860 | BOLT | 1 | | | | 0.024 | 0.0528 |
| 050 | 02112-50080 | NUT | 1 | | | | 0.003 | 0.0066 |
| 060 | 04012-50080 | WASHER PLAIN | 1 | | | | 0.001 | 0.0022 |
| 070 | 04015-60080 | WASHER PLAIN | 1 | | | | 0.01 | 0.022 |
| 080 | 04512-60080 | WASHER SPRING | 1 | | | | 0.002 | 0.0044 |
| 090 | 16225-64420 | STAY DYNAMO | 1 | | | | 0.08 | 0.176 |
| 100 | 01023-50618 | BOLT | 1 | | | | 0.006 | 0.0132 |
| 110 | 04012-50060 | WASHER PLAIN | 1 | | | | 0.001 | 0.0022 |
| 120 | 16271-83370 | CLAMP CORD | 1 | | | | 0.005 | 0.011 |
| 130 | 19482-72530 | BELT FAN | 1 | | | | 0.08 | 0.176 |

PREVIEW - YOUFIXTHIS.COM



Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

| REF.No | Part No. | Description | Q'ty | S.No. | I/C | REMARKS | Weight (kgf) | Weight (lb) |
|---|---|---|---|---|---|---|---|---|
| 010 | 6C031-55460 | ASSY WIRE HARNESS | 1 | <=72035 | | | 0 | 0 |
| 010 | 6C021-55463 | ASSY WIRE HARNESS | 1 | >=72036 | ← | | 0.96 | 2.112 |
| 020 | 17478-60080 | FUSE | 1 | | | 50A | 0.008 | 0.0176 |
| 030 | 6C040-47490 | LABEL FUSE BOX | 1 | | | ENGLISH | 0.001 | 0.0022 |
| 040 | 66426-80010 | FUSE AUTO | 2 | | | 5A | 0.01 | 0.022 |
| 050 | 36730-75550 | FUSE AUTO | 1 | | | 10A | 0.001 | 0.0022 |
| 060 | 35820-75560 | FUSE AUTO | 1 | | | 15A | 0.002 | 0.0044 |
| 070 | 01202-50620 | BOLT | 2 | | | | 0.007 | 0.0154 |
| 080 | 6C040-55480 | WIRE HARNESS | 2 | | | | 0.005 | 0.011 |
| 090 | 53581-64150 | BAND CORD | 7 | <=72035 | | | 0.002 | 0.0044 |
| 090 | 53581-64150 | BAND CORD | 8 | >=72036 | | | 0.002 | 0.0044 |



PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

160 04011-50100




**160**

PREVIEW - YOUFIXTHIS.COM

6C050-804-10



Download full manual at youfixthis.com

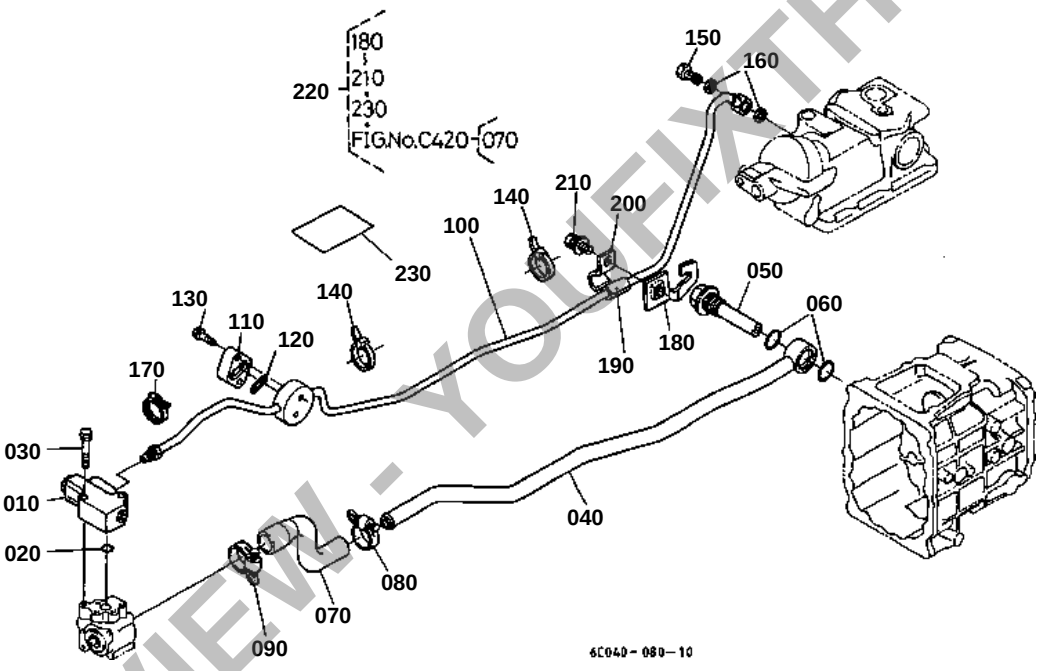


PREVIEW - YOUFIXTHIS.COM



Download full manual at youfixthis.com

# PREVIEW ONLY

You're viewing 12 of 295 pages

## The full manual includes:

- All 295 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

**GET FULL MANUAL NOW**

**Kubota B2100HSD, B1700HSD, B2400HSD Parts Catalog**

**Scan or click anywhere**
**youfixthis.com**

*Click anywhere on this page to get the full manual*