

Item	Part No.	Description	Book
ENGINE	010001	CRANKCASE	100K0566
	010002	OIL PAN	100K0566
	010003	CYLINDER HEAD	100K0566
	010004	GEAR CASE	100K0566
	010005	HEAD COVER	100K0566
	010006	OIL FILTER	100K0566
	010007	DIPSTICK AND GUIDE	100K0566
	010100	MAIN BEARING CASE	100K0566
	010101	CAMSHAFT AND IDLE GEAR SHAFT	100K0566
	010102	PISTON AND CRANKSHAFT	100K0566
	010103	FLYWHEEL	100K0566
	010104	CLUTCH	100K0566
	010105	FUEL CAMSHAFT AND GOVERNOR SHAFT	100K0566
	010200	ENGINE STOP LEVER	100K0566
	010202	INJECTION PUMP	100K0566
	010204	GOVERNOR	100K0566
	01020401	GOVERNOR	100K0566
	010205	SPEED CONTROL PLATE	100K0566
	010206	NOZZLE HOLDER AND GLOW PLUG	100K0566
	010207	NOZZLE HOLDER [COMPONENT PARTS]	100K0566
	010301	FUEL PUMP(MECHANICAL)	100K0566
	010400	DYNAMO AND PULLEY	100K0566
	010401	DYNAMO [COMPONENT PARTS]	100K0566
	010500	WATER FLANGE AND THERMOSTAT	100K0566
	010501	WATER PUMP	100K0566
	010600	VALVE AND ROCKER ARM	100K0566
	010601	INLET MANIFOLD	100K0566
	010602	EXHAUST MANIFOLD	100K0566
	010603	AIR CLEANER	100K0566
	010605	MUFFLER	100K0566
	010700	HYDRAULIC PUMP	100K0566
	010701	HYDRAULIC PUMP [COMPONENT PARTS]	100K0566
	010900	UPPER GASKET KIT	100K0566
	010901	LAWER GASKET KIT	100K0566
	010910	ALTERNATOR KIT	100K0566
	010911	ALTERNATOR [COMPONENT PARTS]	100K0566
	01A001	ACCELERATOR LEVER	100K0566
FUEL SYSTEM	01A101	FUEL TANK	100K0566
	01A110	FUEL PIPE	100K0566
	01A11001	FUEL PIPE	100K0566
	01A130	FUEL FILTER [COMPONENT PARTS]	100K0566
COOLING WATER SYSTEM	01A401	FAN	100K0566
	01A410	WATER PIPE	100K0566
	01A42003	RADIATOR [2WD]	100K0566
	01A430	RESERVE TANK	100K0566
ELECTRICAL SYSTEM	01A510	STOP SOLENOID	100K0566
	01A525	STARTER	100K0566
	01A530	STARTER [COMPONENT PARTS]	100K0566
	01A53501	BATTERY [EXCEPT[AU]]	100K0566
	01B101	SWITCH	100K0566
	01B10101	SWITCH	100K0566
	01B115	PANEL BOARD	100K0566
	01B120	PANEL BOARD [COMPONENT PARTS]	100K0566
	01B301	HEAD LIGHT	100K0566
	01B302	HAZARD LIGHT	100K0566
	01B304	TAIL LIGHT	100K0566
	01B501	ELECTRICAL WIRING	100K0566
	01B50101	ELECTRICAL WIRING	100K0566
CLUTCH	01C110	CLUTCH ROD	100K0566

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

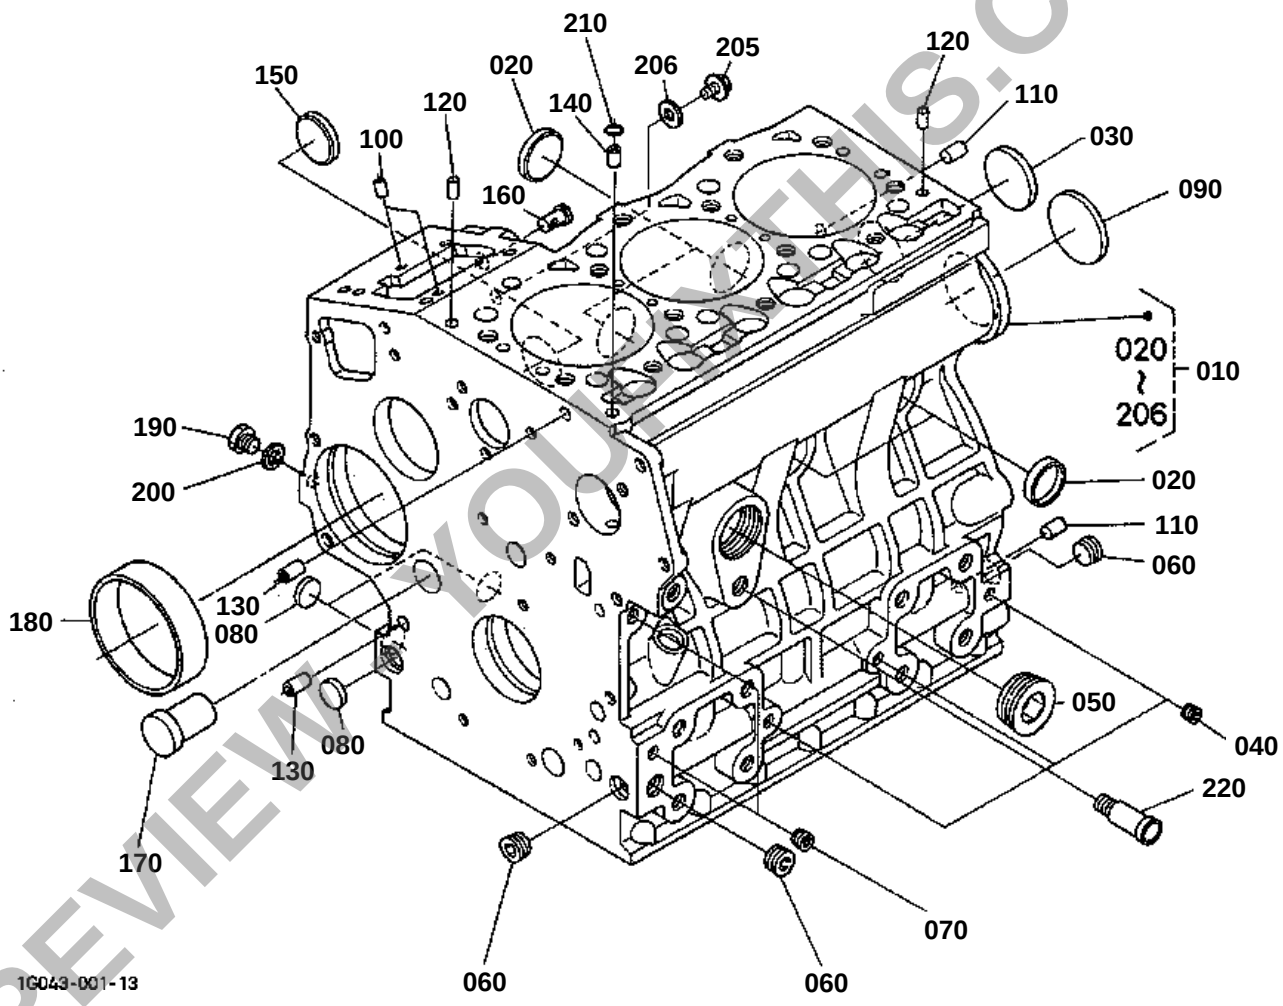


PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

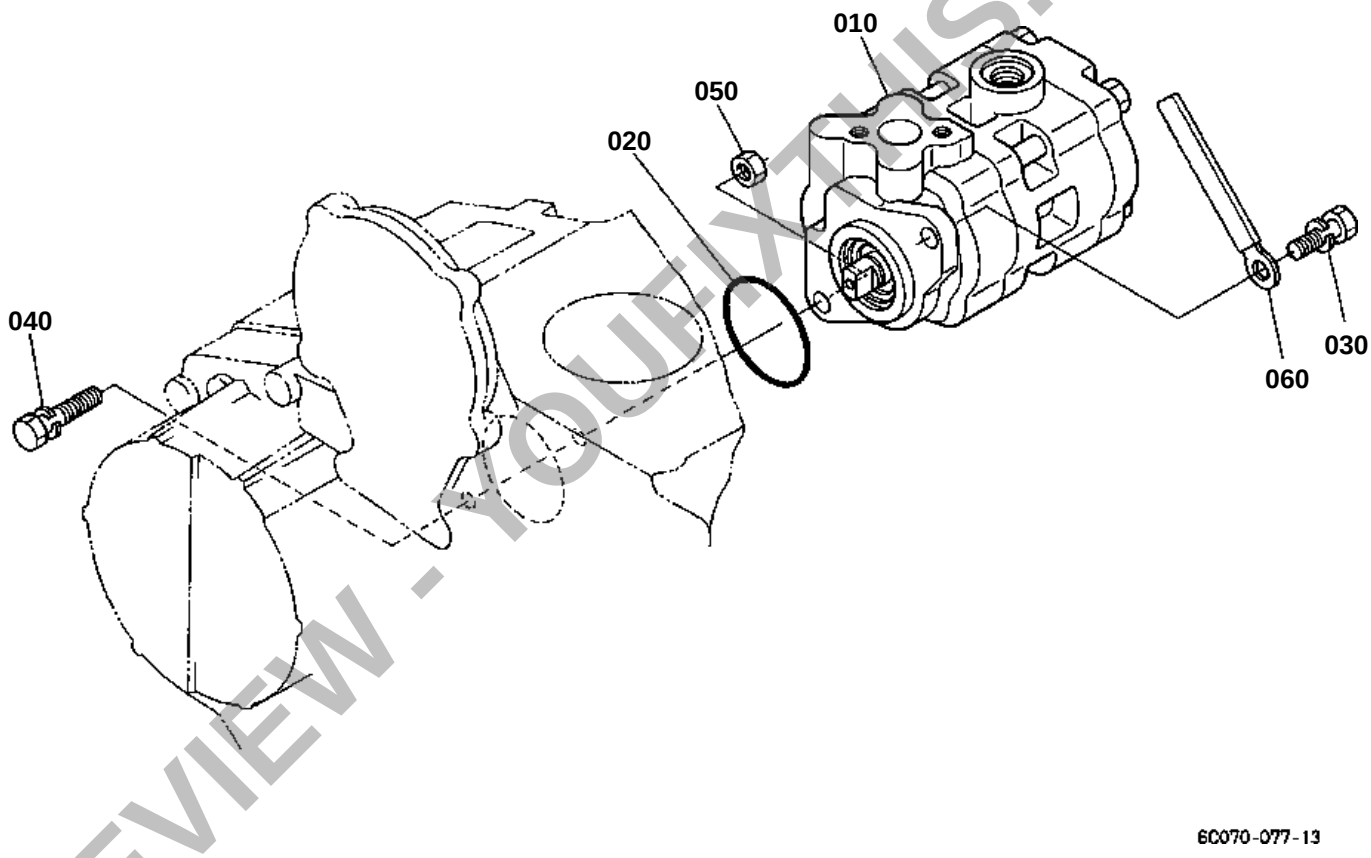


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

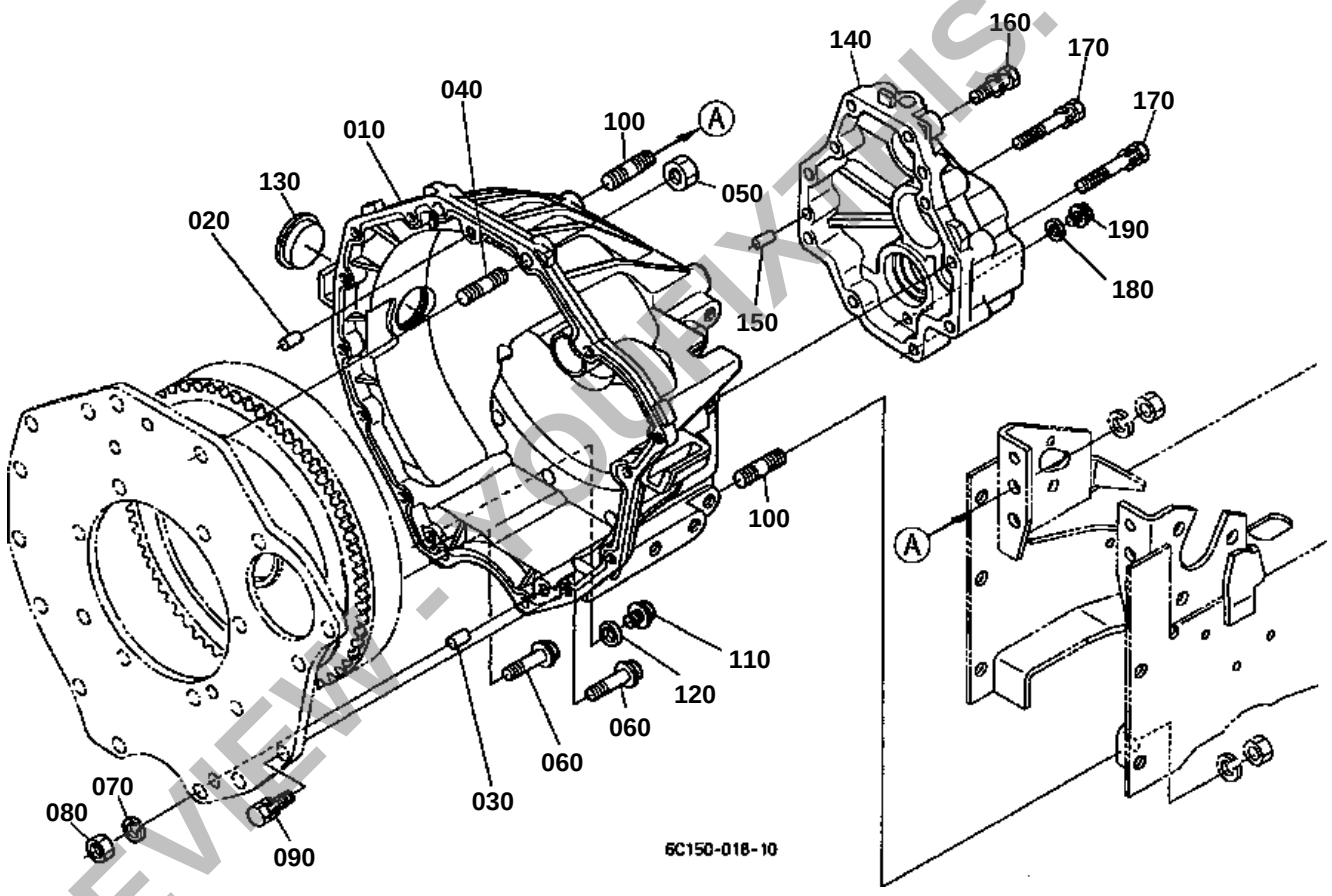


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

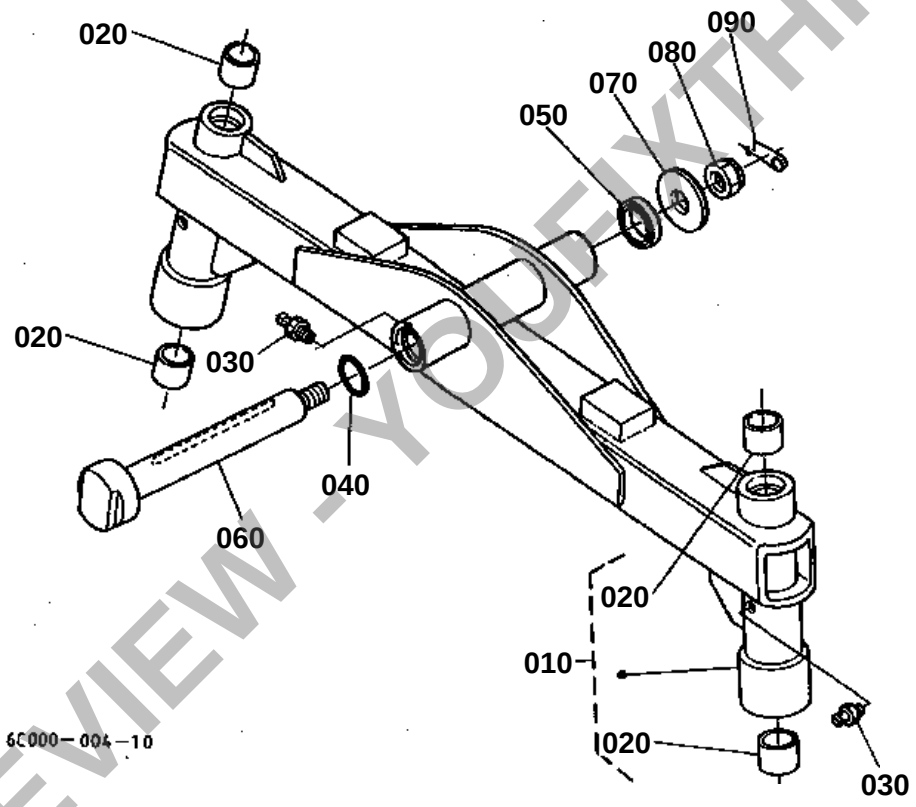


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

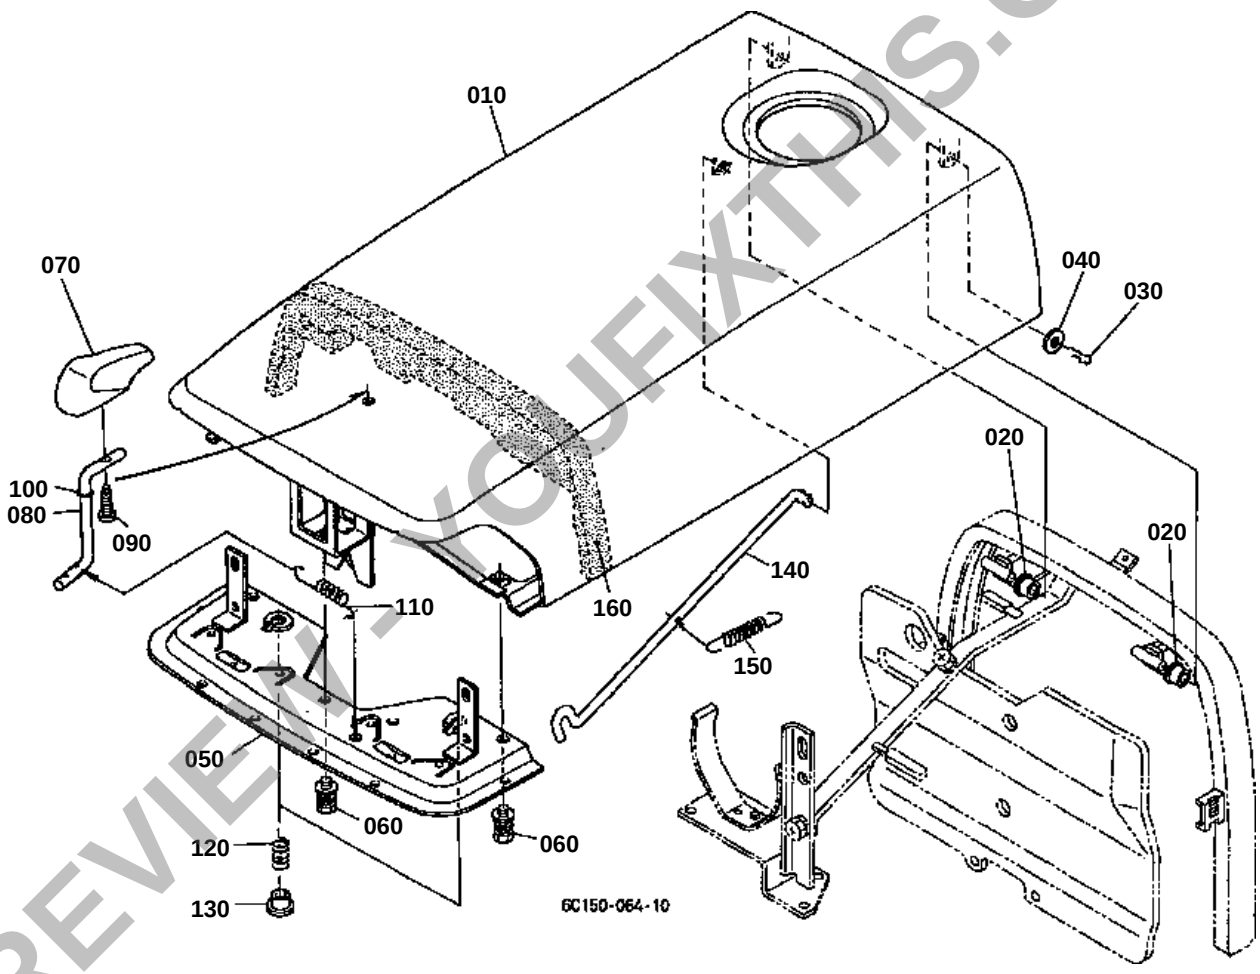

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

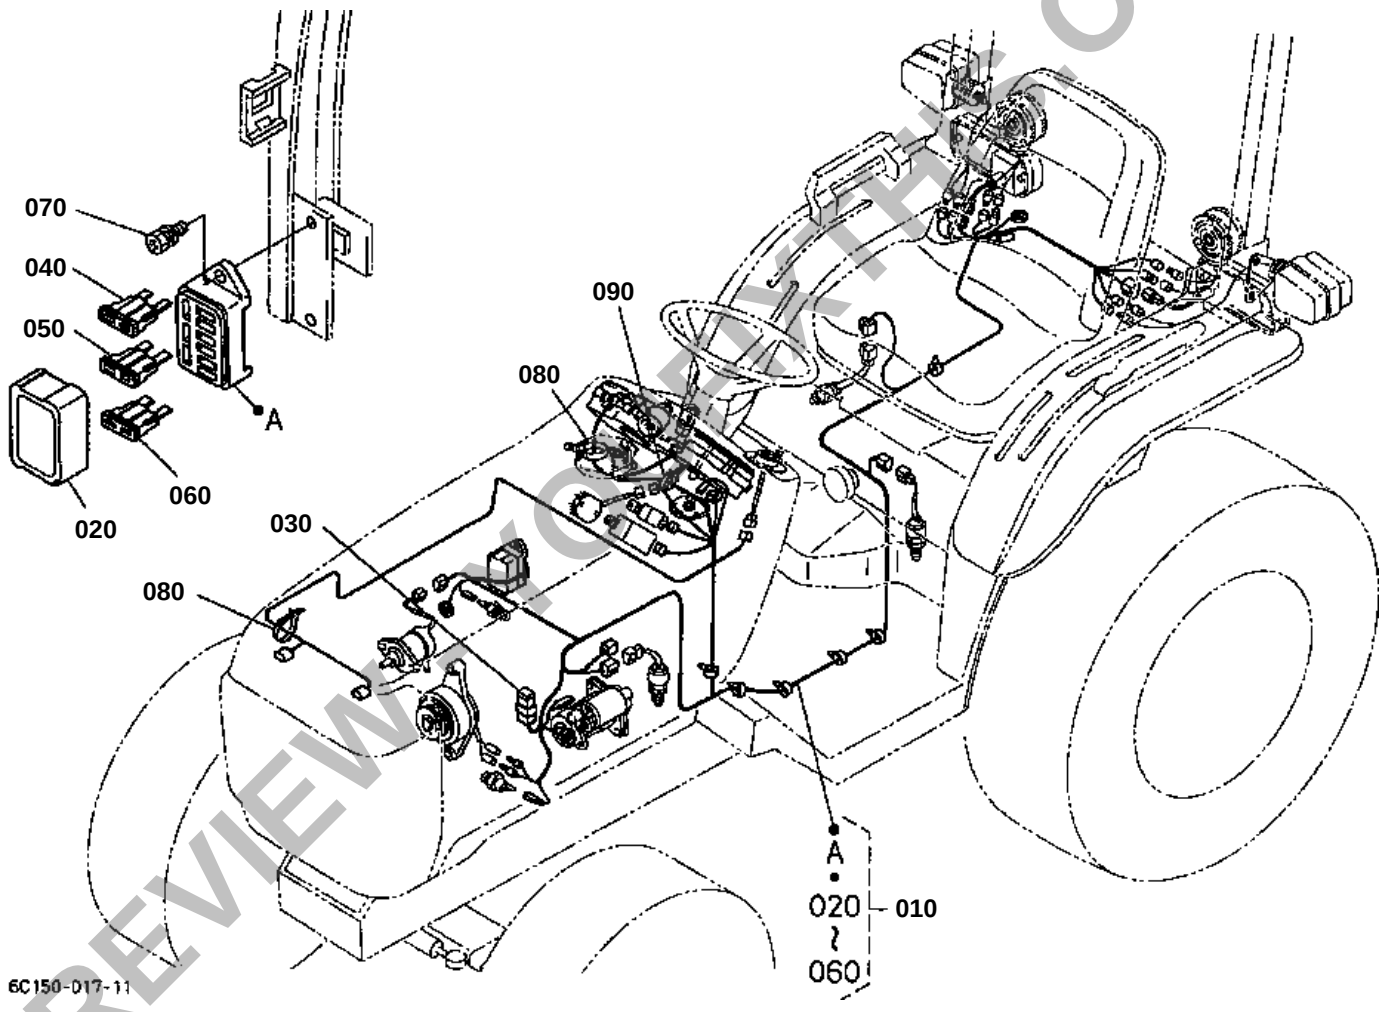

PREVIEW FROM YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
CLUTCH	01C301	CLUTCH PEDAL	100K0566
	01C40102	CLUTCH HOUSING [2WD]	100K0566
FRAME	01C41302	FRONT FRAME [2WD]	100K0566
	01C415	CENTER FRAME	100K0566
TRANSMISSION/REAR AXLE	01C420	TRANSMISSION CASE	100K0566
	01C425	DIFFERENTIAL GEAR CASE	100K0566
	01C42701	REAR AXLE CASE [EXCEPT[BI-SPEED TURN TYPE]]	100K0566
	01D001	CLUTCH SHAFT	100K0566
	01D005	PROPELLER SHAFT	100K0566
	01D010	HST	100K0566
	01D015	HST [COMPONENT PARTS]	100K0566
	01D103	FRONT SHAFT	100K0566
	01D135	PTO SHAFT	100K0566
	01D137	MID PTO	100K0566
	01D140	REAR DIFFERENTIAL	100K0566
	01D149	2ND SHAFT	100K0566
	01D152	3RD SHAFT	100K0566
	01D155	4TH SHAFT	100K0566
	01D217	RANGE GEAR SHIFT FORK	100K0566
	01D220	PTO GEAR SHIFT FORK	100K0566
	01D225	DIFFERENTIAL LOCK SHIFT FORK	100K0566
	01D301	REAR AXLE	100K0566
SPEED CHANGE LEVER/BRAKE	01E001	BRAKE	100K0566
	01E005	BRAKE ROD 1	100K0566
	01E01501	PARKING BRAKE LEVER [EXCEPT[AU]]	100K0566
	01F030	SPEED SET LEVER	100K0566
	01F107	NEUTRAL HOLDER LINK	100K0566
	01F108	SPEED CONTROL PEDAL	100K0566
	01F110	RANGE GEAR SHIFT LEVER	100K0566
	01F11302	FRONT WHEEL DRIVE LEVER [2WD]	100K0566
	01F125	PTO GEAR SHIFT LEVER	100K0566
	01F143	HYDRAULIC CONTROL LEVER	100K0566
	01F201	BRAKE PEDAL	100K0566
	01F205	DIFFERENTIAL LOCK PEDAL	100K0566
FRONT AXLE	01G101	FRONT AXLE FRAME [2WD]	100K0566
	01G103	FRONT WHEEL HUB [2WD]	100K0566
STEERING	01H00102	KNUCKLE ARM [2WD]	100K0566
	01H003	DRAG LINK	100K0566
	01H00502	TIE ROD [2WD]	100K0566
	01H101	STEERING HANDLE	100K0566
	01H105	STEERING POST	100K0566
HYDRAULIC SYSTEM	01J101	HYDRAULIC PUMP(PS)	100K0566
	01J105	HYDRAULIC PUMP(PS) [COMPONENT PARTS]	100K0566
	01J201	HYDRAULIC OIL LINE(SUCTION)	100K0566
	01J210	HYDRAULIC OIL LINE(DELIVERY)	100K0566
	01J215	HYDRAULIC OIL LINE(STEERING)	100K0566
	01J235	HYDRAULIC OIL LINE (HST)	100K0566
	01J240	HYDRAULIC OIL LINE (OIL COOLER)	100K0566
	01J245	HYDRAULIC OIL LINE (F/M)	100K0566
	01J301	HYDRAULIC CYLINDER	100K0566
	01J310	HYDRAULIC PISTON/LIFT ARM	100K0566
	01J330	FEED BACK LEVER	100K0566
	01J405	CONTROL VALVE	100K0566
	01J410	CONTROL VALVE [COMPONENT PARTS]	100K0566
	01K101	3-POINT LINKAGE 2(LIFT ROD)	100K0566
	01K115	LOWER LINK	100K0566
	01K120	3-POINT LINKAGE 1(LOWER LINK)	100K0566
	01K125	CHECK CHAIN	100K0566
	01L105	DRAWBAR	100K0566

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	6C040-13402	COMP.DISK CLUTCH	1				0.88	1.936
020	6C040-13300	COMP.PLATE PRESSURE	1				4.01	8.822
030	01123-60816	BOLT	6				0.01	0.022
040	16221-94530	PIN STRAIGHT	3				0.006	0.0132

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	16251-73032	ASSY PUMP WATER	1	<=1U7903			0.9	1.98
010	16251-73034	ASSY PUMP WATER	1	>=1W0001	≠		0.8	1.76
020	16259-73550	BEARING	1	<=1U7903			0	0
020	16259-73552	BEARING	1	>=1W0001	←		0.21	0.462
030	15481-73050	ASSY SEAL MECHANICAL	1	<=1U7903			0.02	0.044
030	1G642-73050	ASSY SEAL MECHANICAL	1	>=1W0001	≠		0.03	0.066
040	16251-73510	IMPELLER WATER PUMP	1	<=1U7903			0.075	0.165
040	16259-73512	IMPELLER WATER PUMP	1	>=1W0001	≠		0.09	0.198
050	16241-73340	PIPE WATER RETURN	1				0.006	0.0132
060	16251-73430	GASKET WATER PUMP	1	<=1U7903			0.005	0.011
060	16239-73430	GASKET WATER PUMP	1	>=1W0001	≠		0.007	0.0154
070	01023-50630	BOLT	4				0.008	0.0176
080	01023-50685	BOLT	2				0.018	0.0396
090	16259-73520	FLANGE WATER PUMP	1				0.15	0.33

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	6C040-54706	ASSY TANK FUEL	1	<=10071		NOT SALE	0	0
010	6C040-54707	ASSY TANK FUEL	1	>=10072	←	NOT SALE	0	0
010	6C040-54709	ASSY TANK FUEL	1	>=10124	←		4	8.8
020	6C040-54740	TRAY FUEL	1				0.86	1.892
030	6C120-54760	PIPE	1				0.09	0.198
040	6C040-54750	GAUGE FUEL	1	<=10071			0	0
040	6C040-54752	GAUGE FUEL	1	>=10072	←		0.14	0.308
045	6A320-85812	GASKET	1				0.005	0.011
050	03024-50514	SCREW WITH WASHER	5				0.003	0.0066
060	6C040-54780	CLAMP	1				0.005	0.011
070	6A100-54910	ASSY CAP FUEL	1				0.105	0.231
080	6A100-54920	CAP FUEL	1				0.041	0.0902
090	6A100-54942	SPACER	1				0.001	0.0022
100	6A100-54952	GASKET	1				0.02	0.044
110	01127-50820	BOLT	4				0.02	0.044
120	6C040-54790	SPONGE	1				0.392	0.8624


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

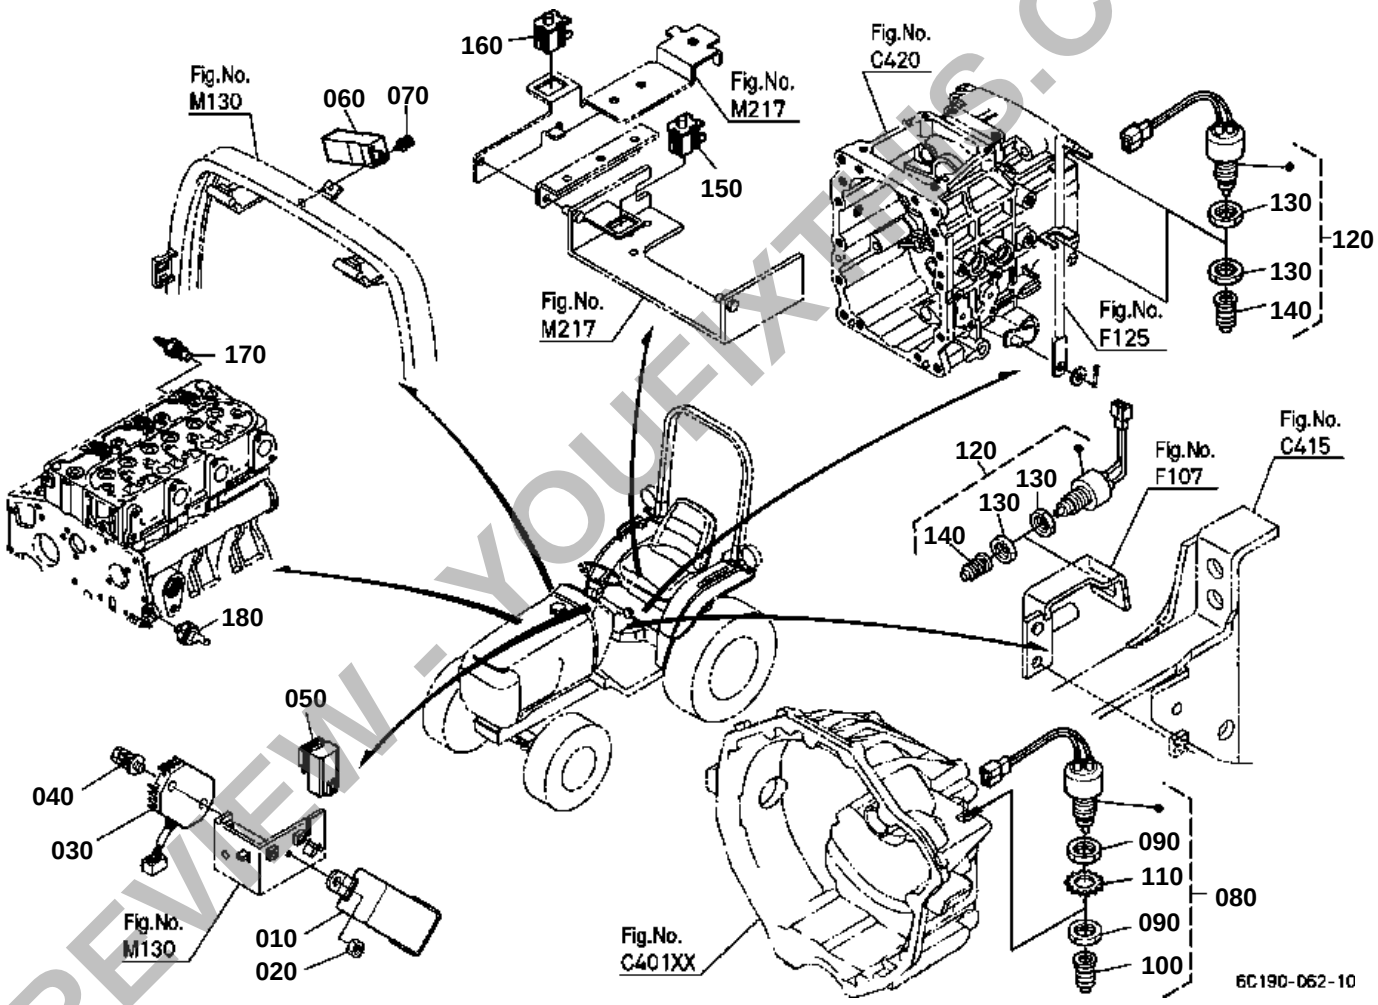

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

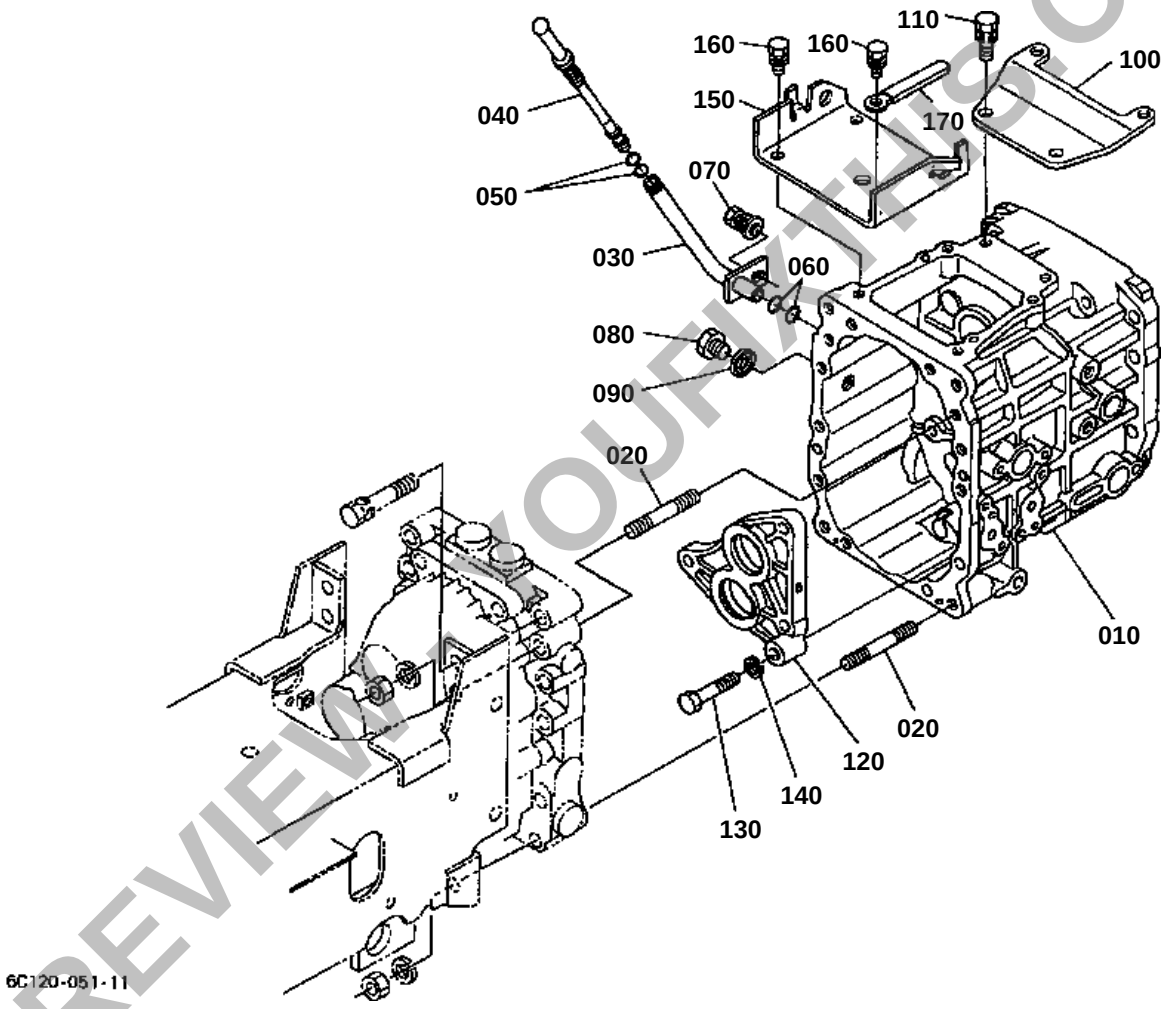

PREVIEW FROM YOUFIXTHIS.COM

Download full manual at youfixthis.com


↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	6C050-14312	SHAFT	1	<=10111		NOT SALE	0.31	0.682
010	6C050-14313	SHAFT	1	>=10112	←		0.32	0.704
020	08101-06303	BEARING BALL	1				0.112	0.2464
030	08101-06304	BEARING BALL	1				0.146	0.3212
040	6C040-14320	GEAR	1			17T	0.33	0.726
050	6C040-14333	GEAR	1			13T	0.17	0.374
060	6C040-14352	BEARING NEEDLE	1	<=10111		NOT SALE	0	0
060	6C040-14353	BEARING NEEDLE	1	>=10112	←		0.03	0.066
070	67111-14160	COLLAR	1				0.01	0.022
080	6C040-14362	COLLAR	1				0.042	0.0924
090	6C050-14520	COUPLING	1				0.099	0.2178

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

090 6C140-4280-0
130 6C150-4284-0

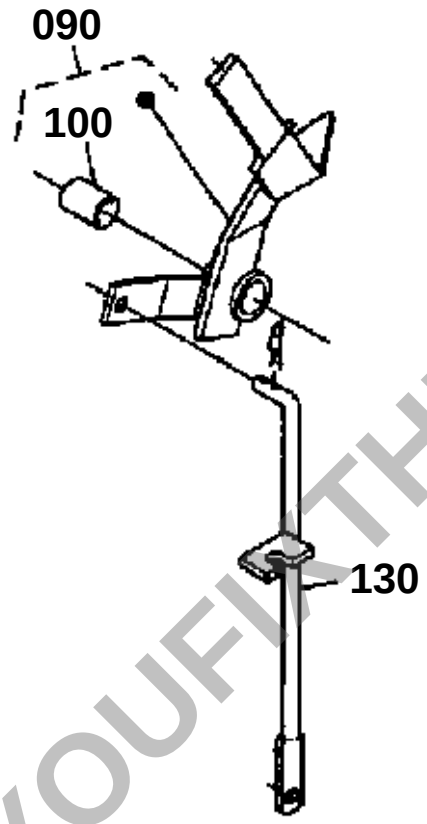


PREVIEW - YOUFIXTHIS.COM

6C150-807-10

Download full manual at youfixthis.com

010 6C140-3911-2

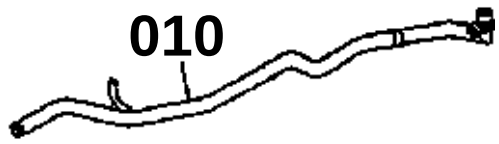

PREVIEW - YOUFIXTHIS.COM

6C132-801-10

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	6C040-66010	PIN LOWER LINK	1				1.14	2.508
020	6C040-65120	BOLT	1				0.02	0.044
030	02018-50100	NUT	1				0.011	0.0242
040	04512-60100	WASHER SPRING	1				0.002	0.0044
050	6C040-65210	COMP.LINK LOWER	2				5.28	11.616
060	34150-37640	PIN SET	4				0.06	0.132
070	66204-65350	SPACER	2				0.12	0.264

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	6C040-51370	COVER SEAT UNDER	1				0.38	0.836
020	01125-50818	BOLT	2				0.015	0.033

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 18 of 309 pages

The full manual includes:

- All 309 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota B2410HSE Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual