
TRACTOR CAB - ELECTRICAL EQUIPMENT

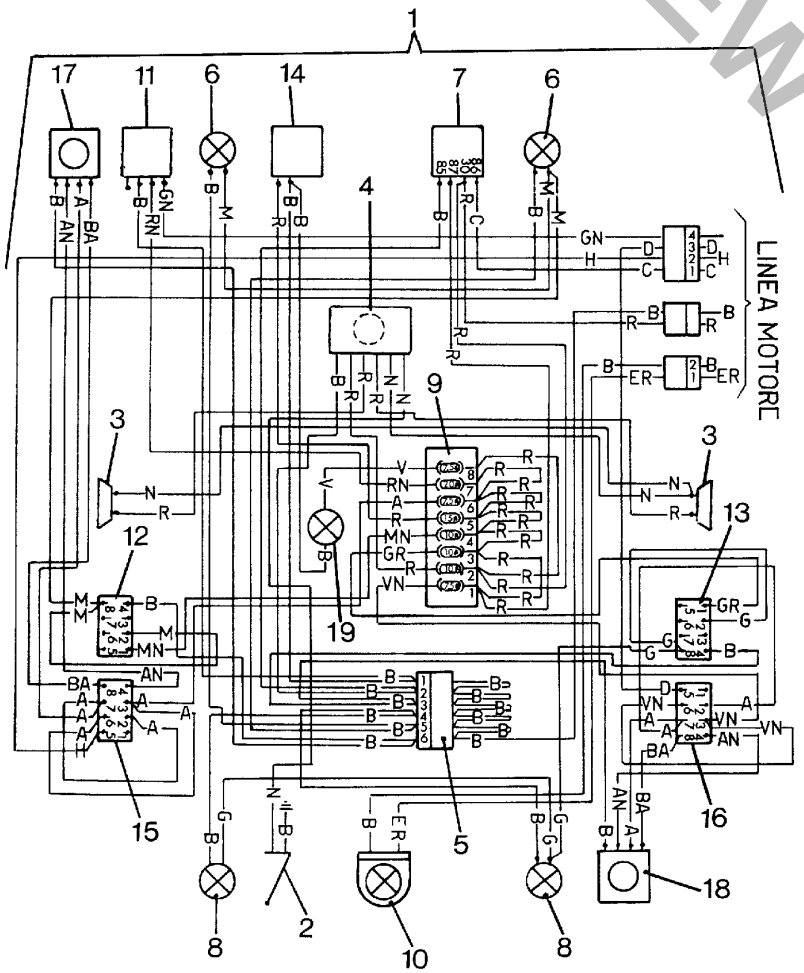

1	3548325M91	1	HARNESS
2		1	AERIAL SHORT
3		2	SPEAKER BALL
4		1	RADIO POD
5		1	BLOCK
6	◄	2	LIGHT
	►		
7		1	SWITCH,IND
8	◄	2	LIGHT
	►		
9		1	BOX
10		1	LIGHT
11		1	AIR CONDIT
12		1	SWITCH,IND
13		1	SWITCH,IND
14		1	HEATER
15		1	SWITCH,IND
16		1	SWITCH,IND
17		1	WINDSCREEN
18		1	WINDSCREEN
19		1	ROOF LIGHT


◄ LEFT HAND

► RIGHT HAND

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

ENGINE ASSEMBLY - T4.236 ENGINE

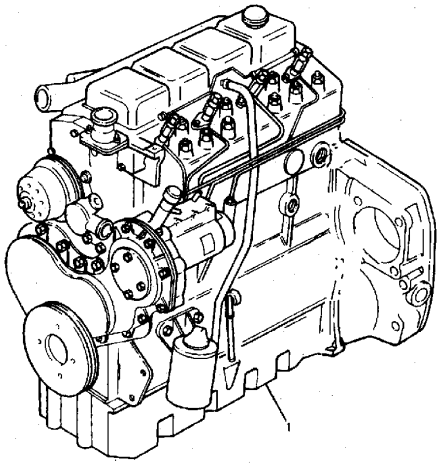


1	3553130M91	●	3553130M92 (1) "PK-LJ31229"	1	ENGINE

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

HYDRAULIC EQUIPMENT - LIFT PIPINGS - FROM SERIAL NO P06077.

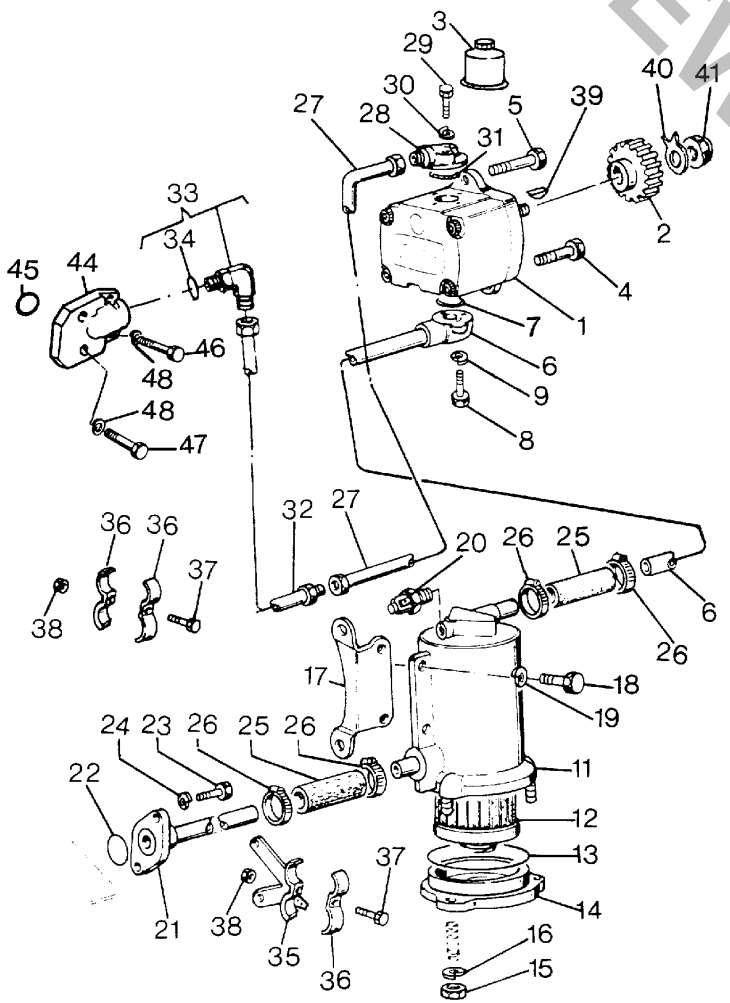

1		▲	AP324058	1 PUMP
1		▲	A AP324061	1 PUMP
1		▲	AP324060	1 PUMP
1		▲	A AP324059	1 PUMP
2	1695001M2		(X) 0.2.3.4	1 GEAR
3	3308788M1			999 LOCTITE
4		D		1 SCREW
5		D		2 SCREW
6	3538871M91			1 PIPE
7	371468X1			1 O RING
8	390796X1			3 SCREW
9	339374X1			3 LOCK WASHER
11	3532598M91		(X) 1.20.40.80	1 BODY
12	3530223M92		(X) 1.2.4.10	1 CARTRIDGE
13	1007242M1			1 RING
14	3532630M1			1 COVER
15	1440086X1			3 NUT
16	339374X1			3 LOCK WASHER
17	3533143M1			1 STIRRUP
18	1442692X1			2 SCREW
19	339375X1			2 LOCK WASHER
20	3530225M92		(X) 0.1.2.4	1 SWITCH,IND
21	3535578M91			1 PIPE
22	1004637M1		(X) 0.5.10.20	1 RING

Download full manual at youfixthis.com
PREVIEW - YOUFIXTHIS.COM

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

TRACTOR CAB


U-47
01



U4701

Blizzard 95


TRACTOR CAB - KIT

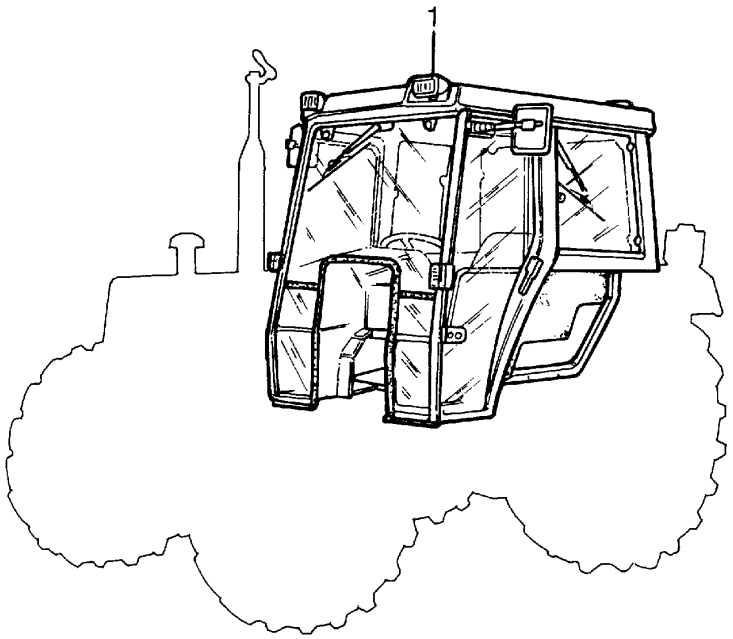

1	3546478M92	●	3551241M91 (1) A	1	CAB
1	3551210M91	●	3546476M92 A	1	CAB
1	3551250M91	➡	C17010 A B	1	CAB

➡ FROM SERIAL OR ENGINE NUMBER
● REPAIRS AND REPLACES
A WITH CONDITIONED AIR
A WITHOUT CONDITIONED AIR
B SWITZERLAND ONLY


CLUTCH - DUAL CLUTCH "O.M.G." - 12"

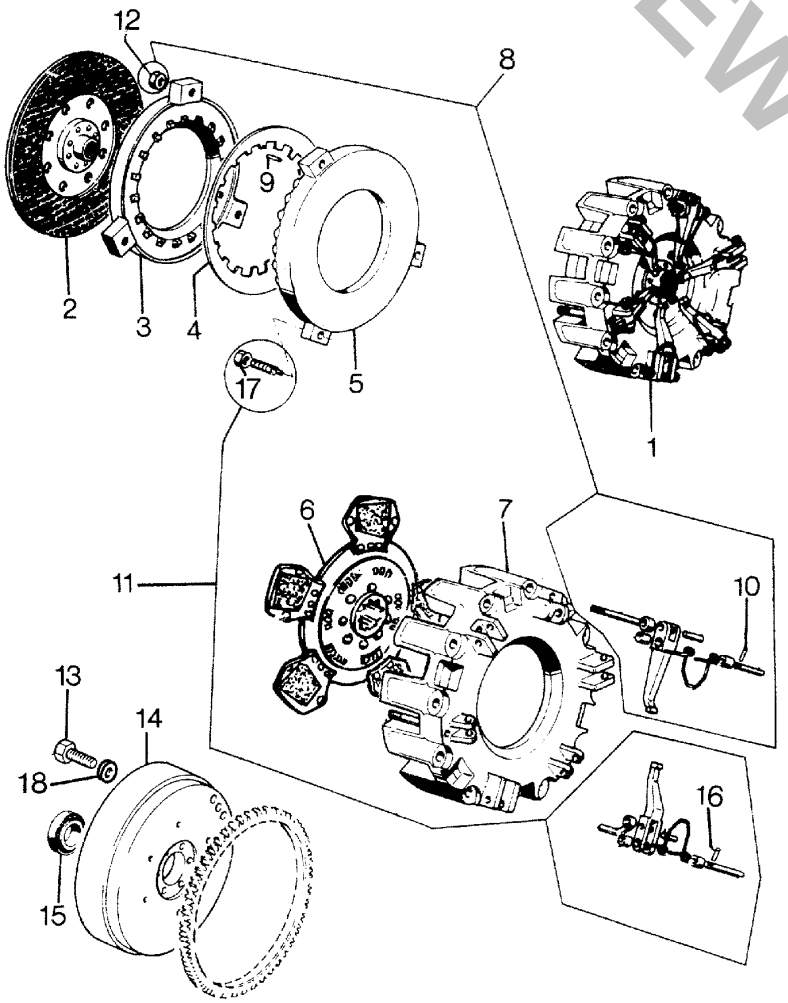

1	3532193M94				1	CLUTCH
			(X) 0.0.1.2			
2	3311352M92	!	1		1	DISC
			D			
			(X) 0.1.2.8			
3	3311925M1	!	1		1	PLATE
			D			
4	3310981M2	!	1		1	SPRING
5	3311926M1	!	1		1	PLATE
			A			
6	3311380M93	!	1		1	DISC
			A			
			(X) 0.1.2.8			
7		!	1		1	HOUSING
			REF.N.1			
8	3311924M91	!	1		999	KIT
			D			
			(X) 0.1.2.8			
9	1440961X1	!	1		1	DOWEL
10	1440389X1		1441726X1	(3)	3	DOWEL
		!	8			
11	3311381M91	!	1		999	KIT
			A			
			(X) 0.1.2.8			
12	3300652M1	!	8		3	NUT
13	973013M1				6	BOLT
14	3532476M1		3532476M2	(1)	1	FLYWHEEL
15	339599X1				1	BEARING
			(X) 0.1.2.8			
16	1440389X1		1441726X1	(3)	3	DOWEL
		!	11			
17	1441344X1	!	11		3	NUT
18	33117127		D		6	WASHER

Download full manual at youfixthis.com
PREVIEW - YOUFIXTHIS.COM

FRONT WHEELS - HOOPS AND TYRES

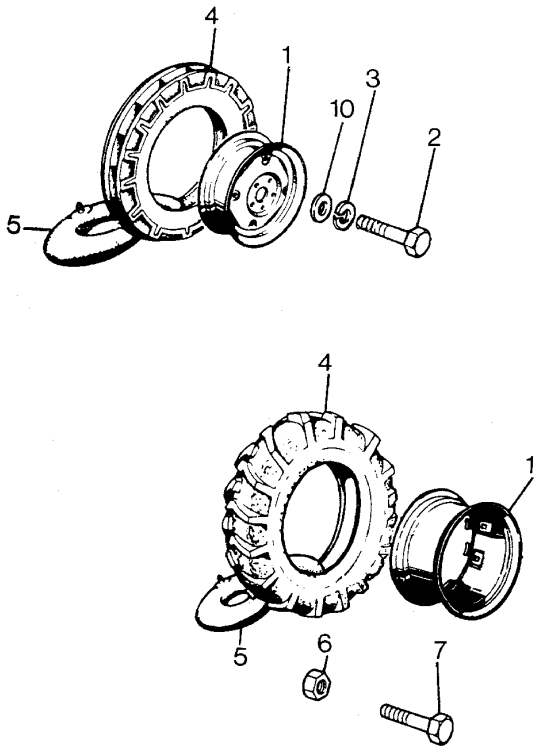


1	3303370M94	H	W12-24 C.V. A G	2	HOOP
1	3308675M93	H	W10-24 A	2	HOOP
1	3308809M91	I	W8-16 C	2	HOOP
2	391870X1	I	(X) 0.10.20.40	10	SCREW
3	1440316X1	I	(X) 0.10.20.40	10	LOCK WASHER
4	3530199M1	I	9.00-16	2	TYRE AND TUBE
4	3532766M1	H	380/70 R24	2	TYRE
4	3535111M1	H	13.6/12-24	2	TYRE
4	3538653M1	H	13.6 R24	2	TYRE
5	1424430M91		A G	2	CHAMBER
5	3301461M91		C	2	CHAMBER
6	3384600M2	H	(X) 0.12.24.48	12	NUT
7	3304220M1	H	(X) 0.12.24.48	12	SCREW
10	390974X1	I	(X) 0.12.24.48	10	WASHER

A	FOR USE WITH 380/70 R24 TYRES
H	4 WHEEL DRIVE
C	FOR USE WITH 9.00-16 TYRES
I	2 WHEEL DRIVE
G	FOR USE WITH 13.6-R24 TYRES
(X)	QTY PER TRACTORS SOLD (AA.BBB.CCC.DDD) (AA) FOR 1,(BBB) 2-10 (CCC) 11-25 (DDD) 26-50

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

ELECTRICAL WIRING - FRONT

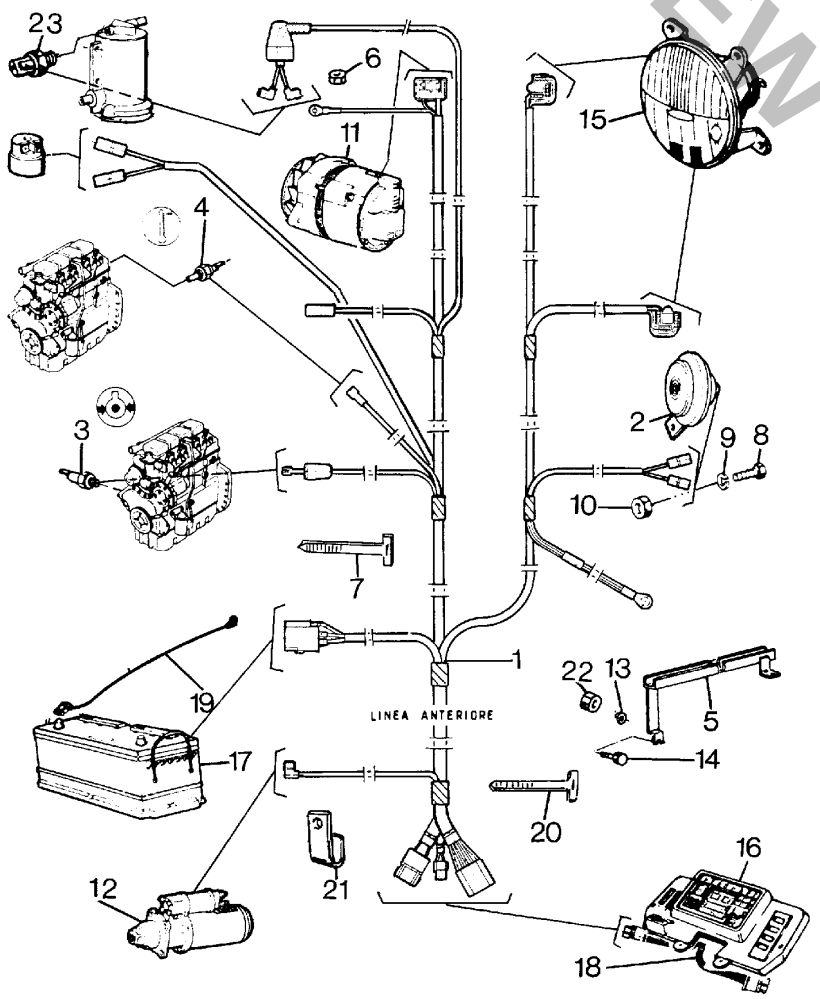

1	3546469M92			1	HARNESS
2	3539770M91			1	HORN
3	1877721M92			1	BULB
			(X) 0.0.1.2		
4	1877731M92			1	BULB
			(X) 0.0.1.2		
5	3305720M94			1	SUPPORT
6	390995X1			1	NUT
7	3533937M1			7	CLAMP
8	339123X1			1	SCREW
9	339374X1			1	LOCK WASHER
10	339169X1	●	394367X1 (1)	1	NUT
11			A	1	ALTERNATOR
12			A	1	STARTERMOTOR
13	390972X1			1	WASHER
14	339337X1			1	SCREW
15			A	2	LIGHT
16			A	1	PANEL
17			A	1	BATTERY
18			A	1	CABLE
19			A	1	CABLE
20	395528X1	●	3307667M91 (3)	3	RETAINER
21	3307614M1			6	CLAMP
22	339169X1	●	394367X1 (1)	1	NUT
23	3530225M92			1	SWITCH,IND
			(X) 0.0.1.2		


A FOR DETAIL SEE PAGE APPROPRIATE

(X) QTY PER TRACTORS SOLD (AA.BBB.CCC.DDD) (AA) FOR 1,(BBB) 2-10 (CCC) 11-25 (DDD) 26-50

Download full manual at youfixthis.com

PREVIEW - YOUFIXTHIS.COM

SHORT ENGINE - T4.236 ENGINE

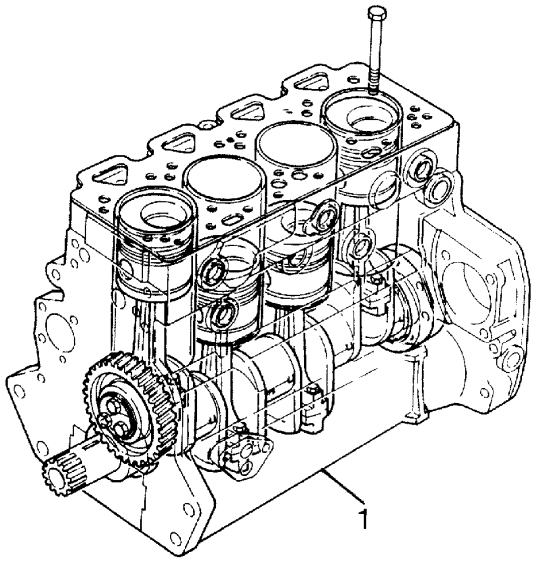

1	LJ39305	●	LJ39323 (1)	1	SHORT ENGINE
2		!	1	4	BOLT
2		!	1	22	BUSH
2				8	BUSH
2		!	1	10	CONROD
2		!	1	4	GASKET
2		!	1	1	HOUSING
2		!	1	1	HOUSING
			A		
2		!	1	1	LINER
2		!	1	4	PISTON
2		!	1	4	SEAL
2		!	1	1	SHAFT
2		!	1	1	WASHER
2				4	BANDAGE


! THIS IS A COMPONENT OF AN ASSEMBLY

A COMPLETE WITH PLUGS

Download full manual at youfixthis.com

PREVIEW - YOUFIXTHIS.COM

HYDRAULIC PUMP

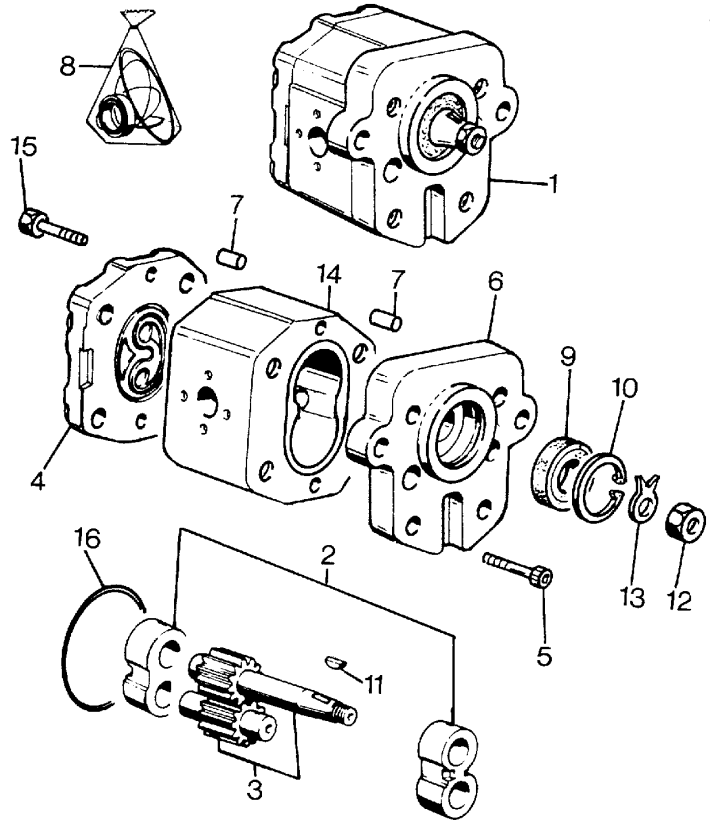

1	3533911M91	◈	P-42 01 1 (X) 0.0.1.2	1	PUMP
2	3311521M91	●	N.L.A. (999)	999	THIMBLE
3	3311524M91	●	N.L.S. (999)	999	KIT
5	1442647X1			4	SCREW
7	3311523M1			4	DOWEL
8	3311522M91			1	KIT
			(X) 0.1.2.4		
9		!	8	1	RING
		▰	REF.N.8		
10	1441597X1	●	339361X1 (1)	1	RING
11	1440360X1			1	TONGUE
12	1442576X1			1	NUT
13	3302053M1			1	WASHER
14		▰	REF.N.1	1	BODY
15	3015039X1			4	SCREW
16	394869X1	!	8	2	RING

! THIS IS A COMPONENT OF AN ASSEMBLY

◈ SEE PAGE - REFERENCE NUMBER


▰ NOT SERVICED, ORDER

QTY PER TRACTORS SOLD (AA.BBB.CCC.DDD) (AA) FOR 1,(BBB) 2-10 (CCC) 11-25 (DDD) 26-50

Download full manual at youfixthis.com

PREVIEW - YOUFIXTHIS.COM


TRACTOR CAB - FRAME - UP TO SERIAL NUMBER "3/94" WINDSCREEN

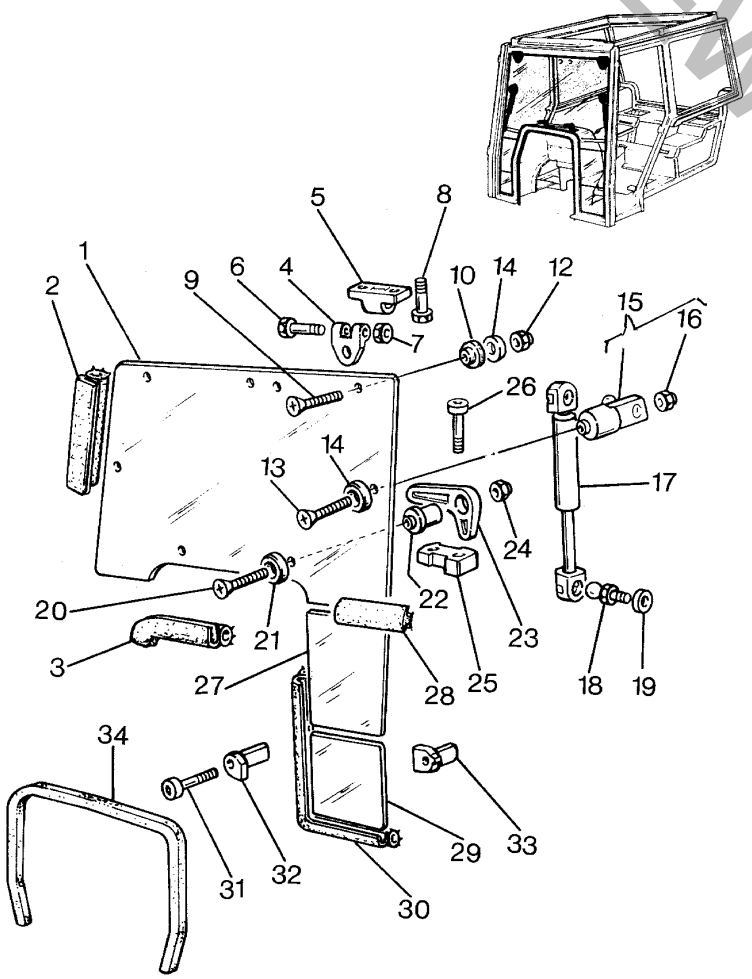

1	3548023M1			1	GLASS
2	3548024M91	●●	3547709M1 (1)	1	GASKET
		◆◆	2,70		
3	3548038M91	◆◆	0,80	1	GASKET
4	3548025M1			2	HINGE
5	3548040M1			2	HINGE
6	339136X1			2	SCREW
7	394367X1			2	NUT
8	3009431X1			4	SCREW
9	3009445X1			2	SCREW
10	3548027M1			4	RING
12	3005908X1			2	NUT
13	3009445X1			2	SCREW
14	3548029M1			2	WASHER
15	3548026M1			2	YOKE
16	339169X1	●●	394367X1 (2)	2	NUT
		!	15		
17	3548042M91			2	DAMPER
			(X) 0.0.1.2		
18	3548281M1	●●	3659464M91 (2)	2	BALL JOINT
19			C	2	WASHER
20	3009448X1			2	SCREW
21	3548029M1			5	WASHER
22	3548028M1			2	BUSH
23	3547857M1			2	HANDLE
24	3005908X1			2	NUT
25	3548041M1			2	RETAINER
26	3009541X1			4	SCREW
27	3548322M1			2	GLASS
28	3548037M91			2	GASKET
29	3548321M1			2	GLASS
30	3548057M91	◆◆	1,60	2	GASKET
31	3015027X1	●●	3015028X1 (8)	8	SCREW

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

TRANSMISSION - "OUTPUT SHAFT"

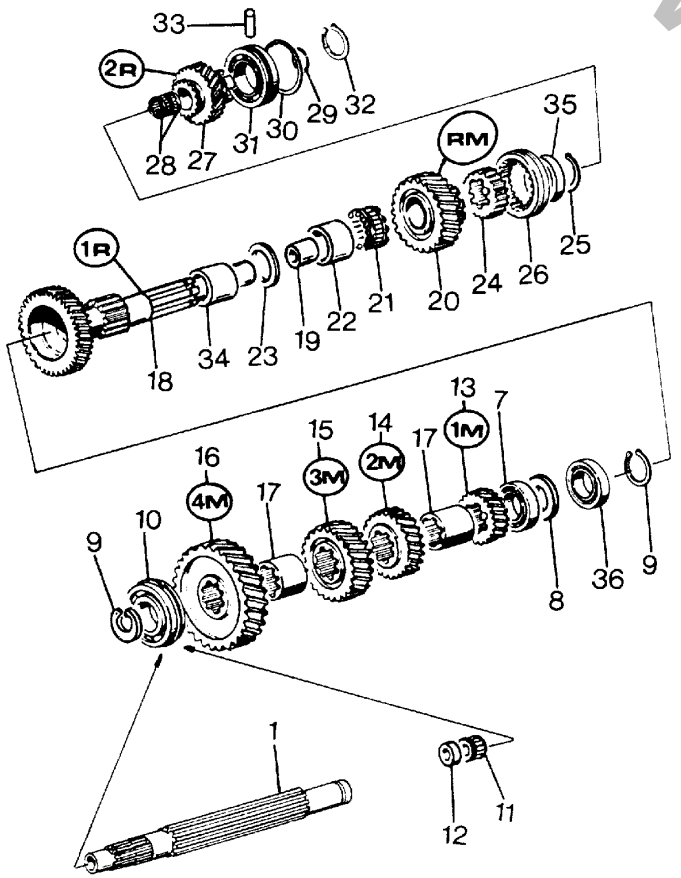


1	3533956M1			1	SHAFT
7	3015037X1			1	BEARING
			(X) 0.2.4.6		
8	3530535M1	●○	3530535M2 (1)	1	SPACER
9	392759X1	●○	339820X1 (2)	2	RING
10	831789M1			1	BEARING
			(X) 0.1.2.8		
11	3308392M1			1	CAGE
12	3308393M1			1	SEAL
13	3530536M1	▲	23	1	GEAR
14	3530537M1	▲	30	1	GEAR
15	3530538M1	▲	34	1	GEAR
16	3532446M1	▲	43	1	GEAR
17	3530540M1			2	SPACER
18	3534374M92	▲	37-15	1	GEAR
19	979469M1	!	18	1	BUSH
20	3532496M2	!	18	1	GEAR
		▲	27		
			A		
21	3530720M1		A	1	CAGE
			(X) 0.1.2.8		
22	3530721M1		A	1	RING
23	3532497M1		A	1	SPACER
24	3534402M1			1	HUB
25	1442697X1			1	RING
26	3536992M1			1	SLEEVE
27	3534368M1	▲	25	1	GEAR
28	395567X1			2	CAGE
29	395566X1			1	RING
30	339517X1			1	RING
31	1443559X1			1	BEARING
			(X) 0.1.2.8		

Download full manual at youfixthis.com
PREVIEW - YOUFIXTHIS.COM

Blizzard 95


FRONT AXLE 2 WHEEL DRIVE - AXLE SUPPORT

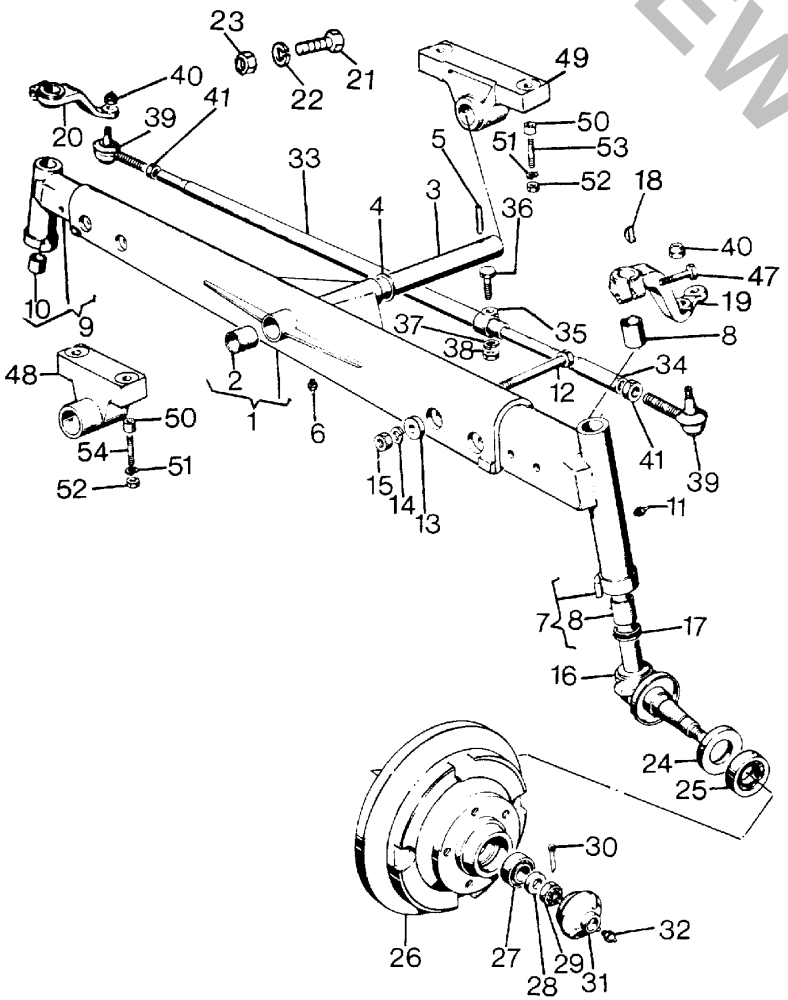

1	1424488M91			1 SUPPORT
2	1423636M1	!	1	2 BUSH
3	1423630M1	●●	1423630M2 (1)	1 PIN
4	1423631M1			2 WASHER
5	390949X1			1 DOWEL
6	339608X1			1 GREASER
7	1424591M91	◄		1 SUPPORT
8	975208M1	!	7	2 BUSH
9	1424592M91	►		1 SUPPORT
10	975208M1	!	9	2 BUSH
11	339608X1			2 GREASER
12	339616X1			4 BOLT
13	1822489M1			4 WASHER
14	391414X1			4 LOCK WASHER
15	1440202X1			4 NUT
16	1424578M93	●●	1424578M94 (2)	2 SPINDLE
17	392060X1			2 BEARING
18	393116X1			2 RETAINER
19	1424974M2	◄		1 LEVER
20	1424584M2	►		1 LEVER
21	3015045X1			1 SCREW
22	1440315X1			1 LOCK WASHER
23	1440200X1			1 NUT
24	394014X1			2 RING
25	339394X1			2 BEARING
			(X) 0.2.4.8	
26	1423654M2			2 HUB
27	339393X1			2 BEARING
			(X) 0.2.4.8	
28	3304452M1			2 LOCK WASHER
			(X) 0.2.4.8	
29	1440252X1			2 NUT
			(X) 0.2.4.8	

Download full manual at youfixthis.com
PREVIEW - YOUFIXTHIS.COM


CYLINDER BLOCK - - T4.236 ENGINE

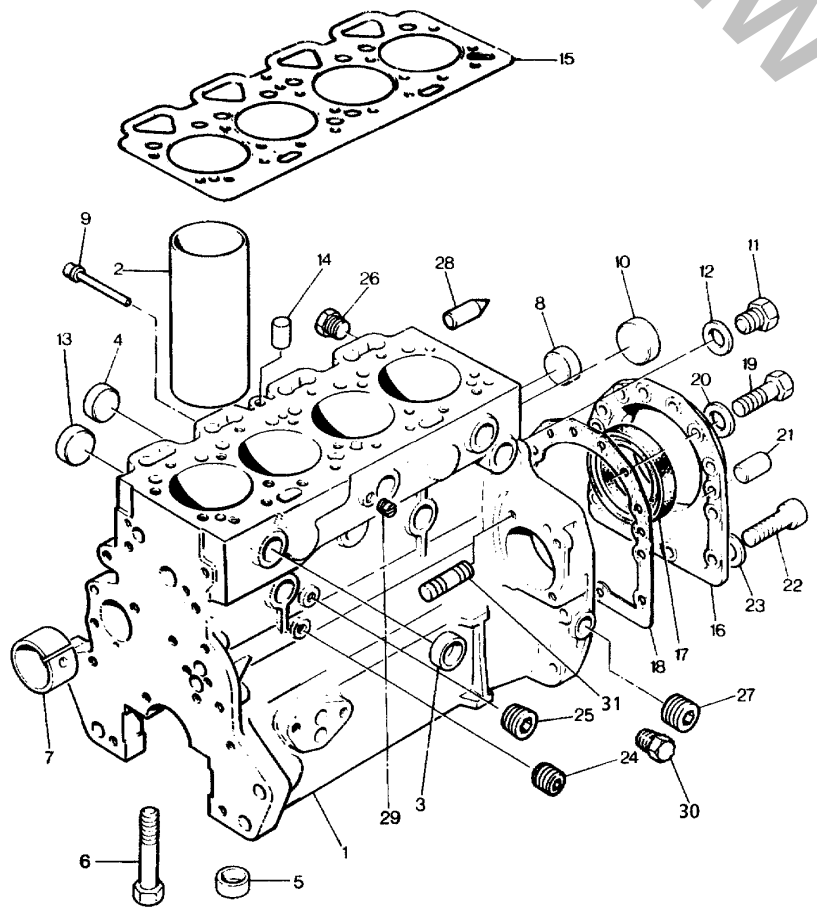

1	ZZ50112	●	ZZ50112/S (1)	1	CYLINDER B
2	3135X031	!	1 A 0. 4. 8	4	LINER
2	3135X032		B (X) 0.4.4.8	999	LINER
3	0650710	!	1	6	PLUG
4	32418122	!	1	4	PLUG
5	33142111	!	1	10	SLEEVE
6	32166329	!	1	10	SCREW
7	31134165	!	1	1	BUSH
8	0650710	!	1	2	PLUG
9	2485A204	!	1	1	PLUG
10	32416119	!	1	1	PLUG
11	32168212	●	0650582 (1) 1	1	PLUG
12	3311R003	●	2415D108 (1) 1	1	WASHER
13	32416118	!	1	4	PLUG
14	32417134	!	1	1	PLUG
15	3681E034		(X) 0.1.4.8	1	GASKET
16	4142V066		C	1	FLANGE
17	2418F475	!	16 (X) 0.1.2.4	1	SEAL
18	3681T018			1	GASKET
19	0746211		D	10	SCREW
19	0746211		E	12	SCREW
20	390972X1			10	WASHER
20	390972X1		E	12	WASHER
21	0350009			2	DOWEL
22	2172530			2	SCREW
23	33112111			2	WASHER


Download full manual at youfixthis.com
PREVIEW - YOUFIXTHIS.COM

LIFT DISTRIBUTOR

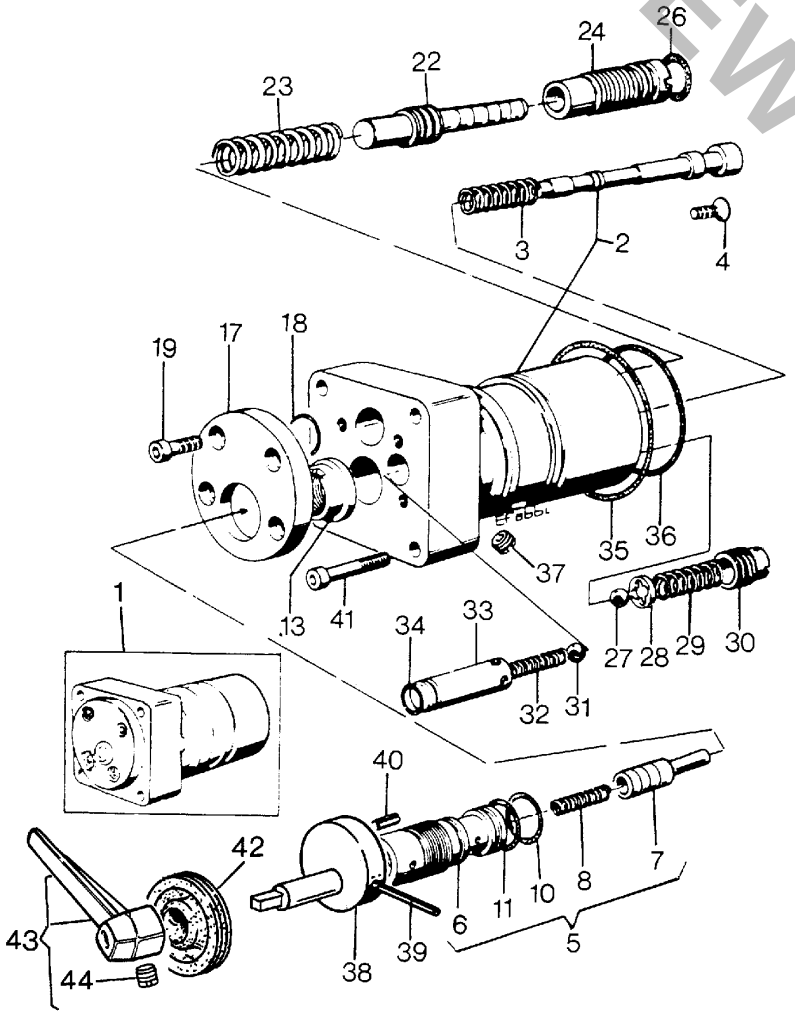

1	3306467M93	●	3306467M97 (1)	1	DISTRIBUTOR
2		!	1	1	BODY
		▰	REF.N.1		
3	1825248M1	!	1	1	SPRING
4	1441267X1	!	1	1	SCREW
5	3306227M93	●	3306227M94 (1)	1	VALVE
		!	1		
6		!	5	1	SHAFT
		▰	REF. N.5		
7		!	5	1	PISTON
		▰	REF. N.5		
8	1825253M1	!	5	1	SPRING
10	1000557M1	!	5	1	O RING
11	1000578M1	!	5	1	O RING
13	3306680M2	!	1	1	FERRULE
17	3531029M2	●	3531029M3 (1)	1	COVER
		!	1		
18	371468X1	!	1	1	O RING
19	391148X1	!	1	4	SCREW
22	3306235M2	!	1	1	VALVE
23	3306236M1	!	1	1	SPRING
24	3306468M3	!	1	1	VALVE SEAT
26	364784X1	!	24	1	O RING
27	361031X1	!	1	2	BALL
28	1425368M1	!	1	2	WASHER
29	3306237M1	!	1	2	SPRING
30	1425370M1	!	1	2	SCREW
31	13535X	●		1	BALL
		!	1		
32	3300776M1	!	1	1	SPRING
33	1425371M1	●	1425371M2 (1)	1	GUIDE
		!	1		
34	3019926X1	!	1	1	O RING

Download full manual at youfixthis.com
PREVIEW - YOUFIXTHIS.COM

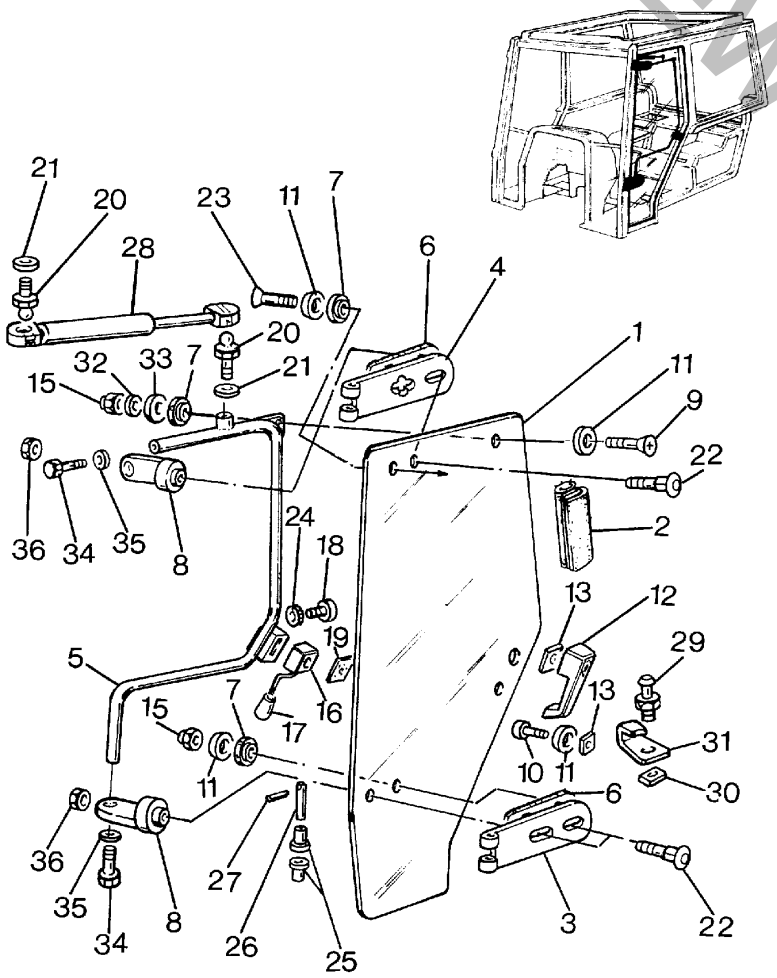

1	3547694M1	▶		1	GLASS
			A		
1	3547695M1	◀		1	GLASS
			B		
2	3548046M1			2	GASKET
3	3548047M91	▼		2	HINGE
			A		
3	3548051M91	▼		1	HINGE
			B		
4	3548048M91	▲		2	HINGE
			A		
4	3548052M91	▲		1	HINGE
			B		
5	3548049M91	▶		1	HANDLE
5	3548053M91	◀		1	HANDLE
6	3548284M1			4	GASKET
7	3548285M1			6	WASHER
8	3548394M1			4	PIN
9	3009442X1			2	SCREW
10	3015126X1			6	SCREW
11	3548029M1			8	WASHER
12	3548287M91			2	HANDLE
13	3548288M1	●●	3541260M91 (2)	2	GASKET
			▶		
13	3548288M1	●●	3541260M91 (2)	2	GASKET
			◀		
15	394367X1			4	NUT
16	3548289M91	▶		1	LOCK
16	3548290M91	◀		1	LOCK
17	3548291M1			2	GRIP
18	3009431X1			4	SCREW
19	3548292M1			2	GASKET
20	3548281M1	●●	3659464M91 (4)	4	BALL JOINT

Download full manual at youfixthis.com
PREVIEW - YOUFIXTHIS.COM

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


TRANSMISSION

E-04
07

E0407


Blizzard 95

TRANSMISSION - "COUNTERSHAFT"

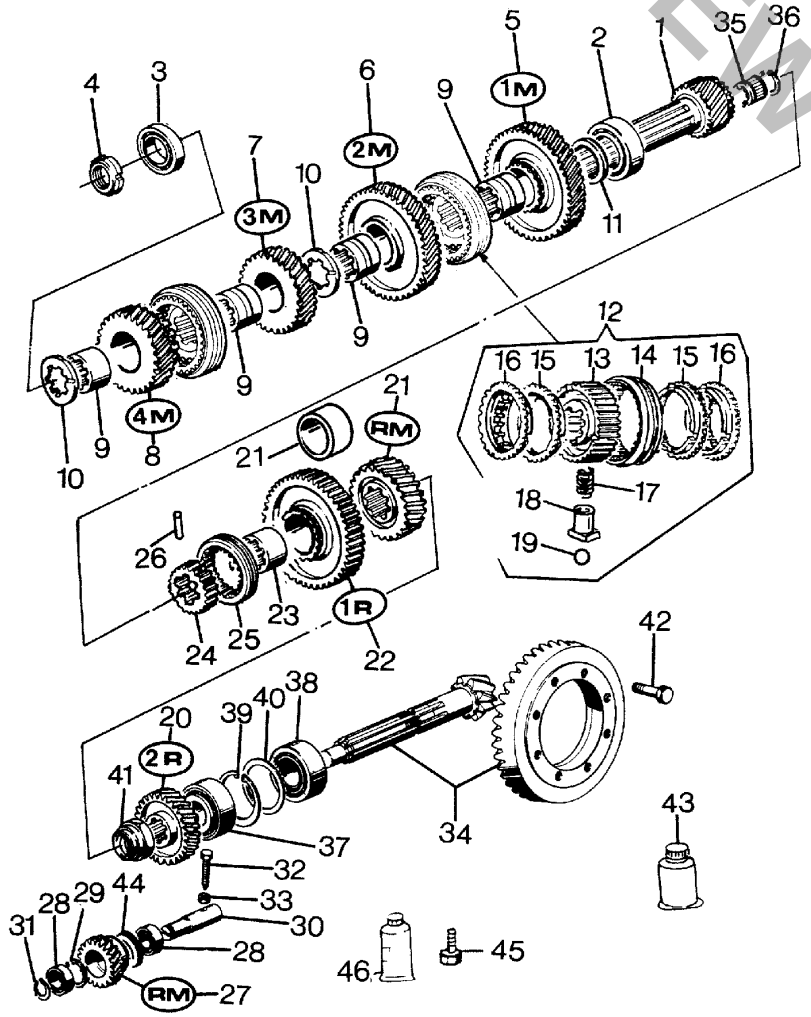

1	3535394M2			1	SHAFT
2	3530755M1			1	BEARING
			(X) 0.1.2.4		
3	1440562X1			1	BEARING
			(X) 0.1.2.4		
4	3530542M1			1	FERRULE
5	3530543M2	●	3530543M3 (1)	1	GEAR
		▲	47		
6	3530544M2	●	3530544M3 (1)	1	GEAR
		▲	39		
7	3530545M2	●	3530545M3 (1)	1	GEAR
		▲	35		
8	3532447M2	●	3532447M3 (1)	1	GEAR
		▲	30		
9	3538938M1	●	3668655M1 (4)	4	BUSH
10	3530548M1			2	WASHER
11	3530549M1			1	WASHER
12	3530550M94		GRAZIANO	2	SYNCHRO GEAR
			(X) 0.0.1.4		
12	3530550M94		CATTINI	2	SYNCHRO GEAR
			(X) 0.0.1.4		
13	3534556M1	!	12 GRAZIANO	2	HUB
13	3539426M1	!	12 CATTINI	1	HUB
14	3538530M1	!	12 GRAZIANO	2	SLEEVE
14	3539422M1	!	12 CATTINI	1	SLEEVE
15	3534405M1	!	12 GRAZIANO	4	RING
15	3539427M1	!	12 CATTINI	2	RING


FRONT AXLE 4 WHEEL DRIVE - DIFFERENTIAL - WITH STANDARD SEAL

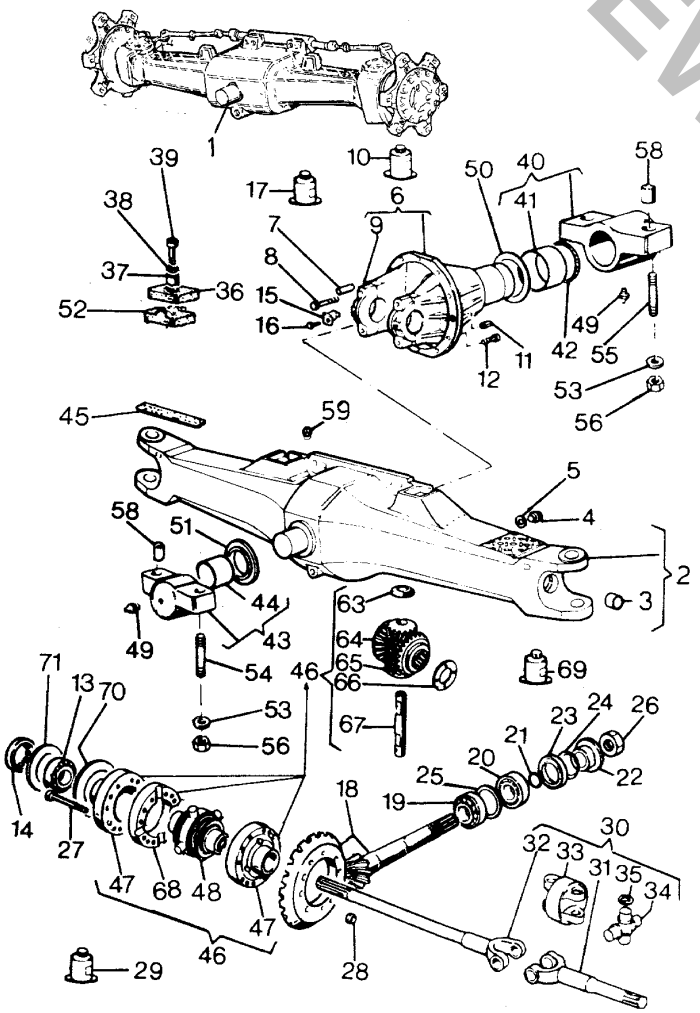

1	3428012M92	B B B CAT.II	1	AXLE
1	3428013M92	B B C CAT.II	1	AXLE
1	3428015M92	A B B CAT.II	1	AXLE
1	3428016M92	A B C CAT.II	1	AXLE
2	3426701M95 ➡	4589DC A	1	BODY
2	3429551M91 ⬅	4590DC A	1	BODY
3	3426938M1 !	2	2	BUSH
4	3429400M1		2	PLUG
5	3427185M1		2	RING
6	3427484M91	B C	1	SUPPORT
7	3427445M1		4	DOWEL
8	3019856X1		4	SCREW
9	!	6 REF.N.6	2	U BOLT
10	3303226M1 ●	3308788M1	999	LOCTITE
11	393596X1		2	DOWEL
12	3428397M1		12	SCREW
13	391339X1		2	BEARING
		(X) 0.0.2.8		

Download full manual at youfixthis.com
PREVIEW - YOUFIXTHIS.COM

DRAWBAR - LINEARE - "HEAVY DUTY"

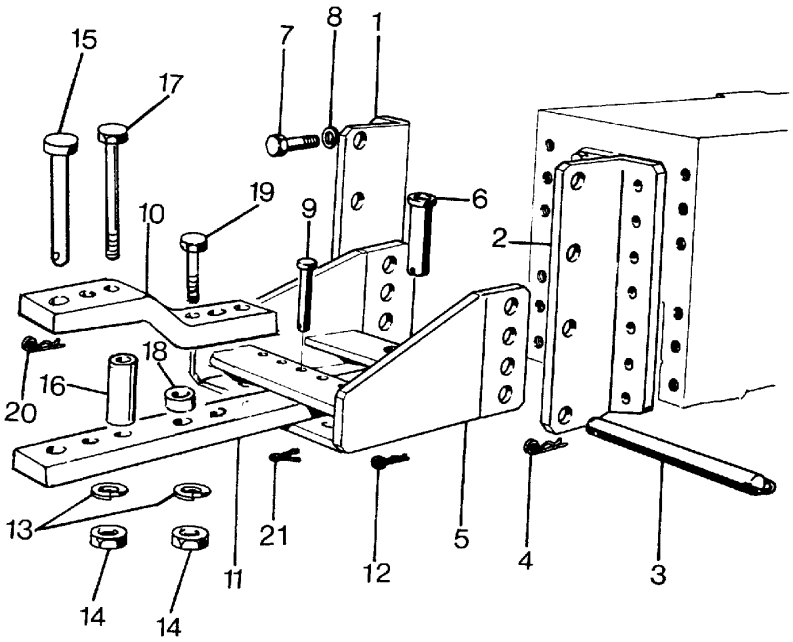

1	1825504M3	◀	1825504M4 (1)	1	STIRRUP
2	1825505M3	▶	1825505M4 (1)	1	PLATE
3	1825506M92			2	PIN
4	1433140M1			2	PIN
5	3530853M91			1	ARMATURE
6	3300157M91			1	PIN
7	390419X1			12	SCREW
8	391414X1			12	LOCK WASHER
9	3530803M1			1	DOWEL
10	3530828M1			1	YOKE
11	3530818M1		CAT."A"	1	BAR
12	1433140M1			1	PIN
13	391414X1			3	LOCK WASHER
14	1440202X1			3	NUT
15	1424441M91			1	PIN
16	3530806M1			1	THIMBLE
17	391413X1			1	SCREW
18	3530805M1			2	THIMBLE
19	339498X1			2	SCREW
20	1433140M1			1	PIN
21	974303M1			1	SPRING

◀ LEFT HAND

▶ RIGHT HAND

Download full manual at youfixthis.com

PREVIEW - YOUFIXTHIS.COM

PREVIEW ONLY

You're viewing 18 of 363 pages

The full manual includes:

- All 363 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Landini Blizzard 95 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual