PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

ENGINE


A-05
01



A0501

Ghibli 90

ENGINE ASSEMBLY - "1004-40T" REEN ENGINE

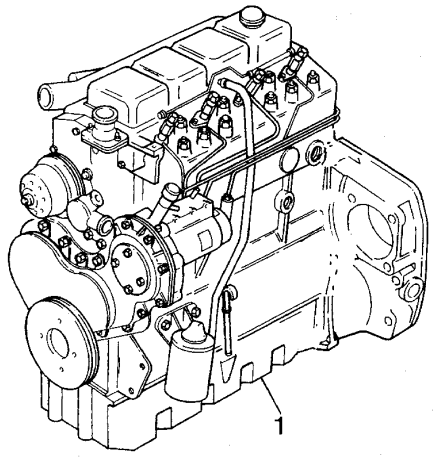

1	3649724M92	⊣	AQ81010	1	ENGINE
		⊣	ALTERNATIVE		

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


TRANSMISSION

E-04
01

E0401

Ghibli 90

CLUTCH - DUAL CLUTCH "O.M.G." - 12"

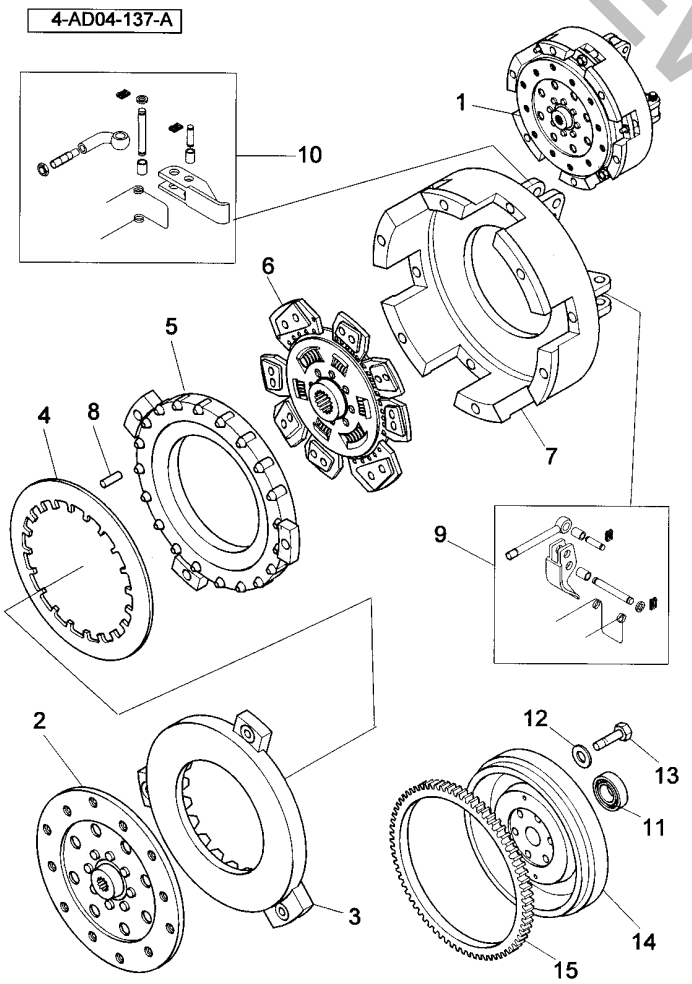

1	3532193M94		(X) 0.1.2.8	1	CLUTCH
2	3311352M92	!	1 D	1	DISC
3	3311925M1	!	(X) 0.0.1.2 1 D	1	PLATE
4	3310981M2	!	(X) 0.1.2.4 1	1	SPRING
5	3311926M1	!	(X) 0.1.2.4 1 A	1	PLATE
6	3311380M93	!	(X) 0.1.2.4 1 A	1	DISC
7		!	(X) 0.1.2.4 1	1	BOX
			REF.N.1		
8	1440961X1	!	1	1	DOWEL
9	3311924M91	!	1 D	1	KIT
10	3311381M91	!	1 A	1	KIT
11	339599X1		(X) 0.2.4.8	1	BEARING
12	33117127		D	6	WASHER
13	973013M1			6	BOLT
14	3532476M2			1	FLYWHEEL
15	3552228M1			1	CROWNWHEEL

!	THIS IS A COMPONENT OF AN ASSEMBLY
	NOT SERVICED, ORDER
A	FOR TRANSMISSION
D	"SEE ENGINE SECTION"
D	FOR P.T.O.
(X)	QTY PER TRACTORS SOLD (AA.BBB.CCC.DDD) (AA) FOR 1,(BBB) 2-10 (CCC) 11-25 (DDD) 26-50

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


HYDRAULICS AND LINKAGE

P-42
01

P4201

Ghibli 90


HYDRAULICS EQUIPMENT - "PIPINGS AND PUMP"

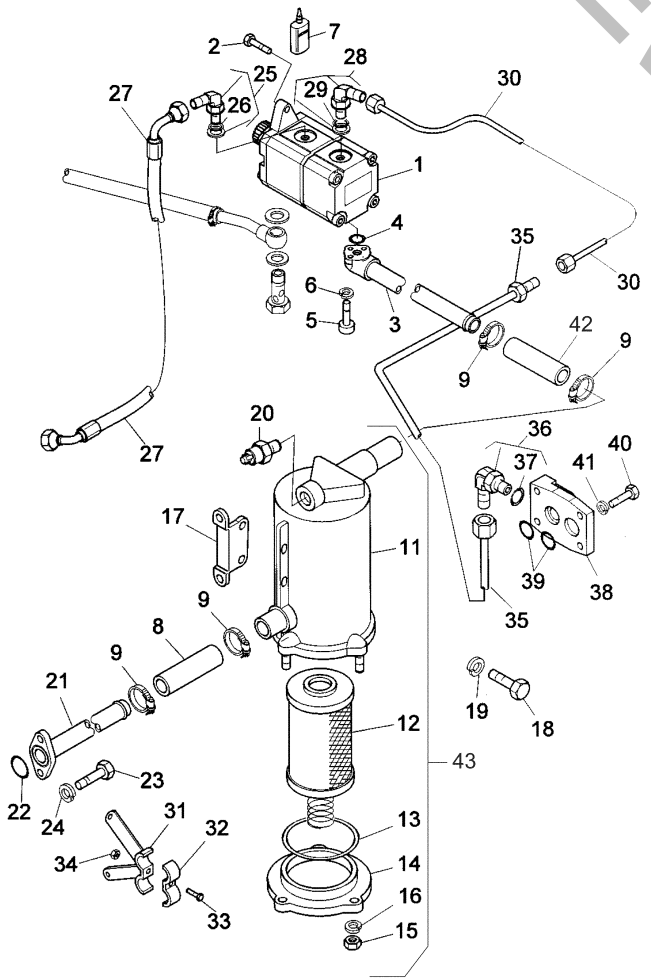

1			D	1	PUMP
2			D	2	SCREW
3	3655107M91	➡|	...	1	PIPE
3	3660417M91	➡	...	1	PIPE
4	371468X1			1	O RING
			(X) 0.5.10.20		
5	390796X1		M8X25	3	SCREW
6	339374X1			3	LOCK WASHER
7	3308788M1			1	LOCTITE
8	3307152M1			2	SLEEVE
9	1442232X1	➡	...	4	CLAMP
9	394301X1	➡|	...	4	CLAMP
11	3532598M91	!	43	1	BODY
			(X) 0.0.1.2		
12	3530223M92	!	43	1	CARTRIDGE
			(X) 2.4.6.12		
13	1007242M1	!	43	1	RING
			(X) 0.5.10.20		
14	3532630M1	!	43	1	COVER
15	1440086X1	!	43	3	NUT
16	1440313X1	●○	339374X1 (3)	3	LOCK WASHER
		➡	...		
16	339374X1	➡|	...	3	LOCK WASHER
17	3533143M1			2	STIRRUP
18	1442692X1		M6X25	2	SCREW
19	339375X1			2	LOCK WASHER
20	3530225M92	➡|	LESLM19142	1	DEPRESSION
			(X) 0.2.4.6		
20	3663168M1	➡	LESLM19143	1	SWITCH,IND
21	3655334J9A	●○	3662369J9A (1)	1	PIPE
		➡|	...		
			E		
21	3655334M91	➡	...	1	PIPE
			A		

TRACTOR CAB - KIT - MIRROR

4-AU18-015-A

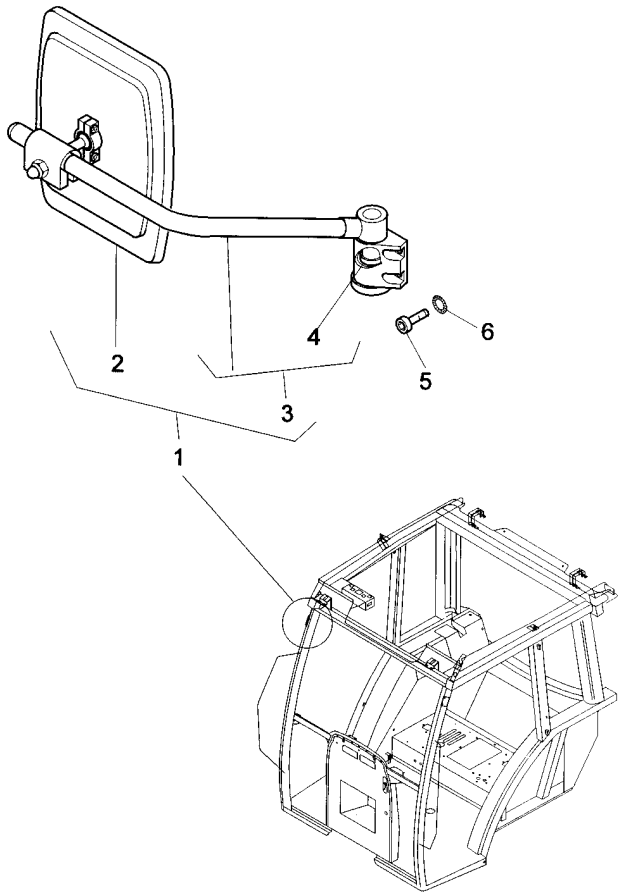

1	3552884M91	►		1	MIRROR
1	3552885M91	◄		1	MIRROR
2	3557565M91	!	1 (X) 0.0.1.2	1	BODY
3	3557019M91	! ►	1	1	ARM
3	3557020M91	! ◄	1	1	ARM
4	3541600M1	● !	3541601M1 (1) 3	1	FERRULE
4	3541601M1	! ◄ ►	3	1	FERRULE
5	391989X1			4	SCREW
6	3008914X1			4	NAMEPLATE

! THIS IS A COMPONENT OF AN ASSEMBLY

◄ LEFT HAND


► RIGHT HAND

QTY PER TRACTORS SOLD (AA.BBB.CCC.DDD) (AA) FOR 1,(BBB) 2-10 (CCC) 11-25 (DDD) 26-50

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

FENDERS - FRONT - 2WHEEL DRIVE

4-AS18-042-A

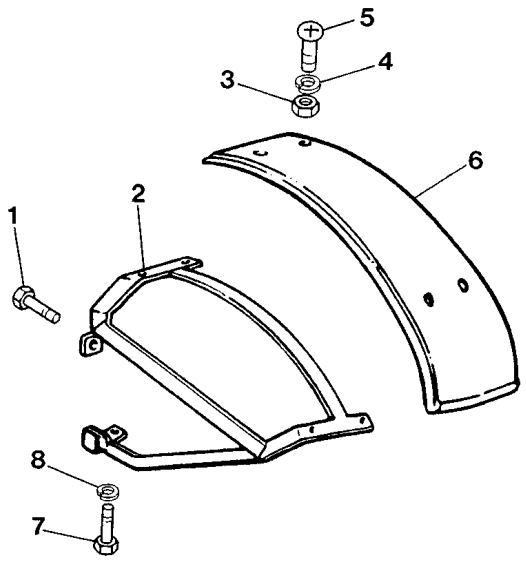

1	390913X1	►		1	SCREW
1	392241X1	◄		1	SCREW
2	3304600M92	◄		1	FRAME
			R		
			T-A 0:50		
2	3304601M92	►		1	FRAME
			R		
			T-A 0:50		
2	3530502M91	◄		1	FRAME
			C		
			C		
			T-A 0:50		
2	3530503M91	►		1	FRAME
			C		
			C		
			T-A 0:50		
3	339169X1		394367X1 (8)	8	NUT
			...		
3	394367X1		...	8	NUT
4	1440313X1		339374X1 (8)	8	LOCK WASHER
			...		
4	339374X1		...	8	LOCK WASHER
5	390018X1			8	BOLT
6	3304607M2		C	2	FENDER
			R		
			T-A 0:50		
6	3537887M1		C	2	GUARD
			T-A 0:50		

Download full manual at youfixthis.com

PREVIEW - YOUFIXTHIS.COM

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


LIGHTING EQUIPMENT

D-00
02

D0002

ELECTRICAL WIRING - "FRONT"

Ghibli 90

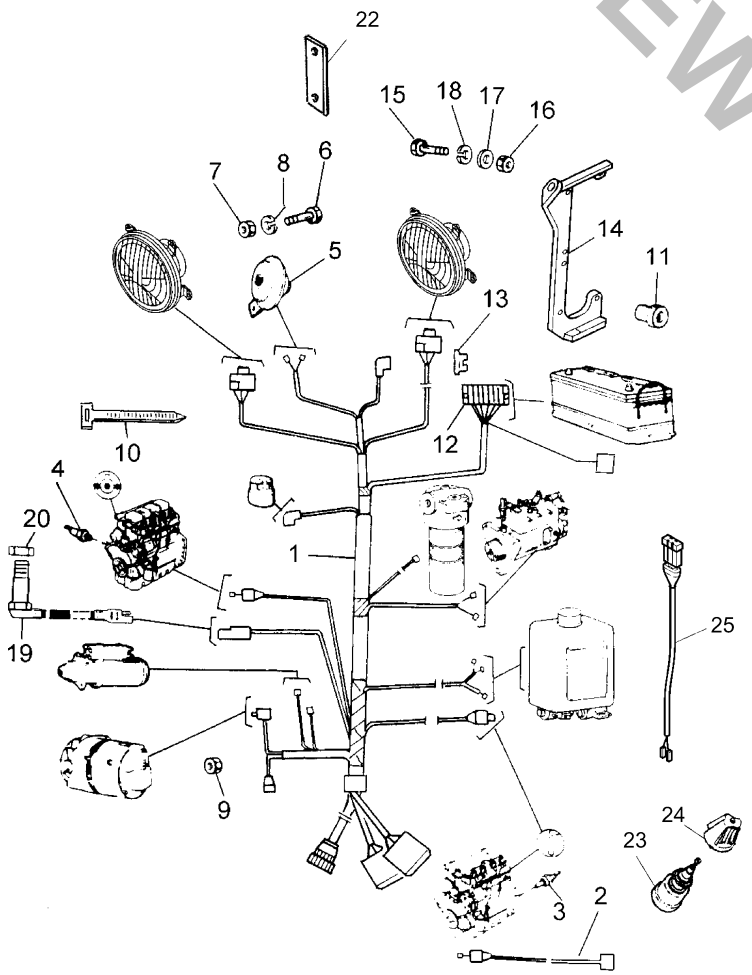

17	390971X1		7	WASHER
18	339375X1		7	LOCK WASHER
19	3648187M91	D	1	SENSOR
20	339592X1		1	NUT
21	3539382M2		1	STIRRUP
22	3547696M1		1	STIRRUP
23	3619446M1		1	SWITCH,IND
24	3619180M3		1	BUTTON
25	3670748M91		1	BUTTON

! THIS IS A COMPONENT OF AN ASSEMBLY

NOT SERVICED, ORDER


A WATER TEMPERATURE SWITCH

C OIL TEMPERATURE SWITCH

D FOR P.T.O.

T-A Replacement

CYLINDER BLOCK - PLATE D - "1004-40T" GREEN ENGINE

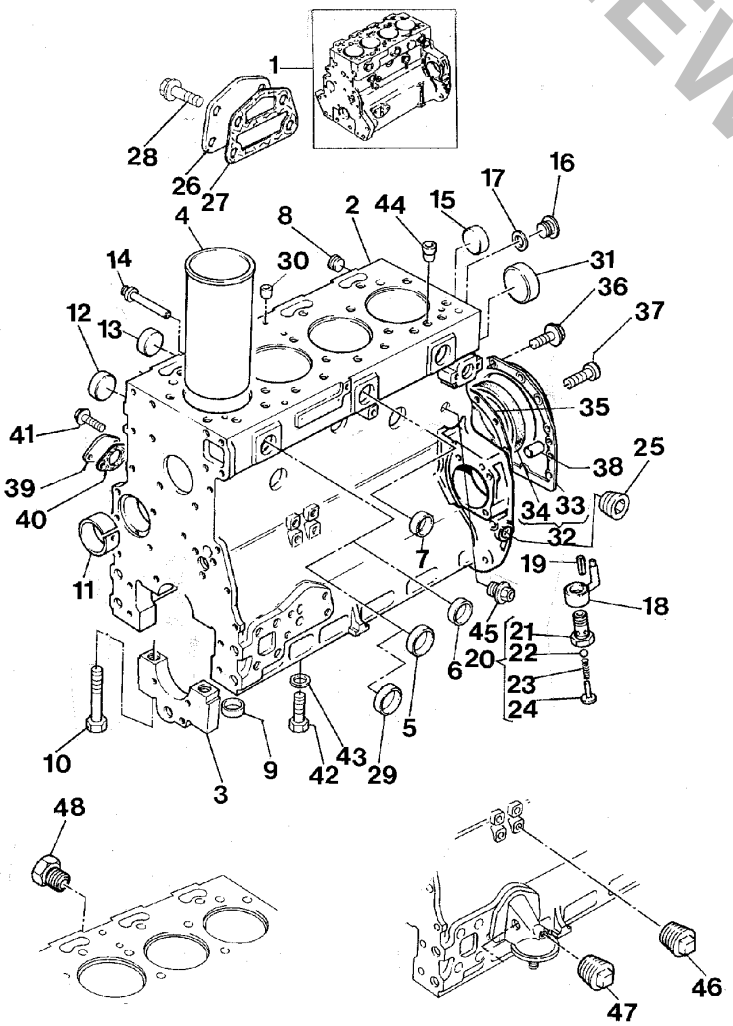


1	ZZ50266	●	ZZ50297 (1)	1	CYLINDER B
2		!	1	1	BLOCK
		⛽	REF.N.1		
3		!	1	5	SUPPORT
		⛽	REF.N.1		
4	3135X062		B	4	LINER
			(X) 0.4.8.16		
4	3135X063	!	1	4	LINER
			P		
			(X) 0.4.8.16		
5	0650710	!	1	5	PLUG
			C		
6	0650713	!	1	1	PLUG
			C		
7	0650710	!	1	1	PLUG
			E		
8	0650588	!	1	1	PLUG
			E		
9	33142111	!	1	10	SLEEVE
10	32166329	!	1	10	SCREW
11	31134165	!	1	1	BUSH
12	32418122	!	1	4	PLUG
			E		
13	32416118	!	1	4	PLUG
			F		
14	2485A204	!	1	1	PLUG
			G		
15	32418122	!	1	2	PLUG
			J		
16	0650582	!	1	1	PLUG
			N		
17	3311R003	●	2415D108 (1)	1	WASHER
		!	1		
			N		

Download full manual at youfixthis.com

PREVIEW - YOUFIXTHIS.COM

TRANSMISSION - "OUTPUT SHAFT"

4-0806-028-A

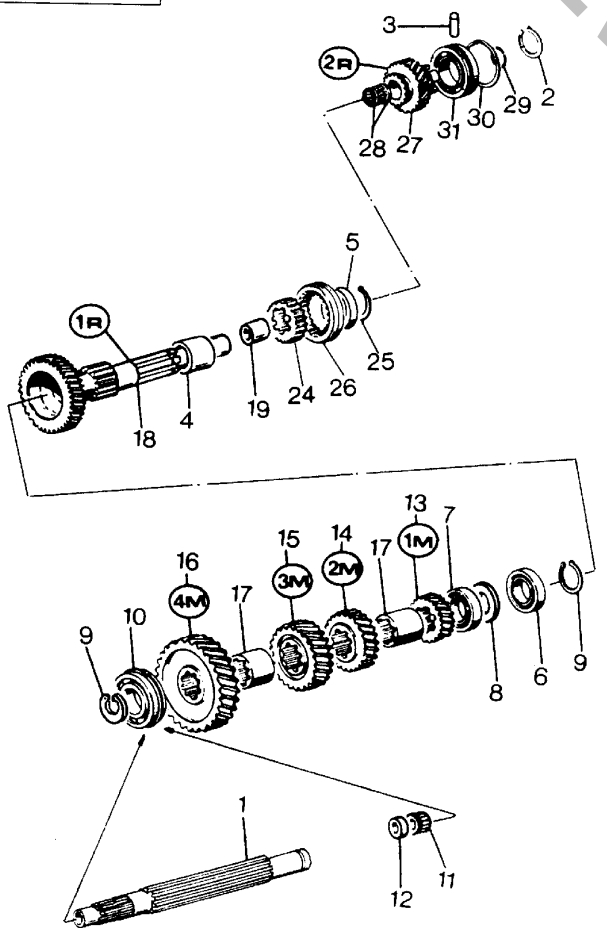

1	3548465M1			1	SHAFT
2	339605X1			1	RING
3	3534671M2			1	PIN
4	3534366M1			1	SPACER
5	3534375M1			1	BEARING
			(X) 0.2.4.8		
6	1440511X1			1	BEARING
7	3015037X1			1	BEARING
8	3530535M1	●	3530535M2 (1)	1	SPACER
9	392759X1	●	339820X1 (2)	2	RING
10	831789M1			1	BEARING
11	3308392M1			1	CAGE
12	3308393M1			1	SEAL
13	3530536M1	▲	23	1	GEAR
14	3530537M1	▲	30	1	GEAR
15	3530538M1	▲	34	1	GEAR
16	3532446M1	▲	43	1	GEAR
17	3530540M1			2	SPACER
18	3534374M92	▲	37/15	1	GEAR
19	979469M1	!	18	1	BUSH
24	3534402M1			1	HUB
25	1442697X1			1	RING
26	3542272M1			1	SLEEVE
			(X) 0.1.2.4		
27	3534368M1	▲	25	1	GEAR
28	395567X1			2	CAGE
29	395566X1			1	RING
30	339517X1			1	RING
31	1443559X1			1	BEARING


! THIS IS A COMPONENT OF AN ASSEMBLY

▲ NUMBER OF TEETH/SPLINES

QTY PER TRACTORS SOLD (AA.BBB.CCC.DDD) (AA) FOR 1,(BBB) 2-10 (CCC) 11-25 (DDD) 26-50

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com


LIFT DISTRIBUTOR - HAND MECHANICAL CONTROL

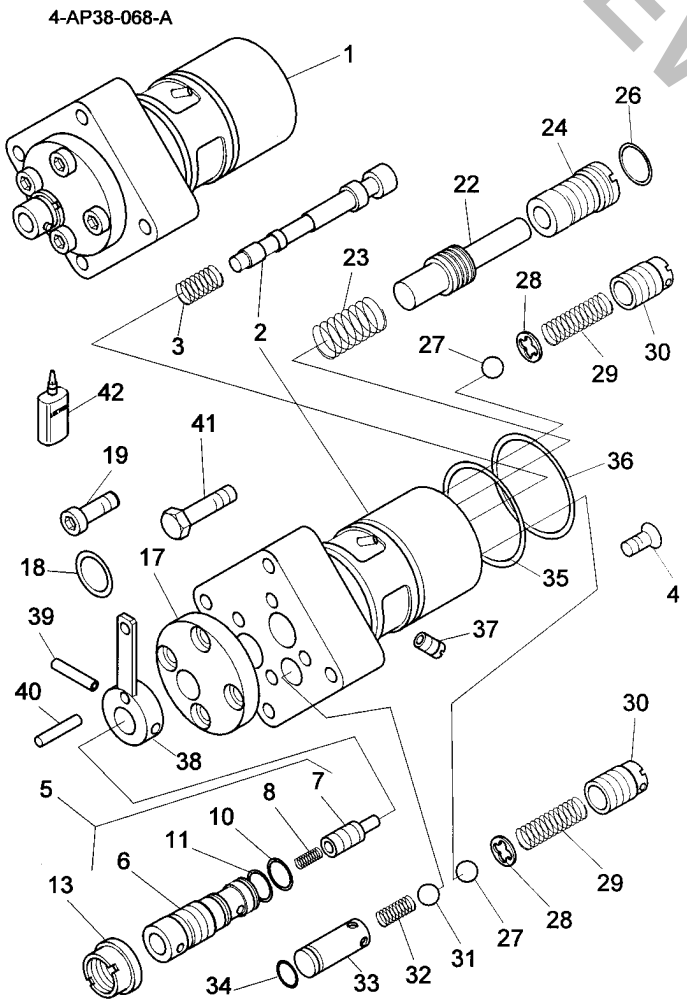

1	3306467M94	●	3306467M97 (1)	1	DISTRIBUTOR
2		!	1	1	KIT
		▰	REF.N.1		
3	1825248M1	!	1	1	SPRING
4	1441267X1	!	1	1	SCREW
5	3306227M94	!	1	1	VALVE
			(X) 0.0.1.2		
6		!	5	1	VALVE SEAT
		▰	REF.N.5		
7		!	5	1	VALVE
		▰	REF.N.5		
8	1825253M1	!	5	1	SPRING
10	1000557M1	!	5	1	O RING
11	1000578M1	!	5	1	O RING
13	3306680M2	!	1	1	FERRULE
17	3531029M2	●	3531029M3 (1)	1	COVER
		!	1		
18	371468X1	!	1	1	O RING
19	391148X1	!	1	4	SCREW
22	3306235M2	!	1	1	VALVE
23	3306236M1	!	1	1	SPRING
24	3306468M3	!	1	1	VALVE SEAT
26	364784X1	!	1	1	O RING
27	361031X1	!	1	2	BALL
28	1425368M1	!	1	2	WASHER
29	3306237M1	!	1	2	SPRING
30	1425370M1	!	1	2	SCREW
31	13535X	●		1	BALL
		!	1		
32	3650048M1	!	1	1	SPRING
33	1425371M1	●	1425371M2 (1)	1	GUIDE
		!	1		
34	3019926X1	!	1	1	O RING

Download full manual at youfixthis.com
PREVIEW - YOUFIXTHIS.COM


TRACTOR CAB - "ROOF" - CLADDING PANEL

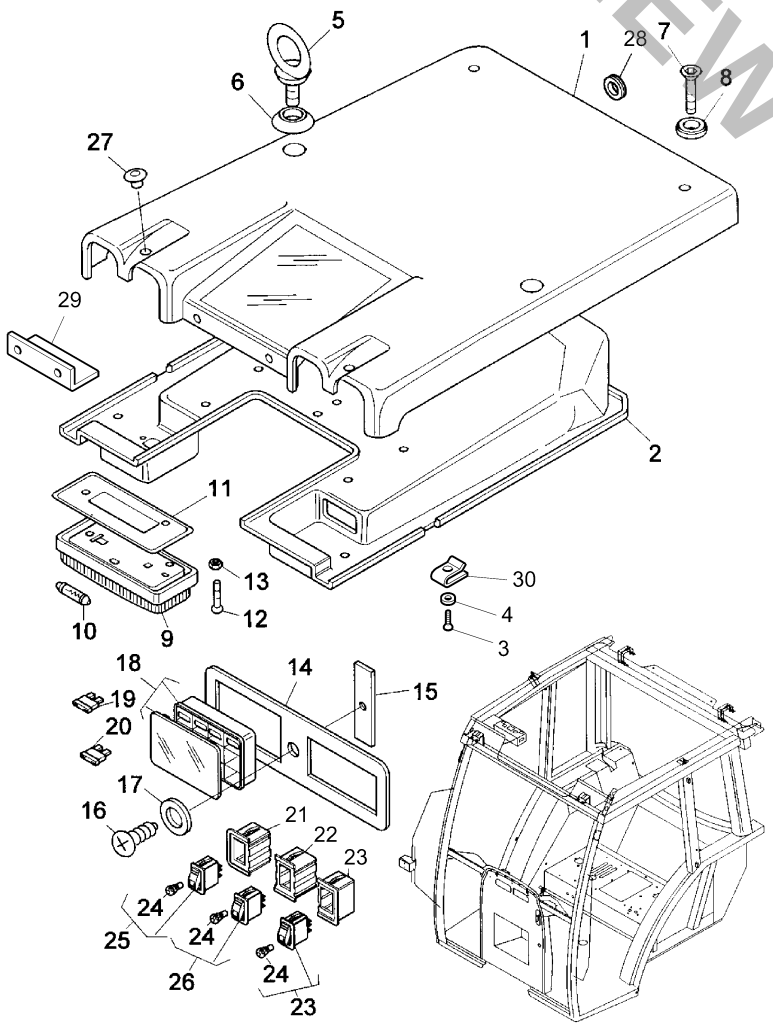

1	3660198M91		D	1 ROOF
1	3660220M91		F	1 ROOF
2	3659449M1			1 FACING
3	3015127X1		M4,9X19	13 SCREW
4	3659451M1			13 BOSS
5	3660112M1			2 EYE BOLT
6	3660115M1			2 SPACER
7	3009444X1	●	3009445X1 (4) M8X40	4 SCREW
8	3660113M1			2 BUSH
9	3540331M91			1 ROOF LIGHT
10	3659453M1			1 FLASHER
11		!	9	1 FACING
			REF.N.9	
12	3019032X1		M4X20	2 SCREW
13	1443615X1			2 NUT
14	3659458M1			1 SKIRT
15	3659459M1			1 STIRRUP
16	3015153X1		M6X20	1 SCREW
17	391038X1			1 WASHER
18			B	1 BOX
19			B	999 FUSE
20		!	18	999 FUSE
			B	
21	3559524M1			2 SKIRT
22	3559525M1			1 SKIRT
23	3559519M91		A	1 SWITCH,IND
24			B	999 FLASHER
25	3559518M91		E	1 SWITCH,IND
26			B	1 SWITCH,IND
			C	
27	3660114M1			2 BUSH

Download full manual at youfixthis.com
PREVIEW - YOUFIXTHIS.COM

FLOOR PLATFORM - RAILS LADDER

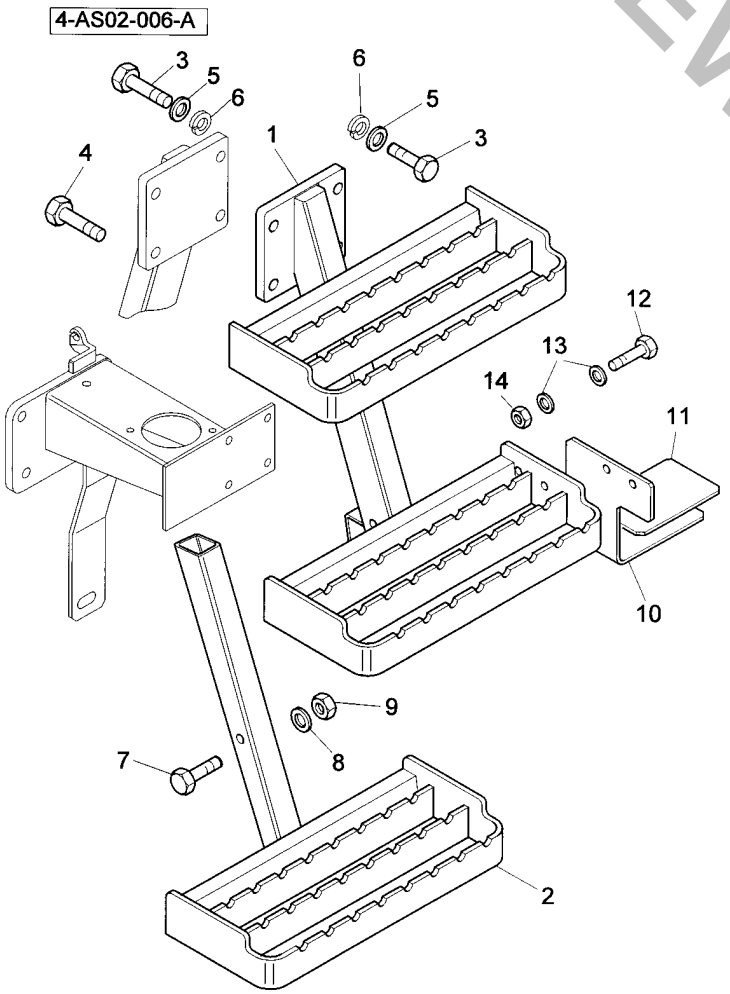

1	3657591J9C ►		1	LADDER
1	3660348J9A ◄	T-A 0:25 3660348M92 (1)	1	LADDER
2	3655406J9B		2	STEP
3	3009506X1	T-A 0:25 339299X1 (7)	7	SCREW
4	339208X1 ►	M12X30 1440718X1 (1)	1	SCREW
5	390735X1		8	WASHER
6	339369X1		8	LOCK WASHER
7	1440352X1	M10X60	2	SCREW
8	390734X1		2	WASHER
9	1441329X1		2	NUT
10	3660349JA	3660349M1 (1) ...	1	STIRRUP
11	3660360JA	3660360M1 (1) ...	1	GASKET
12	3009493X1		2	SCREW
13	390734X1		4	WASHER
14	1441932X1		2	NUT

➡|	UP TO SERIAL OR ENGINE NUMBER
◄	LEFT HAND
►	RIGHT HAND
T-A	Replacement

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


LIGHTING EQUIPMENT

D-00
02

D0002


Ghibli 90


ELECTRICAL WIRING - "FRONT"

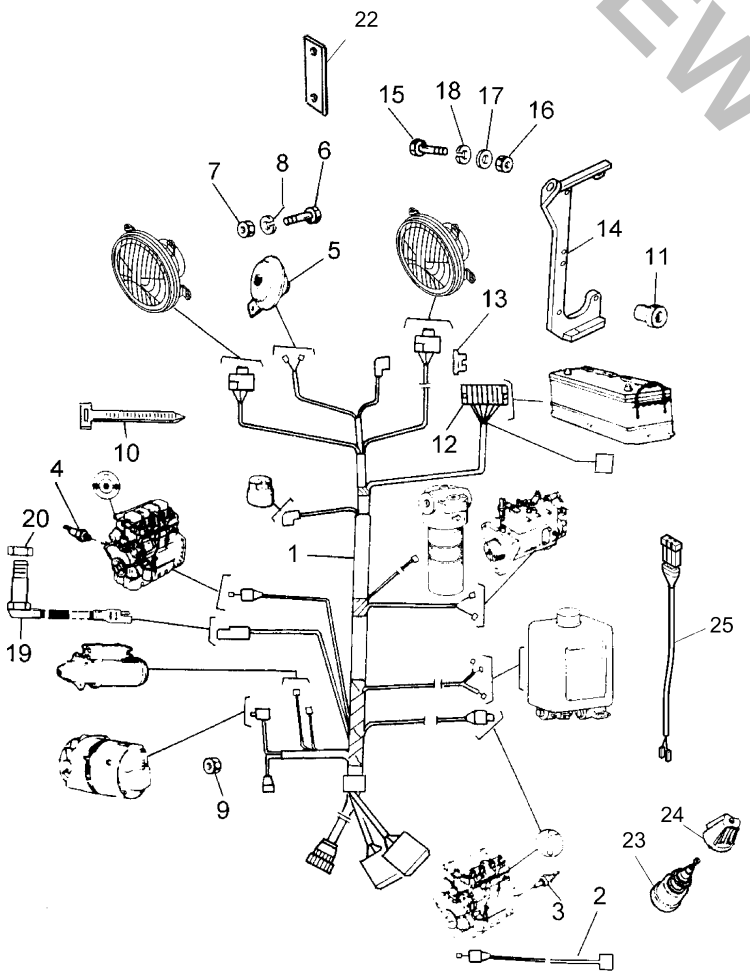


1	3659091M91	●	3659091M94 (1)	1	HARNESS
2	3658643M91		A T-A 2:50	1	CABLE
3	1877731M92		A	1	BULB
4	1877721M92		C	1	BULB
5	3666296M91		COBO	1	HORN
6	339123X1		M8X20	1	SCREW
7	339169X1	●	394367X1 (1)	1	NUT
8	339374X1			1	LOCK WASHER
9	390995X1			1	NUT
10	3533937M1			5	CLAMP
11	3555163M1			1	NUT
12		!	1 REF.N.1	1	BOX
13	3534038M91	!	1 20 AMP T-A 0:25	999	FUSE
13	3550550M91	!	1 100 AMP T-A 0:25	999	FUSE
13	3550551M91	!	1 70 AMP T-A 0:25	999	FUSE
14	3657674J9A	●	3657674M91 (1)	1	STIRRUP
15	339666X1		M6X20	7	SCREW
16	339030X1	●	1441500X1 (5)	5	NUT

CYLINDER HEAD - PLATE C - "1004-40T" GREEN ENGINE

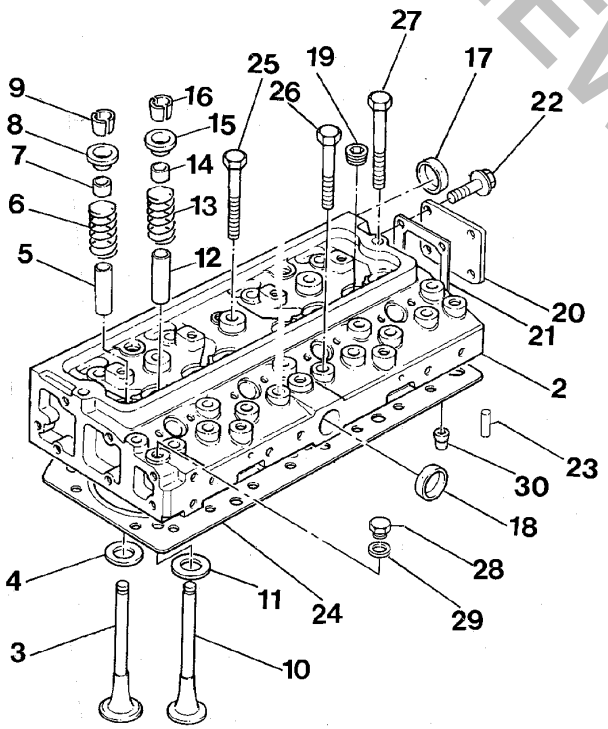

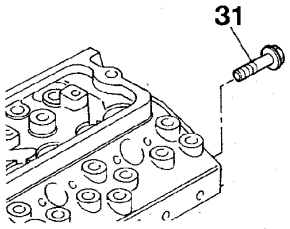

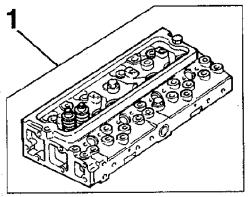


1	ZZ80254			1	CYLINDER HEAD
			(X) 0.0.0.1		
2		!	1	1	CYLINDER HEAD
			REF.N.1		
3	3142L081	!	1	4	VALVE
			(X) 0.4.8.16		
4	3314A071	!	1	4	INSERT
			(X) 0.4.8.16		
5	3313A012	!	1	4	INSERT
			(X) 0.0.4.8		
6	3174T003		3174P409 (4)	4	SPRING
		!	1		
			(X) 0.4.8.16		
7	2418M506	!	1	4	SEAL
			INLET		
			(X) 0.4.8.16		
8	3342N011	!	1	4	CAP
			(X) 0.4.8.16		
9	3142W004	!	1	8	COTTER
			(X) 0.4.8.16		
10	3142D051	!	1	4	VALVE
			(X) 0.4.8.16		
11	3314A009	!	1	4	INSERT
			(X) 0.4.8.16		
12	3318A705	!	1	4	GUIDE
			(X) 0.0.4.8		
13	3174T003		3174P409 (4)	4	SPRING
		!	1		
			(X) 0.4.8.16		
14	2418M505	!	1	4	SEAL
			EXHAUST		
			(X) 0.4.8.16		
15	3342N011	!	1	4	CAP
			(X) 0.4.8.16		

Download full manual at youfixthis.com

PREVIEW - YOUFIXTHIS.COM


TRANSMISSION - "COUNTERSHAFT"

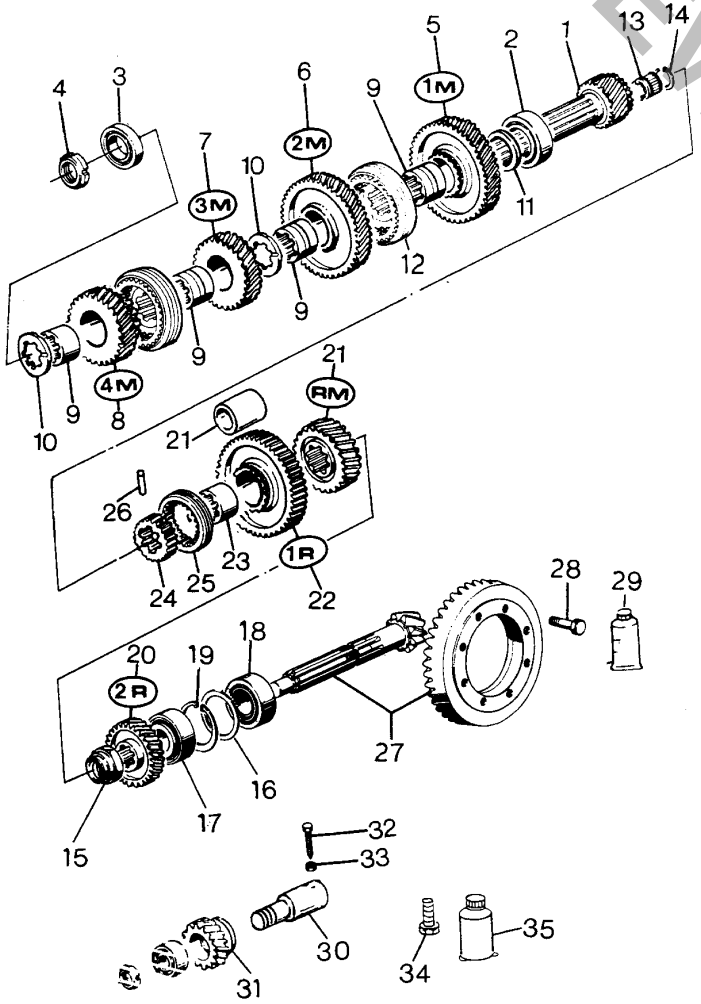

1	3535394M2			1	SHAFT
2	3530755M1			1	BEARING
3	1440562X1			1	BEARING
4	3530542M1			1	FERRULE
5	3530543M2		3530543M3 (1)	1	GEAR
			47		
6	3530544M2		3530544M3 (1)	1	GEAR
			39		
7	3530545M2		3530545M3 (1)	1	GEAR
			35		
8	3532447M2		3532447M3 (1)	1	GEAR
			30		
9	3538938M1		3668655M1 (4)	4	BUSH
			(X) 0.2.4.8		
10	3530548M1			2	WASHER
11	3530549M1			1	WASHER
12			E-04 11 1	2	SYNCHRO
			E-04 111 1		GEAR
13	1441925X1			1	BEARING
			(X) 0.2.4.8		
14	1441924X1			1	RING
			(X) 0.2.4.8		
15	3307883M1			1	NUT
16	1824669M1		1824670M1 (999)	999	SHIM
			0,10MM		
16	1824670M1		0,15MM	999	SHIM
16	1824671M1		0,20MM	999	SHIM
16	1824672M1		0,30MM	999	SHIM
17	1440640X1			1	BEARING
			(X) 0.2.4.8		
18	3532345M91			1	BEARING
			(X) 0.2.4.8		
19	393580X1			1	RING

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

HYDRAULIC LIFT - LIFT ARMS

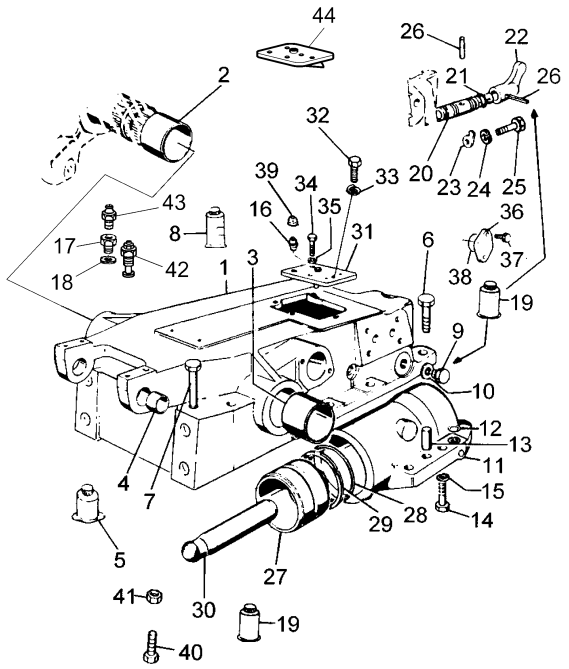


1	3549082M91	●	3549082M96 (1) A	1	BODY
1	3660204M91		C	1	BODY
2	1819841M1	! ◄	1	2	BUSH
3	1825272M1	! ►	1	2	BUSH
4	1426483M1	!	1	2	BUSH
5	3308788M1			1	LOCTITE
6	1440718X1	➡	...	11	SCREW
6	3009514X1		C M12X40	4	SCREW
6	339208X1	● ➡	1440718X1 (9) ... A M12X45	9	SCREW
6	339208X1	● ➡	1440718X1 (3) ... C M12X45	3	SCREW
7	1440030X1		C M12X60	1	SCREW
7	1441991X1	●	3015155X1 (1) C M12X35	1	STUD
7	1441991X1	●	3015155X1 (2) A M12X35	2	STUD
7	390171X1		C M12X120	4	STUD
7	390171X1		A M12X120	2	SCREW
8	3536801M1			1	LOCTITE
9	3547976M1	➡	...	1	PLUG

Download full manual at youfixthis.com

PREVIEW - YOUFIXTHIS.COM

TRACTOR CAB - WINDSCREEN

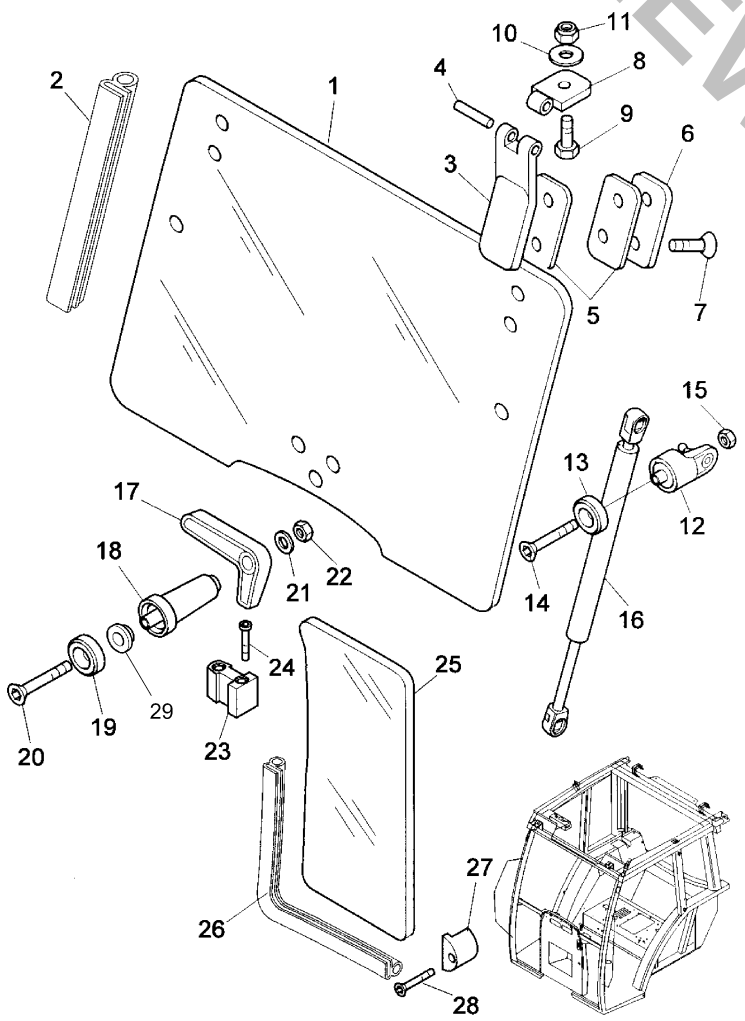


1	3659450M1	➡	...	1	GLASS
1	3661412M1	➡	...	1	GLASS
2	3660066M1			1	GASKET
3	3659005M1			2	HINGE
			T-A 0:50		
4	3659462M1			2	DOWEL
5	3660103M1			4	GROMMET
6	3660073M1			2	WASHER
7	3008490X1	●	3008302X1 (4)	4	SCREW
			M8X20		
8	3548317M1			2	HINGE
9	3009432X1		M6X25	4	SCREW
10	390036X1			4	WASHER
11	1441500X1			4	NUT
12	3548026M1			2	YOKE
13	3548029M1			4	WASHER
14	3009443X1		M8X35	2	SCREW
15	394367X1			3	NUT
16	3548042M91			2	DAMPER
			(X) 0.0.1.2		
			T-A 0:25		
17	3547857M1			1	HANDLE
			T-A 0:25		
18	3548028M1			1	BUSH
			T-A 0:25		
19	3548029M1			1	WASHER
20	3009448X1		M8X70	1	SCREW
21	391039X1			2	WASHER
22	3005908X1			2	NUT
23	3548041M1			1	RETAINER

Download full manual at youfixthis.com
PREVIEW - YOUFIXTHIS.COM

TOOL BOX

4-AR08-004-A

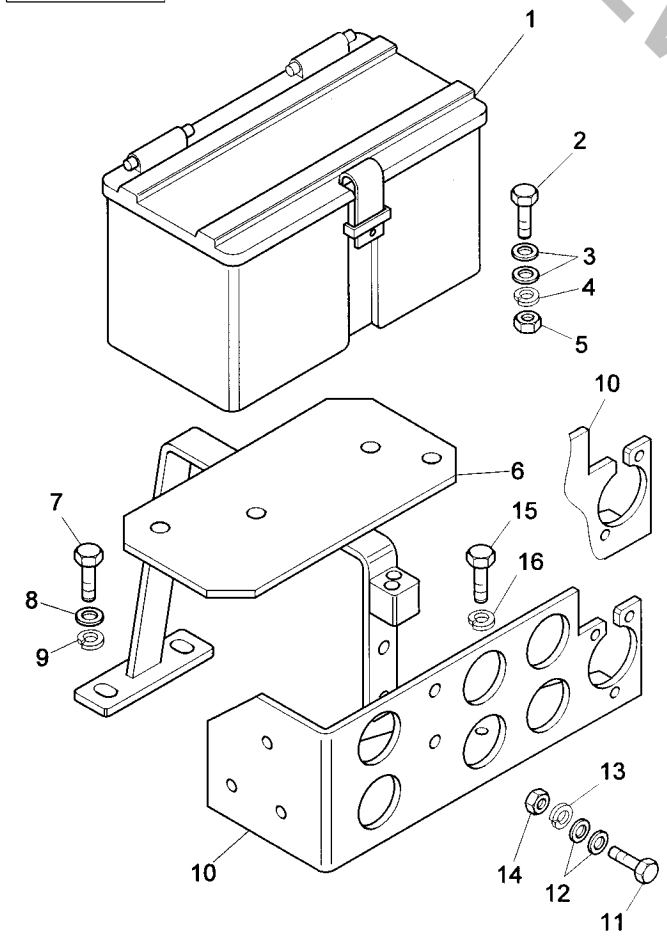

1	3656831M91			1 BOX
			T-A 0:25	
2	339761X1		M8X25	2 SCREW
3	390972X1			4 WASHER
4	339374X1			2 LOCK WASHER
5	339169X1	●	394367X1 (2)	2 NUT
6	3657664M91	●	3657664M92 (1)	1 SUPPORT
			C	
6	3660538J9A		D	1 SUPPORT
7	339401X1		M10X25	2 SCREW
8	390734X1			2 WASHER
9	1440314X1			2 LOCK WASHER
10	3655136M91		B	1 SUPPORT
10	3658316M91		A	1 SUPPORT
11	339123X1		M8X20	2 SCREW
12	390972X1			4 WASHER
13	339374X1			2 LOCK WASHER
14	339169X1	●	394367X1 (2)	2 NUT
15	1441630X1			2 SCREW
16	1440314X1			2 LOCK WASHER


A	NORTH AMERICAN MARKET ONLY
B	NOT INCLUDED TRACTOR VERSION FOR N.A.O.
C	WITH MECANICS RISER
D	WITH ELECTRONIC LIFT
T-A	Replacement

Download full manual at youfixthis.com
PREVIEW - YOUFIXTHIS.COM

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

ELECTRICAL WIRING - EQUIPMENT INSTRUMENT PANEL

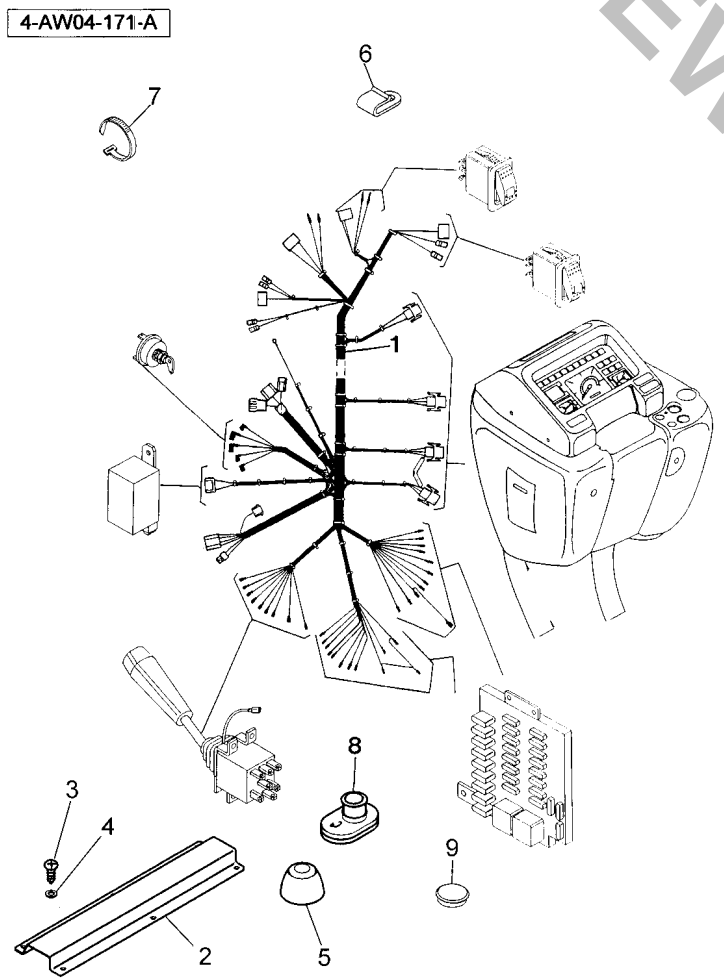

1	3658965J9A	3658965M91 (1) ... C	1	HARNESS
1	3659090M91	3659090M92 (1) ... B	1	HARNESS
1	3671077M93	...	1	HARNESS
2	3559604M2		1	FLAP
3	3015127X1		5	SCREW
4	390469X1		5	LOCK WASHER
5	3654432M1		2	PLUG
6	3307615M1		2	CLAMP
7	3533937M1		5	CLAMP
8	3559670M1		1	CHOCK
9	3658663M1		1	PLUG

➡ FROM SERIAL OR ENGINE NUMBER

➡| UP TO SERIAL OR ENGINE NUMBER

B NOT INCLUDED TRACTOR VERSION FOR N.A.O.

C FOR TRACTOR "N.A.O." VERSION

PREVIEW ONLY

You're viewing 18 of 365 pages

The full manual includes:

- All 365 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Landini Ghibli 90 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual