
545C 3 CYL TRACTOR LOADER (12/88-8/92) - Wheels and Weights

01B01 STANDARD REAR WHEELS

Ref	Part Number	Qty	Description
1	C5NN1036G	2	Disc, 24" for 16.9 x 24 Tire, 8 Bolt, Start Year: 12/01/1988
2	9823966	AR	Nut, G8, 3/4"-16, Start Year: 12/01/1988
3	C5NN1050S	2	Rim Assy., 15 x 24, Start Year: 12/01/1988
3A	C0NN1A030A	2	Valve, Plug, Start Year: 12/01/1988
4	370938S36	AR	Bolt, Carriage, 5/8"-18 x 2-53/64", Start Year: 12/01/1988
4	374713S36	12	Bolt, Carriage, 5/8"-18 x 3.4", Start Year: 12/01/1988
5	370692S36	AR	Washer, Flat, 5/8", Start Year: 12/01/1988
6	408	AR	Nut, G5, 5/8"-18, Start Year: 12/01/1988
7	E8NN1100BA	2	Wheel Assy., 15 x 24, 8 Bolt, Start Year: 12/01/1988
7	E8NN1100EA	2	Wheel Assy., 15 x 28, 8 Bolt, Start Year: 12/01/1988
8	86512328	16	Washer, Hardened, G8, 3/4", Start Year: 12/01/1988

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

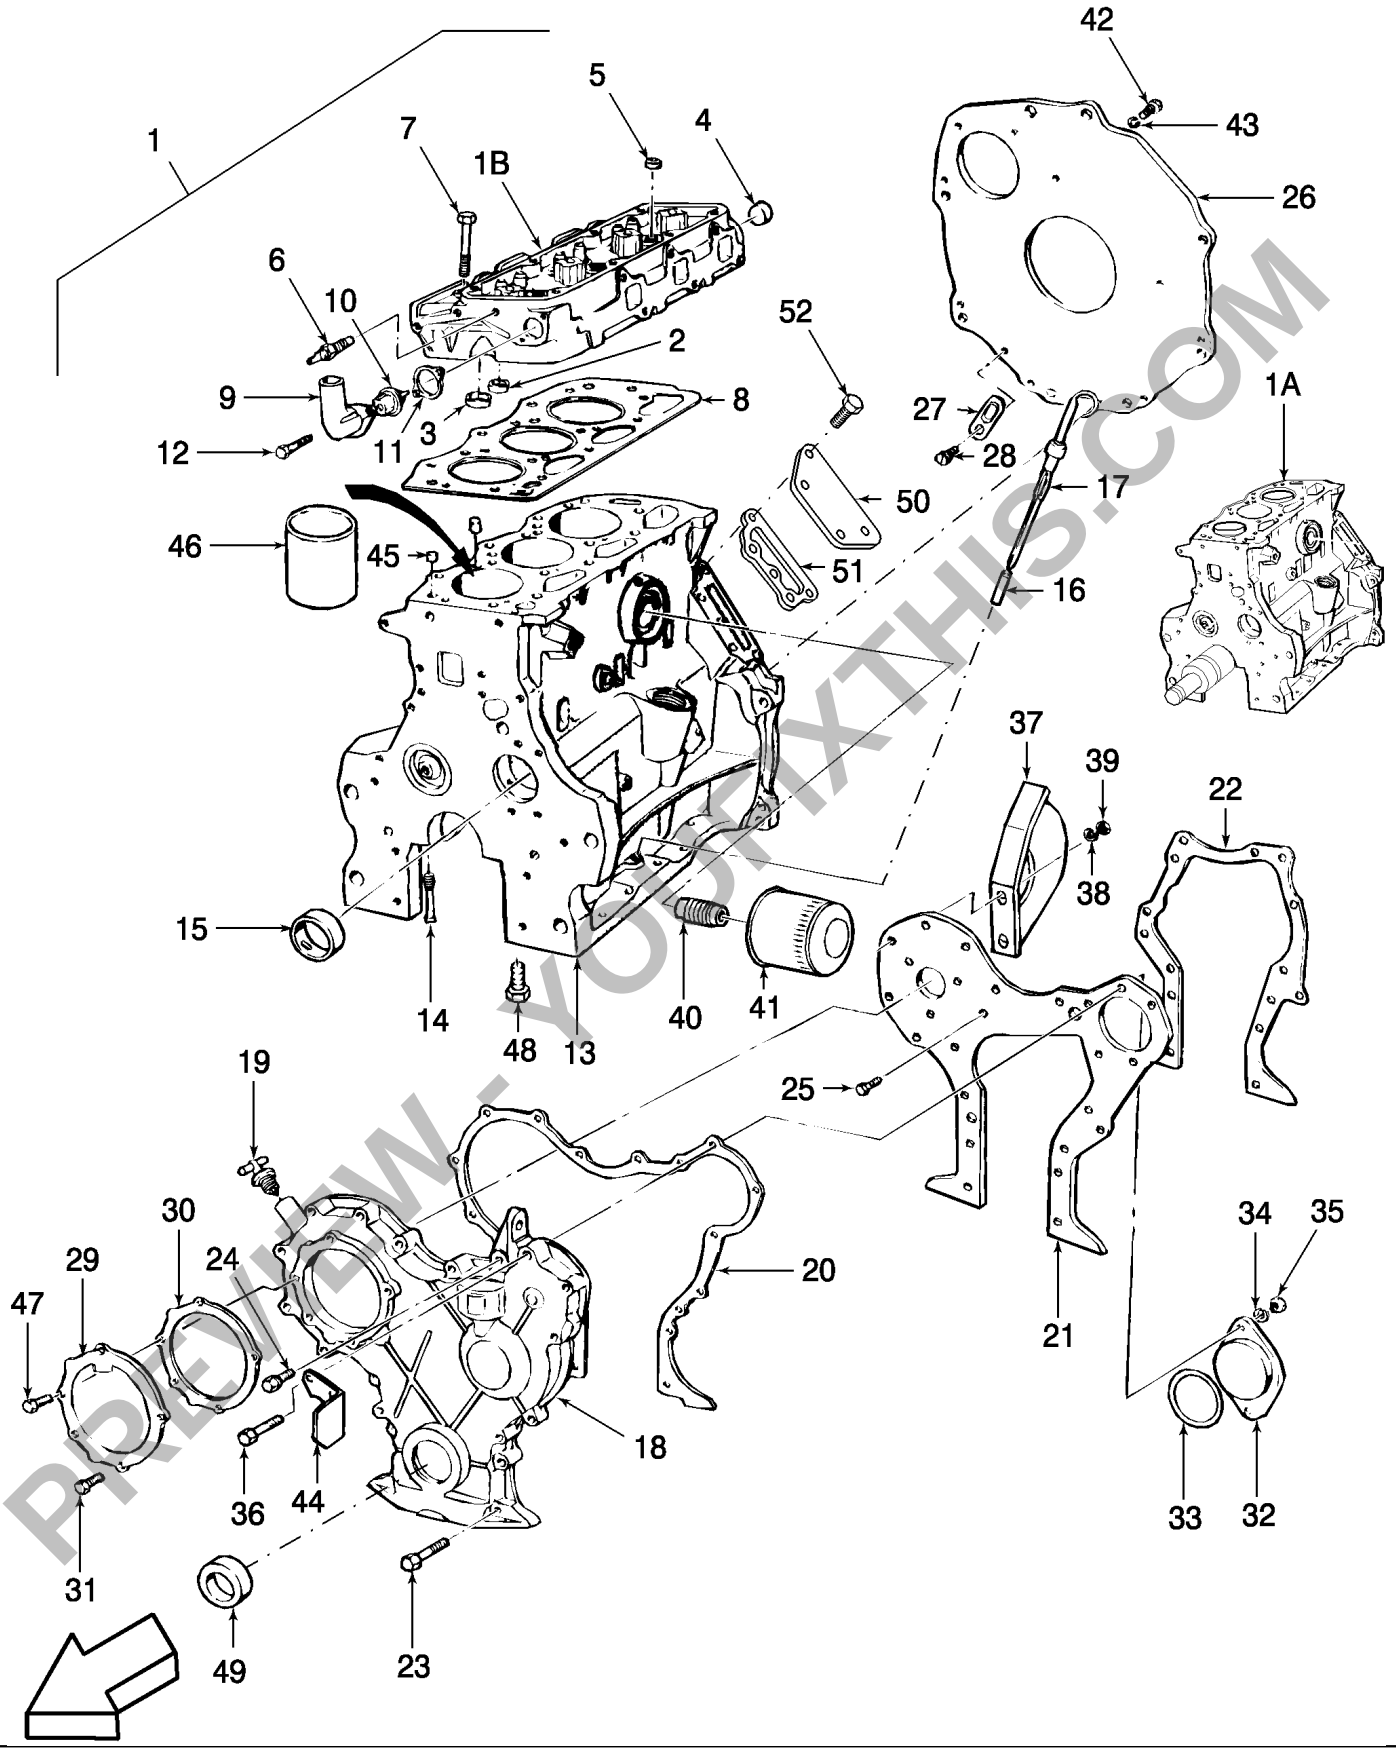


Meeting the U.S. Environmental Protection Agency regulation, the engines in the Utility Tractor Loaders have been emissionized beginning with serial number A442030, effective 5/12/98.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


545C 3 CYL TRACTOR LOADER (12/88-8/92) - Wheels and Weights

07A01 6 X 4 MANUAL REVERSING TRANSMISSION CASE & SHIFT LEVER

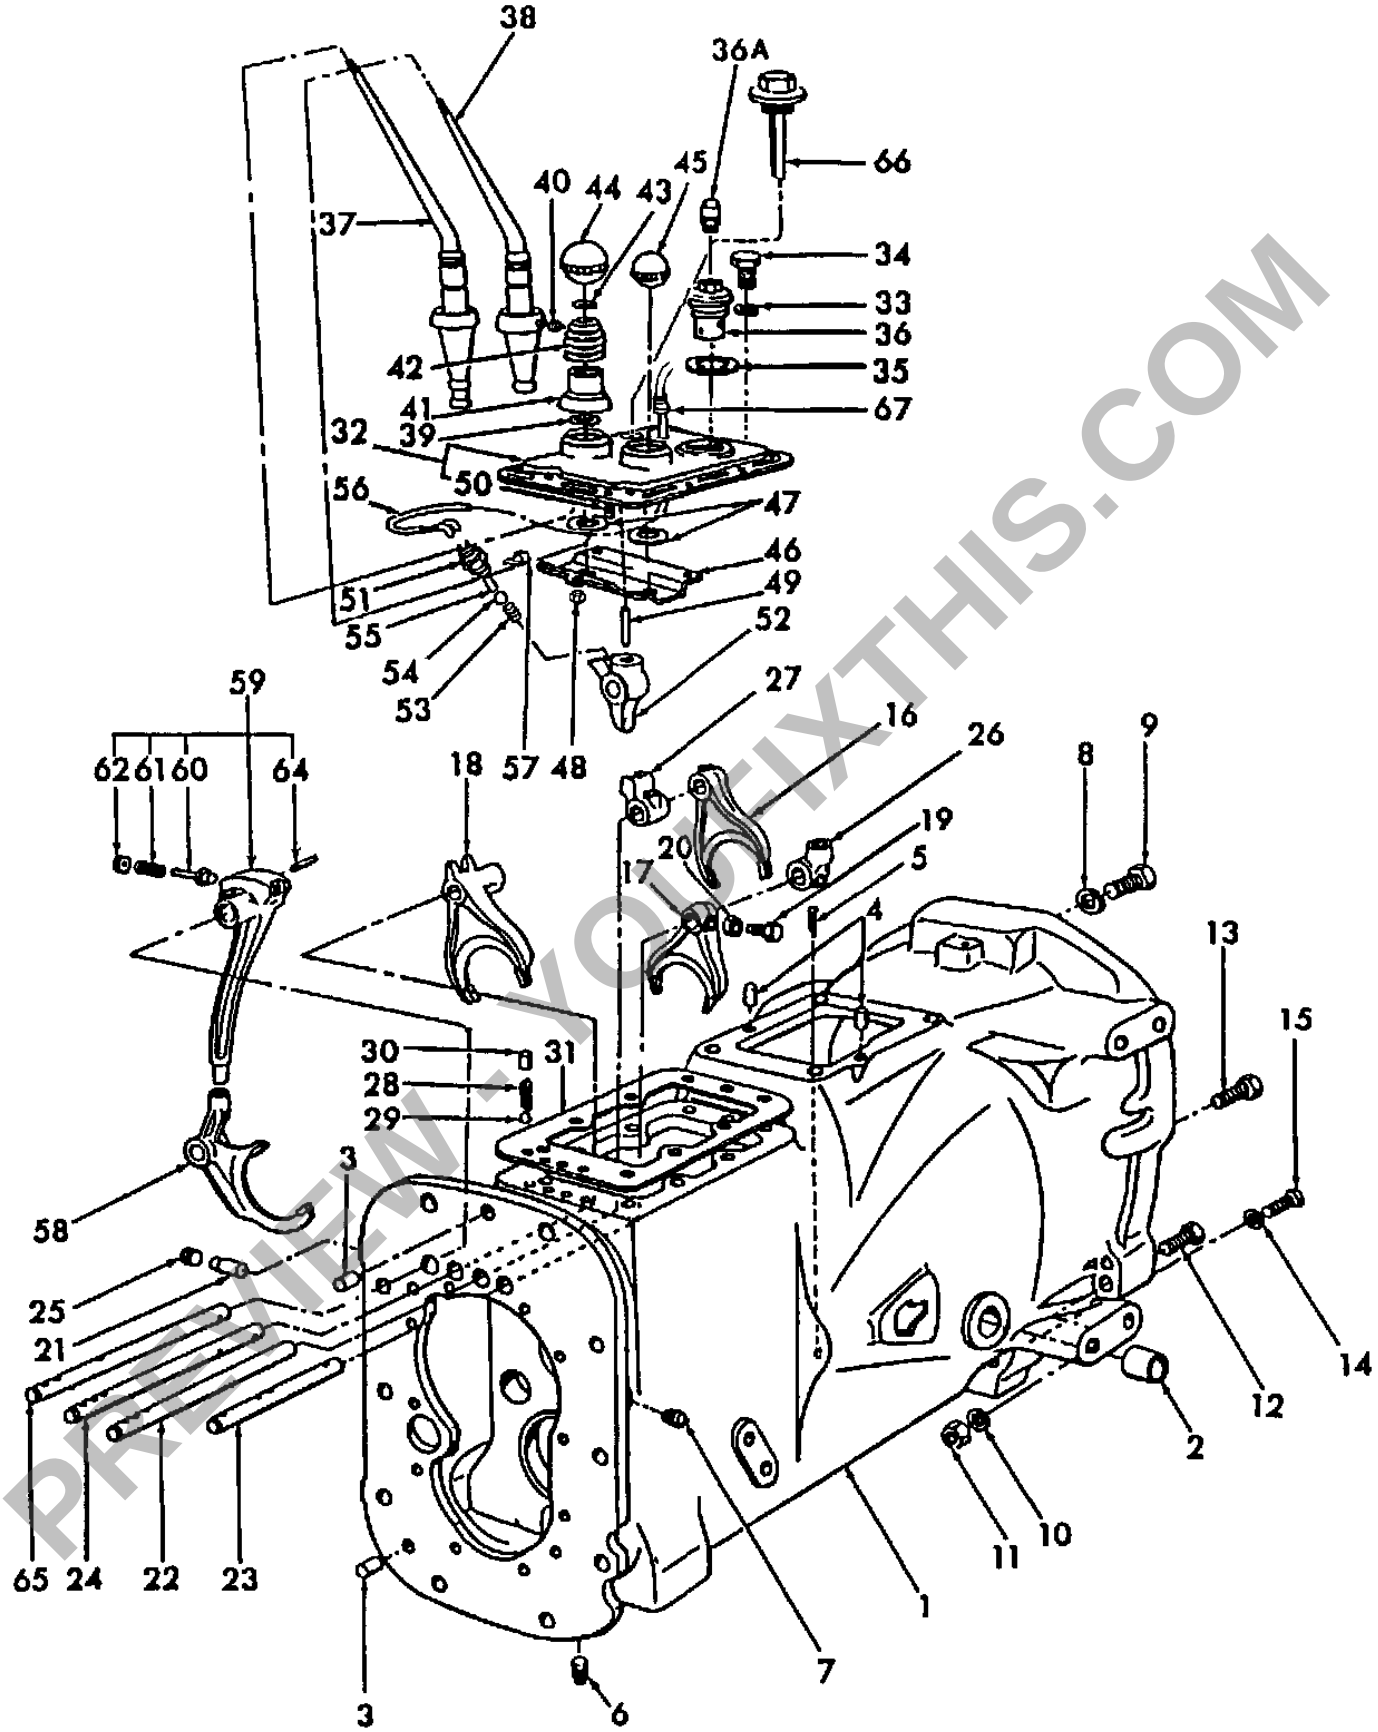

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

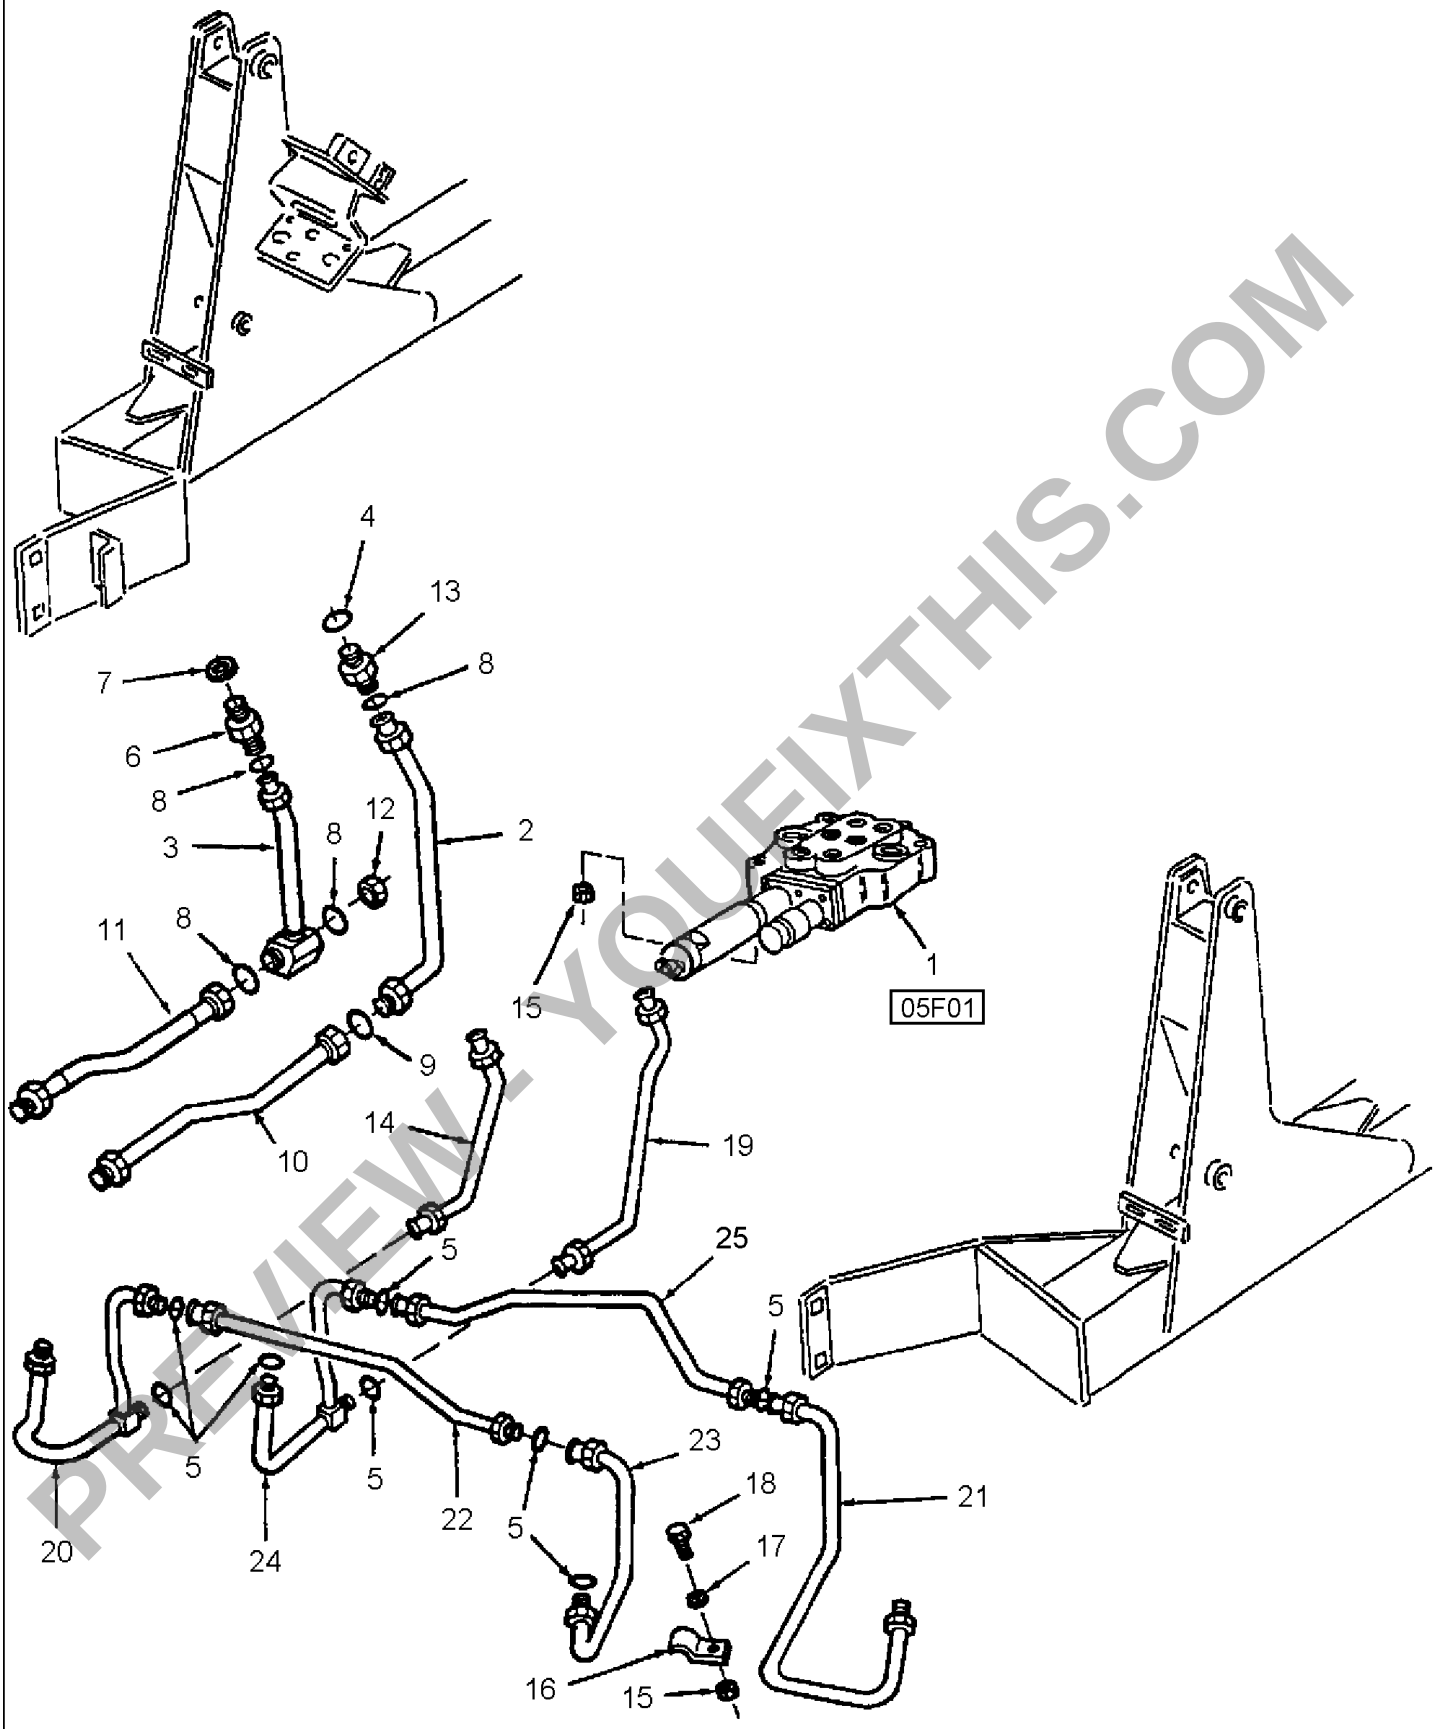


The loader control valve assembly, linkage and lever is the same for tractors with non-emissionized and emissionized engines. See figure 5F1 & 18C1 for more details.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


13A02 SEAT ASSEMBLY, GRAMMER

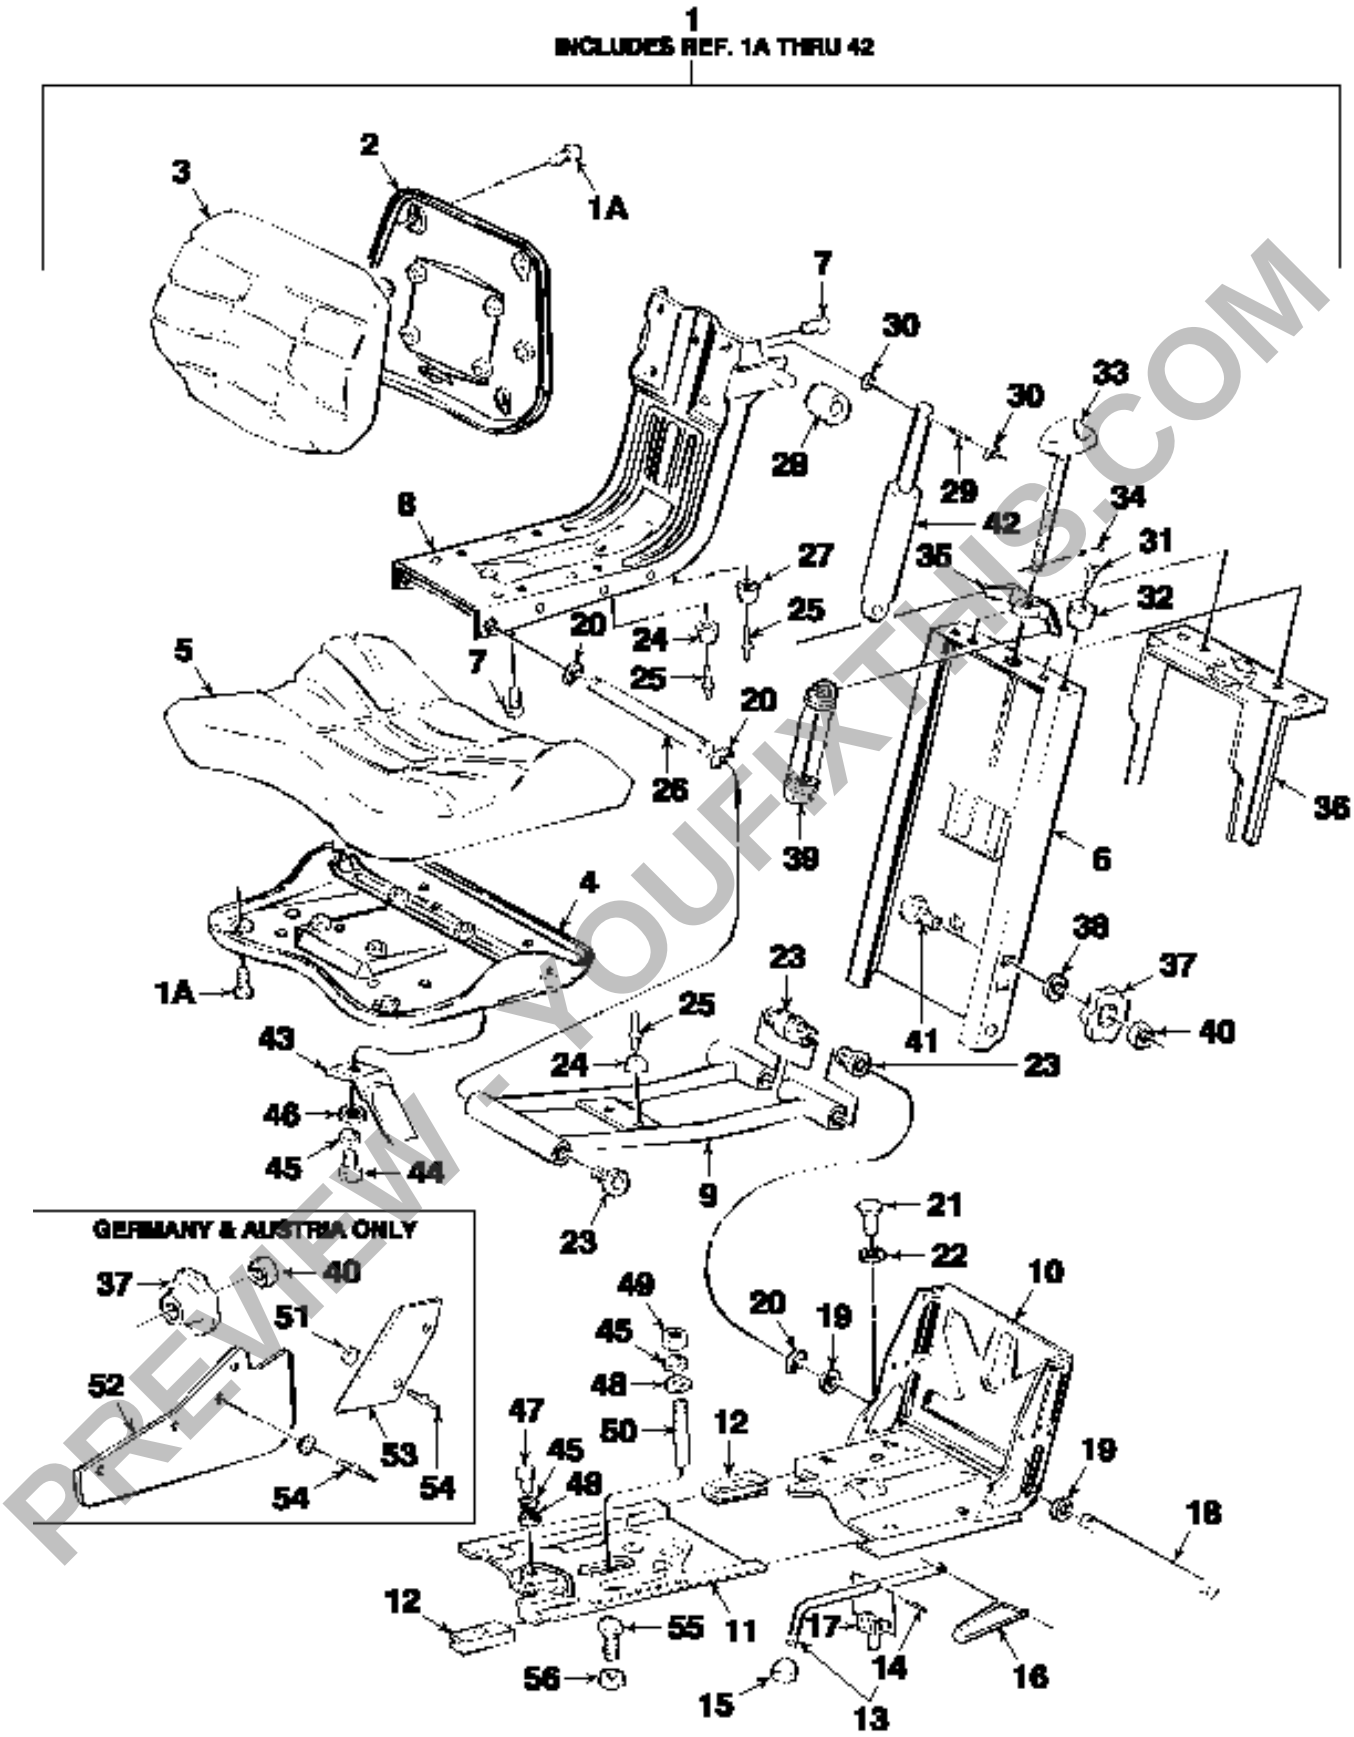

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

18A01 SUBFRAME ASSEMBLY

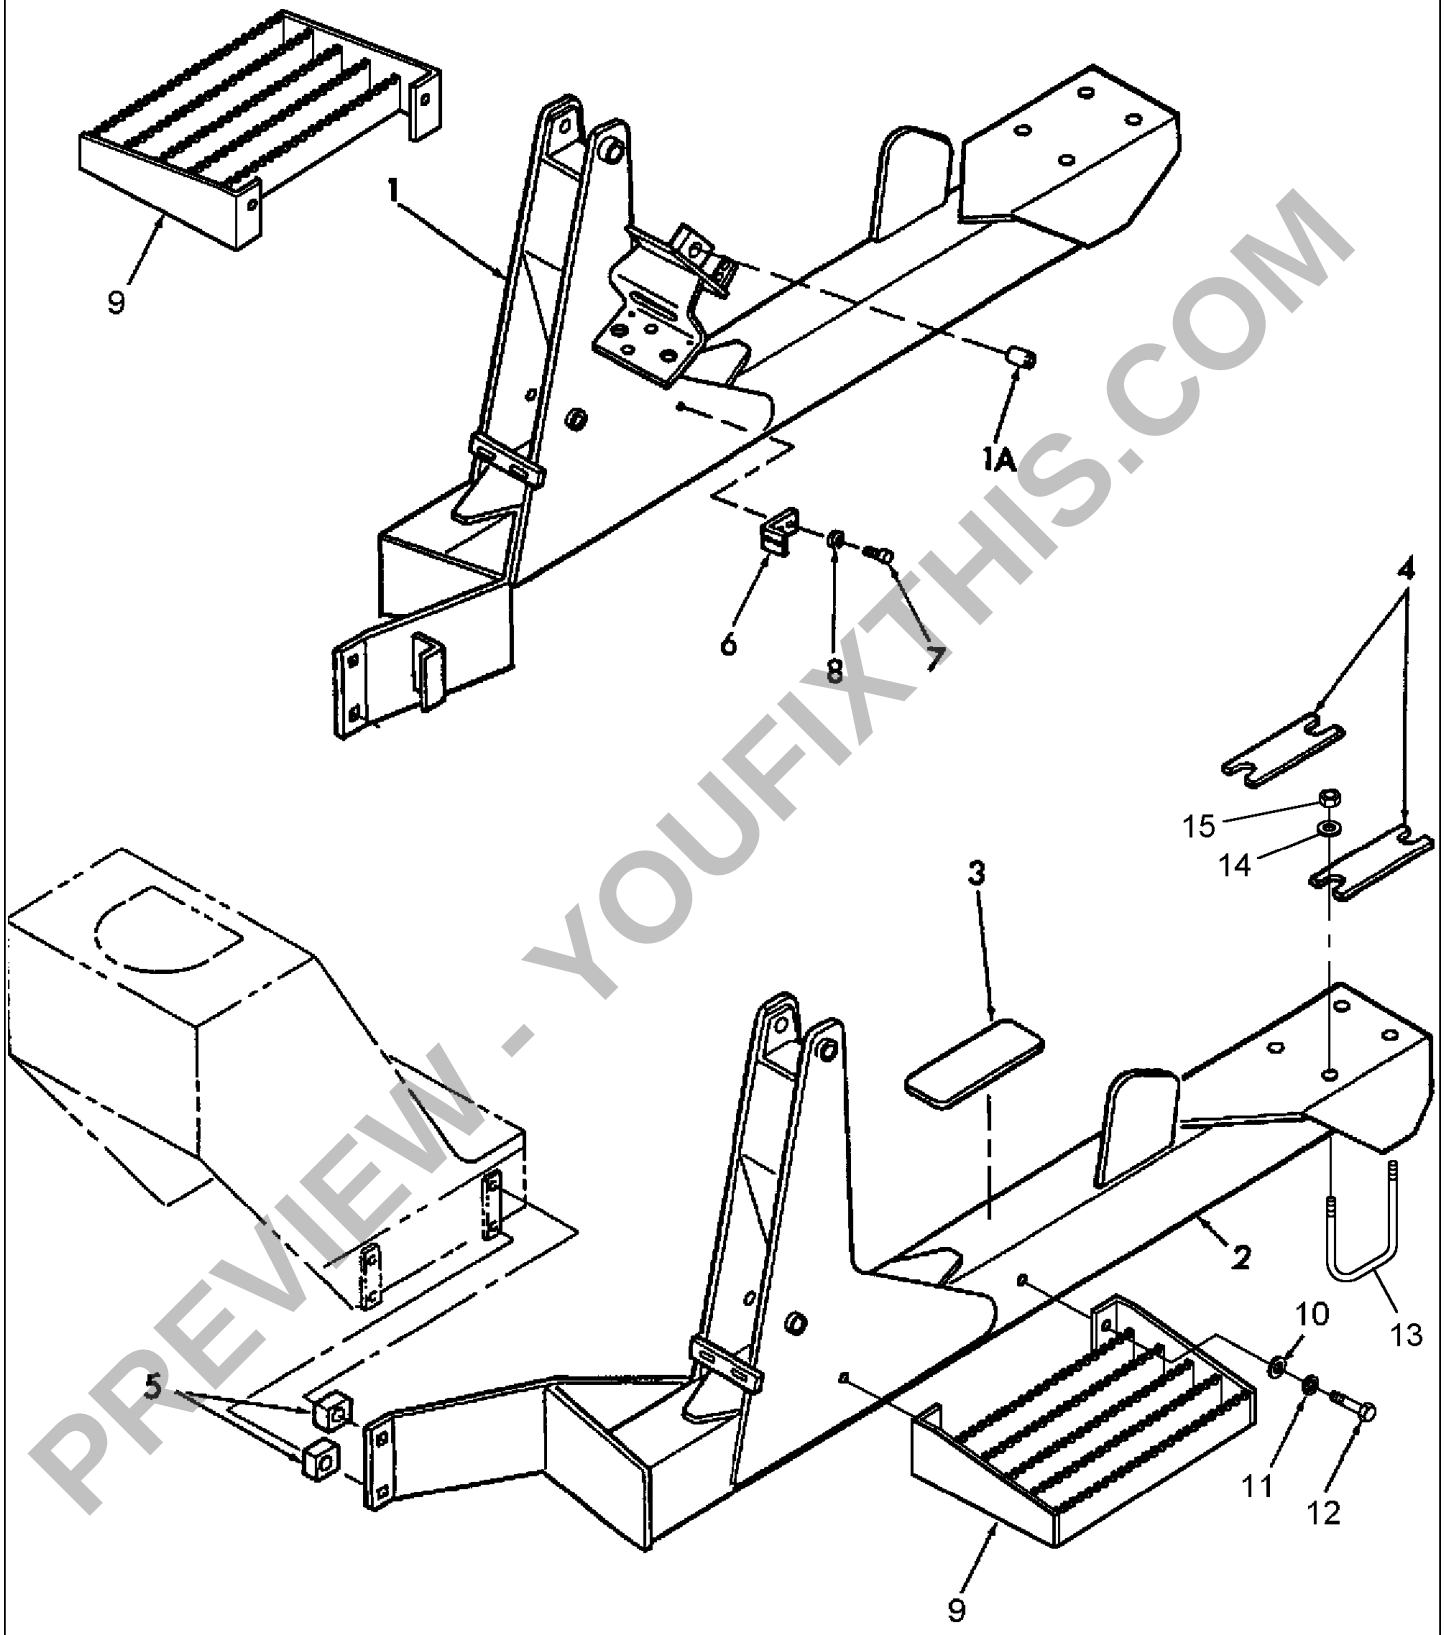

PREVIEW - YOUFIXTHIS.COM

For steps with cab, see section 15

Download full manual at youfixthis.com

545C 3 CYL TRACTOR LOADER (12/88-8/92) - Wheels and Weights

01C01 FRONT END WEIGHTS

Ref	Part Number	Qty	Description
1	82947222	1	Weight, 560#, Start Year: 12/01/1988
1A	D9NN3N080AA	2	Spacer, Front End Weight, Start Year: 12/01/1988
2	82938425	1	Weight, RH, 210 lb, Start Year: 12/01/1988
3	82938196	1	Weight, LH, 210 lb, Start Year: 12/01/1988
4	D8NN3N080AA12Z	2	Spacer, Start Year: 12/01/1988
5	86507002	4	Screw, Cap, HH, G5, 3/4"-10 x 5-1/2", Start Year: 12/01/1988
6	88007	4	Screw, Cap, HH, G5, 3/4"-10 x 4-1/2", Start Year: 12/01/1988
7	86511191	AR	WASHER, 3/4", Start Year: 12/01/1988
8	86505972	2	Screw, Cap, HH, G5, 5/16"-18 x 2-1/4", Start Year: 12/01/1988

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

545C 3 CYL TRACTOR LOADER (12/88-8/92) - Wheels and Weights


03D02 POWER STEERING CYLINDER ASSEMBLY - "CASCADE"

Ref	Part Number	Qty	Description
1	85999338	1	Cylinder Assy., LH on 4WD, RH on 2WD, Start Year: 12/01/1988
1	85999337	1	Cylinder Assy., RH, RH on 4WD, LH on 2WD, Start Year: 12/01/1988
2	NSS	1	Tube Assy., Start Year: 12/01/1988
3	85999105	1	Rod Assy., Start Year: 12/01/1988
4	85999107	1	Gland, Steering Cylinder, Start Year: 12/01/1988
5	85999106	1	Piston, Steering Cylinder, Start Year: 12/01/1988
6	34420S7	1	Nut, Lock, 3/8", Start Year: 12/01/1988
7	NSS	1	Seal, Piston, Start Year: 12/01/1988
8	NSS	1	O-Ring, Start Year: 12/01/1988
9	NSS	1	O-Ring, Start Year: 12/01/1988
10	NSS	1	Ring, Back Up, Start Year: 12/01/1988
11	NSS	1	Ring, Retaining, Start Year: 12/01/1988
12	NSS	1	Ring, Snap, Start Year: 12/01/1988
13	NSS	1	Seal, Rod, Start Year: 12/01/1988
14	NSS	1	Wiper, Start Year: 12/01/1988
15	85999102	1	Kit, Seal, Incl. Ref. 7 thru 14, Start Year: 12/01/1988

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

04B01 DIFFERENTIAL LOCK LINKAGE

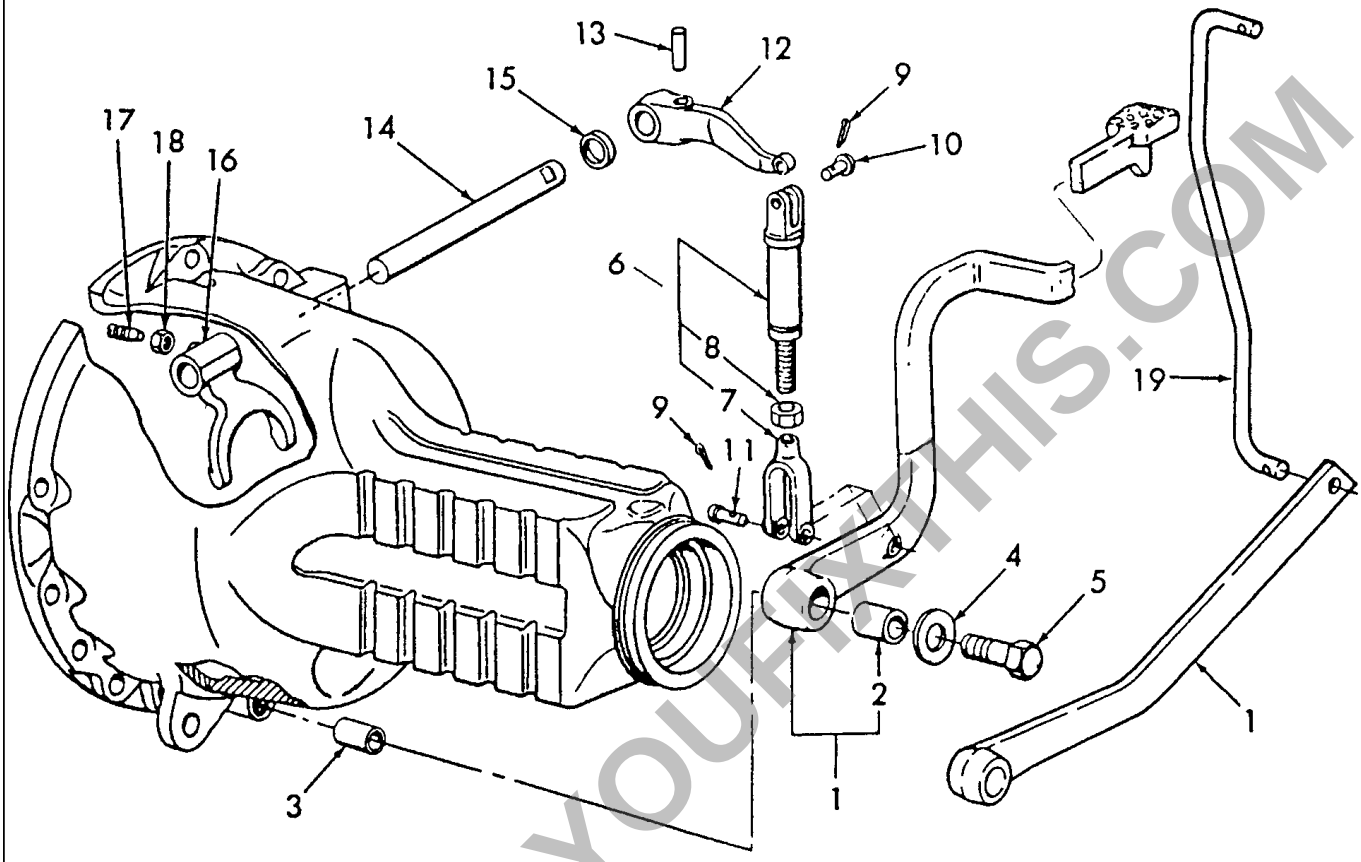

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

545C 3 CYL TRACTOR LOADER (12/88-8/92) - Wheels and Weights

05C01 HYDRAULIC LIFT LINKAGE

Ref	Part Number	Qty	Description
65	201834	1	Drawbar, Cat. II, Start Year: 12/01/1988
4	80754	2	Pin, Split (Cotter), 3/16" x 1 1/2", Start Year: 12/01/1988

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

545C 3 CYL TRACTOR LOADER (12/88-8/92) - Wheels and Weights

05J03 HYDRAULIC PUMP ASSEMBLY, FRONT MOUNTED, LOADER BACKHOE

Ref	Part Number	Qty	Description
1	85700190	1	Pump Assy., Years: 12/01/1988-03/31/1993
1	85700190	1	Pump Assy., Black, Start Year: 04/01/1993
2	E6NNE999AA	1	Kit, Seal, Includes: 2 Gaskets & 1 Lip Seal, Inludes 2 Seals, Gaskets & 1 Lip Seal, Start Year: 12/01/1988
3	86507057	1	Kit, Thrust Plate, Includes Channel Seal & Thrust Plate, Years: 12/01/1988-03/31/1993
3	86507057	1	Kit, Thrust Plate, For Black Pump, Start Year: 04/01/1993

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

545C 3 CYL TRACTOR LOADER (12/88-8/92) - Wheels and Weights

07C01 INDEPENDENT PTO ASSEMBLY

Ref	Part Number	Qty	Description
	E9NNN751CA	1	Clutch Assy., PTO Drive, w/Torq. Conv., With 4WD, Start Year: 12/01/1988
1	E9NNN708DA	1	Housing,, With 4WD, Start Year: 11/01/1989
1	E0NNN708AB	1	Housing, Less 4WD, Years: 12/01/1988-10/31/1980
2	81801963	1	Piston, Start Year: 12/01/1988
3	9849963	1	O-RING, -136, 90 Duro, 1.987" ID x .103" Thk, Start Year: 12/01/1988
4	C0NN7C000A	1	Seal, Start Year: 12/01/1988
5	1P77515B	1	Spring, Start Year: 12/01/1988
6	C5NNN757A	1	Washer, Start Year: 12/01/1988
7	C5NNN754A	1	Ring, Snap, Start Year: 12/01/1988
8	C8AP7B442A	7	Plate, External Spline, Start Year: 12/01/1988
9	E0NNP743AA	7	Plate Assy., Internal Spline, Start Year: 12/01/1988
10	C4TP7B437A	1	Plate, Pressure, Start Year: 12/01/1988
11	1P77523A	1	Ring, Snap, Start Year: 12/01/1988
12	81809513	2	Ring, Seal, Start Year: 12/01/1988
13	C5NNN783B	1	Washer, PTO Clutch Thrust, Start Year: 12/01/1988
14	E9NNN739AA	1	Shaft, PTO Clutch, Incl. Ref. 15, Start Year: 12/01/1988
15	C5NNN709B	1	Bushing, Start Year: 12/01/1988
16	81805215	AR	Washer, .030", Start Year: 12/01/1988
16	C5NN7N509B	AR	Washer, .010", Start Year: 12/01/1988
17	E0NNC765AB	1	Support Assy., PTO Clutch Brake, Start Year: 12/01/1988
18	83416255	1	Connector, 1/2"-20 x 5/16" (Replaces 87972S), Start Year: 12/01/1988
19	C9NNN747A	1	Arm Assy., Drive Clutch Brake, Start Year: 12/01/1988
20	280236	1	Pin, Split (Cotter), 1/16" x 1/2", Start Year: 12/01/1988
21	73947S	1	Pin, Clevis, 1/4" x 1-3/8", Start Year: 12/01/1988
22	49886	1	O-Ring, .239" ID x .070" Thk, Start Year: 12/01/1988
23	E0NNN787AA	1	Piston, PTO Clutch Brake, Start Year: 12/01/1988
24	14454480	1	O-Ring, -027, 70 Duro, 1.301" ID x .070" Thk, Start Year: 12/01/1988
25	E0NNC764AA	1	Retainer, PTO Clutch Brake, Start Year: 12/01/1988
26	511356	1	O-Ring, .801" ID x .070" Thk, Start Year: 12/01/1988
27	87128S94	1	O-Ring, 1.437" ID x .070" Thk, Start Year: 12/01/1988
28	N660238S36	1	Ring, Retaining, 1.9mm, Start Year: 12/01/1988
29	C5NNN742A	1	Gasket, Drive Clutch Brake Arm, Start Year: 12/01/1988
30	E0NNN706BA	1	Plate, Clutch Brake PTO, Start Year: 12/01/1988
31	81547	3	Washer, Lock, 7/16", Start Year: 12/01/1988
32	304724S36	3	Screw, Cap, HH, G5, 7/16"-14 x 1-1/4", Start Year: 12/01/1988
33	81801988	1	Tube Assy., PTO Clutch Valve, Start Year: 12/01/1988
34	D8NNN797AA	1	Valve, PTO Clutch, Incl. Ref.,35 thru 41, Start Year: 12/01/1988
35	C5NNN781A	1	Spring, Start Year: 12/01/1988
36	353081S	1	Ball, Start Year: 12/01/1988
37	81801976	1	Piston, Start Year: 12/01/1988
38	81801936	AR	Shim, .027"/.033", Start Year: 12/01/1988
39	D8NNN775AA	1	Spring, Start Year: 12/01/1988
40	C5NNN717B	1	Plunger, Start Year: 12/01/1988
41	V15713	1	Pin, Roll, 1/8" x 7/8", Start Year: 12/01/1988

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

545C 3 CYL TRACTOR LOADER (12/88-8/92) - Wheels and Weights

07K07 TRANSMISSION OUTPUT SHAFT & GEARS, 4 X 4

Ref	Part Number	Qty	Description
1	K3660028512	1	Shaft, Output, Start Year: 01/01/1988
2	K3660228521	1	Bearing, Tapered Roller, Start Year: 01/01/1988
3	K3660228822	1	Bearing, Start Year: 01/01/1988
4	K3660028541	1	Collar, Thrust, Start Year: 01/01/1988
5	K3660028551	1	Collar, Thrust, .275" Thick, Start Year: 01/01/1988
6	K3660228561	1	Seal, Oil, Start Year: 01/01/1988
7	86615813	1	Gear Assy., 23T, Start Year: 01/01/1988
8	K3660028621	1	Coupling, Start Year: 01/01/1988
9	K3660223781	2	Ring, Snap, Start Year: 01/01/1988
10	K3660028641	1	Gear Assy., 32T, Start Year: 01/01/1988
11	K3660028671	1	Gear Assy., 43T, Years: 01/01/1988-07/31/1989
11	86615815	1	Gear Assy., 43T, Used after Transmission Date Code 9L30, Start Year: 08/01/1989
12	K3660028711	2	Collar, Thrust Inner, Start Year: 01/01/1988
13	K3660428391	1	Ring, Snap, Start Year: 01/01/1988
14	K3660028731	1	Gear Assy., 49T, Years: 01/01/1988-07/31/1989
14	K3660028732	1	Gear Assy., 49T, Used after Transmission Date Code 9L30, Start Year: 08/01/1989
15	K3660234702	1	Synchronizer Assy., 1, Start Year: 01/01/1988
16	K3660234711	1	Synchronizer Assy., 2, Years: 01/01/1988-07/31/1989
16	K3660234702	1	Synchronizer Assy., Common w/15, Start Year: 08/01/1989

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

545C 3 CYL TRACTOR LOADER (12/88-8/92) - Wheels and Weights

07L11 TRANSMISSION SHIFT LEVER & DIPSTICK - W/8 X 8

Ref	Part Number	Qty	Description
1	K3660229723	1	Support
2	K3660229611	1	Lever, Main, Years: 01/01/1988-12/31/1988
2	K3660229612	1	Lever, Main, Start Year: 01/01/1989
3	K0481105160	2	O-Ring
4	K3660229542	2	Pin
5	K3660229642	2	Shield
6	K3660229551	2	Cup
7	K3660229561	2	Spring
8	300627	2	Ring, Snap, Ext, M19, Years: 01/01/1988-12/01/1988
8	300627	2	Ring, Snap, Ext, M19, Start Year: 01/01/1989
9	K0112350822	6	Bolt
10	K3660229723	1	Support
11	K3660229511	1	Lever, Range
12	K3660229581	2	Washer, Start Year: 01/01/1989
13	K3660221525	1	Dipstick
14	14463580	1	O-Ring, 1.717" ID x .139" Thk
15	83905584	2	Ball
15	E9NN7K327FA	1	Knob, Main Shift, Marked 2-4-1-3 in a "H" Pattern
15	E9NN7K327BB	1	Knob, Range Shift, Marked H-L

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

09D02 FUEL INJECTION PUMP, DPA ROTARY, LOWER HALF

Ref	Part Number	Qty	Description
81	NSS	3	Cap Heater, Immersion

Components of Fuel Injection Pump for tractors with emissionized engines are not serviced due to EPA regulations. The fuel shut-off solenoid is E8NN9D278AA.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

545C 3 CYL TRACTOR LOADER (12/88-8/92) - Wheels and Weights

11C05 IMPLEMENT LAMP ASSEMBLY L/CAB - N.A. ONLY

Ref	Part Number	Qty	Description
1	82005479	1	Lamp, w/Switch, 11C6, Incl. Ref. 2 thru 4, Years: 12/01/1988-02/28/1990
2	E3NN15330AA	1	Bulb, Years: 12/01/1988-02/28/1990
3	E8NN15N550AA	1	Switch, NHNA Only., Years: 12/01/1988-02/28/1990
4	E1NN15N312AA	1	Boot, Years: 12/01/1988-02/28/1990
5	D9NN13469AA	1	Bracket, NHNA Only., Years: 12/01/1988-02/28/1990
6	87670	1	Bolt, Cap, HH, G5, 1/2"-13 x 1-1/4", Years: 12/01/1988-02/28/1990
7	281038	1	Washer, Lock, Ext T, 1/2", Years: 12/01/1988-02/28/1990
8	88871	1	Nut, Lock, GC, 1/2"-13, Years: 12/01/1988-02/28/1990
9	9636711	1	Screw, Cap, HH, G5, 5/16"-18 x 2", Years: 12/01/1988-02/28/1990
10	280278	1	Washer, Lock, Ext T, 5/16", Years: 12/01/1988-02/28/1990
11	280736	1	Nut, Lock, 5/16"-18, GC, Years: 12/01/1988-02/28/1990

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

545C 3 CYL TRACTOR LOADER (12/88-8/92) - Wheels and Weights

13A02 SEAT ASSEMBLY, GRAMMER


Ref	Part Number	Qty	Description
40	100037	2/3	Nut, Lock, M10 x 1.5, Cl 8, Start Year: 08/01/1992
41	V44416	1	Bolt, Carriage, Short Neck, CL 8.8, M10 x 1.5 x 35, Start Year: 03/01/1990
42	D6NNB425F	1	Absorber, Shock, Start Year: 03/01/1990
43	82014400	1	Seat Belt Assy., Start Year: 03/01/1990
44	304669S36	2	Screw, Cap, HH, G5, 7/16"-20 x 7/8", Start Year: 03/01/1990
45	81547	2	Washer, Lock, 7/16", Start Year: 03/01/1990
46	81541	2	Washer, 7/16", Start Year: 03/01/1990
47	9706729	AR	Screw, Cap, HH, G5, 7/16"-14 x 1", Start Year: 03/01/1990
47	304724S36	AR	Screw, Cap, HH, G5, 7/16"-14 x 1-1/4", Start Year: 03/01/1990
47	86050212	AR	Screw, Cap, HH, G8, 7/16"-14 x 1-1/2", Start Year: 03/01/1990
48	356420S36	2	Washer, 7/16", Start Year: 03/01/1990
49	87891	1	Nut, Jam, G2, 7/16"-20, Start Year: 03/01/1990
50	E1NN669AA	1	Pin, Hyd. Lift Plunger, Start Year: 03/01/1990
51	E630022S71	10	Washer, M5, Start Year: 03/01/1990
52	D6NND404B	2	Guard, Start Year: 03/01/1990
53	83986504	2	Guard, Upper, Years: 03/01/1990-04/30/1992
53	81874581	2	Guard, Upper, Start Year: 04/01/1992
54	PL	10	Rivet, Blind, 4.0x15.3, Start Year: 03/01/1990
55	43151	1	Bolt, Hex, M12 x 20, 8.8, Full Thd, Start Year: 03/01/1990
56	9706685	1	NUT, M12, Cl 8, Seat Stop, Start Year: 03/01/1990

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com



2

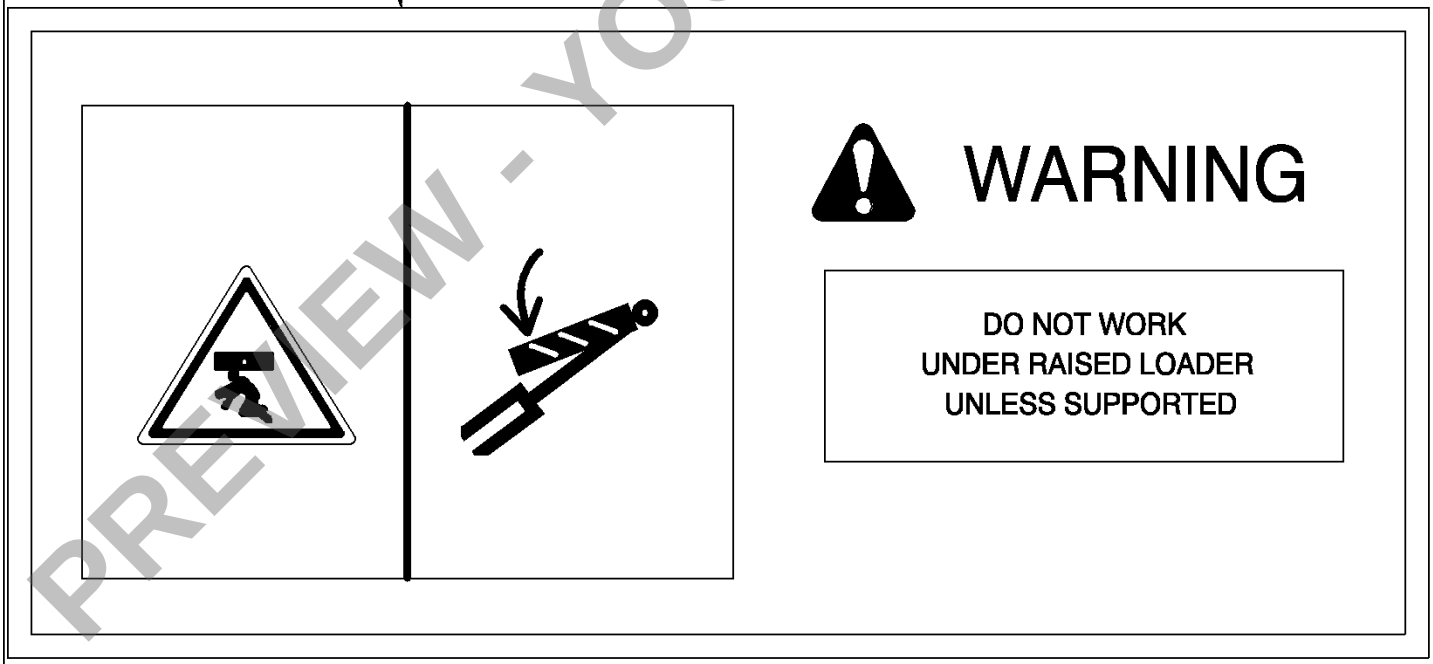

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 18 of 354 pages

The full manual includes:

- All 354 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Ford 545C, 445D, 545D, 345C, 445C, 345D Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual