
ロワフレーム

Item		Part number	Description	Q'ty	Chan.	Serial No.	Serv.	Remarks
			FRAME ASSY, lower (450W)			1703932~		
			FRAME ASSY, lower (550W)			1703932~		
1	X	**********	FRAME	1				
2		**0561019300**	COVER	2				
3		**0561017400**	COVER	2				
4		**0561019400**	COVER	2				
5		**0561019500**	STEP	2				550mm shoe
6		**1501710010**	PLUG	1				
7		**1100041020**	BOLT	8				450mm shoe
8		**1100041025**	BOLT	8				550mm shoe
9		**1100040816**	BOLT	8				
10		**1140020010**	WASHER, spring	8				450mm shoe
		1140020010	WASHER, spring	16				550mm shoe
11		**1140020008**	WASHER, spring	8				
12		**1130040010**	NUT	8				550mm shoe
13		**1141110010**	WASHER	8				
14		**0561021010**	COVER	1		1703932~		
15		**1100041225**	BOLT	4		1703932~		
16		**1140020012**	WASHER, spring	4		1703932~		
17		**1141110012**	WASHER	4		1703932~		
		L101a2L						

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

LOWER FRAME

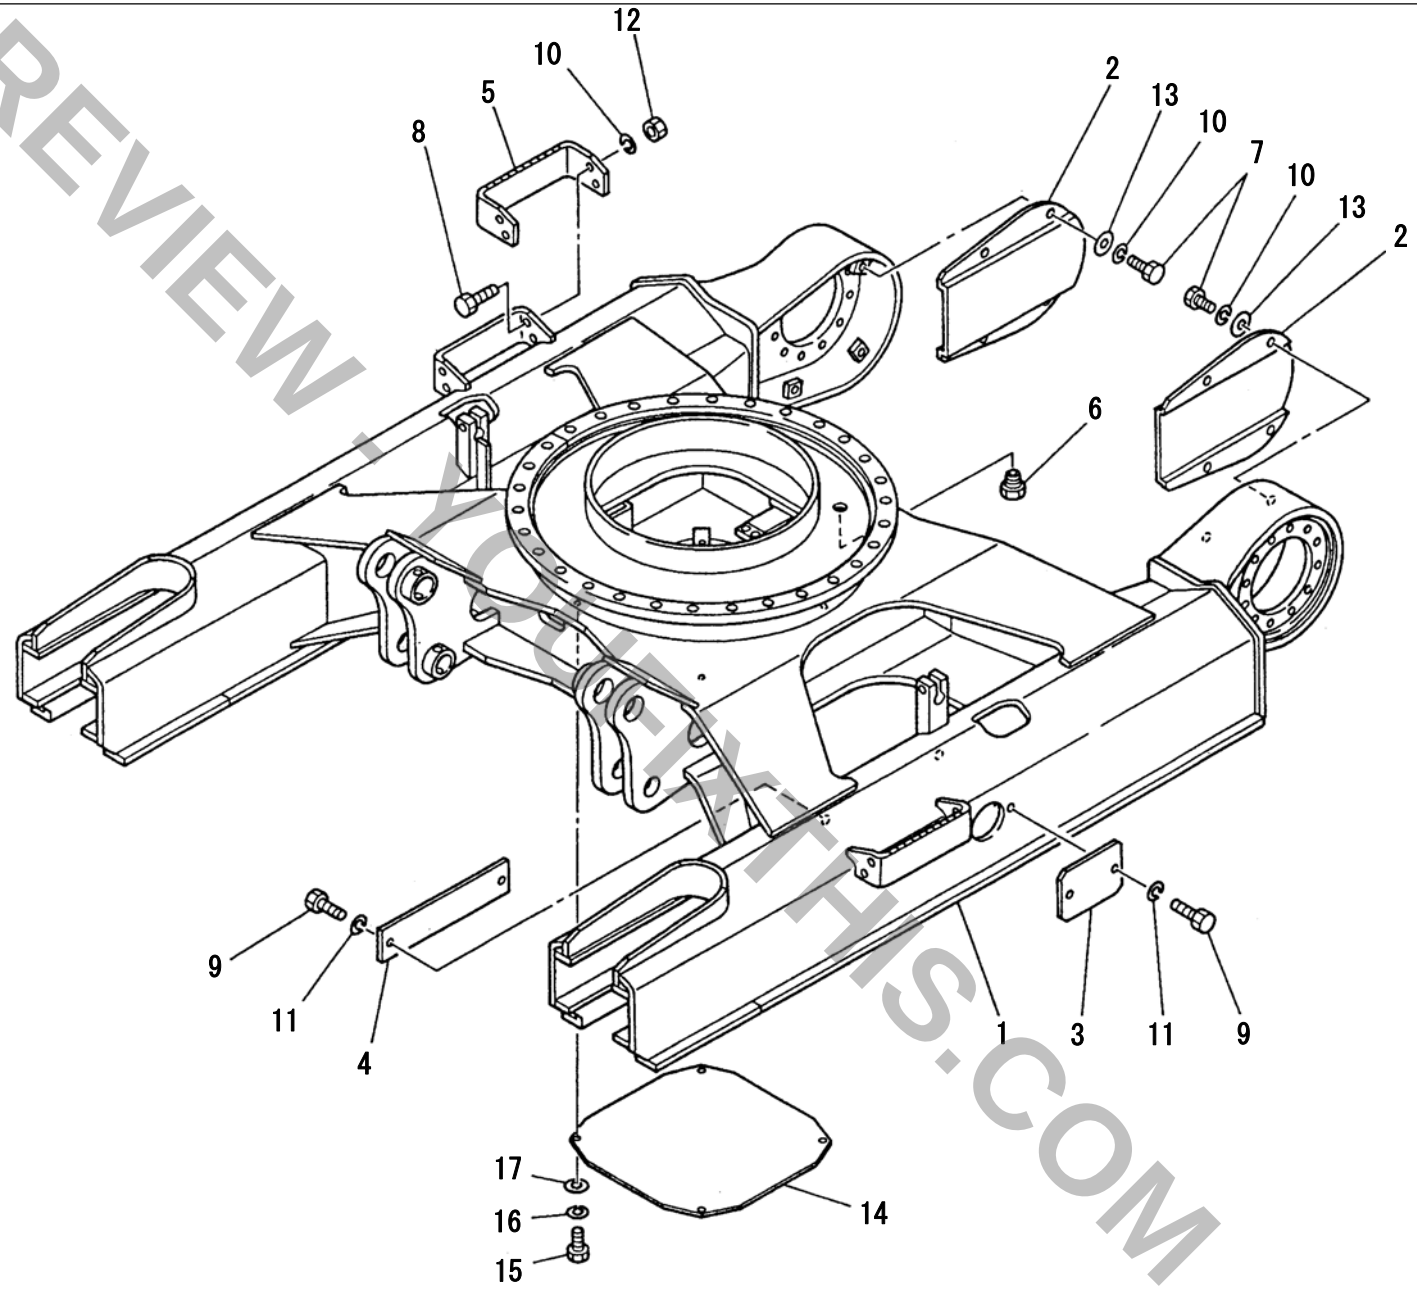


L1-01a-2-D

PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com


BOOM (1703004~1703190)

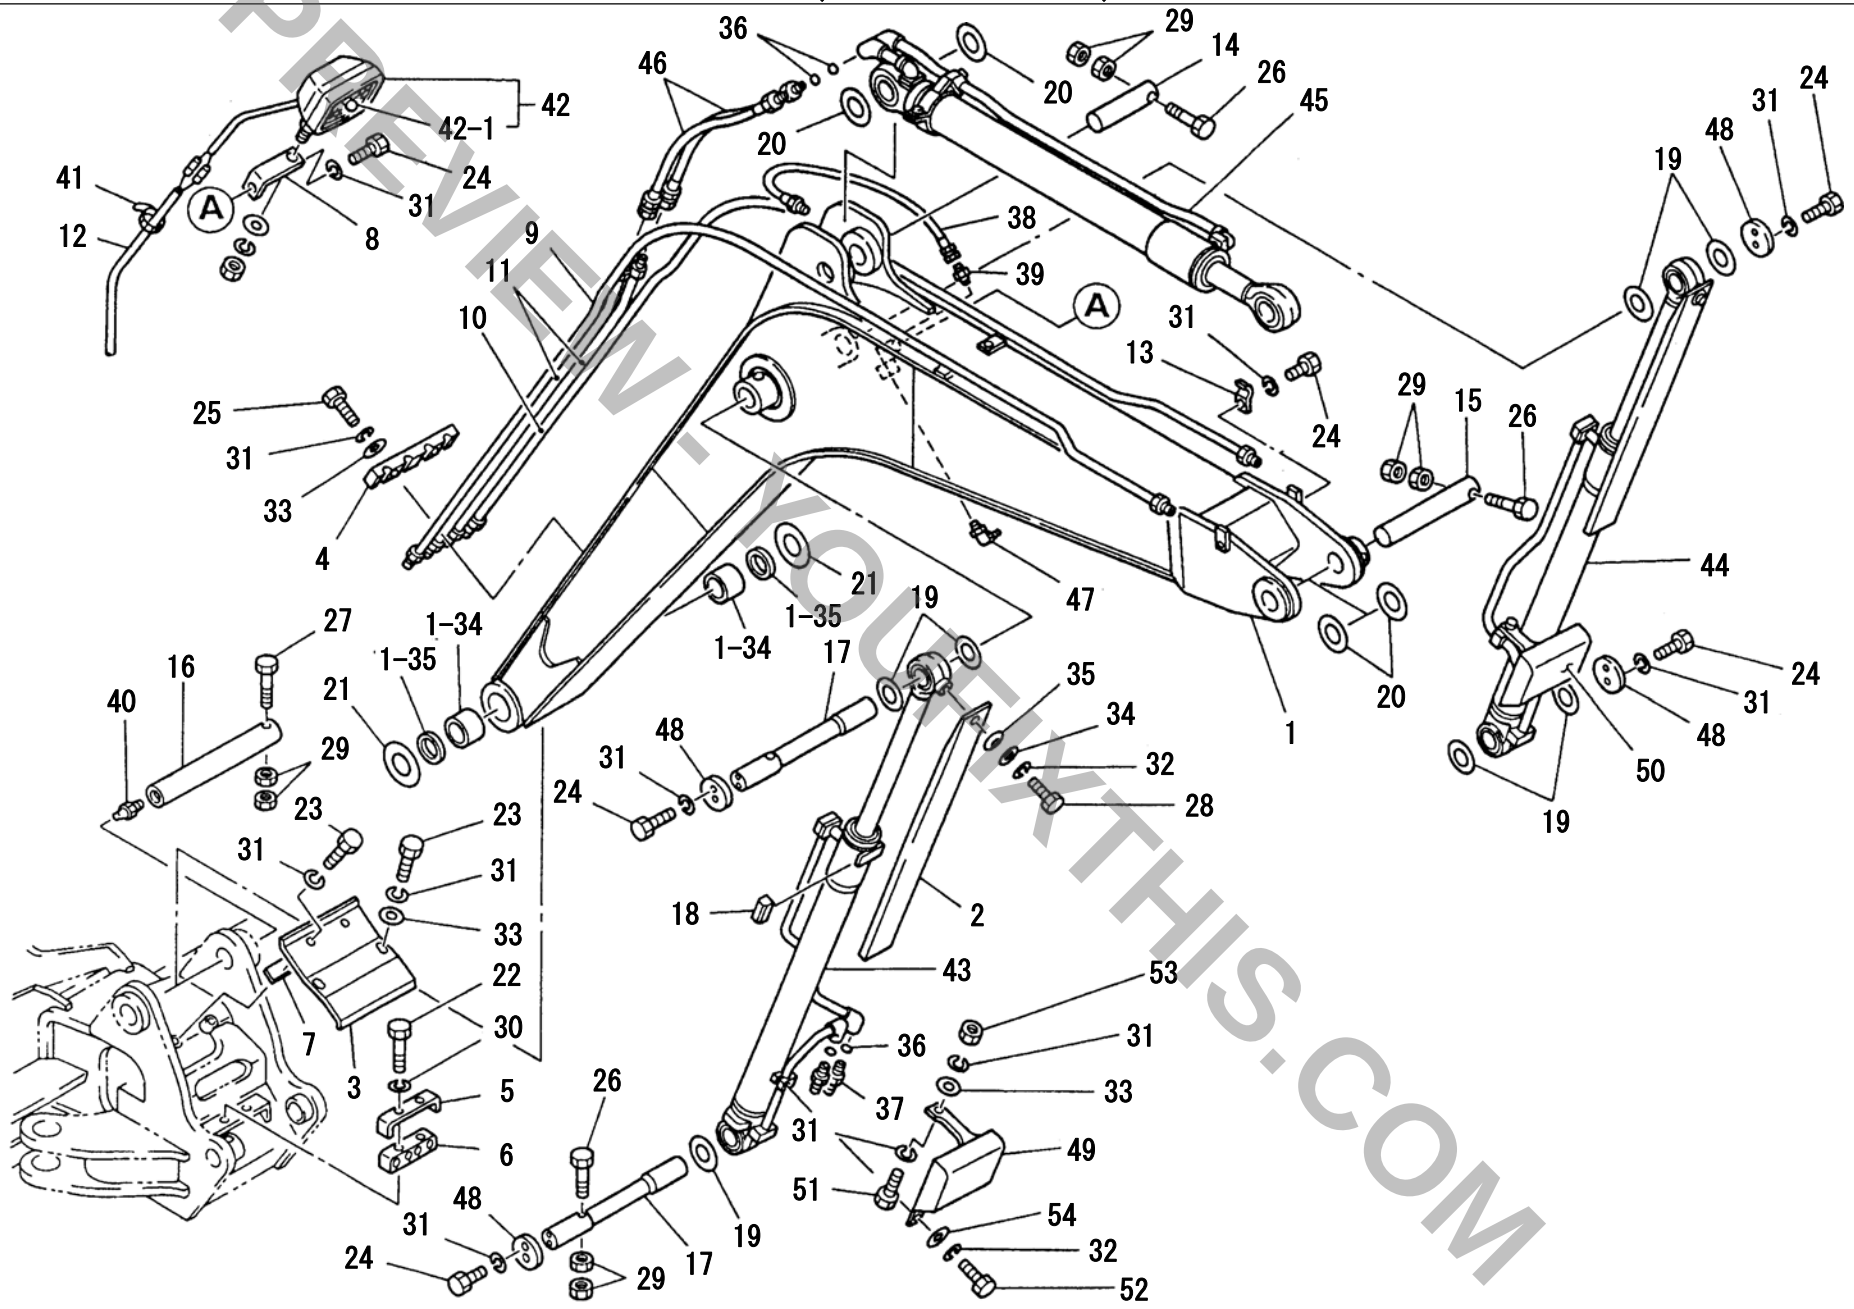

PREVIEW: YOUFIXTHIS.COM


Download full manual at youfixthis.com

CAB (1/5)

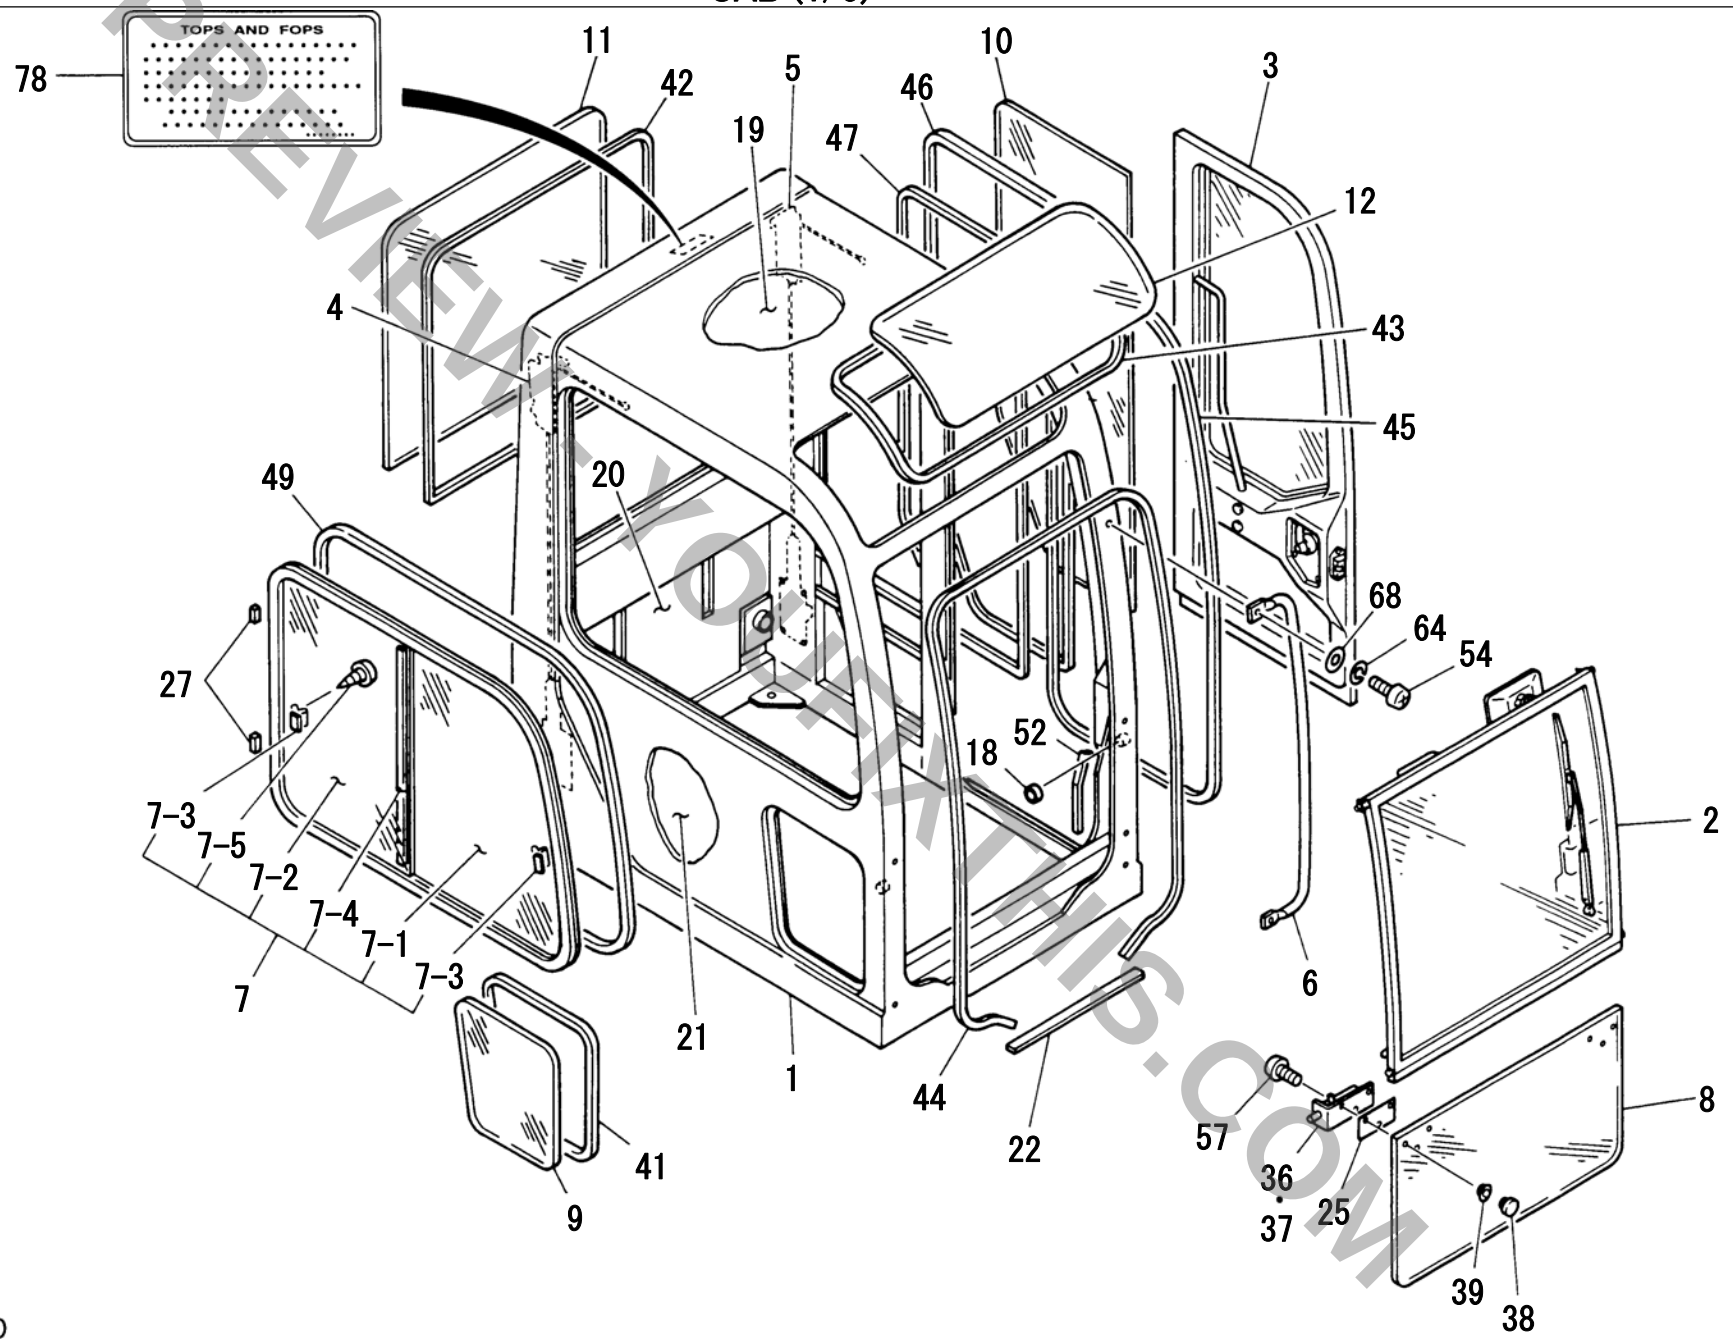


PREVIEW ONLY
Download full manual at youfixthis.com

HYDRAULIC PUMP (1/3) (1703004~1704023)

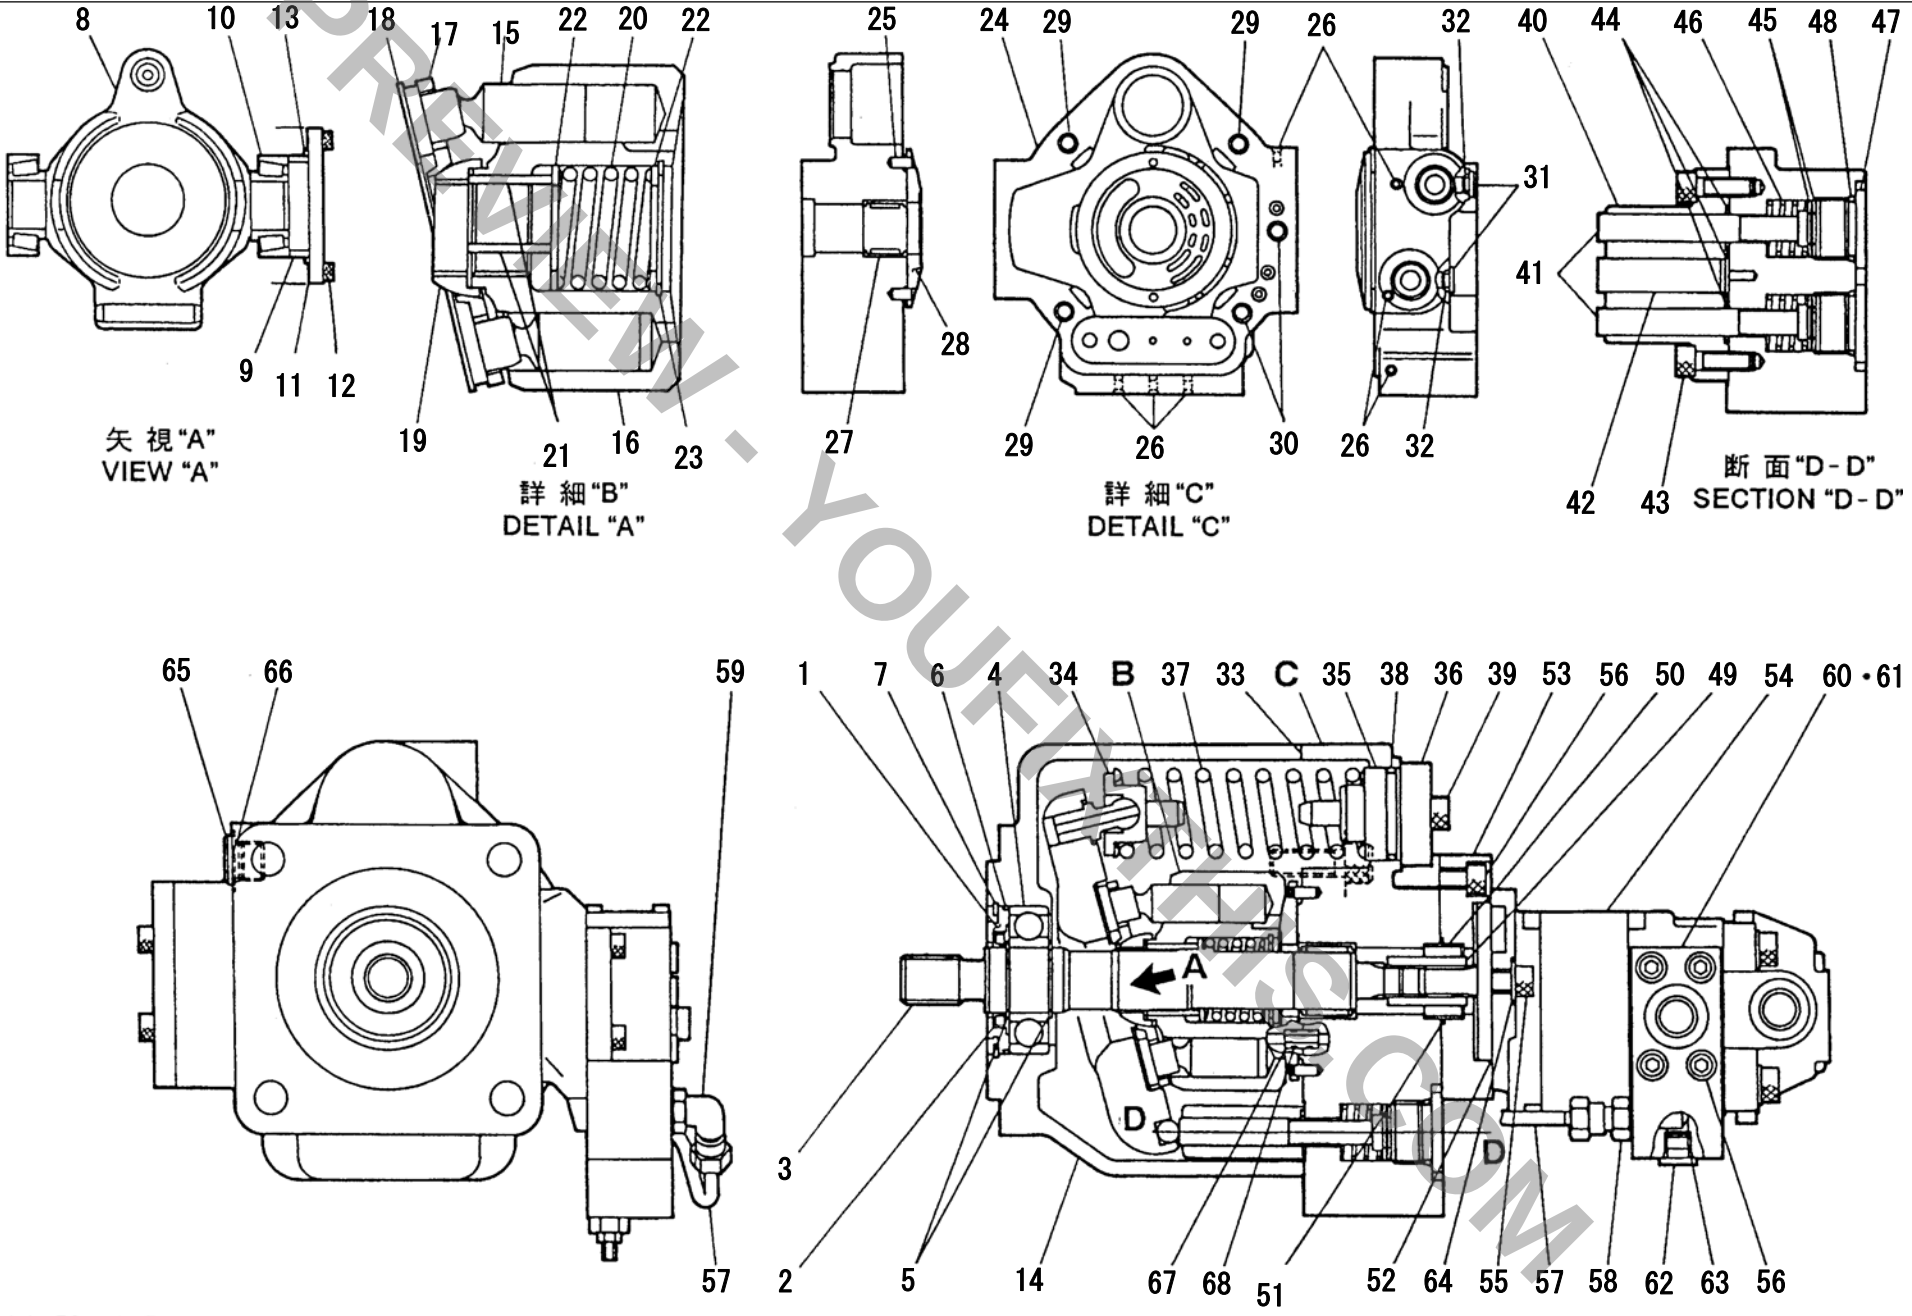

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

ENGINE & ACCESSORIES (1/2)

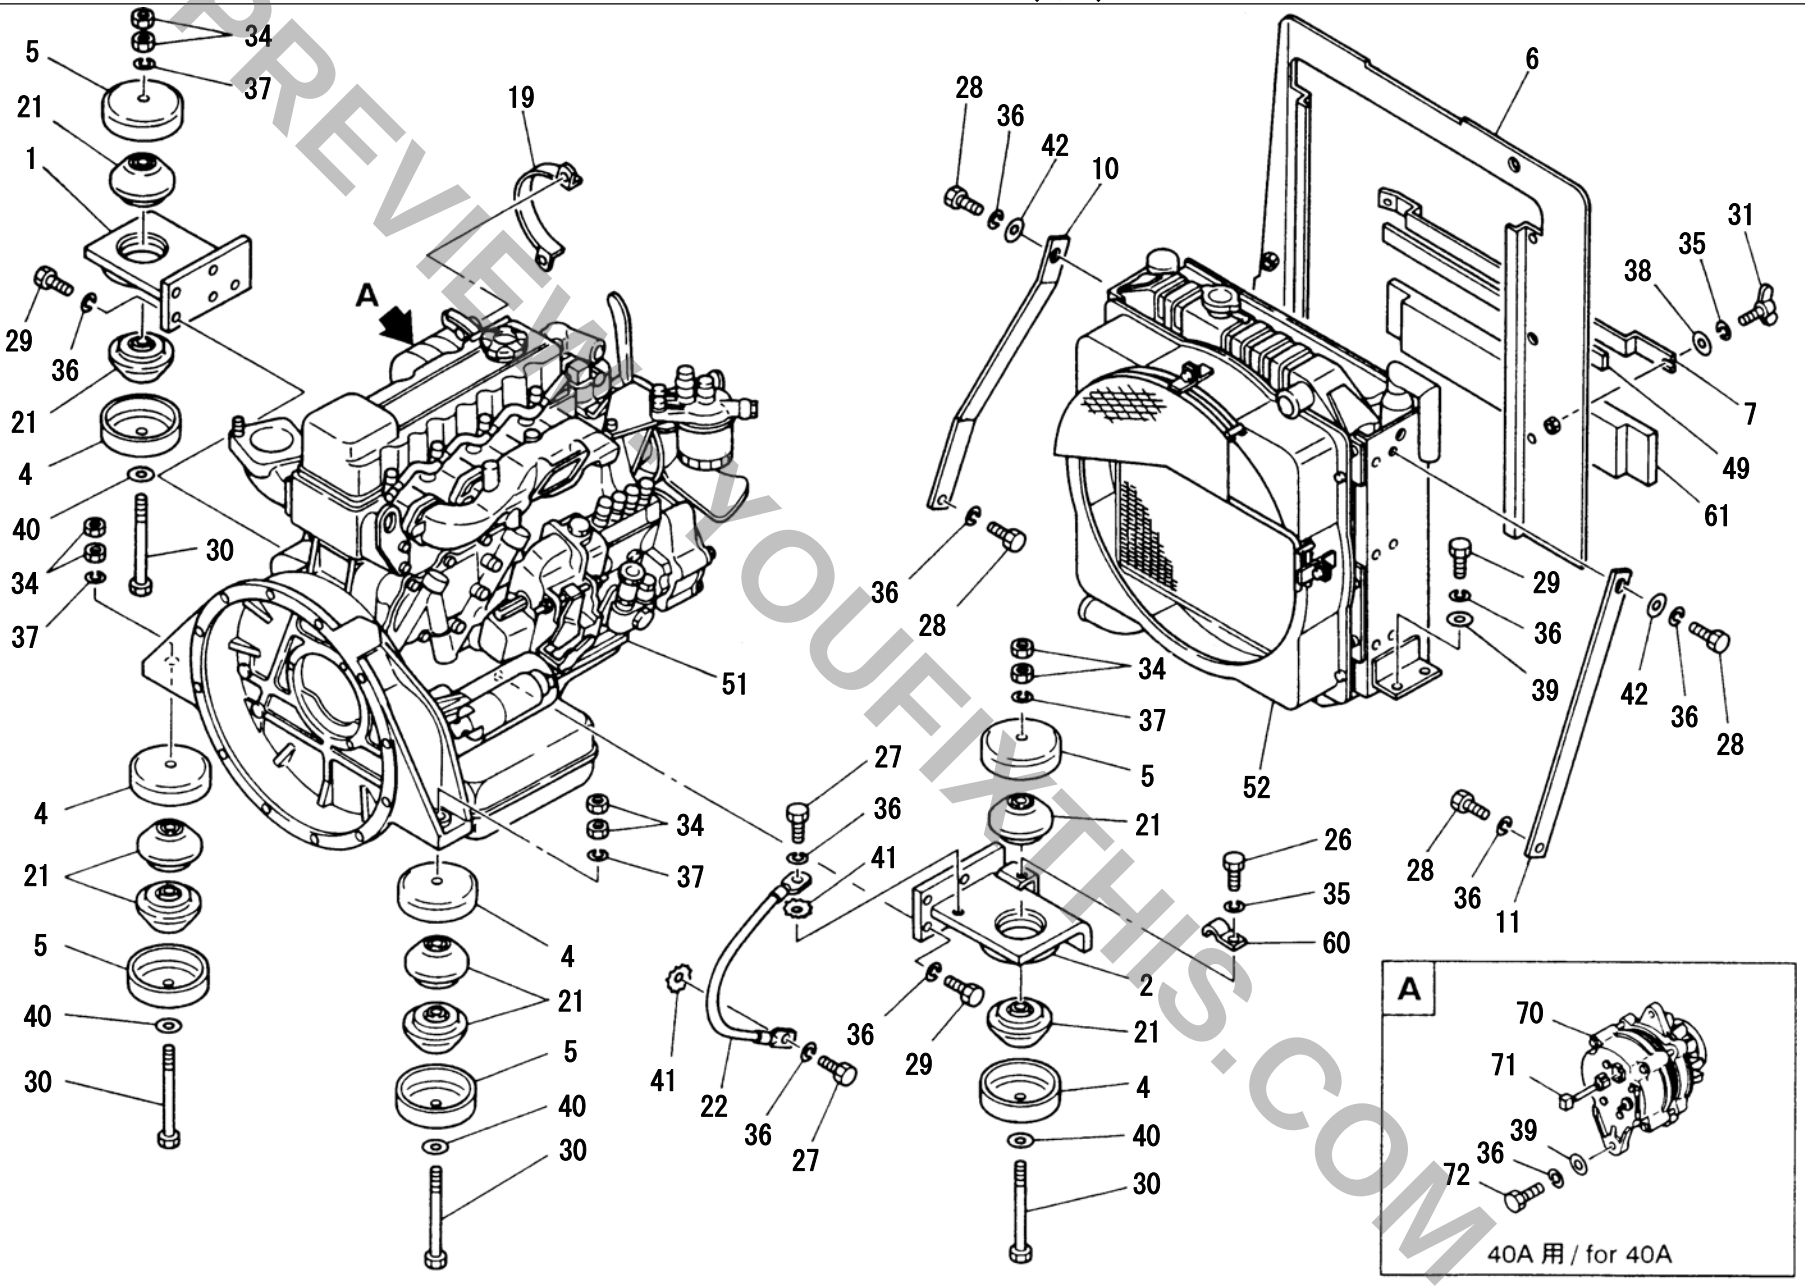


PREVIEW ONLY YOUFIXTHIS.COM

Download full manual at youfixthis.com

TB070

Book No. PL1-101Z5-1
Serial No. 1703004-1705487

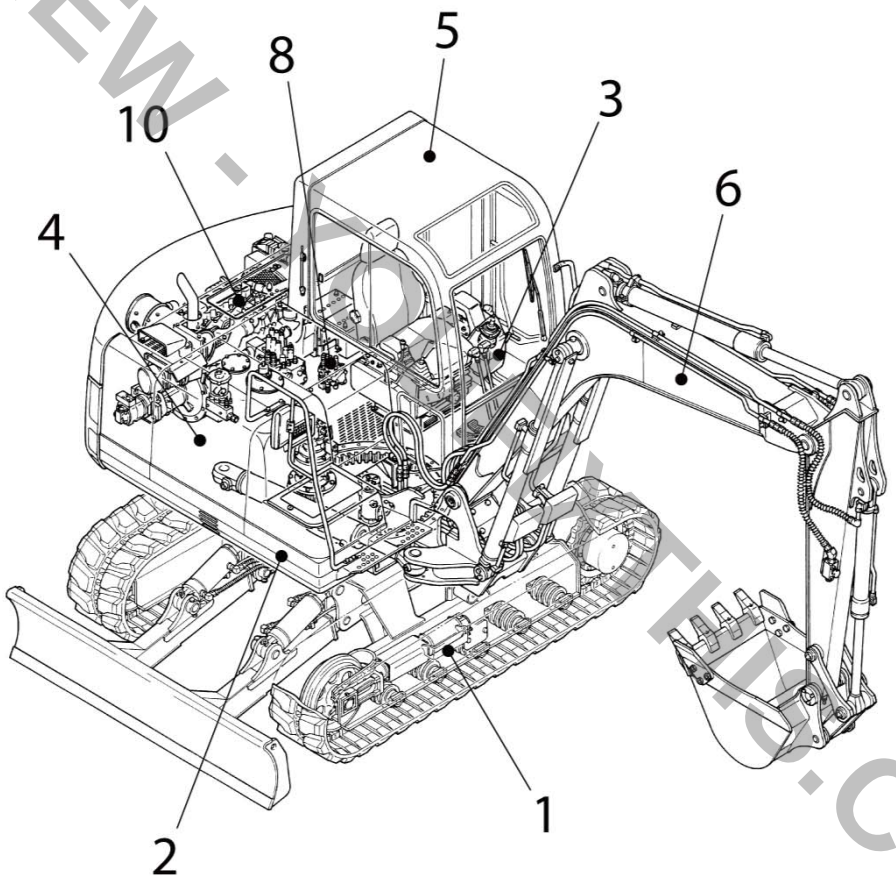

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com
TAKEUCHI

NAME	PAGE
LOWER FRAME	1-3
CRAWLER BELT	1-4
CARRIER ROLLER	1-5
TRACK ROLLER	1-6
FRONT IDLER	1-7
TRACK ADJUSTER	1-8
TRAVEL DEVICE	1-9
SLEW BEARING	1-10
SWIVEL JOINT & ACCESSORIES (1703004~1703949)	1-11
SWIVEL JOINT & ACCESSORIES (1703950~)	1-12
DOZER BLADE	1-13
PIPING; LOWER (1703004~1703949)	1-14
PIPING; LOWER (with valve) (1703004~1703949)	1-15
PIPING; LOWER (1703950~)	1-16
SLEWING DEVICE	2-3
TURNTABLE	2-4
COUNTERWEIGHT (for telescopic arm)	2-5
BOOM SWING	2-6
SWING STOPPER	2-7
TRAVEL LEVER & PEDAL (1703004~1703075)	2-8
TRAVEL LEVER & PEDAL (1703076~1705080)	2-10
TRAVEL LEVER & PEDAL (1705081~)	2-12
OPERATION LEVER (R.H.) & STAND	2-14
OPERATION LEVER (L.H.) & STAND	2-15
ARM REST	2-17
PIPING; OPERATION LEVER (1703004~1705080)	2-18
PIPING; OPERATION LEVER (1/2) (1705081~)	2-19
PIPING; OPERATION LEVER (2/2) (1705081~)	2-20
PIPING; OPERATION LEVER (1/2) (multi pattern) (1703004~1703052)	2-21
PIPING; OPERATION LEVER (2/2) (multi pattern) (1703004~1703052)	2-23
PIPING; OPERATION LEVER (1/2) (multi pattern) (1703053~1705080)	2-24
PIPING; OPERATION LEVER (2/2) (multi pattern) (1703053~1705080)	2-26
PIPING; OPERATION LEVER (1/3) (multi pattern) (1705081~)	2-27
PIPING; OPERATION LEVER (2/3) (multi pattern) (1705081~)	2-29
PIPING; OPERATION LEVER (3/3) (multi pattern) (1705081~)	2-30
PIPING; OPERATION LEVER (ISO-JCB pattern) (1703004~1705080)	2-31
PIPING; OPERATION LEVER (1/2) (ISO-JCB pattern) (1705081~)	2-33
PIPING; OPERATION LEVER (2/2) (ISO-JCB pattern) (1705081~)	2-35
DOZER BLADE LEVER (1703004~1703711)	2-36
DOZER BLADE LEVER (1703712~)	2-37
ENGINE & ACCESSORIES (1/2)	3-3
ENGINE & ACCESSORIES (2/2)	3-5
DRAIN PLUG	3-7
CONTROL BOX (R.H.)	3-8
CONTROL BOX (L.H.)	3-10
ENGINE CONTROL (1/3) (1703004~1703006)	3-11
ENGINE CONTROL (1/3) (1703007~)	3-12
ENGINE CONTROL (2/3) (1703004~1703006)	3-13
ENGINE CONTROL (2/3) (1703007~1704705)	3-14
ENGINE CONTROL (2/3) (1704706~)	3-16
ENGINE CONTROL (3/3)	3-17
ELECTRICAL (1703004~1703063)	3-18
ELECTRICAL (1703064~1703324)	3-20

PDFMANUFIXTHIS.COM

Download full manual at youfixthis.com

1 タイトル及びサブタイトル

2 符 号
イラスト内の各部品を示す番号です。

3 部品番号
部品に付けられた固有の番号です。
販売されない部品は、部品番号の前に「X」印が付けられています。

4 部品名称
部品の名前を示します。
組立品を構成する部品は、部品名称の前に「★」印を付け、組立品の次につづけて記載されています。更に、「★」印の部品が組立品の場合は、その構成部品に「★★」印が付けてあります。以下「★」を順次増やして組立品の構成部品であることを表しています。
(R) .... 右側
(L) ..... 左側

5 個 数
「1 台分の個数」を示しています。
ただし、組立品の構成部品及び「油圧機器詳細」の項の構成部品は、その組立品「1 組分の個数」が示されています。
AR .... 任意選択・必要数使用

6 互換性
単品での互換性
(H) .... すぐ上の行に記載されている部品の代わりに使用できます。
(L) ..... すぐ下の行に記載されている部品の代わりに使用できます。
複数の部品が組になった場合の互換性
英文字(H・Lを除く)の付いた部品は、同じ文字の大文字と小文字ごとに組になっています。これらの文字の後に記号(H)又は(L)を付け、組での互換性を示します。
(H) .... 同じ英文字の大文字が付いた部品の代わりに使用できます。
(L) ..... 同じ英文字の小文字が付いた部品の代わりに使用できます。

7 適用号機
その部品が使用されている機械の号機を示します。
号機表示のない部品は全ての機械に使用されています。但し、小見出しに適用号機が記載されている場合は、個々に号機表示のあるものを除き、そのページの部品すべてにこの号機が適用されます。

8 備 考

9 ノート


10 機械の型式

11 ページ番号

12 改訂番号
改訂されたときの番号が付けられており、そのページが何回改訂されたかを示すものではありません。

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

SLEWING DEVICE

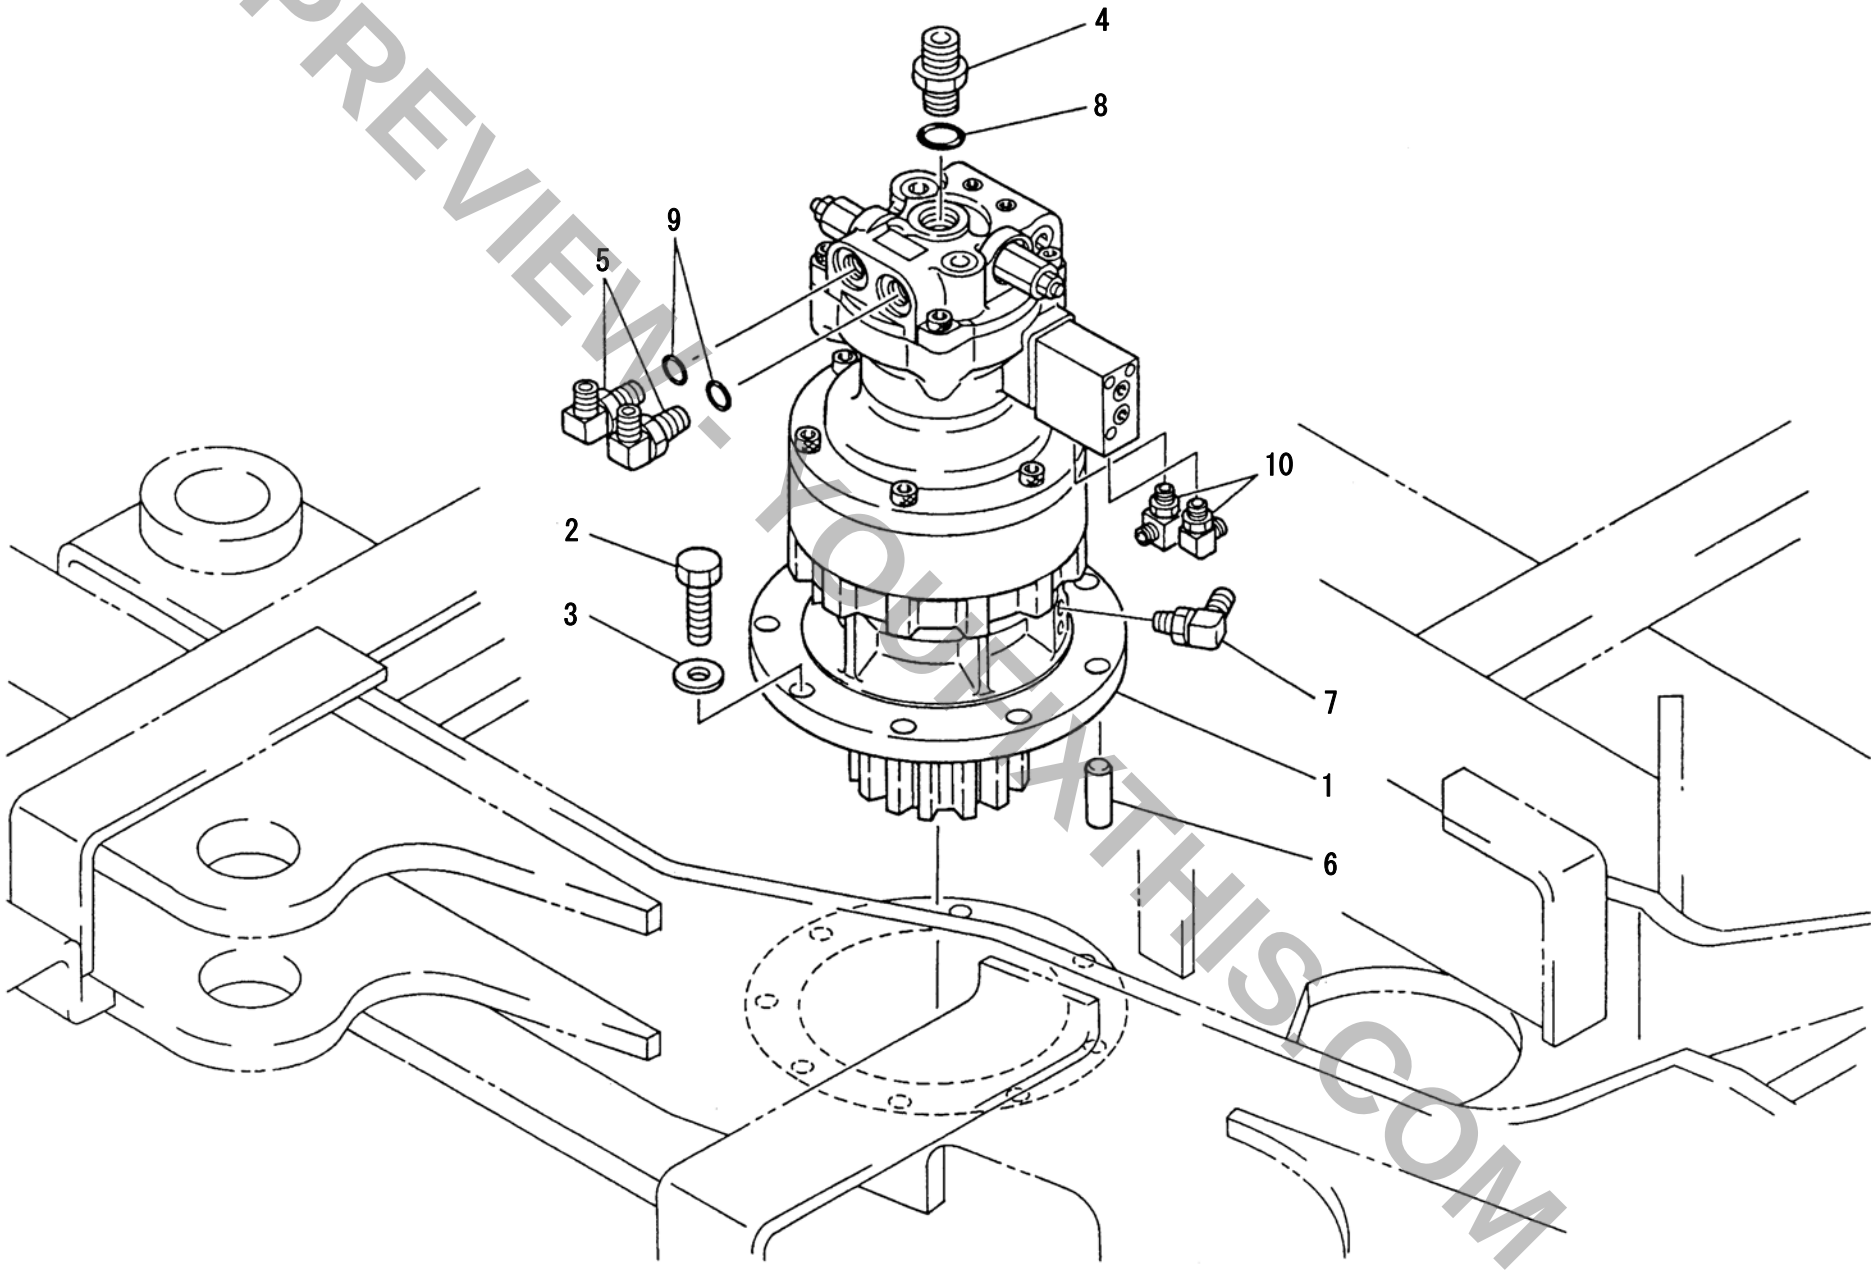

PREVIEW: YOUFIXTHIS.COM

Download full manual at youfixthis.com


操作用レバー配管(3/3)(マルチパターン)(1705081~)

Item	Part number	Description	Q'ty	Chan.	Serial No.	Serv.	Remarks
		PIPING ASSY, multi					
9	**1934852255**	HOSE ASSY	2		1705218~		
10	**1934822255**	HOSE ASSY	2		1705081~1705217		
51	**1934822225**	HOSE ASSY	2				
52	**1934822080**	HOSE ASSY	1				
53	**1934823180**	HOSE ASSY	1				
	L115d0L						

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


TRAVEL ARAM

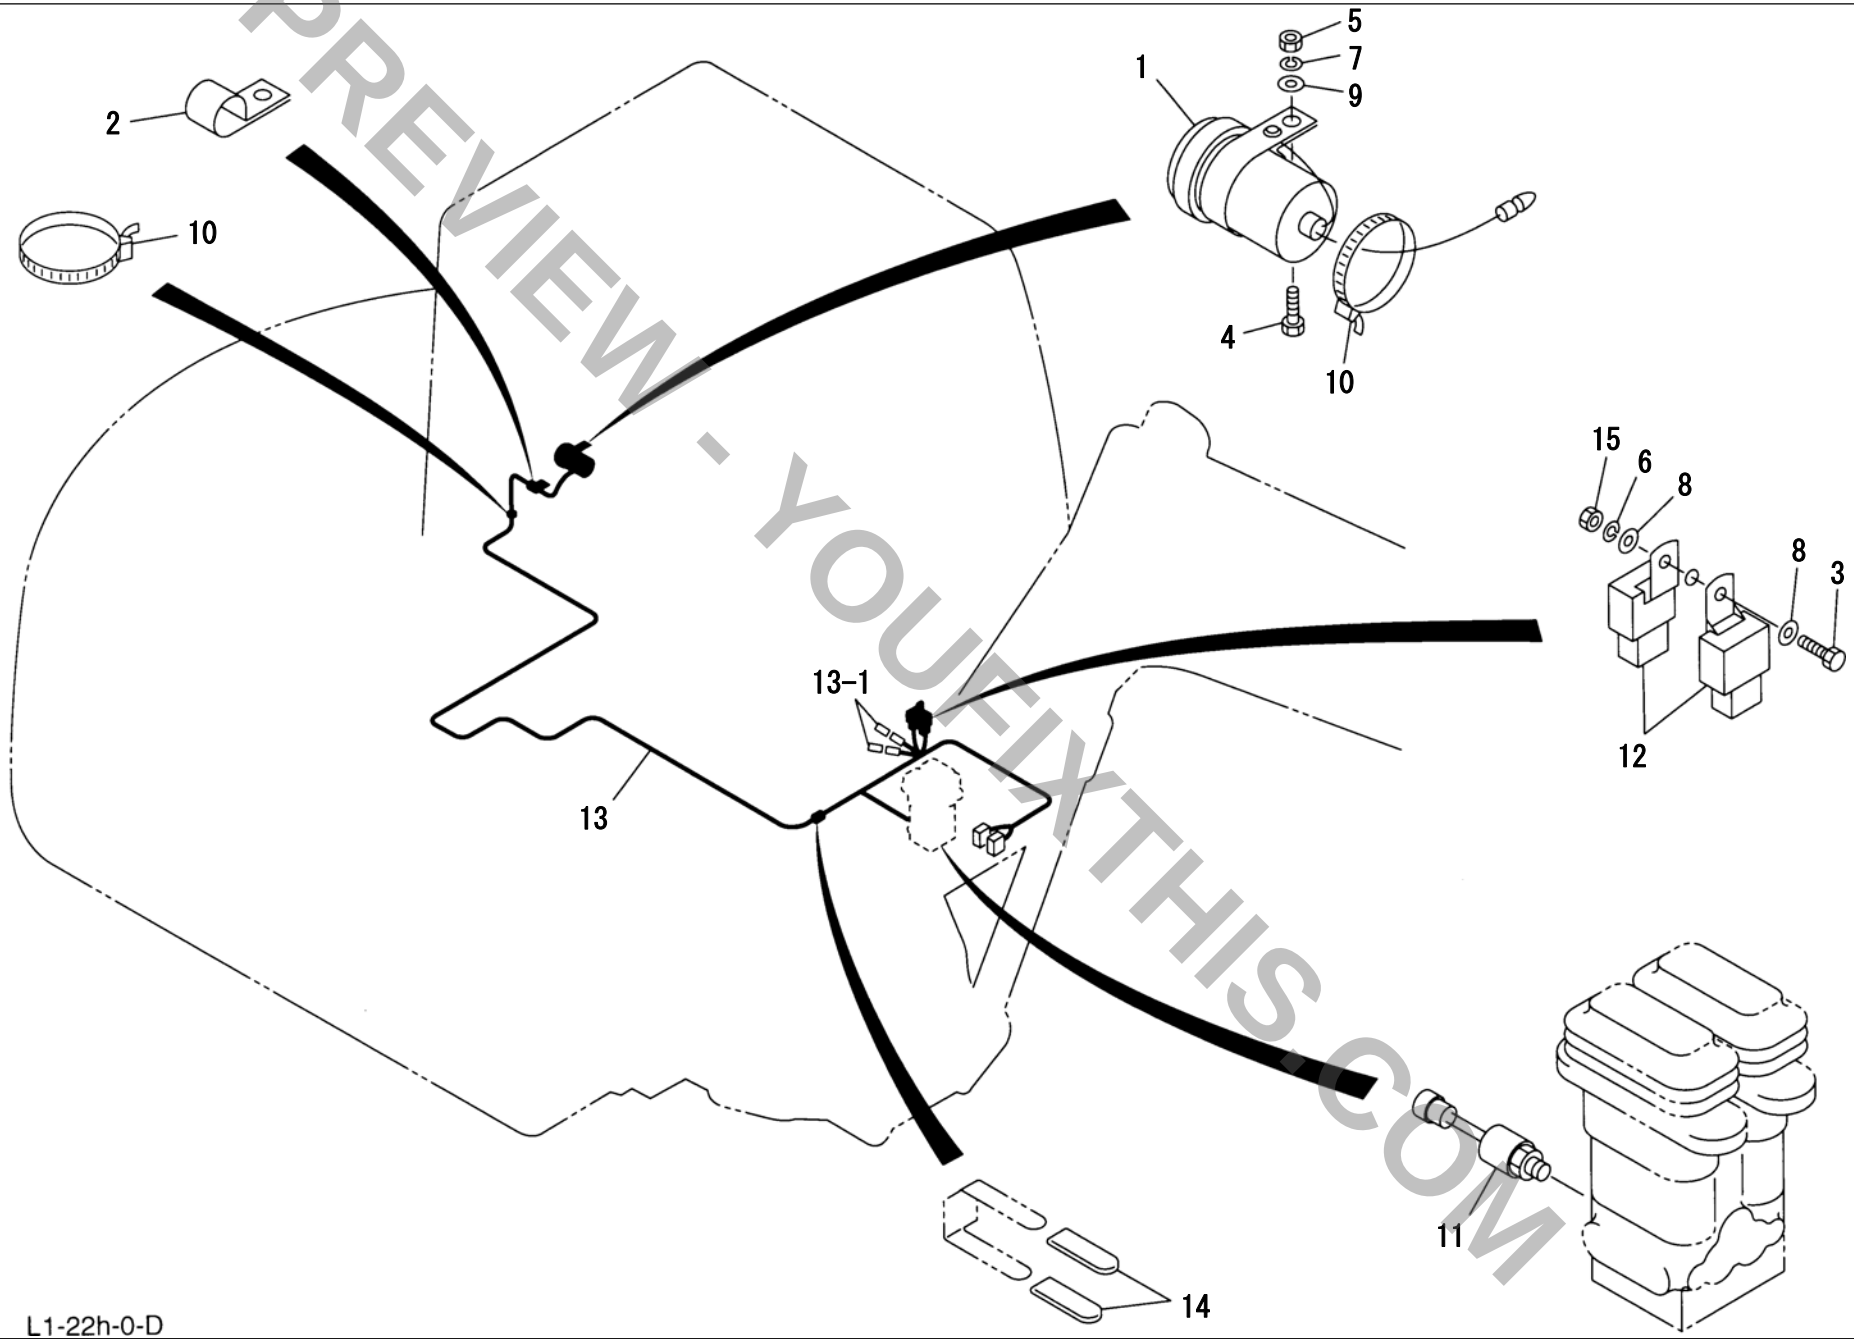

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

HYDRAULIC TANK

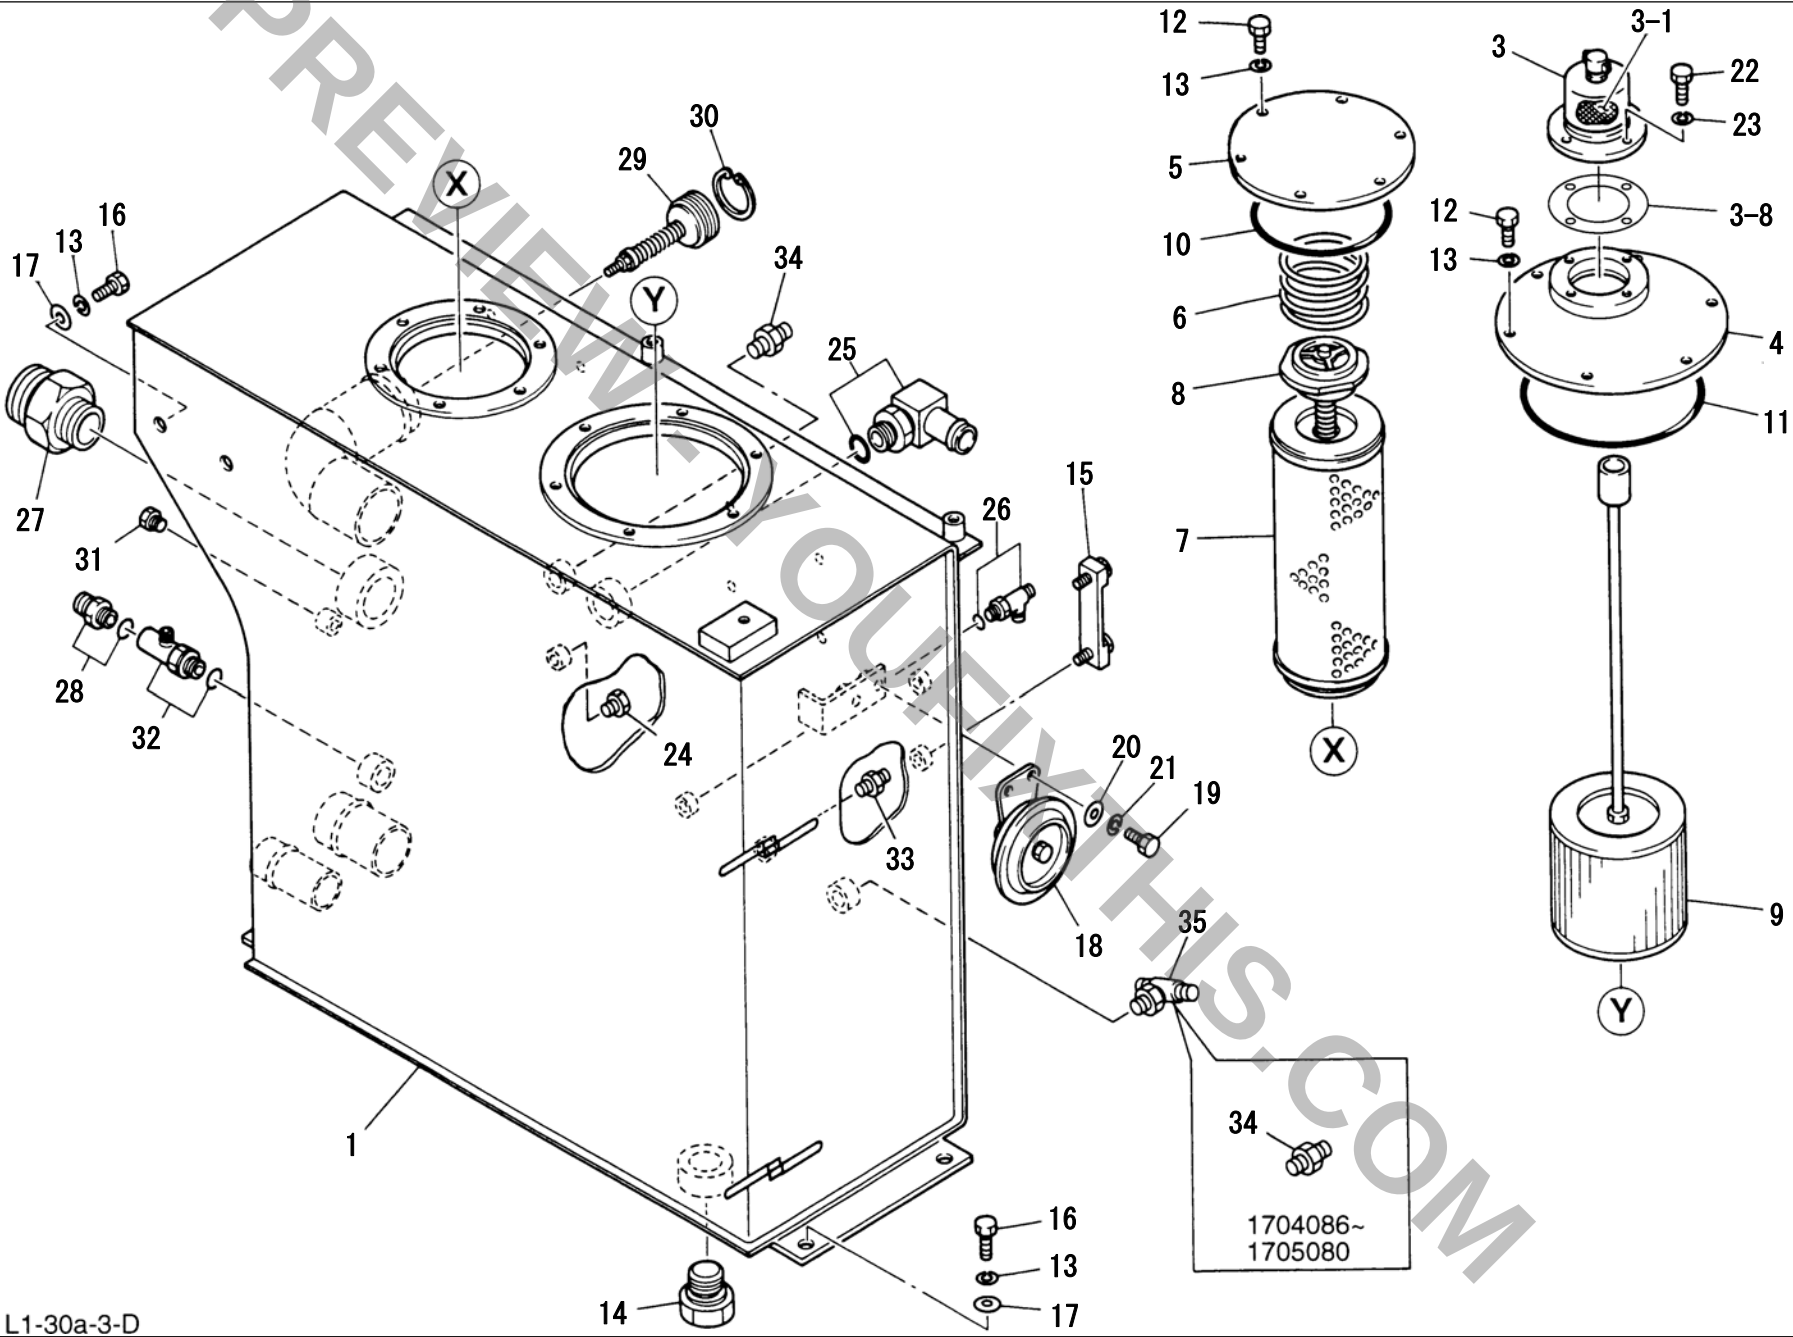

PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

キャブ(5/5) (コンストン) (1703004~1703095)

Item	Part number	Description	Q'ty	Chan.	Serial No.	Serv.	Remarks
0	**0568628100**	CAB ASSY	1				incl.1/5~5/5
0-4	**0568631000**	・ CONSTON ASSY (R.H.)	1				
0-5	**0568632000**	・ CONSTON ASSY (L.H.)	1				
1	**0568631100**	・・ BRACKET	2				
3	**0568631300**	・・ COVER (R.H.)	1				
4	**0568632100**	・・ COVER (L.H.)	1				
5	**0568631400**	・・ PULLY	2				
6	**0568631500**	・・ PLATE	2				
8	**0568631700**	・・ PIN	2				
9	**0568631800**	・・ WIRE	2				
10	**0568632450**	・・ CONSTON (R.H.)	1				
11	**1651101224**	・・ STOPPER	2				
12	**1220000015**	・・ RING, snap	2				
13	**1100041080**	・・ BOLT	2				
14	**1120590616**	・・ SCREW	6				
15	**1120590512**	・・ SCREW	8				
16	**1120530408**	・・ SCREW	2				
17	**1120530820**	・・ SCREW	2				
18	**1120590610**	・・ SCREW	2				
19	**1140090006**	・・ WASHER, spring	8				
20	**1140090005**	・・ WASHER, spring	8				
21	**1130140012**	・・ NUT	2				
22	**1130140010**	・・ NUT	4				
23	**1140020008**	・・ WASHER, spring	4				
24	**1130140004**	・・ NUT	2				
25	**1141110008**	・・ WASHER	6				
26	**0568631900**	・・ RIVET	2				
27	**0568631200**	・・ BRACKET (R.H.)	1				
28	**0568632200**	・・ BRACKET (L.H.)	1				
29	**0568632400**	・・ CONSTON (L.H.)	1				
	L136d1L						

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part number	Description	Q'ty	Chan.	Serial No.	Serv.	Remarks
43	**1900068200**	CYLINDER, boom (R.H.)	1				
44	**1900068300**	CYLINDER, boom (L.H.)	1				
45	**1900068400**	CYLINDER, arm	1				
46	**1802743048**	HOSE ASSY	2				
47	**1560001675**	NIPPLE, grease	1				
48	**0566015200**	PLATE	4				
49	**0566016700**	PROTECTOR (R.H.)	1				
50	**0566016800**	PROTECTOR (L.H.)	1				
51	**1100241065**	BOLT	2				
52	**1100041250**	BOLT	2				
53	**1130040010**	NUT	2				
54	**1141110012**	WASHER	2				
55	**0566016900**	PIPE (R.H.)	1				
56	**0566017000**	PIPE (L.H.)	1				
57	**0566017100**	PIPE (R.H.)	1				
58	**0566017200**	PIPE (L.H.)	1				
59	**0566017300**	PIPE	1				
60	**0566017400**	PIPE	1				
61	**1110040830**	SCREW, cap	12				
62	**1110040840**	SCREW, cap	12				
63	**1420010220**	O-RING	6				
64	**1100041025**	BOLT	8				
65	**0566019100**	SHIM	AR				t=1.0mm
	0566019200	SHIM	AR				t=2.3mm
	L139a4L						

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

銘　板（スペイン語）

Item		Part number	Description	Q'ty	Chan.	Serial No.	Serv.	Remarks
0		**0569348000**	DECAL SET	1				machine color; red and gray
1		**0569321100**	・ DECAL	1				
2		**0569326100**	・ DECAL	1				
3		**0569321300**	・ DECAL	3				
4		**0569321400**	・ DECAL	1				
5		**0569335070**	・ DECAL	1				
6		**0359325220**	・ DECAL	1				
7		**0569348100**	・ DECAL	1				
11		**0339364100**	・ DECAL	4				
12		**0339364200**	・ DECAL	3				
13		**0359306600**	・ SYMBOL MARK	1				
14		**0359306700**	・ SYMBOL MARK	1				
15		**0359325240**	・ DECAL	1				ISO
		0359313800	・ DECAL	1				JCB
16		**0359325170**	・ DECAL	1				
17		**0329360100**	・ SYMBOL MARK	1				
18		**0359325190**	・ DECAL	1				
19	X	**************	・ DECAL	1				
20	X	**************	・ SCREW	2				
21	X	**************	・ DECAL	1				
22		**0569348300**	・ DECAL	1				
23		**0569321900**	・ DECAL	1				
24		**0569321910**	・ DECAL	1				
25		**0569348200**	・ DECAL	1				
29		**0339364500**	・ DECAL	1				
30		**0569348400**	・ DECAL	1				
31		**0569348500**	・ DECAL	1				
34		**0399300400**	・ DECAL	1				
35	X	**************	・ DECAL	1				
36	X	**************	・ DECAL	1				
37	X	**************	・ DECAL	1				
38		**0399300500**	・ DECAL	3				
39		**0569321200**	・ DECAL	1				
		L143s0L						

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


緊急遮断弁

Item	Part number	Description	Q'ty	Chan.	Serial No.	Serv.	Remarks
0	**1901729500**	VALVE ASSY	2				
1	**1501810001**	・ PLUG	3				
2	**1420010140**	・ O-RING	1				
3	**1221000010**	・ RING, snap	1				
4	**1420010210**	・ O-RING	1				
5	**1420010140**	・ O-RING	1				
6	**1420010040**	・ O-RING	1				
7	**1421020040**	・ RING, back-up	1				
	L150c0L						

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

SLEW MOTOR (1/2) (moter sec.)

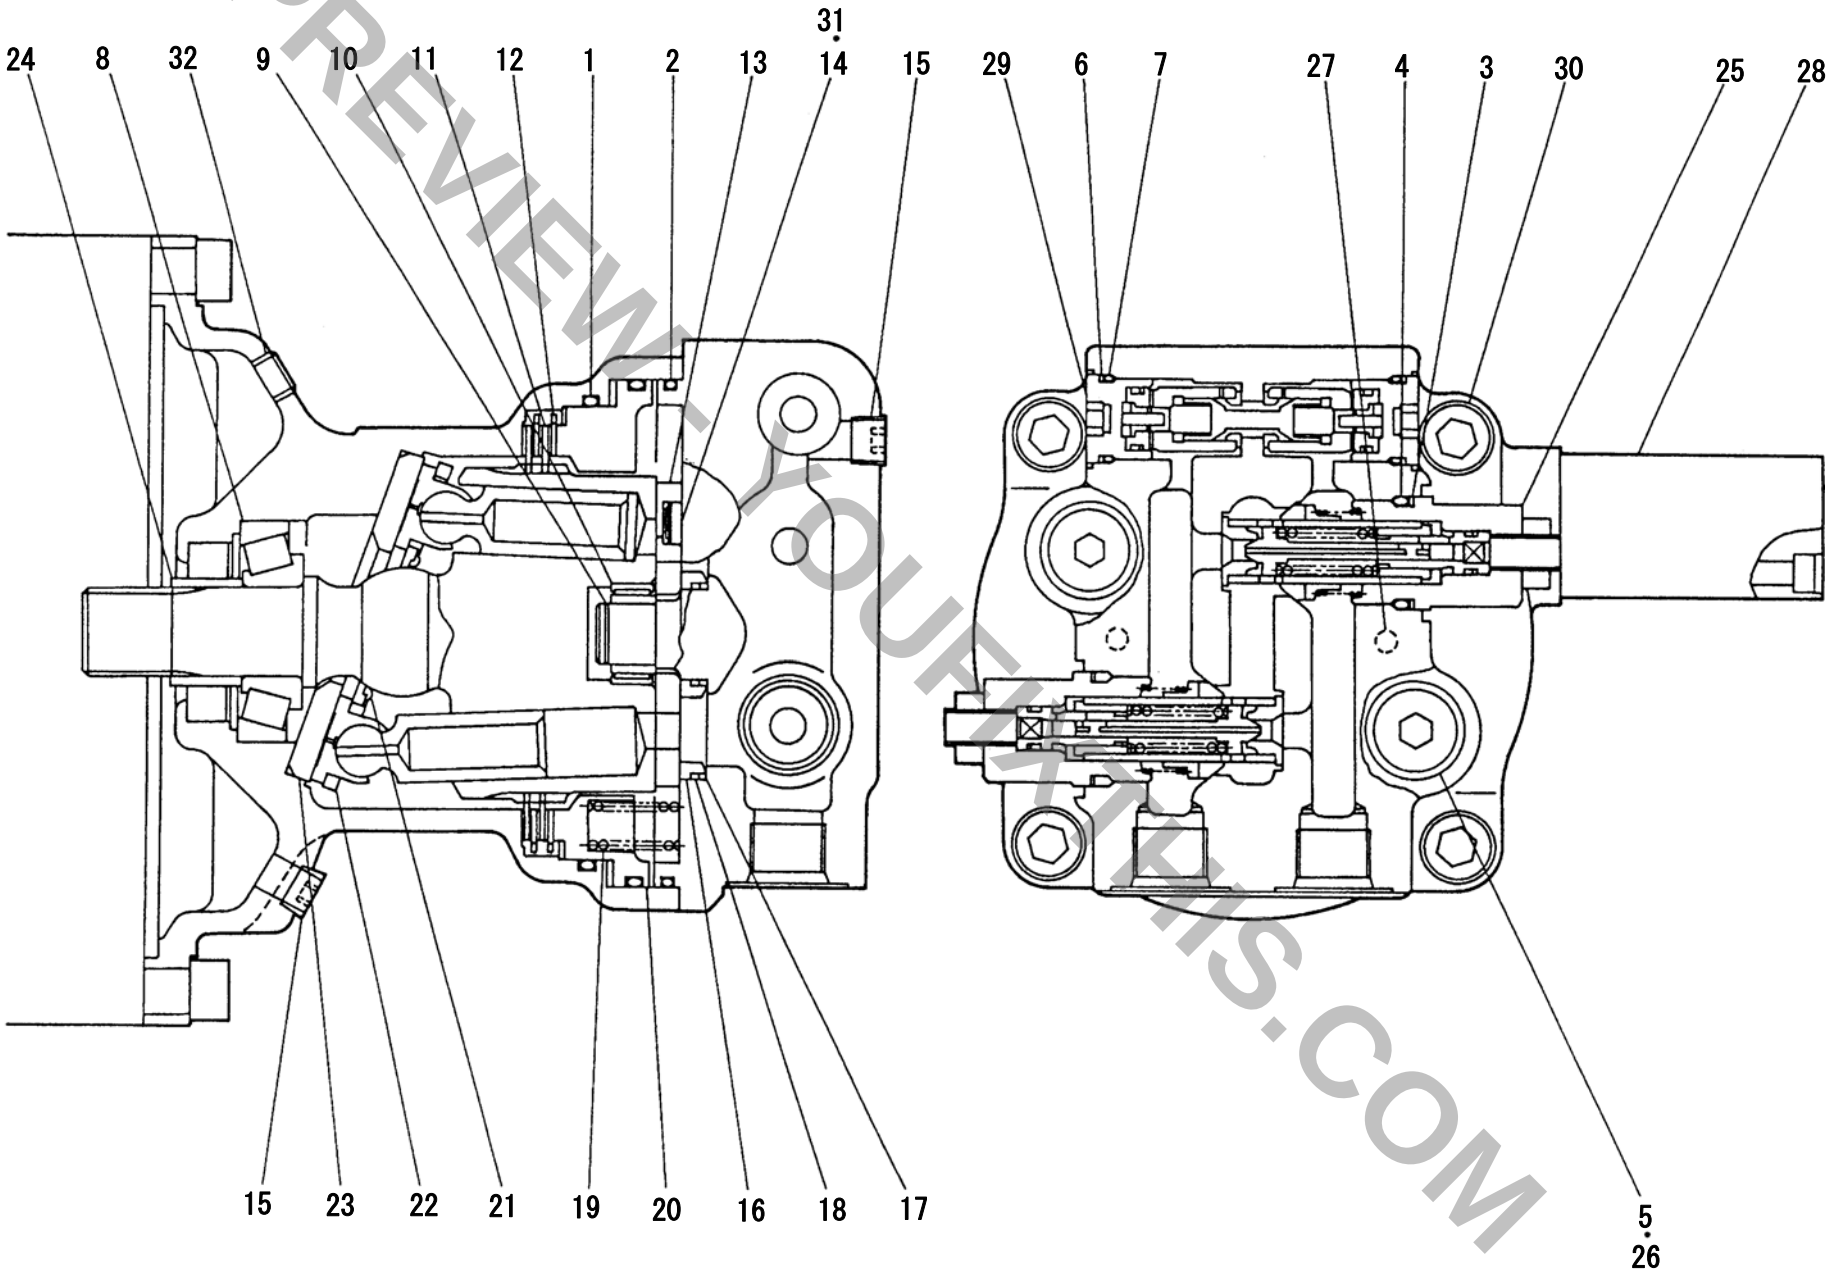

PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 18 of 414 pages

The full manual includes:

- All 414 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Takeuchi TB070 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual