```
Y00B4971,Industrial,"Vertical multi cyl, diesel(T-series)",
[Info]
PcNo=Y00B4971
PcName=3TNE88L-RBV(VIO40)
JpnUse=0
JpnSec1=
JpnSec2=
JpnSec3=
JpnPreface=0
EngUse=1
EngSec1=ENGINE
EngSec2=SMALL VERTICAL (ViO)
EngSec3=TNE
EngPreface=0
```

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

```
0,Y00B4971
1,002,,"ENGINE 3TNE88L-RBV"
2,1,,"CYLINDER BLOCK",3TNE88L-RBV,,,
2,2,,"GEAR HOUSING",3TNE88L-RBV,,,
2,3,,"FLYWHEEL HOUSING & OIL SUMP",3TNE88L-RBV,,,
2,4,,"CYLINDER HEAD & BONNET",3TNE88L-RBV,,,
2,5,,"SUCTION MANIFOLD & AIR CLEANER",3TNE88L-RBV,,,
2,6,,"EXHAUST MANIFOLD & SILENCER",3TNE88L-RBV,,,
2,7,,"CAMSHAFT & DRIVE GEAR",3TNE88L-RBV,,,
2,8,,"CRANKSHAFT & PISTON",3TNE88L-RBV,,,
2,9,,"LUB. OIL SYSTEM",3TNE88L-RBV,,,
2,10,,"COOLING WATER SYSTEM",3TNE88L-RBV,,,
2,11,,"FUEL INJECTION PUMP",3TNE88L-RBV,,,
2,12,,GOVERNOR,3TNE88L-RBV,,,
2,13,,"FUEL INJECTION VALVE",3TNE88L-RBV,,,
2,14,,"FUEL PIPE",3TNE88L-RBV,,,
2,15,,"ENGINE STOP DEVICE",3TNE88L-RBV,,,
2,16,,"STARTING MOTOR",3TNE88L-RBV,,,
2,17,,GENERATOR,3TNE88L-RBV,,,
2,18,,"GASKET SET(OPTIONAL) & TOOL",3TNE88L-RBV,,,
```

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Fig. 1 シリンダブロック CYLINDER BLOCK

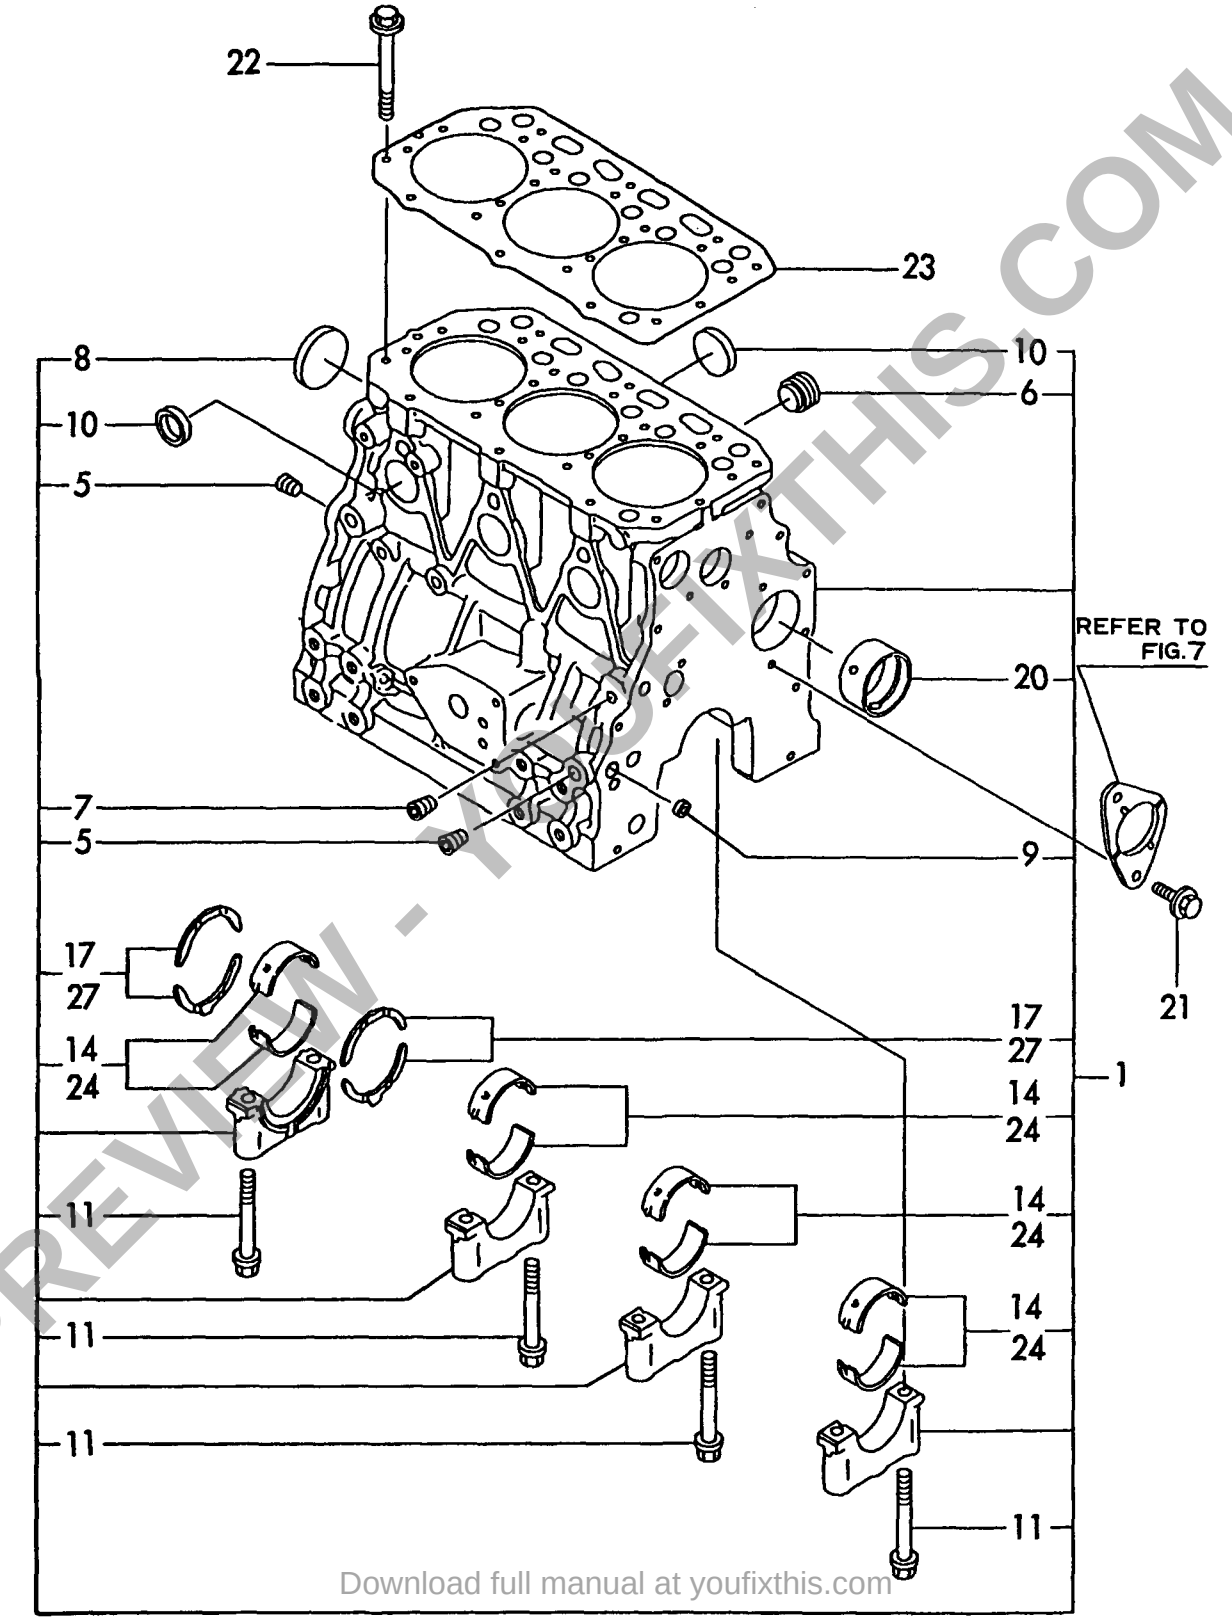

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Fig. 11 燃料噴射ポンプ FUEL INJECTION PUMP

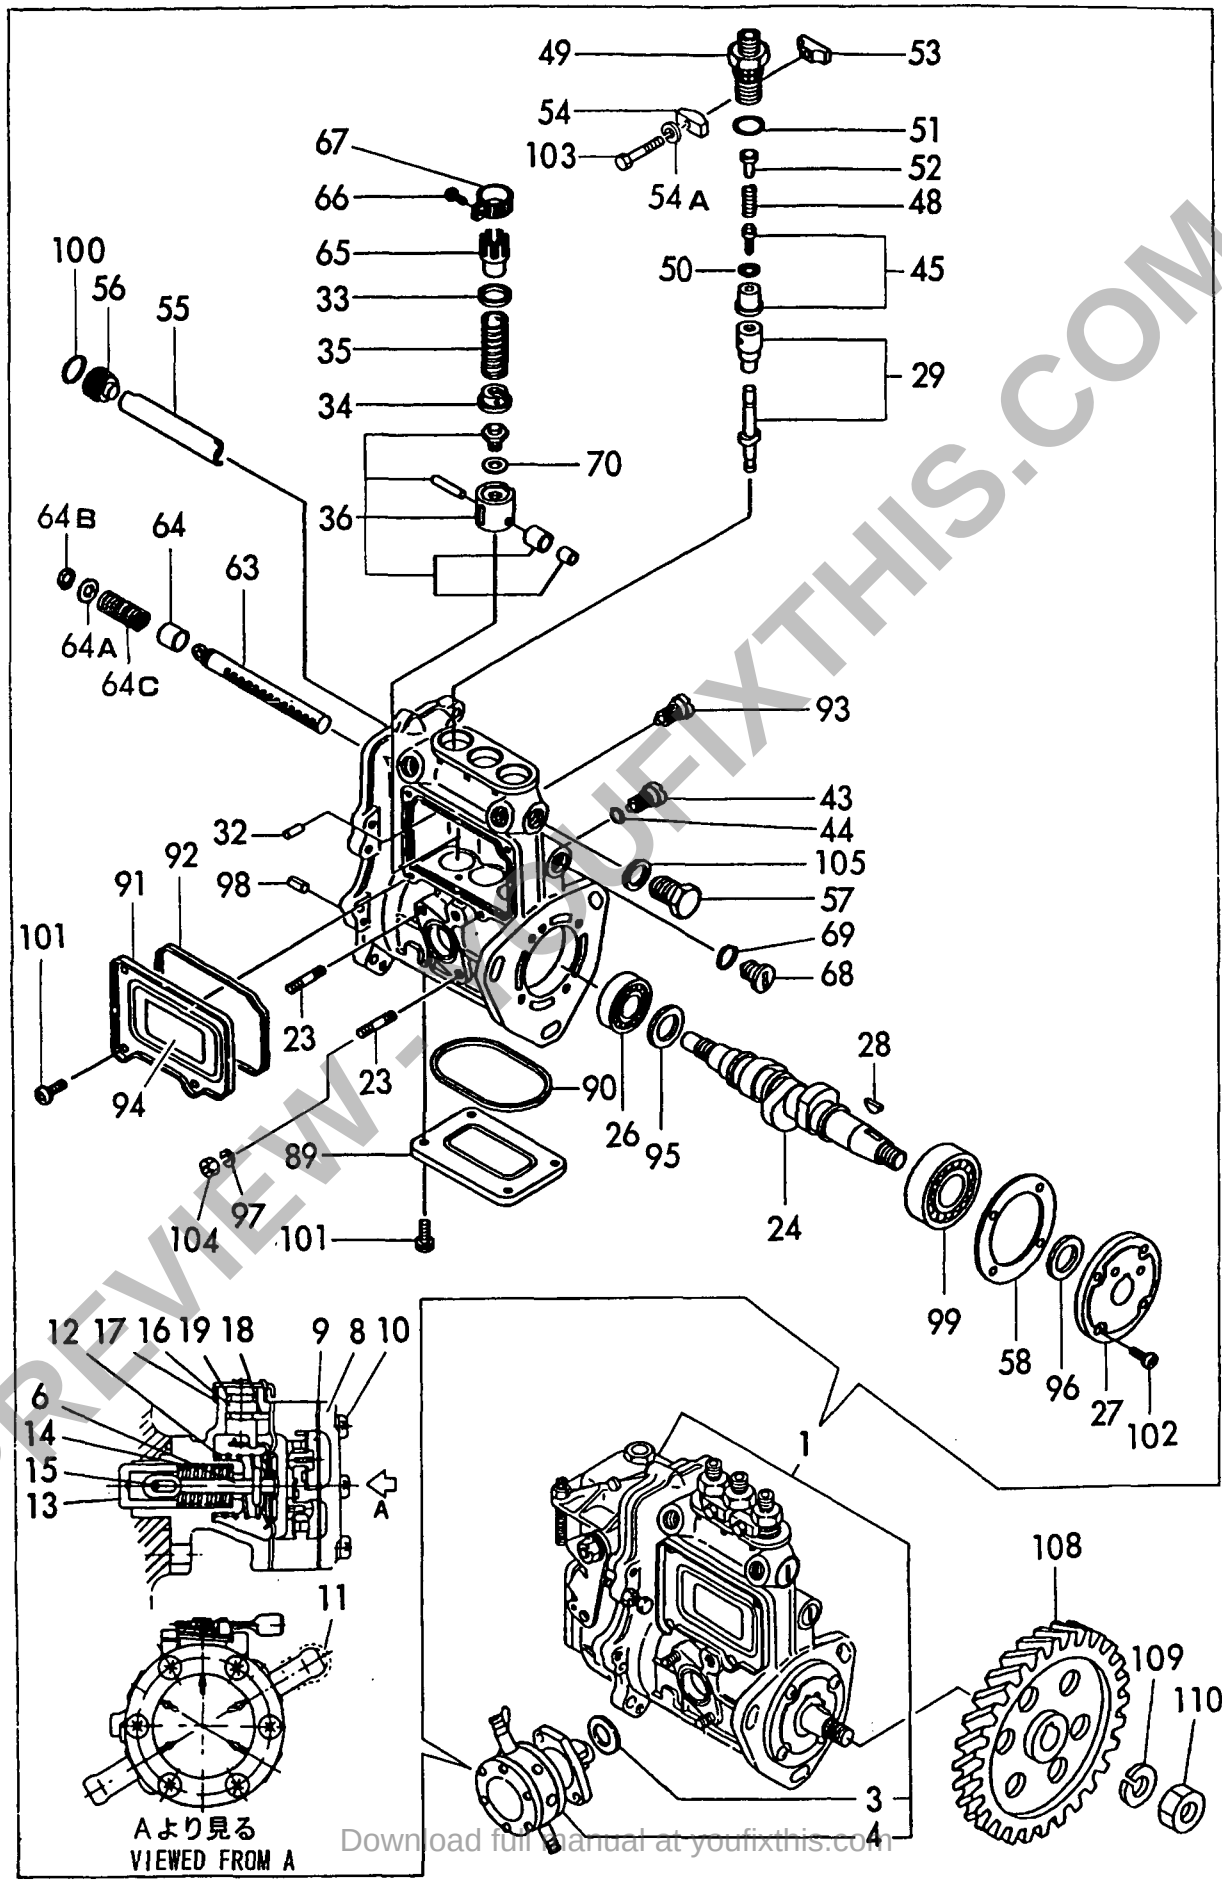

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig. 16 スターティングモータ STARTING MOTOR

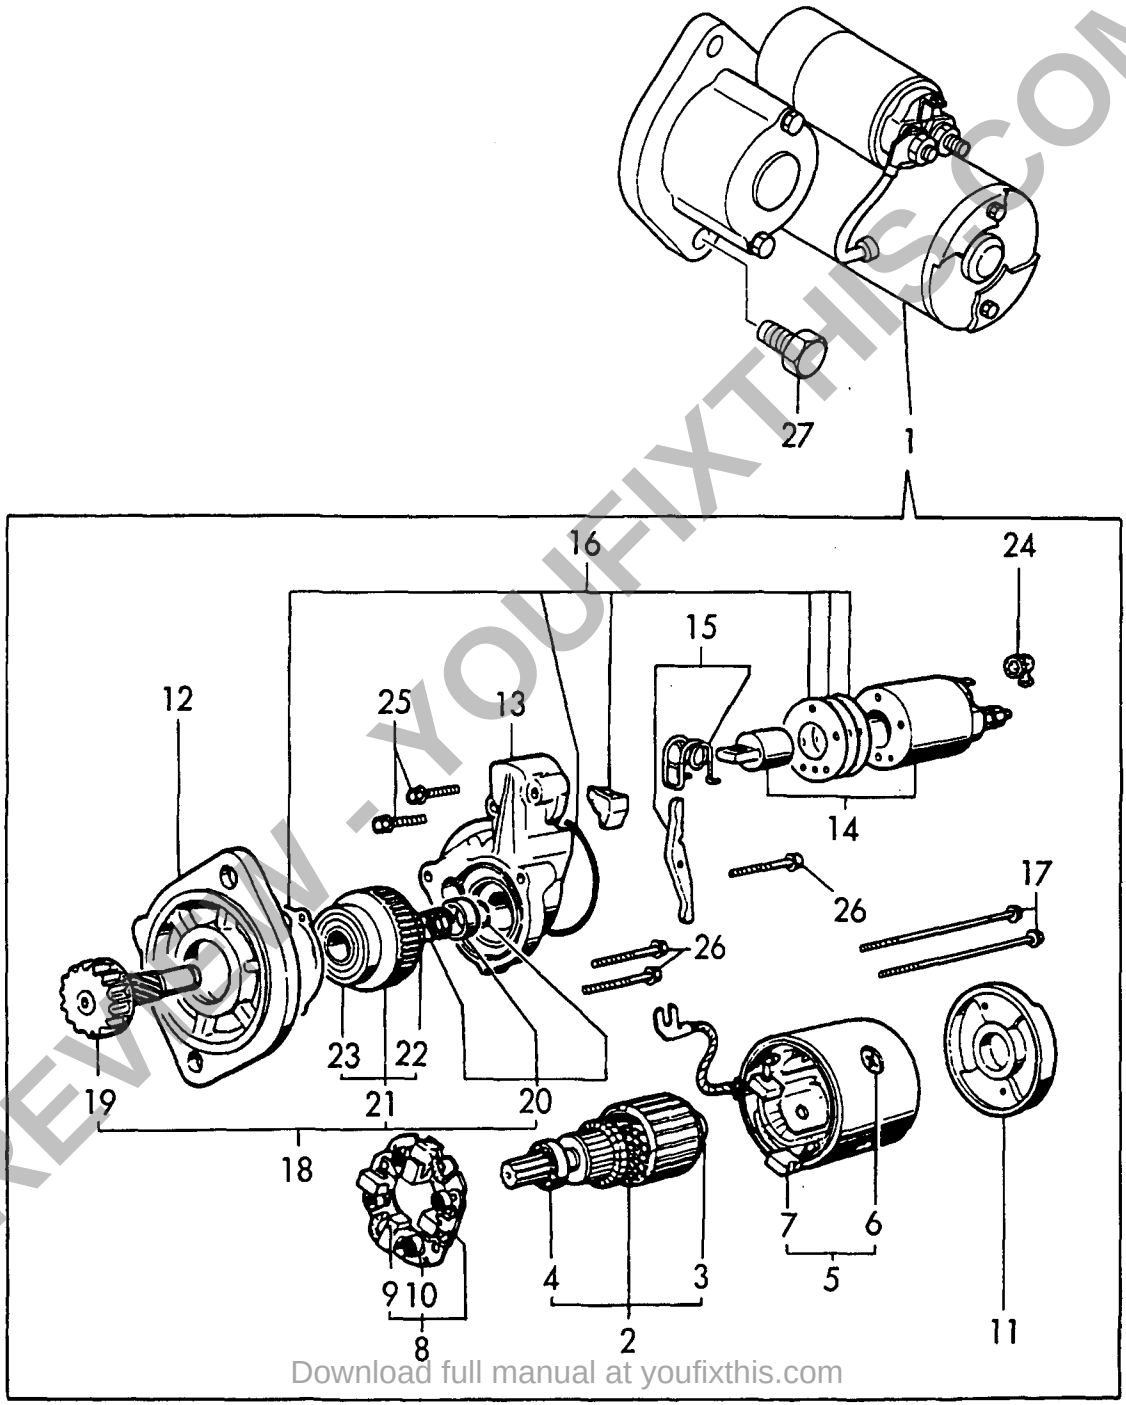

REVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

```
1,1,,719810-01500,,"HOUSING ASSY, GEAR",1,,,,,,,,,,,,,,,
3,2,,129795-01800,,"SEAL, OIL",1,,,,,,,,,,,,,,,
4,1,,129400-01520,,"FLANGE,GEARS HOUSING",1,,,,,,,,,,,,,,,
5,1,,121450-01560,,"STUD M 8X 22",3,,,,,,,,,,,,,,,
6,1,,124160-01751,,"CAP, LUB.OIL SUPPLY",1,,,,,,,,,,,,,,,
7,1,,124240-01871,,"COVER, HO-P",1,,,,,,,,,,,,,,,
8,1,,124240-01883,,"GASKET, (NON-ASB.)",1,,,,,,,A,,,,,,,,,
9,1,,129795-01950,,"PIPE, KNOCK L=18",2,,,,,,,,,,,,,,,
10,1,,129150-03100,,RETAINER,1,,,,,,,,,,,,,,,
11,1,,121850-51960,,"O-RING, F.I.PUMP",1,,,,,,,A,,,,,,,,,
12,1,,24311-000160,,"O-RING 1A P-16.0",2,,,,,,,,,,,,,,,
13,1,,24311-000320,,"O-RING 1A P-32.0",1,,,,,,,A,,,,,,,,,
14,1,,171031-11741,,PIPE,1,,,,,,,,,,,,,,,
15,1,,24311-000320,,"O-RING 1A P-32.0",1,,,,,,,A,,,,,,,,,
16,1,,26106-080122,,"BOLT M 8X 12 PLATED",4,,,,,,,,,,,,,,,
17,1,,26106-080162,,"BOLT M 8X 16 PLATED",1,,,,,,,,,,,,,,,
18,1,,26106-080162,,"BOLT M 8X 16 PLATED",3,,,,,,,,,,,,,,,
19,1,,26106-080202,,"BOLT M 8X 20 PLATED",2,,,,,,,,,,,,,,,
20,1,,26106-080452,,"BOLT M 8X 45 PLATED",6,,,,,,,,,,,,,,,
21,1,,26106-080552,,"BOLT M 8X 55 PLATED",3,,,,,,,,,,,,,,,
22,1,,26106-080852,,"BOLT M 8X 85 PLATED",4,,,,,,,,,,,,,,,
23,1,,26366-080002,,"NUT M 8",3,,,,,,,,,,,,,,,
24,1,,22190-080002,,"SEAL WASHER  8S",4,,,,,,,,,,,,,,,
25,1,,22190-080002,,"SEAL WASHER  8S",1,,,,,,,,,,,,,,,
26,1,,121023-01550,,"COVER, BLIND",1,,,,,,,,,,,,,,,
27,1,,24341-000240,,"O-RING 1A S-24.0",1,,,,,,,,,,,,,,,
28,1,,26106-060122,,"BOLT M 6X 12 PLATED",2,,,,,,,,,,,,,,,
```

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

```
1,1,,129150-14200,,TAPPET,6,,,,,,,,,,,,,,,
2,1,,129150-14400,,"ROD, PUSH",6,,,,,,,,,,,,,,,
3,1,,129129-14580,,"CAMSHAFT ASSY",1,,,,,,,,,,,,,,,
4,2,,129150-02450,,"METAL,THRUST",1,,,,,,,,,,,,,,,
6,2,,129150-14101,,"GEAR, CAMSHAFT",1,,,,,,,,,,,,,,,
7,2,,22512-070140,,"KEY  7X 14",1,,,,,,,,,,,,,,,
8,1,,129100-25061,,"SHAFT, IDLE GEAR",1,,,,,,,,,,,,,,,
9,1,,129150-25101,,"GEAR W/BUSH",1,,,,,,,,,,,,,,,
11,2,,129150-25061,,"BUSH, IDLE GEAR",1,,,,,,,,,,,,,,,
12,1,,26106-080452,,"BOLT M 8X 45 PLATED",2,,,,,,,,,,,,,,,
```

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

1,2,,129155-51280,,"O-RING S6",2,,,,,,,,,,,,,,,
2,2,,129155-61012,,"CASE, GOVERNOR",1,,,,,,,,,,,,,,,
3,2,,129155-61050,,"GASKET, GOV. CASE",1,,,,,,,,,,,,,,,
4,2,,129155-61060,,"COVER, GOVERNOR CASE",1,,,,,,,,,,,,,,,
5,2,,129155-61070,,"GASKET, CASE COVER",1,,,,,,,,,,,,,,,
6,2,,129155-61120,,"LINK L=30(MARK 0",1,,,,,,,1,,,,,,,,,
7,2,,129155-61130,,"LINK L=31(MARK 1",1,,,,,,,1,,,,,,,,,
8,2,,129155-61140,,"LINK L=30.5(MARK 05)",1,,,,,,,1,,,,,,,,,
9,2,,129155-61201,,"WEIGHT ASSY, GOV.",1,,,,,,,,,,,,,,,
13,2,,129155-61341,,SLEEVE,1,,,,,,,,,,,,,,,
14,2,,129100-61400,,"SHAFT ASSY, CONTROL",1,,,,,,,,,,,,,,,
17,2,,129155-61430,,"SPACER, SHAFT",1,,,,,,,,,,,,,,,
18,2,,129100-61440,,"LEVER, CONTROL",1,,,,,,,,,,,,,,,
19,2,,129155-61450,,"BOLT, REVOL. LIMIT",1,,,,,,,,,,,,,,,
20,2,,129155-61460,,"BOLT, IDLE LIMIT",1,,,,,,,,,,,,,,,
21,2,,129155-61480,,"SPACER ASSY",2,,,,,,,,,,,,,,,
22,2,,129155-61490,,"SHAFT, GOV. LEVER",1,,,,,,,,,,,,,,,
23,2,,119843-61500,,"LEVER ASSY, GOVERNOR",1,,,,,,,,,,,,,,,
28,3,,119843-61540,,SPRING,1,,,,,,,,,,,,,,,
29,3,,129155-61540,,SHIFTER,1,,,,,,,,,,,,,,,
33,3,,22272-000040,,"CIRCLIP E- 4",1,,,,,,,,,,,,,,,
35,2,,129100-61650,,"SPRING, FUEL CONTROL",1,,,,,,,,,,,,,,,
36,2,,129129-61801,,"LEVER ASSY, STOP",1,,,,,,,,,,,,,,,
37,2,,129155-61810,,"PIN, STOP LEVER",1,,,,,,,,,,,,,,,
38,2,,129155-61830,,"O-RING S10",1,,,,,,,,,,,,,,,
39,2,,129116-61890,,"SUPPORT, STOP LEVER",1,,,,,,,,,,,,,,,
40,2,,129155-61950,,"BOLT, WASHER BASED",1,,,,,,,,,,,,,,,
41,2,,124550-66370,,"LOCK NUT M 6",1,,,,,,,,,,,,,,,
42,2,,22117-040000,,"WASHER 4",1,,,,,,,,,,,,,,,
43,2,,22272-000060,,"CIRCLIP E- 6",2,,,,,,,,,,,,,,,
44,2,,22287-120000,,"WASHER 12",1,,,,,,,,,,,,,,,
45,2,,22372-040000,,"SNAP PIN 4",2,,,,,,,,,,,,,,,
46,2,,23887-100002,,"PLUG 10",1,,,,,,,,,,,,,,,
47,2,,24311-240100,,"O-RING 1A P-10A",1,,,,,,,,,,,,,,,
48,2,,26022-050102,,"SCREW M 5X 10",2,,,,,,,,,,,,,,,
49,2,,26023-050102,,"SCREW M 5X 10",2,,,,,,,,,,,,,,,
50,2,,26106-060202,,"BOLT M 6X 20 PLATED",5,,,,,,,,,,,,,,,
51,2,,26106-060252,,"BOLT M 6X 25 PLATED",1,,,,,,,,,,,,,,,
52,2,,26366-080002,,"NUT M 8",1,,,,,,,,,,,,,,,
53,2,,26756-060002,,"LOCK NUT M 6 PLATED",1,,,,,,,,,,,,,,,
54,2,,26776-120002,,"LOCK NUT M12 PLATED",2,,,,,,,,,,,,,,,
55,2,,22190-060002,,"SEAL WASHER 6S",1,,,,,,,,,,,,,,,
56,2,,22190-100002,,"SEAL WASHER 10S",1,,,,,,,,,,,,,,,
57,2,,22190-120002,,"SEAL WASHER 12",2,,,,,,,,,,,,,,,
58,1,,129155-61470,,"BOLT, FUEL CONTROL",1,,,,,,,,,,,,,,,
59,1,,171353-61550,,"ANGLEICH ASSY",1,,,,,,,,,,,,,,,
63,2,,129155-61590,,NUT,1,,,,,,,,,,,,,,,
67,1,,171353-61710,,"SPRING, GOVERNOR",1,,,,,,,,,,,,,,,
68,1,,129129-66860,,"LINK, SOLENOID",1,,,,,,,,,,,,,,,
69,1,,22117-080000,,"WASHER 8",1,,,,,,,,,,,,,,,
70,1,,22372-080000,,"SNAP PIN (JASO 8)",1,,,,,,,,,,,,,,,
71,1,,26687-120002,,"CAP NUT M12",1,,,,,,,,,,,,,,,

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 8 of 39 pages

The full manual includes:

- All 39 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota 3TNE88L-RBV (VIO40), 3TNE88L-RBV Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual