
Fig.1.CYLINDER BLOCK

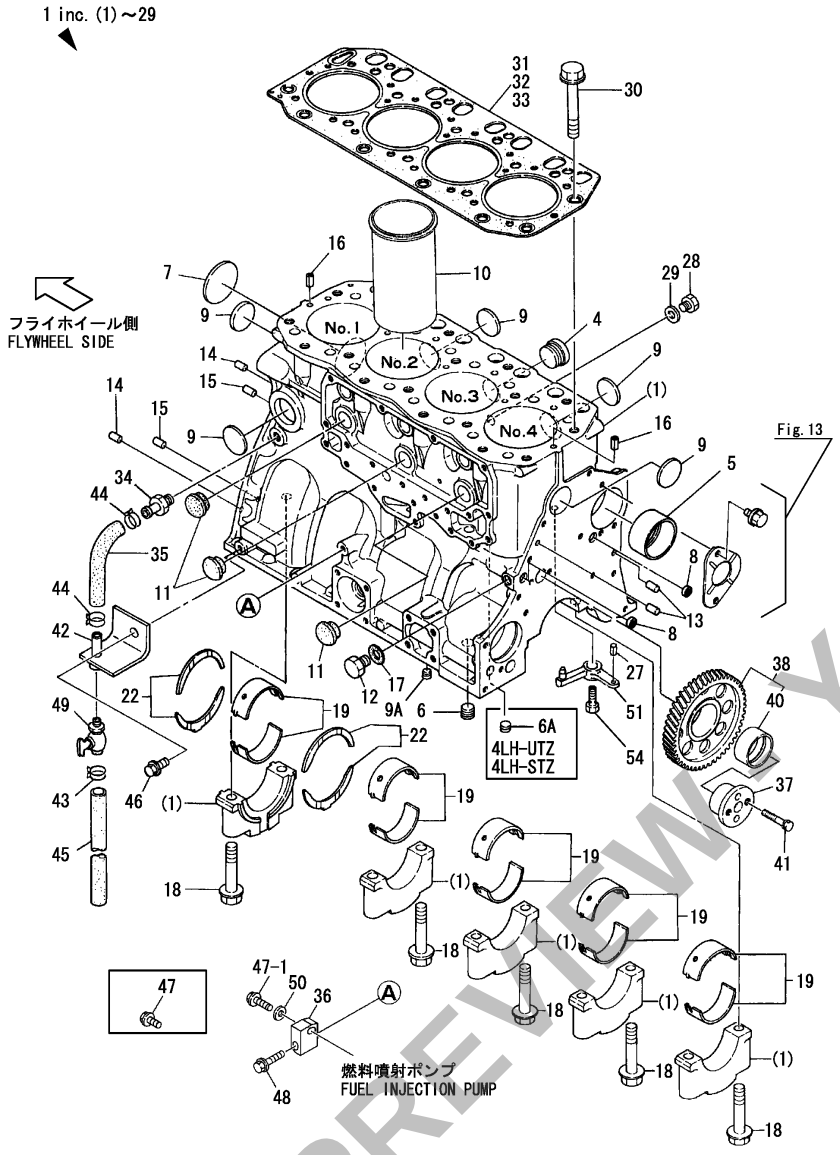

Remarks
(1)For adjustment

1.CYLINDER BLOCK

(A)=4LH-UT (B)=4LH-UTZAY (C)=4LH-UTZ (D)=4LH-ST (E)=4LH-STZAY (F)=4LH-STZ

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	719183-01560	BLOCK ASSY, CYLINDER	1	1		1	1			
1A	1	719171-01560	BLOCK ASSY, CYLINDER			1			1		
4	3	171051-01921	PLUG, NPTF-1	1	1	1	1	1	1		
5	3	119000-02410	BUSH, CAMSHAFT	1	1	1	1	1	1		
6	3	23876-030000	PLUG PT3/8,SCREW	1	1	1	1	1	1		
6A	3	23876-010000	PLUG PT1/8,SCREW			1			1		
7	3	27231-600000	PLUG, 60	1	1	1	1	1	1		
8	3	27241-140000	PLUG 14	3	3	3	3	3	3		
8-1	3	27241-140000	PLUG 14	2	2	2	2	2	2	K	
	(A=E40651)	(B=E40652)	(C=*1995.05) (D=FROM 1ST)	(E=FROM 1ST)					(F=FROM 1ST)		
9	3	27241-400000	PLUG 40	5	5	5	5	5	5		
9-1	3	119593-01870	PLUG,CUP	5	5	5	5	5	5	N	
	(A=E40549)	(B=E40555)	(C=E40515) (D=FROM 1ST)	(E=FROM 1ST)					(F=FROM 1ST)		
9A	3	119000-01880	SCREW	1	1	1	1	1	1	W	
	(A=E40651)	(B=E40652)	(C=*1995.05) (D=FROM 1ST)	(E=FROM 1ST)					(F=FROM 1ST)		
10	2	119142-01150	LINER, CYLINDER	4	4		4	4			
10A	2	119171-01101	LINER, CYLINDER			4			4		
11	2	119000-01840	PLUG, RUBBER	3	3	3	3	3	3		
12	2	135602-34390	RETAINER	1	1	1	1	1	1		
13	2	22312-080160	PARALLEL PIN 8X 16	2	2	2	2	2	2		
13-1	2	129100-01580	PIN, PARALLEL	2	2	2	2	2	2	R	
	(A=E40865)	(B=E40864)	(C=*1997.07) (D=E00229)	(E=E00225)					(F=*1997.07)		
14	2	22312-080160	PARALLEL PIN 8X 16	2	2	2	2	2	2		
14-1	2	129100-01580	PIN, PARALLEL	2	2	2	2	2	2	R	
	(A=E40865)	(B=E40864)	(C=*1997.07) (D=E00229)	(E=E00225)					(F=*1997.07)		
15	2	22312-080160	PARALLEL PIN 8X 16	2	2	2	2	2	2		
15-1	2	129100-01580	PIN, PARALLEL	2	2	2	2	2	2	R	
	(A=E40865)	(B=E40864)	(C=*1997.07) (D=E00229)	(E=E00225)					(F=*1997.07)		
16	2	22351-080016	SPRING PIN 8X16	2	2	2	2	2	2		
17	2	23414-140000	GASKET 14, ROUND	1	1	1	1	1	1		
18	2	119000-02020	BOLT, METAL CAP	10	10	10	10	10	10		
19	2	719000-02800	METAL, MAIN	5	5	5	5	5	5		
22	2	119000-02930	WASHER, THRUST	2	2	2	2	2	2		
27	2	22351-040008	SPRING PIN 4X 8	4	4	4	4	4	4		
28	2	135400-01790	PLUG	1	1	1	1	1	1		
29	2	23414-100000	GASKET 10, ROUND	1	1	1	1	1	1		
30	1	119174-01200	BOLT, CYLINDER HEAD	18	18	18	18	18	18		
31	1	119174-01340	GASKET,CYLHEADT1.30	1	1	1	1	1	1		
32	1	119174-01330	GASKET,CYLHEAD T1.2	1	1	1	1	1	1		1
33	1	119174-01350	GASKET,CYLHEAD T1.4	1	1	1	1	1	1		1
34	1	121550-49111	JOINT PT1/4	1	1	1	1	1	1		
35	1	119173-49160	PIPE	1	1	1	1	1	1		
36	1	119174-01990	RETAINER	1	1						
36-1	1	119174-01991	RETAINER	1	1	1	1	1	1	R	
	(A=E40495)	(B=E40496)									
36-2	1	119181-01990	RETAINER	1	1	1	1	1	1	N	
	(A=E40634)	(B=E40633)	(C=*1995.04) (D=FROM 1ST)	(E=FROM 1ST)					(F=FROM 1ST)		
37	1	119000-25050	SHAFT, IDLE GEAR	1	1	1	1	1	1		
38	1	119000-25100	GEAR ASSY, IDLE Z=51	1	1	1	1	1	1		
40	2	119000-25060	BUSH, IDLE GEAR	1	1	1	1	1	1		
41	1	119174-25060	BOLT M8X45,COLLAR	2	2	2	2	2	2		


N:Old ⇄(Yes/No) New, Q:Old ⇄(No/Yes) New, R:Old ⇄(Yes/Yes) New, S:Old ⇄(No/No) New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

++ CONTINUE ++

(C)Copy Rights YANMAR CO.,LTD.

PREVIEW YOUFIXTHIS.COM
Download full manual at youfixthis.com

Fig.2.GEAR HOUSING

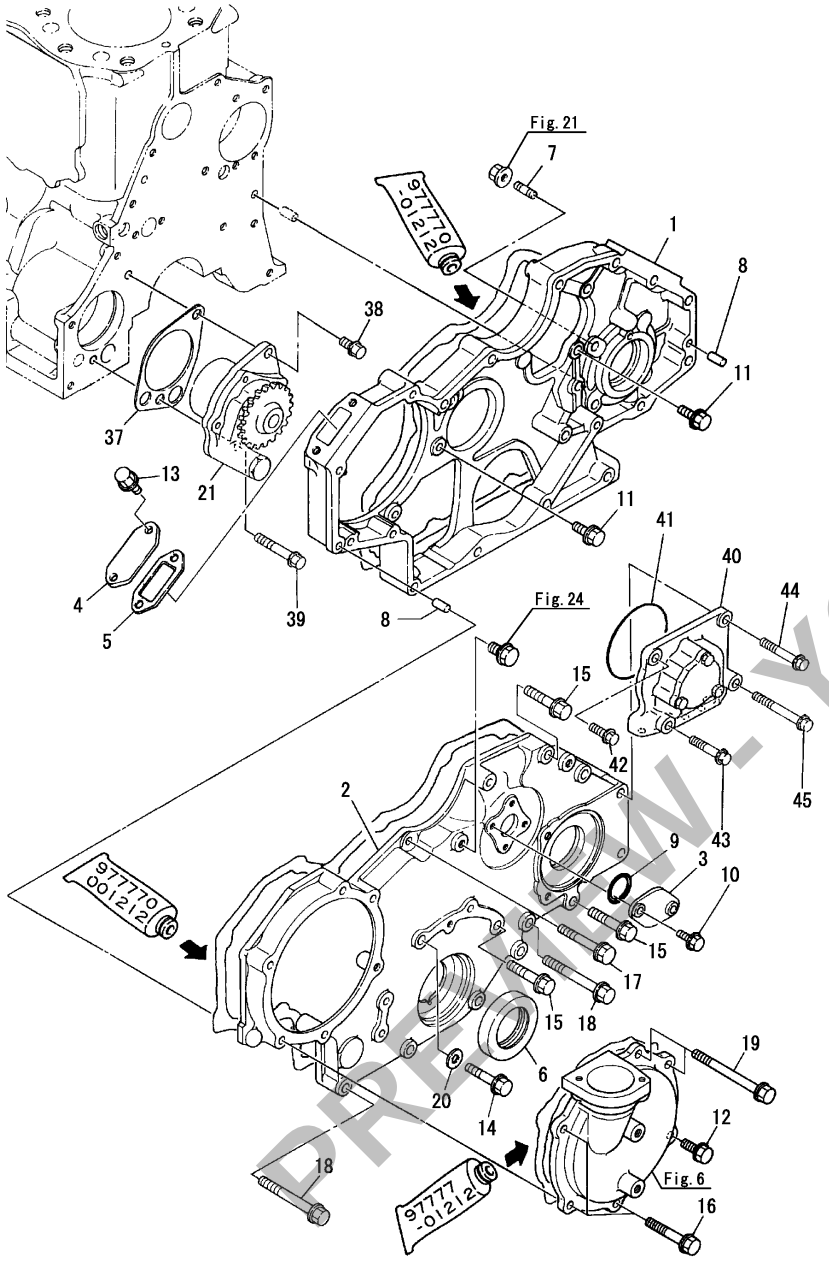

0CF10-G29805

2.GEAR HOUSING

(A)=4LH-UT (B)=4LH-UTZAY (C)=4LH-UTZ (D)=4LH-ST (E)=4LH-STZAY (F)=4LH-STZ

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	119000-01500	HOUSING, GEAR	1	1	1	1	1	1		
2	1	119000-01520	COVER, GEAR CASE	1	1	1	1	1	1		
3	1	121023-01550	COVER, BLIND	1	1	1	1	1	1		
3-1	1	121023-01551	COVER, TACHOMETER	1	1	1	1	1	1		R
	(A=EZZZZZ)	(B=EZZZZZ)	(C=EZZZZZ) (D=EZZZZZ)	(E=EZZZZZ)				(F=EZZZZZ)			
4	1	119000-01740	COVER, PUMP	1	1	1	1	1	1		
5	1	119000-01771	GASKET, FLANGE	1	1	1	1	1	1		
6	1	121850-01800	SEAL, OIL	1	1	1	1	1	1		
7	1	121850-01920	STUD, 2D 8X22	2	2	2	2	2	2		
8	1	22312-080160	PARALLEL PIN 8X 16	2	2	2	2	2	2		
8-1	1	129100-01580	PIN, PARALLEL	2	2	2	2	2	2		R
	(A=E40865)	(B=E40864)	(C=*1997.07) (D=E00229)	(E=E00225)				(F=*1997.07)			
9	1	24341-000240	O-RING 1A S-24.0	1	1	1	1	1	1		
10	1	26106-060182	BOLT M 6X 18 PLATED	2	2	2	2	2	2		
11	1	26106-080202	BOLT M 8X 20 PLATED	5	5	5	5	5	5		
12	1	26106-080252	BOLT M 8X 25 PLATED	1	1	1	1	1	1		
13	1	26106-080202	BOLT M 8X 20 PLATED	2	2	2	2	2	2		
14	1	26106-080402	BOLT M 8X 40 PLATED	1	1	1	1	1	1		
15	1	26106-080452	BOLT M 8X 45 PLATED	5	5	5	5	5	5		
16	1	26106-080552	BOLT M 8X 55 PLATED	3	3	3	3	3	3		
17	1	26106-080552	BOLT M 8X 55 PLATED	1	1	1	1	1	1		
18	1	26106-080752	BOLT M 8X 75 PLATED	4	4	4	4	4	4		
19	1	26106-080952	BOLT M 8X 95 PLATED	2	2	2	2	2	2		
20	1	43400-500420	SEAL WASHER 8	1	1						
20-1	1	22190-080003	WASHER, 8	1	1	1	1	1	1		R
	(A=E40384)	(B=E40383)									
21	1	119000-32001	PUMP ASSY, LUB.OIL	1	1	1	1	1	1		
37	1	119000-32020	GASKET, L.O.PUMP	1	1	1	1	1	1		
38	1	26106-080162	BOLT M 8X 16 PLATED	1	1	1	1	1	1		
39	1	26106-080502	BOLT M 8X 50 PLATED	1	1	1	1	1	1		
40	1	119187-32000	LUB. OIL PUMP	1	1	1			1		
40-1	1	119174-32000	LUB. OIL PUMP	1	1		1	1			N
	(A=E40121)	(B=E40152)									
41	1	24341-000800	O-RING 1A S-80.0	1	1	1	1	1	1		
42	1	26106-080252	BOLT M 8X 25 PLATED	1	1	1	1	1	1		
43	1	26106-080452	BOLT M 8X 45 PLATED	1	1	1	1	1	1		
44	1	26106-080552	BOLT M 8X 55 PLATED	1	1	1	1	1	1		
45	1	26106-080702	BOLT M 8X 70 PLATED	1	1	1	1	1	1		


N:Old $\overset{\text{Yes}}{\underset{\text{No}}{\rightleftarrows}}$ New, Q:Old $\overset{\text{No}}{\underset{\text{Yes}}{\rightleftarrows}}$ New, R:Old $\overset{\text{Yes}}{\underset{\text{Yes}}{\rightleftarrows}}$ New, S:Old $\overset{\text{No}}{\underset{\text{No}}{\rightleftarrows}}$ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

(C)Copy Rights YANMAR CO.,LTD.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.9.CYLINDER HEAD & BONNET

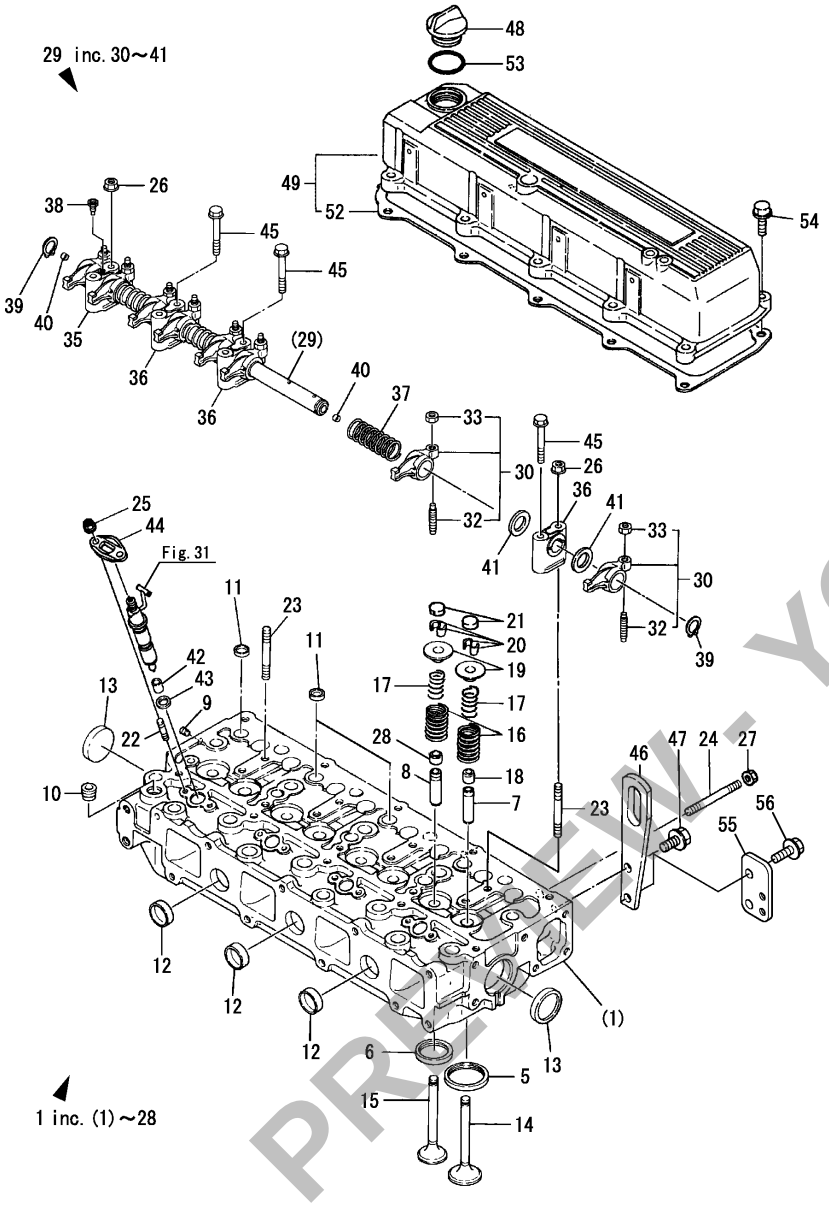

0CF10-G29805

9.CYLINDER HEAD & BONNET

(A)=4LH-UT (B)=4LH-UTZAY (C)=4LH-UTZ (D)=4LH-ST (E)=4LH-STZAY (F)=4LH-STZ

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	719174-11700	HEAD ASSY, CYLINDER	1	1						
1A	1	719184-11700	HEAD ASSY, CYLINDER			1					
1B	1	719195-11700	HEAD ASSY, CYLINDER				1	1	1		
5	3	119173-11080	INSERT, INTAKE	4	4	4	4	4	4		
6	3	119173-11090	SEAT, VALVE	4	4	4	4	4	4		
6-1	3	119173-11091	SEAT, VALVE	4	4	4	4	4	4	N	
	(A=EZZZZZ)	(B=EZZZZZ)	(C=EZZZZZ) (D=EZZZZZ)	(E=EZZZZZ)			(F=EZZZZZ)				
7	3	121850-11160	GUIDE, VALVE	4	4	4	4	4	4		
8	3	119000-11170	GUIDE, VALVE (EXH.	4	4	4	4	4	4		
9	3	23876-005000	PLUG, PT1/16	1	1	1	1	1	1		
10	3	23876-030000	PLUG PT3/8,SCREW	1	1	1	1	1	1		
11	3	27241-160000	PLUG, 16	4	4	4	4	4	4		
11-1	3	119000-11990	PLUG, 16	4	4	4	4	4	4	N	
	(A=EZZZZZ)	(B=EZZZZZ)	(C=EZZZZZ) (D=EZZZZZ)	(E=EZZZZZ)			(F=EZZZZZ)				
12	3	27241-280000	PLUG, 28	3	3	3	3	3	3		
12-1	3	119100-11990	PLUG, 28	3	3	3	3	3	3	N	
	(A=EZZZZZ)	(B=EZZZZZ)	(C=EZZZZZ) (D=EZZZZZ)	(E=EZZZZZ)			(F=EZZZZZ)				
13	3	27241-400000	PLUG 40	2	2	2	2	2	2		
13-1	3	119885-01990	PLUG 40	2	2	2	2	2	2	N	
	(A=EZZZZZ)	(B=EZZZZZ)	(C=EZZZZZ) (D=EZZZZZ)	(E=EZZZZZ)			(F=EZZZZZ)				
14	2	119173-11101	VALVE, SUCTION	4	4	4	4	4	4		
15	2	119593-11110	VALVE, EXHAUST	4	4		4	4	4		
15A	2	119173-11110	VALVE, EXHAUST			4					
16	2	124617-11120	SPRING, VALVE OUTER	8	8	8	8	8	8		
17	2	124617-11130	SPRING, VALVE INNER	8	8	8	8	8	8		
18	2	121850-11150	SEAL, VALVE STEM	4	4	4	4	4	4		
19	2	124411-11180	RETAINER, SPRING	8	8	8	8	8	8		
20	2	124250-11190	COTTER 9	16	16	16					
20-1	2	27310-090001	COTTER, 9	8	8	8	8	8	8	N	
	(A=E40568)	(B=E40569)	(C=E40515)								
21	2	119171-11370	CAP, VALVE	8	8	8	8	8	8		
22	2	119593-11910	BOLT	8	8	8	8	8	8		
22-1	2	119175-11910	BOLT	8	8	8	8	8	8	N	
	(A=E40970)	(B=E40971)	(C=*1998.06) (D=E00303)	(E=E00300)			(F=*1998.06)				
23	2	26216-080652	STUD M 8X 65 PLATED	2	2	2	2	2	2		
24	2	26216-081402	STUD M8X140	2	2	2	2	2	2		
25	2	26366-060002	NUT M 6	8	8	8	8	8	8		
26	2	26306-080002	NUT, M8	2	2	2	2	2	2		
27	2	26306-080002	NUT, M8	2	2	2	2	2	2		
28	2	119171-11150	SEAL, VALVE STEM	4	4	4	4	4	4		
29	1	119173-11240	SHAFT ASSY, ARM	1	1	1	1	1	1		
30	2	719000-11651	ARM ASSY, ROCKER	8	8	8	8	8	8		
32	3	119000-11230	SCREW, VALVE ADJUST	8	8	8	8	8	8		
33	3	129150-11750	NUT, M8	8	8	8	8	8	8		
35	2	119000-11260	SUPPORT, ARM A	1	1	1	1	1	1		
36	2	119000-11270	SUPPORT, ARM A	3	3	3	3	3	3		
37	2	119000-11280	SPRING	3	3	3	3	3	3		
38	2	119000-11290	BOLT, SETTING	1	1	1	1	1	1		
39	2	22242-000180	CIRCLIP 18	2	2	2	2	2	2		
40	2	27241-100000	PLUG, 10	2	2	2	2	2	2		
41	2	119173-11350	SPACER	8	8	8	8	8	8		

N:Old $\overset{\text{Yes}}{\underset{\text{No}}{\rightleftarrows}}$ New, Q:Old $\overset{\text{No}}{\underset{\text{Yes}}{\rightleftarrows}}$ New, R:Old $\overset{\text{Yes}}{\underset{\text{Yes}}{\rightleftarrows}}$ New, S:Old $\overset{\text{No}}{\underset{\text{No}}{\rightleftarrows}}$ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change


++ CONTINUE ++

(C)Copy Rights YANMAR CO.,LTD.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.13.CAMSHAFT & CRANKSHAFT

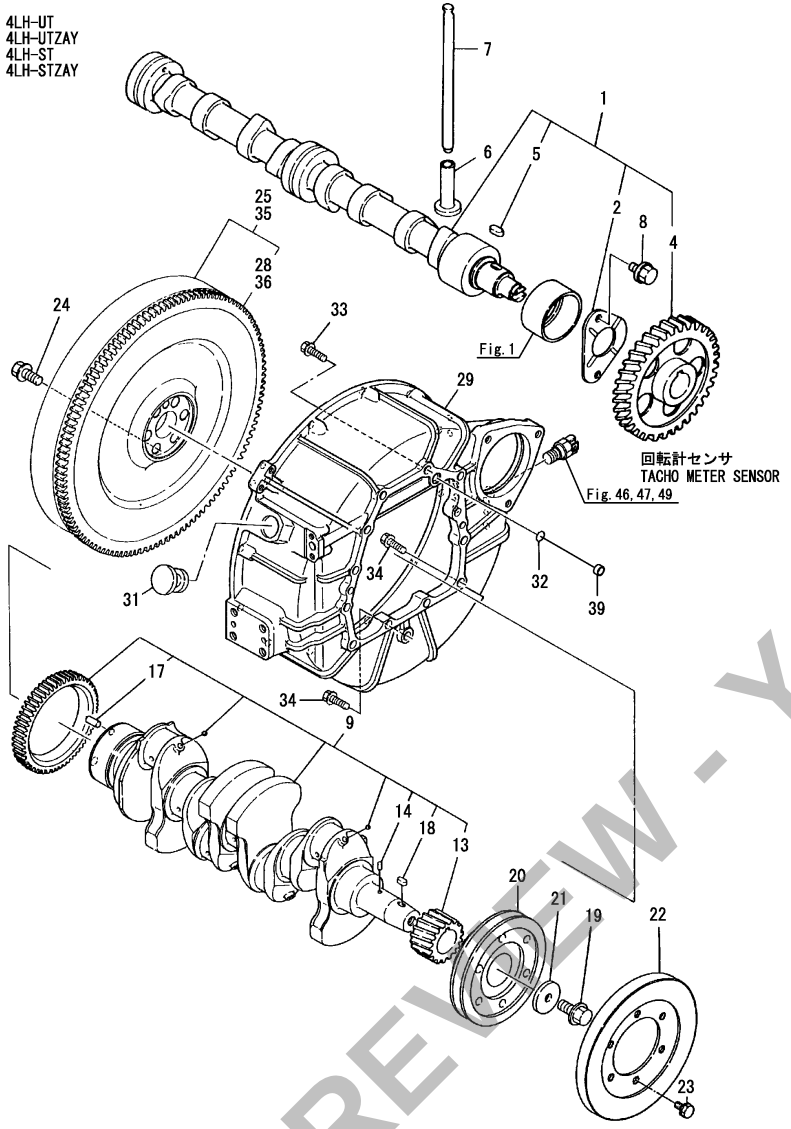

Remarks
(1)Optional parts only for YX-40.
(2)Interchangeable by simultaneous replacement with Ref.No.29-1 & Ref.No.32-1.

0CF10-G29805

13.CAMSHAFT & CRANKSHAFT

(A)=4LH-UT
(B)=4LH-UTZAY
(C)=4LH-UTZ
(D)=4LH-ST
(E)=4LH-STZAY
(F)=4LH-STZ

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	119171-14000	CAMSHAFT ASSY.	1	1						
1A	1	119195-14000	CAMSHFT ASSY				1	1			
2	2	119000-02450	BEARING, THRUST	1	1		1	1			
4	2	119000-14100	GEAR, CAMSHAFT Z=48	1	1		1	1			
5	2	22512-070140	KEY, 7X14	1	1		1	1			
6	1	119000-14200	TAPPET	8	8		8	8			
7	1	119171-14400	PUSH ROD	8	8		8	8			
8	1	26106-080162	BOLT M 8X 16 PLATED	2	2		2	2			
9	1	719189-21700	CRANKSHAFT ASSY	1	1		1	1			
13	3	121850-21200	GEAR, CRANKSHAFT	1	1		1	1			
14	3	121850-21290	PIN	2	2		2	2			
17	2	121850-21920	PARALLEL PIN, M10X22	1	1		1	1			
18	2	22512-070140	KEY, 7X14	1	1		1	1			
19	1	121850-21130	BOLT, FLYWHEEL	1	1		1	1			
20	1	119187-21650	V-PULLEY	1	1		1	1			
21	1	124610-21660	WASHER, PULLEY	1	1		1	1			
22	1	124611-28010	DAMPER	1	1		1	1			
23	1	26106-100162	BOLT M10X 16 PLATED	6	6		6	6			
24	1	121850-21130	BOLT, FLYWHEEL	6	6		6	6			
25	1	119187-21590	FLYWHEEL W/GEAR	1	1		1	1			
28	2	127410-21480	RING GEAR Z=129	1	1		1	1			
29	1	119187-01600	HOUSING, FLYWHEEL	1	1		1	1			
29-1	1	119187-01601	HOUSING, FLYWHEEL	1	1		1	1		S	2
	(A=*2007.10)	(B=*2007.10)	(D=*2007.10)	(E=*2007.10)							
31	1	119620-01750	CAP, FLYWHEEL COVER	1	1		1	1			
31-1	1	119575-01750	CAP	1	1		1	1		R	
	(A=EZZZZZ)	(B=EZZZZZ)	(D=EZZZZZ)	(E=EZZZZZ)							
32	1	24311-000140	O-RING 1A P-14.0	1	1		1	1			
32-1	1	24311-000160	O-RING 1A P-16.0	1	1		1	1		S	
	(A=*2007.10)	(B=*2007.10)	(D=*2007.10)	(E=*2007.10)							
33	1	26106-100302	BOLT M10X 30 PLATED	8	8		8	8			
34	1	26106-100352	BOLT M10X 35 PLATED	5	5		5	5			
35	1	119187-21690	FLYWHEEL COMP	1						W	1
	(A=E41224)										
36	2	127410-21480	RING GEAR Z=129	1						W	1
	(A=E41224)										
39	1	119175-39730	BUSH,LO GALLERY	1	1		1	1		Z	
	(A=*2007.10)	(B=*2007.10)	(D=*2007.10)	(E=*2007.10)							


N:Old $\overset{\text{Yes}}{\underset{\text{No}}{\leftrightarrows}}$ New, Q:Old $\overset{\text{No}}{\underset{\text{Yes}}{\leftrightarrows}}$ New, R:Old $\overset{\text{Yes}}{\underset{\text{Yes}}{\leftrightarrows}}$ New, S:Old $\overset{\text{No}}{\underset{\text{No}}{\leftrightarrows}}$ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

(C)Copy Rights YANMAR CO.,LTD.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.25.FUEL INJECTION PUMP

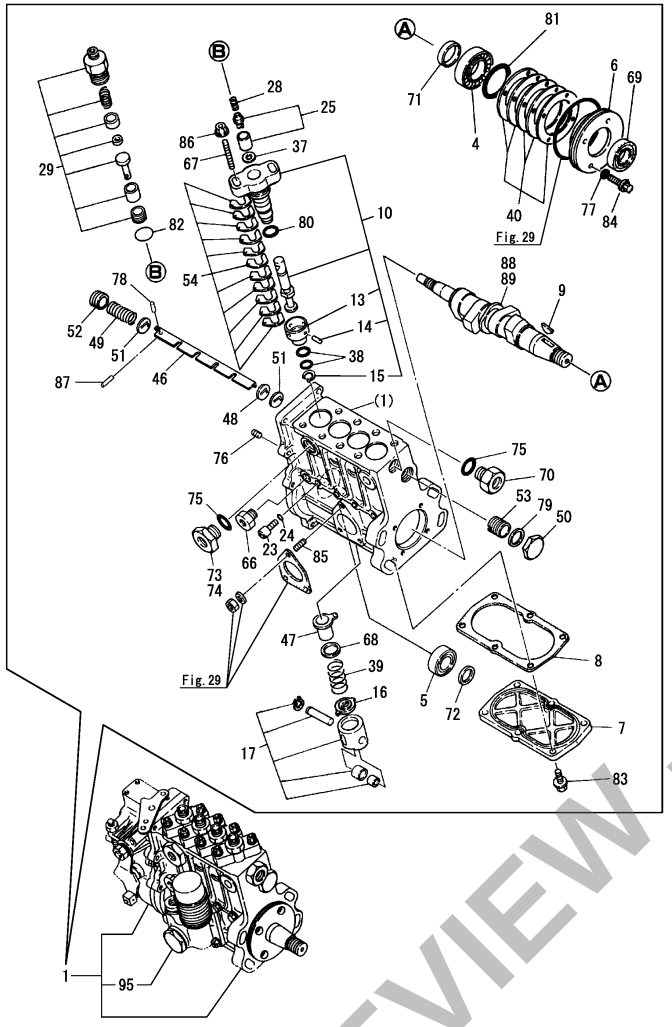

Remarks
(1)Governor assy(Fig.26) and fuel feed pump assy(Fig.29) is incorporated in this fuel injection pump assy(Ref. No.1).
(2)Governor assy(Fig 27,28) and fuel feed pump assy(Fig 29) is incorporated in this fuel injection pump assy(Ref.No.1A,1B, 1C).

0CF10-G29805

25.FUEL INJECTION PUMP

(A)=4LH-UT (B)=4LH-UTZAY (C)=4LH-UTZ (D)=4LH-ST (E)=4LH-STZAY (F)=4LH-STZ

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	719189-51300	PUMP ASSY, INJECTION	1	1						1
1A	1	719174-51300	PUMP ASSY, INJECTION			1					1
1B	1	719195-51300	PUMP ASSY, INJECTION				1	1			2
1C	1	719175-51300	PUMP ASSY, INJECTION						1		2
4	2	119000-51050	BEARING	1	1	1	1	1	1		
5	2	122710-51050	BEARING, ROLLER	1	1	1	1	1	1		
6	2	119000-51060	SUPPORT, BEARING A	1	1	1	1	1	1		
7	2	119100-51081	COVER, LOWER	1	1	1	1	1	1		
8	2	119100-51091	GASKET, COVER	1	1	1	1	1	1		
9	2	144626-51090	KEY, WOODRUFF 5X19	1	1	1	1	1	1		
10	2	119593-51100	PLUNGER W/BARREL	4	4	4	4	4	4		
13	3	119000-51151	DEFLECTOR	4	4	4	4	4	4		
14	3	119000-51430	PIN, DEFLECTOR	4	4	4	4	4	4		
15	3	22242-000200	CIRCLIP 20	4	4	4	4	4	4		
16	2	119000-51181	SEAT, SPRING B	4	4	4	4	4	4		
17	2	119000-51201	TAPPET ASSY	4	4						
17A	2	119573-51200	TAPPET ASSY			4	4	4	4		
23	2	129155-51270	LOCKING, TAPPET	4	4	4	4	4	4		
23-1	2	158600-51270	STOPPER, TAPPET	4	4	4	4	4	4	N	
	(A=EZZZZZ)	(B=EZZZZZ)	(C=EZZZZZ) (D=EZZZZZ)	(E=EZZZZZ)				(F=EZZZZZ)			
24	2	129155-51280	O-RING, S6	4	4	4	4	4	4		
25	2	119593-51300	VALVE ASSY, DELIVERY	4	4	4	4	4	4		
28	2	119000-51330	SPRING, DELIVERY	4	4	4	4	4	4		
29	2	119187-51341	HOLDER	4	4	4					
29A	2	119175-51340	VALVE ASSY, DELIVERY				4	4	4		
37	2	122710-51350	GASKET, DELIVERY	4	4	4	4	4	4		
38	2	119000-51410	O-RING S18	8	8	8	8	8	8		
38-1	2	119000-51411	O-RING	8	8	8	8	8	8	N	
	(A=EZZZZZ)	(B=EZZZZZ)	(C=EZZZZZ) (D=EZZZZZ)	(E=EZZZZZ)				(F=EZZZZZ)			
39	2	119000-51161	SPRING, PLUNGER	4	4	4	4	4	4		
40	2	119000-51450	SHIM SET, CAMSHAFT	1	1	1	1	1	1		
46	2	119187-51500	RACK, CONTROL	1	1	1	1	1	1		
47	2	119000-51510	SLEEVE, CONTROL	4	4	4	4	4	4		
47-1	2	119000-51511	SLEEVE, CONTROL	4	4	4	4	4	4	R	
	(A=E41039)	(B=E41042)	(C=*1998.10) (D=E00323)	(E=E00321)				(F=*1998.10)			
48	2	119593-51520	WASHER	1	1	1	1	1	1		
49	2	119593-51530	SPRING, RACK	1	1	1	1	1	1		
50	2	119000-51550	COVER, RACK	1	1	1	1	1	1		
51	2	119000-51570	GUIDE, RACK	2	2	2	2	2	2		
52	2	119000-51580	SCREW, GUIDE	1	1	1	1	1	1		
53	2	119000-51590	SCREW, GUIDE	1	1	1	1	1	1		
54	2	119000-51650	SHIM SET, ADJUSTING	8	8	8	8	8	8		
66	2	121850-51700	BUSHING, OIL FEED	1	1	1	1	1	1		
67	2	119000-51800	BOLT,BARREL MOUNTING	8	8	8	8	8	8		
68	2	119000-51170	SEAT, SPRING A	4	4	4	4	4	4		
69	2	119000-51900	OIL SEAL AC1290E0	1	1	1	1	1	1		
70	2	121952-51900	PLUG	1	1	1	1	1	1		
71	2	119000-51911	SPACER, CAMSHAFT	1	1					Z	
	(A=E40157)	(B=E40156)									
72	2	122710-51920	SPACER, CAMSHAFT	1	1					Z	
	(A=E40157)	(B=E40156)									

N:Old ⇄ New, Q:Old ⇄ New, R:Old ⇄ New, S:Old ⇄ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change


++ CONTINUE ++

(C)Copy Rights YANMAR CO.,LTD.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.36.STARTING MOTOR

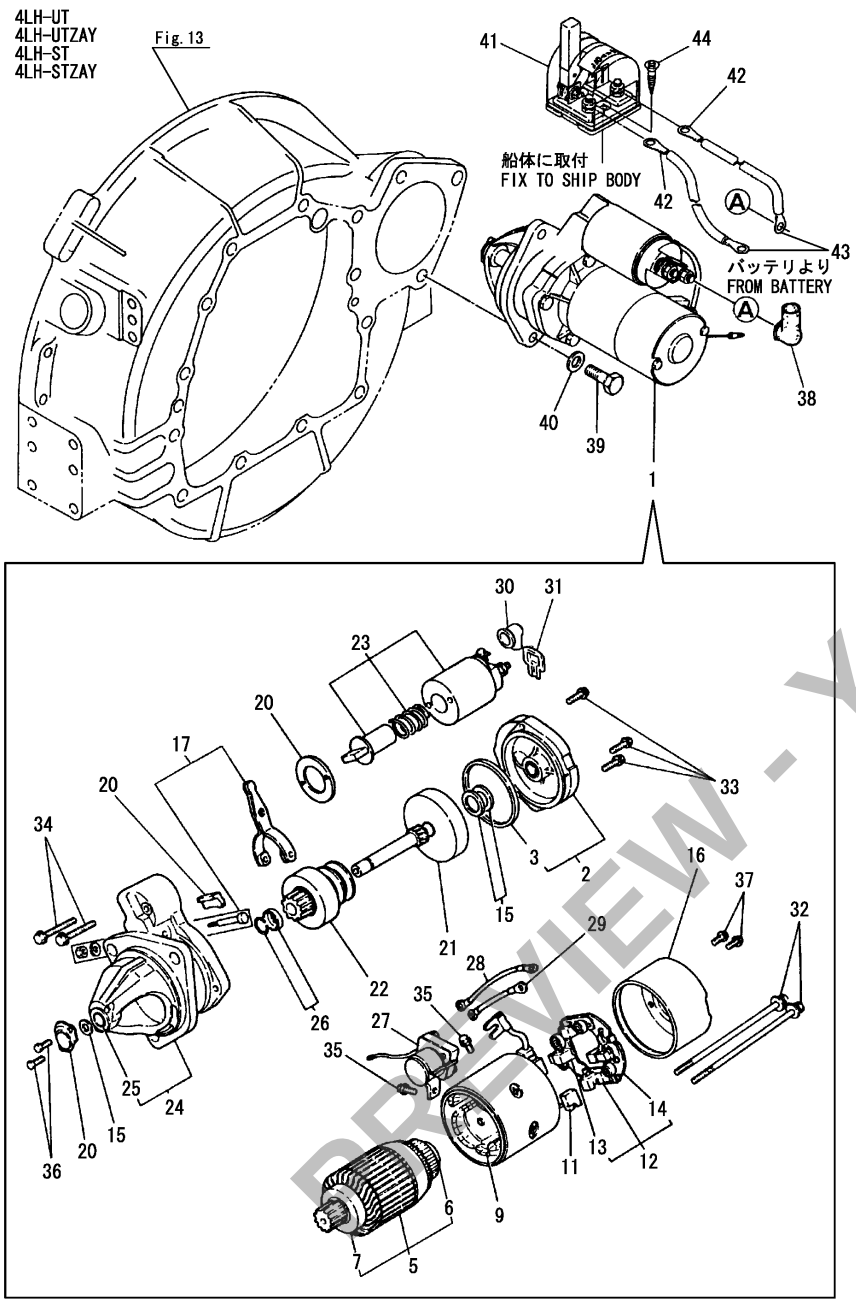

36.STARTING MOTOR

(A)=4LH-UT
(B)=4LH-UTZAY
(C)=4LH-UTZ
(D)=4LH-ST
(E)=4LH-STZAY
(F)=4LH-STZ

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	124617-77011	STARTING MOTOR	1	1		1	1			
2	2	121254-77600	BEARING ASSY, CENTER	1	1		1	1			
3	3	119129-77210	SEAL, OIL	1	1		1	1			
5	2	124617-77110	ARMATURE ASSY	1	1		1	1			
6	3	121254-77410	BALL BEARING	1	1		1	1			
7	3	121254-77420	BALL BEARING	1	1		1	1			
9	2	119129-77440	COIL ASSY, FIELD	1	1		1	1			
11	2	119129-77460	BRUSH(+)	2	2		2	2			
12	2	119129-77470	HOLDER ASSY, BRUSH	1	1		1	1			
13	3	119129-77480	BRUSH(-)	2	2		2	2			
14	3	121254-77590	SPRING, BRUSH	4	4		4	4			
15	2	121254-77430	WASHER KIT, THRUST	1	1		1	1			
16	2	119129-77530	COVER, REAR	1	1		1	1			
17	2	121254-77700	LEVER SET, SHIFT	1	1		1	1			
20	2	121254-77730	DUST COVER SET	1	1		1	1			
21	2	124610-77640	SHAFT ASSY, GEAR	1	1		1	1			
22	2	119129-77630	PINION ASSY	1	1		1	1			
23	2	119129-77640	SWITCH ASSY,MAGNETIC	1	1		1	1			
23-1	2	124617-77510	SWITCH ASSY MAGNETIC	1	1		1	1			N
	(A=E40785)	(B=E40785)	(D=E00144)	(E=E00167)							
24	2	119129-77650	CASE ASSY, GEAR	1	1		1	1			
25	3	119129-77660	BEARING, METAL	1	1		1	1			
26	2	119129-77670	STOPPER SET, PINION	1	1		1	1			
27	2	119129-77700	RELAY, STARTER	1	1		1	1			
27-1	2	124617-77590	RELAY, STARTER	1	1		1	1			N
	(A=E40785)	(B=E40785)	(D=E00144)	(E=E00167)							
28	2	119129-77710	WIRE-HARNESS	1	1		1	1			
29	2	119129-77720	WIRE-HARNESS	1	1		1	1			
30	2	119129-77740	COVER, TERMINAL	3	3		3	3			
31	2	121254-77810	TERMINAL COVER	1	1		1	1			
32	2	121254-77770	BOLT, THROUGH	2	2		2	2			
33	2	26106-060302	BOLT M 6X 30 PLATED	3	3		3	3			
34	2	26106-060452	BOLT M 6X 45 PLATED	2	2		2	2			
35	2	26116-050082	BOLT, M5X8	2	2		2	2			
36	2	26450-050122	BOLT, M5X12	2	2		2	2			
37	2	26557-040122	SCREW, M4X12	2	2		2	2			
38	1	124550-77030	COVER, TERMINAL	1	1		1	1			
38-1	1	119773-77030	COVER, TERMINAL	1	1		1	1			R
	(A=EZZZZZ)	(B=EZZZZZ)	(D=EZZZZZ)	(E=EZZZZZ)							
39	1	26116-120302	BOLT M12X 30 PLATED	3	3		3	3			
40	1	22137-120000	WASHER 12,POLISHED	3	3		3	3			
41	1	123310-77640	SWITCH, BATTERY	1	1		1	1			
42	1	123325-77920	TERMINAL	2	2		2	2			
43	1	123325-77930	TERMINAL	2	2		2	2			
44	1	22724-800380	SCREW, M8X38	2	2		2	2			


N:Old $\overset{\text{Yes}}{\underset{\text{No}}{\rightleftarrows}}$ New, Q:Old $\overset{\text{No}}{\underset{\text{Yes}}{\rightleftarrows}}$ New, R:Old $\overset{\text{Yes}}{\underset{\text{Yes}}{\rightleftarrows}}$ New, S:Old $\overset{\text{No}}{\underset{\text{No}}{\rightleftarrows}}$ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

(C)Copy Rights YANMAR CO.,LTD.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.40.GENERATOR

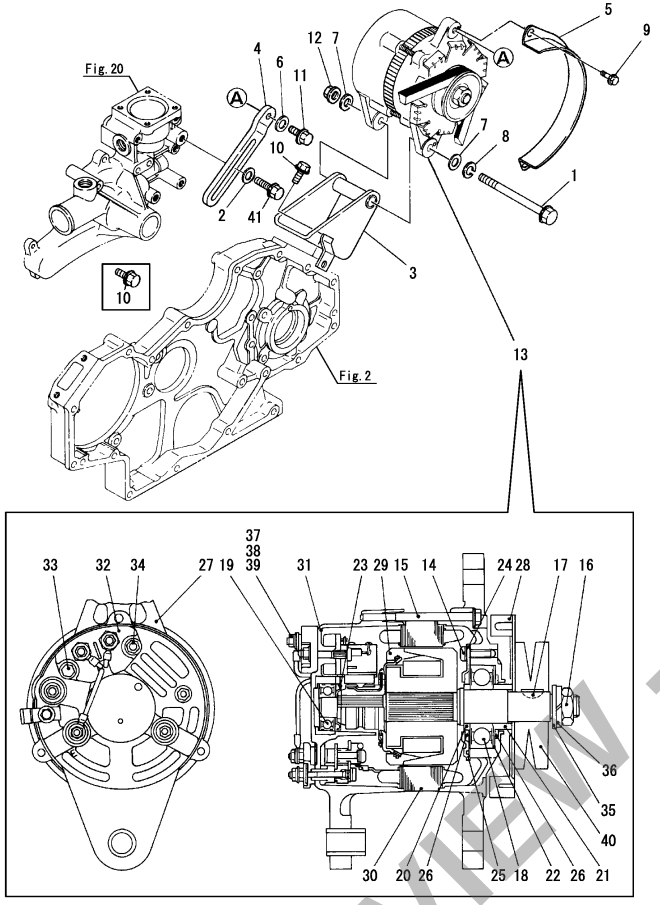

Remarks
*Parts of this figure are executed
to the following engine number.
*(A)=E41329 (B)=E41331 (D)=E00516
(E)=E00501
*Please refer to Fig.41 since above
-mentioned engine number.
(1)Interchangeable by simultaneous
replacement with Fig.20 Ref.No.7-1
,Fig.41 Ref.No.1,8-16 & Fig.45
Ref.No.16.

40.GENERATOR

(A)=4LH-UT (D)=4LH-ST
(B)=4LH-UTZAY (E)=4LH-STZAY
(C)=4LH-UTZ (F)=4LH-STZ

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	121950-28820	BOLT 12X136	1	1		1	1			
2	1	106100-55800	WASHER	1	1		1	1			
3	1	119187-77300	BRACKET	1	1		1	1			
4	1	119187-77330	ADJUSTER	1	1		1	1			
5	1	122410-77381	COVER, GENERATOR	1	1		1	1			
6	1	22137-100000	WASHER 10,POLISHED	1	1		1	1			
7	1	22137-120000	WASHER 12,POLISHED	2	2		2	2			
8	1	22217-120000	SPRING WASHER 12	1	1		1	1			
9	1	26106-060102	BOLT 6X 10 PLATED	2	2		2	2			
10	1	26106-080202	BOLT M 8X 20 PLATED	5	5						
10-1	1	26106-080202	BOLT M 8X 20 PLATED	4	4		4	4		K	
	(A=E40705)	(B=E40703)									
11	1	26136-100252	BOLT M10X25	1	1		1	1			
12	1	26716-120002	NUT 12	1	1		1	1			
13	1	119187-77200	GENERATOR	1	1		1	1		Z	1
	(A=E41330)	(B=E41332)	(D=E00517)	(E=E00502)							
14	2	X1005506162	SCREW	3	3		3	3			
15	2	X0027506802	BOLT	3	3		3	3			
16	2	X0028016022	NUT	1	1		1	1			
17	2	X1041604160	WOODRUFF KEY	1	1		1	1			
18	2	X1045663057	BALL BEARING	1	1		1	1			
19	2	X1092010530	BALL BEARING	1	1		1	1			
20	2	X0339230980	COLLAR	1	1		1	1			
21	2	X1339230920	COLLAR	1	1		1	1			
22	2	X1339260730	RETAINER	1	1		1	1			
23	2	X1339260820	RETAINER	1	1		1	1			
24	2	X0359260060	RETAINER	1	1		1	1			
25	2	X1339260750	RETAINER	1	1		1	1			
26	2	X1339510610	GASKET	2	2		2	2			
27	2	X0333110560	BRACKET,FRONT	1	1		1	1			
28	2	X0334210630	FAN, COOLING	1	1		1	1			
29	2	X0331001450	ROTAR ASSY	1	1		1	1			
30	2	X0332001470	STATOR CMP	1	1		1	1			
31	2	X0337002950	BRACKET COMP.,REAR	1	1		1	1			
32	2	X0337800950	TERMINAL COMPL.	1	1		1	1			
33	2	X0027405202	BOLT	1	1		1	1			
34	2	X0339020080	NUT	1	1		1	1			
35	2	X1033016012	WASHER,PLAIN	1	1		1	1			
36	2	X1033516002	WASHER,SPRING	1	1		1	1			
37	2	X0028105020	NUT	2	2		2	2			
38	2	X1033105010	WASHER,PLAIN	2	2		2	2			
39	2	X1033605000	WASHER,SPRING	2	2		2	2			
40	2	X0334112980	PULLEY	1	1		1	1			
41	1	26106-080252	BOLT M 8X 25 PLATED	1	1		1	1		W	
	(A=E40705)	(B=E40703)									


N:Old $\overset{\text{Yes}}{\underset{\text{No}}{\leftrightarrows}}$ New, Q:Old $\overset{\text{No}}{\underset{\text{Yes}}{\leftrightarrows}}$ New, R:Old $\overset{\text{Yes}}{\underset{\text{Yes}}{\leftrightarrows}}$ New, S:Old $\overset{\text{No}}{\underset{\text{No}}{\leftrightarrows}}$ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

(C)Copy Rights YANMAR CO.,LTD.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.45.WIRE HARNESS

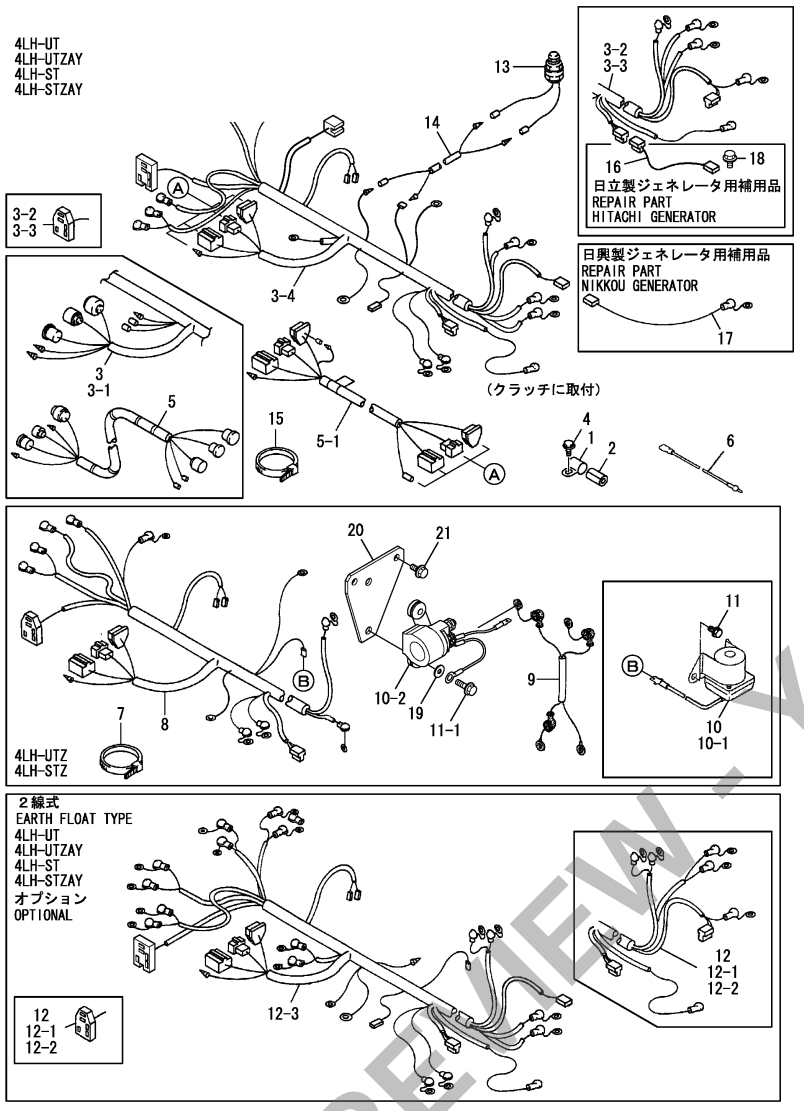

Remarks
(1)Change over the panel from previous type to new type.
(2)Optional:Two place panel.
(3)Repair part
(4)Interchangeable by simultaneous replacement with Ref.No.10-2,11-1, 19,20,21.

45.WIRE HARNESS

(A)=4LH-UT (D)=4LH-ST
(B)=4LH-UTZAY (E)=4LH-STZAY
(C)=4LH-UTZ (F)=4LH-STZ

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	124770-49310	RETAINER	1	1	1	1	1	1		
1-1	1	124070-77950	CLAMP, WIRE			1			1	R	
			(C=*1999.01)						(F=*1999.01)		
2	1	123682-77710	PROTECTOR	1	1	1	1	1	1		
2-1	1	124770-77940	PROTECTOR			1			1	R	
			(C=*1999.01)						(F=*1999.01)		
3	1	119187-77810	HARNESS, WIRE	1	1						
3-1	1	119187-77811	HARNESS, WIRE	1	1					N	
	(A=E40248)		(B=E40250)								
3-2	1	119187-77812	HARNESS, WIRE	1	1		1	1		S	1
	(A=E40286)		(B=E40285)								
3-3	1	119187-77813	WIRE HARNESS(ENG	1	1		1	1		R	
	(A=E40903)		(B=E40902)	(D=E00261)		(E=E00262)					
3-4	1	119187-77814	WIREHARNESS	1	1		1	1		S	
	(A=E41330)		(B=E41332)	(D=E00517)		(E=E00502)					
4	1	26106-080162	BOLT M 8X 16 PLATED	1	1	1	1	1	1		
5	1	119171-77700	WIRE,EXTENSION L6000	1	1						
5-1	1	129574-77720	HARNESS, WIRE(6M)	1	1	1	1	1	1	S	1
	(A=E40302)		(B=E40302)								
6	1	119588-77710	WIRE,LEAD (6M)	1	1					Z	
	(A=E40320)		(B=E40319)								
7	1	121750-59890	CLAMP 140			1			1		
8	1	119173-77811	WIRE HARNESS(ENG			1			1		
8-1	1	119173-77812	WIRE HARNESS(ENG			1			1	R	
			(C=*1997.12)						(F=*1997.12)		
9	1	119171-77850	WIRE HARNESS			1			1		
10	1	129100-77910	RELAY, MAGNETIC			1			1		
10-1	1	129490-77910	RELAY, STARTER			1			1	N	
			(C=*1998.08)						(F=*1998.08)		
10-2	1	119575-77510	RELAY, STARTER			1			1	F	4
			(C=*2004.06)						(F=*2004.06)		
10-3	1	119575-77511	RELAY, STARTER			1			1	S	
			(C=EZZZZZ)						(F=EZZZZZ)		
11	1	26106-060122	BOLT M 6X 12 PLATED			2			2		
11-1	1	26106-060202	BOLT M 6X 20 PLATED			2			2	F	4
			(C=*2004.06)						(F=*2004.06)		
12	1	119187-77820	HARNESS, WIRE	1	1					W	2
	(A=E40191)		(B=E40190)								
12-1	1	119187-77821	HARNESS, WIRE	1	1		1	1		S	2
	(A=E40302)		(B=E40302)								
12-2	1	119187-77822	WIRE HARNESS	1	1		1	1		R	
	(A=E40903)		(B=E40902)	(D=E00261)		(E=E00262)					
12-3	1	119187-77823	WIRE HARNESS	1	1		1	1		S	
	(A=E41330)		(B=E41332)	(D=E00517)		(E=E00502)					
13	1	120270-77101	SWITCH, SAFETY	1	1		1	1		W	
	(A=E40496)		(B=E40496)								
13-1	1	120270-77102	SWITCH, SAFETY	1	1		1	1		N	
	(A=EZZZZZ)		(B=EZZZZZ)	(D=EZZZZZ)		(E=EZZZZZ)					
14	1	119187-77860	HARNESS, WIRE	1	1		1	1		W	
	(A=E40496)		(B=E40496)								
15	1	121750-59890	CLAMP 140	1	1		1	1		W	

N:Old $\overset{\text{Yes}}{\underset{\text{No}}{\rightleftarrows}}$ New, Q:Old $\overset{\text{No}}{\underset{\text{Yes}}{\rightleftarrows}}$ New, R:Old $\overset{\text{Yes}}{\underset{\text{Yes}}{\rightleftarrows}}$ New, S:Old $\overset{\text{No}}{\underset{\text{No}}{\rightleftarrows}}$ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change


++ CONTINUE ++

(C)Copy Rights YANMAR CO.,LTD.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.51.INSTRUMENT PANEL(4LH-UT)

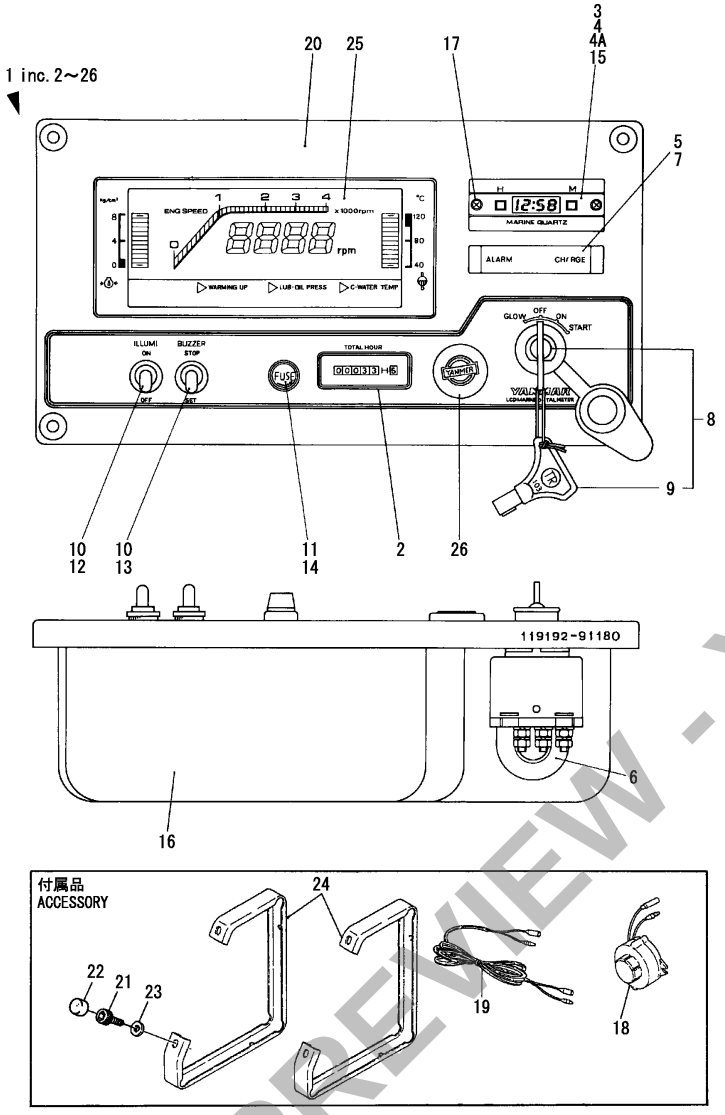

Remarks
(1)Electric battery
(marketting goods):SR-44(G13)
(2)Up to E40301.

51.INSTRUMENT PANEL(4LH-UT)

(A)=4LH-UT
(B)=4LH-UTZAY
(C)=4LH-UTZ
(D)=4LH-ST
(E)=4LH-STZAY
(F)=4LH-STZ

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	119192-91180	PANNEL ASSY	1							
2	2	127687-91230	HOUR METER	1							
3	2	127687-91760	BULB	1							
4	2	127687-91240	CLOCK ASSY	1							1
4A	3	127620-91250	CELL	1							
5	2	127687-91220	PILOT BOX ASSY	1							
6	2	127687-91800	GROMMET	1							
7	2	127620-91770	BULB	4							
8	2	127412-91250	SWITCH W/KEY	1							
9	3	123482-91291	KEY, SWITCH	2							
10	2	127687-91770	CAP	2							
11	2	46150-003610	BOX(WITH OUT FUSE	1							
12	2	127687-91790	SWITCH	1							
13	2	127687-91780	SWITCH	1							
14	2	46150-003620	FUSE	1							
15	2	127687-91250	GASKET	1							
16	2	127687-91840	COVER	1							
17	2	127687-91890	SCREW	2							
18	2	127610-91310	BUZZER (DC24V)	1							
19	2	127620-91580	WIRE	1							
20	2	127687-91830	BODY ASSY	1							
21	2	127687-91870	BOLT 6X 35	4							
22	2	127687-91820	CAP	4							
23	2	127687-91880	WASHER	4							
24	2	127410-91680	BRACKET, PANEL	2							
25	2	119192-91600	LCD ASSY	1							
26	2	127620-91810	PLUG	1							


N:Old $\overset{\text{Yes}}{\underset{\text{No}}{\leftrightarrows}}$ New, Q:Old $\overset{\text{No}}{\underset{\text{Yes}}{\leftrightarrows}}$ New, R:Old $\overset{\text{Yes}}{\underset{\text{Yes}}{\leftrightarrows}}$ New, S:Old $\overset{\text{No}}{\underset{\text{No}}{\leftrightarrows}}$ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change


(C)Copy Rights YANMAR CO.,LTD.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.56.TOOL

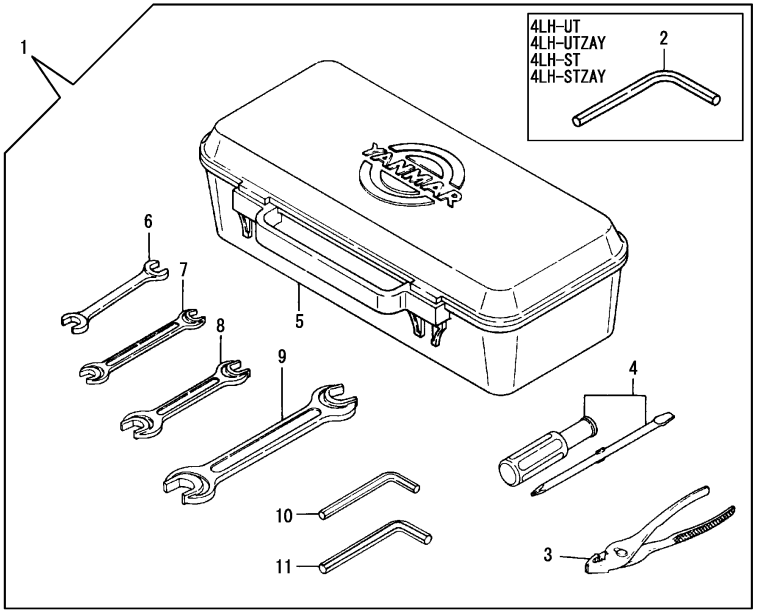

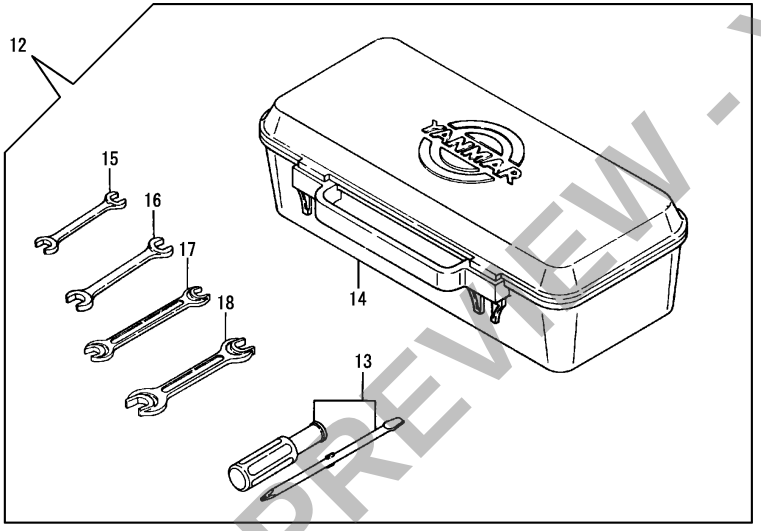

Remarks
(1)Optional parts for 4LH-UT,UTZAY, UTZ.

56.TOOL

(A)=4LH-UT
(B)=4LH-UTZAY
(C)=4LH-UTZ
(D)=4LH-ST
(E)=4LH-STZAY
(F)=4LH-STZ

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	729499-92100	TOOL KIT	1	1		1	1			1
1A	1	705311-92100	TOOL ASSY			1			1		1
2	2	177040-09050	WRENCH, EMERGENCY	1	1		1	1			
3	2	189010-92020	PLIER	1	1	1	1	1	1		
4	2	104200-92350	DRIVER, SCREW	1	1	1	1	1	1		
5	2	104200-92600	BOX, TOOL	1	1	1	1	1	1		
6	2	28110-100130	WRENCH 10X13	1	1	1	1	1	1		
7	2	28110-120140	WRENCH 12X14	1	1	1	1	1	1		
8	2	28110-170190	WRENCH 17X19	1	1	1	1	1	1		
9	2	28110-220240	WRENCH 22X24	1	1	1	1	1	1		
10	2	28150-050000	BAR WRENCH	1	1	1	1	1	1		
11	2	28150-060000	BAR WRENCH 6	1	1	1	1	1	1		
12	1	719195-92500	TOOL ASSY, STD	1	1	1				W	
	(A=EZZZZZ)	(B=EZZZZZ)	(C=EZZZZZ)								
13	2	104200-92350	DRIVER, SCREW	1	1	1					
14	2	104200-92600	BOX, TOOL	1	1	1					
15	2	28110-080100	WRENCH 8X10	1	1	1					
16	2	28110-100130	WRENCH 10X13	1	1	1					
17	2	28110-120140	WRENCH 12X14	1	1	1					
18	2	28110-170190	WRENCH 17X19	1	1	1					


N:Old $\overset{\text{Yes}}{\underset{\text{No}}{\rightarrow}}$ New, Q:Old $\overset{\text{No}}{\underset{\text{Yes}}{\rightarrow}}$ New, R:Old $\overset{\text{Yes}}{\underset{\text{Yes}}{\rightarrow}}$ New, S:Old $\overset{\text{No}}{\underset{\text{No}}{\rightarrow}}$ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

(C)Copy Rights YANMAR CO.,LTD.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.3.L.O.SUMP & OIL SEAL HOUSING

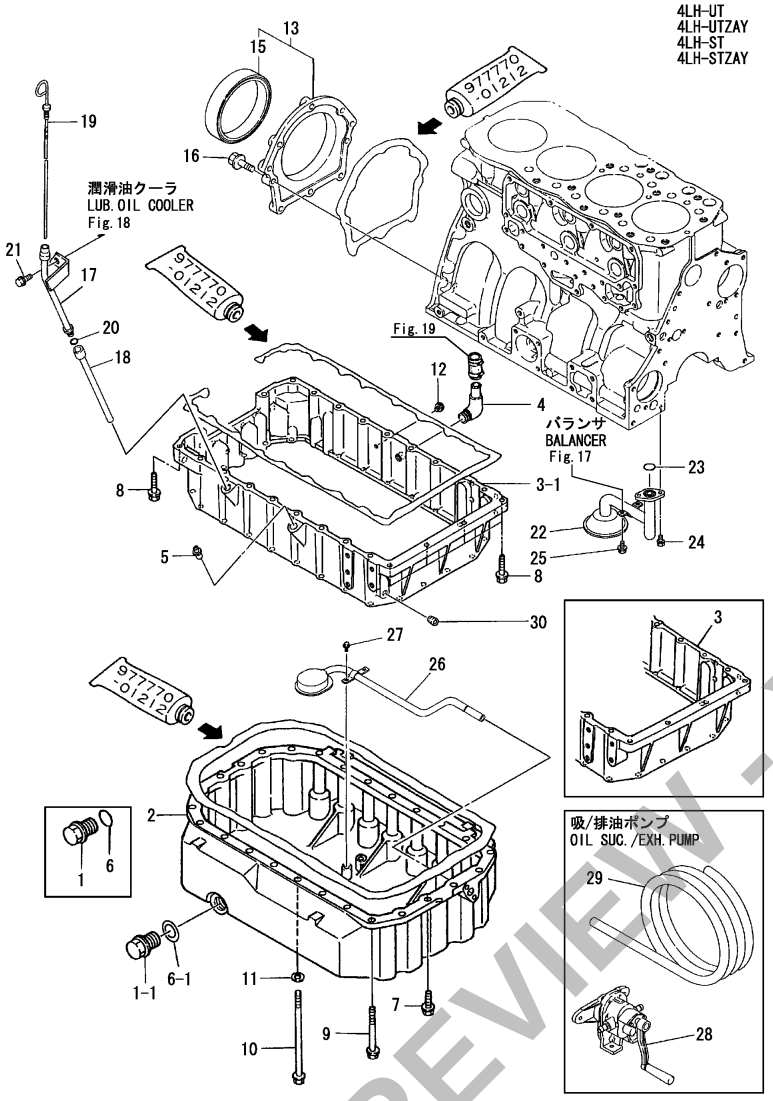

Remarks
(1)Interchangeable by simultaneous replacement with Ref.No.1-1 & Ref.No.6-1.
(2)Interchangeable by simultaneous replacement with Ref.No.30.

0CF10-G29805

3.L.O.SUMP & OIL SEAL HOUSING

(A)=4LH-UT
(B)=4LH-UTZAY
(C)=4LH-UTZ
(D)=4LH-ST
(E)=4LH-STZAY
(F)=4LH-STZ

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	171301-01640	PLUG M22	1	1						
1-1	1	119640-01640	DRAIN PLUG M22	1	1		1	1		F	1
	(A=E40495)	(B=E40496)									
2	1	119187-01710	SUMP, LUB. OIL	1	1		1	1			
3	1	119187-01730	INTERMEDIATE, SUMP	1	1						
3-1	1	119187-01731	SPACER, OIL SUMP	1	1		1	1		F	2
	(A=E40696)	(B=E40695)									
4	1	124070-13300	ELBOW (PT3/8)	1	1		1	1			
5	1	119174-39500	JOINT,BYPASS RETURN	1	1		1	1			
6	1	24341-000240	O-RING 1A S-24.0	1	1						
6-1	1	22190-220002	WASHER, 22	1	1		1	1		F	1
	(A=E40495)	(B=E40496)									
7	1	26106-080252	BOLT M 8X 25 PLATED	8	8		8	8			
8	1	26106-080352	BOLT M 8X 35 PLATED	6	6		6	6			
9	1	26106-081202	BOLT M 8X120 PLATED	4	4		4	4			
10	1	26116-081902	BOLT M 8X190 PLATED	14	14		14	14			
11	1	22137-080000	WASHER 8, POLISHED	14	14		14	14			
12	1	23876-020000	PLUG PT1/4,SCREW	1	1		1	1			
13	1	119100-01640	CASE ASSY, OIL SEAL	1	1		1	1			
15	2	124411-01780	SEAL HTC95,115,12	1	1		1	1			
16	1	26106-080252	BOLT M 8X 25 PLATED	8	8		8	8			
17	1	119189-34810	GUIDE A,DIPSTICK	1	1		1	1			
18	1	119187-34820	GUIDE, DIPSTICK	1	1		1	1			
19	1	129470-34850	DIPSTICK, LUB. OIL	1	1		1	1			
20	1	24341-000100	O-RING 1A S-10.0	1	1		1	1			
21	1	26106-080162	BOLT M 8X 16 PLATED	1	1		1	1			
22	1	119187-35090	PIPE, OIL INLET	1	1		1	1			
23	1	24311-000220	O-RING 1A P-22.0	1	1		1	1			
24	1	26013-080162	BOLT W/WASHER M8X16	2	2		2	2			
25	1	26106-080162	BOLT M 8X 16 PLATED	2	2		2	2			
26	1	119187-35100	PIPE, OIL INLET	1	1		1	1			
27	1	26106-060122	BOLT M 6X 12 PLATED	2	2		2	2			
28	1	124413-39100	PUMP, OIL SUMP	1	1		1	1			
29	1	43720-001220	PIPE	1	1		1	1			
29-1	1	120130-39990	HOSE,OIL DRAIN 3M	1	1		1	1		R	
	(A=EZZZZZ)	(B=EZZZZZ)	(D=EZZZZZ)	(E=EZZZZZ)							
30	1	23876-020000	PLUG PT1/4,SCREW	1	1		1	1		W	
	(A=E40696)	(B=E40695)									


N:Old $\overset{\text{Yes}}{\underset{\text{No}}{\leftarrow\rightarrow}}$ New, Q:Old $\overset{\text{No}}{\underset{\text{Yes}}{\leftarrow\rightarrow}}$ New, R:Old $\overset{\text{Yes}}{\underset{\text{Yes}}{\leftarrow\rightarrow}}$ New, S:Old $\overset{\text{No}}{\underset{\text{No}}{\leftarrow\rightarrow}}$ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

(C)Copy Rights YANMAR CO.,LTD.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Fig.31.F.I.VALVE & F.I.PIPE

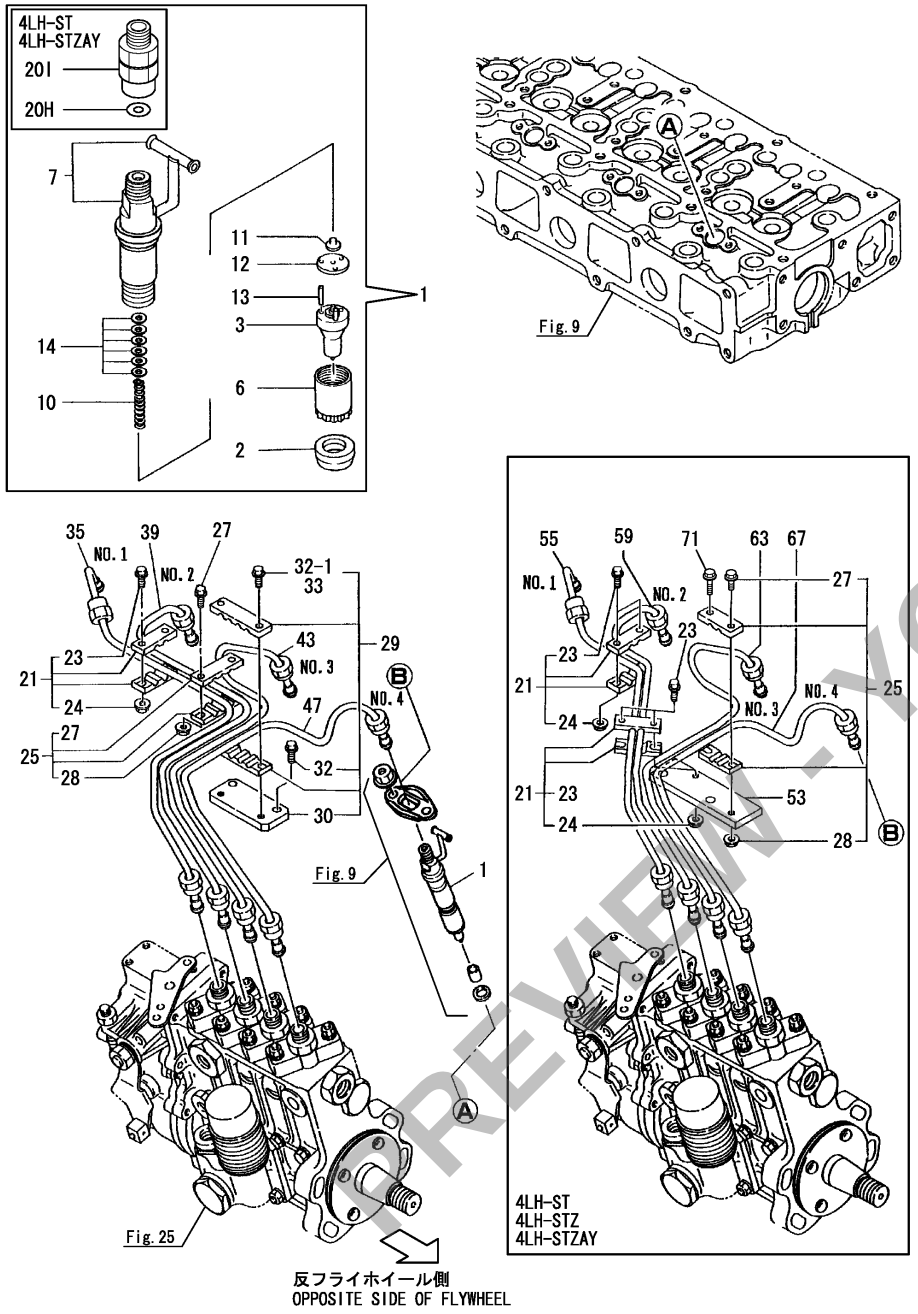

0CF10-G29805

31.F.I.VALVE & F.I.PIPE

(A)=4LH-UT (D)=4LH-ST
(B)=4LH-UTZAY (E)=4LH-STZAY
(C)=4LH-UTZ (F)=4LH-STZ

REF.	LEV.	PARTS NO.	DESCRIPTION	Q'TY (A)	(B)	(C)	(D)	(E)	(F)	I	R
1	1	719593-53101	VALVE ASSY,INJECTION	4	4	4					
1A	1	719195-53100	VALVE ASSY,INJECTION				4	4			
1B	1	719175-53100	VALVE ASSY,INJECTION						4		
2	2	129470-11920	GASKET	4	4	4	4	4	4		
3	2	119593-53001	NOZZLE ASSY	4	4	4					
3A	2	119195-53000	NOZZLE ASSY				4	4			
3B	2	119175-53000	NOZZLE ASSY						4		
6	2	119593-53080	NUT, CASE	4	4	4	4	4	4		
7	2	119593-53100	HOLDER ASSY, NOZZLE	4	4	4					
7A	2	119594-53100	HOLDER, NOZZLE				4	4	4		
10	2	119593-53120	SPRING, NOZZLE	4	4	4	4	4	4		
11	2	119593-53130	SEAT, SPRING	4	4	4	4	4	4		
12	2	119593-53140	PLATE, STOP	4	4	4	4	4	4		
13	2	114250-53210	PIN	8	8	8	8	8	8		
14	2	114250-53400	SHIM SET	4	4	4	4	4	4		
20H	2	119594-53290	GASKET				4	4			
20I	2	119175-53300	JOINT CMP				4	4			
21	1	122780-59080	RETAINER	1	1	1	3	3	3		
23	2	26106-060202	BOLT M 6X 20 PLATED	2	2	2	6	6	6		
24	2	26366-060002	NUT M 6	2	2	2	6	6	6		
25	1	123372-59080	RETAINER	1	1	1	1	1	1		
27	2	26106-060202	BOLT M 6X 20 PLATED	2	2	2	2	2	2		
28	2	26366-060002	NUT M 6	2	2	2	2	2	2		
29	1	119174-59090	CLAMP ASSY,F.I.LINE	1	1	1					
30	2	119174-59120	BRACKET,STEADY REST	1	1	1					
32	2	26106-060162	BOLT M 6X 16 PLATED	2	2						
32-1	2	26106-060162	BOLT M 6X 16 PLATED	4	4	4				K	
	(A=EXXX)	(B=EXXX)									
33	2	26106-060202	BOLT M 6X 20 PLATED	2	2					Z	
	(A=EXXX)	(B=EXXX)									
35	1	119174-59811	PIPE CMP,#1 F.O.INJ.	1	1	1					
39	1	119174-59821	PIPE CMP,#2 F.O.INJ.	1	1	1					
43	1	119174-59831	PIPE CMP,#3 F.O.INJ.	1	1	1					
47	1	119174-59841	PIPE CMP,#4 F.O.INJ.	1	1	1					
53	1	119181-59120	BRACKET,STEADY REST				1	1	1		
55	1	119181-59811	PIPE,FUEL INJECTION				1	1	1		
59	1	119181-59821	PIPE, FUEL INJECTION				1	1	1		
63	1	119181-59831	PIPE, FUEL INJECTION				1	1	1		
67	1	119181-59841	PIPE, FUEL INJECTION				1	1	1		
71	1	26106-060252	BOLT M 6X 25 PLATED				4	4	4		

N:Old $\overset{\text{Yes}}{\underset{\text{No}}{\rightarrow}}$ New, Q:Old $\overset{\text{No}}{\underset{\text{Yes}}{\rightarrow}}$ New, R:Old $\overset{\text{Yes}}{\underset{\text{Yes}}{\rightarrow}}$ New, S:Old $\overset{\text{No}}{\underset{\text{No}}{\rightarrow}}$ New, W:Add, Z:Discontinued, F:Interchangeable by set, K:Q'ty Change

(C)Copy Rights YANMAR CO.,LTD.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 12 of 101 pages

The full manual includes:

- All 101 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Yanmar 4LH-UT, 4LH-UTZAY, 4LH-UTZ, 4LH-ST, 4LH-STZAY, 4LH-STZ, 0CF10-G29805 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual